

32k (256kBit) Memory Configurations. V4.5 to V5.1

(^ Also applicable to V3.5 & V4 with the exceptions shown in brackets)

V3.5^ / V4^ / V4.5 / V5 / V5.1 32k (256kBit)	Standard	Access	Enlarged	Apartments V4.5 or later	Access 2 V4.5 or later	Special	Alarm
Users	100	100	100	100	100	50	50
User Names	50	50	50	100	100	50	50
User RF Fobs ‡	0	0	0	10	0	10	10
User Types	16	16	16	16	16	8	8
Card Only Users *	0	0	0	0	0	0	0
Areas	24	16	8	16	16	16	16
Doors	4	8	16	8	8	4	4
Lift Cars *	0	0	0	0	0	0	0
Site Codes	3	3	3	3	3	3	3
TimeZones	8	8	8	8	8	8	8
Holidays	8	8	8	8	8	8	8
Diaries	5	5	5	5	5	5	5
Review Memory	300	550	500 (550)	400	400	300	300
Counters	4	0	0	4	0	4	4
Area Lists	16	16	8	16	16	16	16
Doors Lists	8	16	16	16	16	8	8
Siren Lists	8	8	2	4	8	8	8
Floor Lists *	0	0	0	0	0	0	0
Lift Car Lists *	0	0	0	0	0	0	0
Auxiliary Lists	2	2	2	8	2	8 (2)	2
Menu Groups	8	8	8	8	8	8	8
Access Groups	8	8	8	8	8	8	8
Process Groups	16	16	16	16	16	16	16
Interlock Groups *	0	0	0	0	0	0	0
Comms Tasks	5	5	5	5	5	5	5
Phone Numbers	6	6	6	6	6	6	6
DTMF Controls	8	4	4	4	4	8	4
Function Zones	32	16	16	16	16	32	32
Calculated Auxes	16	16	16	16	16	16	16
Home Auxiliaries	8	8	8	8	8	16	16
Home Zones	8	0	0	0	8	16	0 (16)
Automation Auxiliaries	0	0	0	0	0	0	0
LCD Terminals	8	8	8	8	8	8	8
Expander Modules 32Z	1	1	0	0	1	1	2 (1)
Expander Modules 16Z	3	2	0	2	2	1	2 (1)
Reader Modules	2	4	2	4	4	2	2
Mini Expander Modules	1	0	2	1	0	3	0 (3)
Analogue Modules	0	0	1	0	0	0	0
Intelligent 4Dr Access Modules	0	0	2	0	0	0	0
Wireless Network Modules	0	0	0	0	0	0	0
RF Expander Modules ‡	0	0	0	1	0	1	1
AirCon Control *	0	0	0	0	0	0	0

- NOTES:**
- 1) Only Users with names have Expiry dates in the 32k Memory configurations.
 - 2) * Only available in Access 4000.
 - 3) ^ Changes from V3.5 / V4. Where values differ from V3.5/V4, the old values are shown in brackets.
 - 4) ‡ RF Expander Modules available in V5.1 or later only.