

Expanded Users (256k) Memory Configurations. V7.8 *Please read notes on p10.*

| V7.8 Expanded Users | Standard | Access | Enlarged | Apartments | Access 2 | Special | Alarms | XDoor | IP Door |
|----------------------------|----------|--------|----------|------------|----------|---------|--------|-------|---------|
| | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 |
| Users | 4096 | 4096 | 4096 | 4096 | 4096 | 4096 | 4096 | 4096 | 4096 |
| User Names | 200 | 1000 | 200 | 500 | 1000 | 1000 | 200 | 200 | 10 |
| User RF Fobs | 25 | 25 | 0 | 25 | 25 | 25 | 25 | 25 | 0 |
| Extra Door/DList for Users | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 12000 | 0 |
| User Types | 128 | 128 | 128 | 128 | 128 | 128 | 128 | 128 | 64 |
| Card Only Users | 7904 | 7904 | 7904 | 7904 | 7904 | 7904 | 7904 | 7904 | 5904 |
| Areas | 96 | 32 | 96 | 48 | 32 | 32 | 64 | 32 | 10 |
| Doors | 32 | 64 | 16 | 48 | 64 | 48 | 16 | 48 | 8 |
| Lift Cars | 3 | 6 | 3 | 4 | 6 | 4 | 3 | 4 | 0 |
| Site Codes | 6 | 5 | 6 | 6 | 5 | 6 | 5 | 6 | 8 |
| TimeZones | 32 | 32 | 32 | 32 | 32 | 32 | 32 | 32 | 16 |
| Holidays | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 16 |
| Diaries | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 5 |
| Counters | 8 | 8 | 16 | 4 | 4 | 8 | 8 | 8 | 0 |
| Area Lists | 96 | 32 | 96 | 48 | 32 | 32 | 64 | 32 | 64 |
| Door Lists | 64 | 64 | 64 | 64 | 64 | 64 | 64 | 64 | 64 |
| Siren Lists | 32 | 16 | 32 | 16 | 16 | 8 | 32 | 8 | 1 |
| Floor Lists | 64 | 64 | 64 | 64 | 64 | 64 | 64 | 64 | 0 |
| Lift Car Lists | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 0 |
| Auxiliary Lists | 32 | 32 | 32 | 16 | 32 | 32 | 32 | 32 | 4 |
| Menu Groups | 16 | 8 | 16 | 8 | 8 | 8 | 16 | 8 | 4 |
| Access Groups | 16 | 12 | 16 | 12 | 16 | 16 | 8 | 16 | 8 |
| Process Groups | 32 | 24 | 32 | 32 | 32 | 32 | 32 | 32 | 24 |
| Interlock Groups | 16 | 32 | 12 | 8 | 16 | 16 | 8 | 8 | 4 |
| Comms Tasks | 6 | 6 | 6 | 6 | 6 | 6 | 8 | 6 | 4 |
| Phone Numbers | 8 | 8 | 8 | 12 | 12 | 8 | 12 | 8 | 4 |
| DTMF Controls | 16 | 16 | 16 | 8 | 8 | 16 | 16 | 16 | 0 |
| Function Zones | 32 | 16 | 32 | 32 | 16 | 16 | 32 | 16 | 4 |
| Calculated Auxes | 32 | 16 | 32 | 32 | 16 | 16 | 32 | 16 | 4 |
| Home Auxiliaries | 48 | 32 | 64 | 32 | 32 | 32 | 64 | 32 | 0 |
| Home Zones | 32 | 16 | 64 | 16 | 16 | 16 | 64 | 16 | 0 |
| Automation Auxiliaries | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 16 | 0 |
| LCD Terminals | 32 | 16 | 32 | 32 | 16 | 16 | 32 | 16 | 4 |
| Touchscreen Terminals | 2 | 2 | 2 | 0 | 2 | 2 | 2 | 0 | 0 |
| Expander Modules 32Z | 4 | 2 | 6 | 1 | 2 | 1 | 15 | 2 | 0 |
| Expander Modules 16Z | 6 | 6 | 8 | 2 | 4 | 2 | 0 | 2 | 0 |
| Reader Modules | 16 | 32 | 8 | 24 | 32 | 8 | 8 | 16 | 4 |
| Mini Expander Modules | 5 | 4 | 10 | 25 | 4 | 16 | 4 | 8 | 0 |
| Analogue Modules | 2 | 3 | 4 | 2 | 2 | 4 | 4 | 2 | 0 |
| Intell. 4Dr Access Modules | 0 | 0 | 2 | 4 | 0 | 8 | 2 | 8 | 0 |
| LAN Pwr Supply Modules | 2 | 2 | 2 | 6 | 4 | 2 | 2 | 2 | 0 |
| Wireless Network Modules | 0 | 0 | 6 | 0 | 0 | 0 | 0 | 0 | 0 |
| RF Expander Modules | 2 | 1 | 0 | 2 | 2 | 2 | 2 | 2 | 0 |
| AirCon Control | 0 | 0 | 4 | 0 | 0 | 0 | 4 | 0 | 0 |
| Review Memory. * | 3000 | 3000 | 3000 | 3000 | 3000 | 3000 | 3000 | 2500 | 875 |
| EN Review: ^ Normal | 2000 | 2000 | 2000 | 2000 | 2000 | 2000 | 2000 | 1500 | 375 |
| Mandatory | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 500 |

* Applies only to Non EN firmware types. See Note 7.

^ Applies only to EN firmware types. See Note 7.