

INTEGRITI

CONTACT ID "SIMS II" ALARM REPORT ZONE (INPUT) MAPPING

Contact ID message

XYZnnTPP	where:
XYZ	Event Code
nn	Group Byte. Used to show the Module number when reporting Zones. 1 to 35; Provides 35 unique Module numbers. - 1 to 34 = Modules 1 to 34 respectively. - 35 = Modules 35 to 99.
TPP	Point Number. Utilized as follows:
T	Module Type. <i>See table below.</i>
PP	Input Number. <i>See additional details below.</i>

SIMS II 7 Digit Account Maintenance Zone Data

XYZnTPP	where:
XYZ	Event Code
n	Group Byte. Used for Module number when reporting Zones. 1 to 9, then A to Z; Providing 35 unique Module numbers. - 1 to Y = Modules 1 to 34 respectively. - Z = Modules 35 to 99.
TPP	Point Number. Utilized as follows:
T	Module Type. <i>See table below.</i> Note. The following Module Types share the same Account Maintenance Zones: 1) LCD Terminals and Touchscreen Terminals. These have the same number of Zones and the same System Inputs. 2) Expanders and Secure Encrypted Expanders. These have a different number of Zones and different System Inputs.
PP	Input Number. Note: Zone Input and System Input numbering both start at 01. Differentiation of Zone Inputs and System Inputs on the same Module is via the Event Code. e.g. 140B301 = Expander #11, Zone Input 1 145B301 = Expander #11, System Input 1 (Cabinet Tamper)

No.	ID Letter	Module Type
0	C	Control Module
1	T / K	LCD Terminal or Touchscreen Keypad *See Note 1
2	G	Graphic Terminal
3	E / S	Expander or Secure Encrypted Expander *See Note 2
4	R	2-Door Reader Module
5	I	Intelligent Reader Module
6	F	RF (Wireless) Expander
7	P	Power Supply Module
8		Not assigned
9		Not assigned

* Note 1 Touchscreen Keypad not yet implemented.

Note 2 Secure Encrypted Expander not yet implemented.

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
C01:Z01	14001001	1401001	Controller	1	Z01	C01:Z01
C01:Z02	14001002	1401002	Controller	1	Z02	C01:Z02
C01:Z03	14001003	1401003	Controller	1	Z03	C01:Z03
C01:Z04	14001004	1401004	Controller	1	Z04	C01:Z04
C01:Z05	14001005	1401005	Controller	1	Z05	C01:Z05
C01:Z06	14001006	1401006	Controller	1	Z06	C01:Z06
C01:Z07	14001007	1401007	Controller	1	Z07	C01:Z07
C01:Z08	14001008	1401008	Controller	1	Z08	C01:Z08
C01:Z09	14001009	1401009	Controller	1	Z09	C01:Z09
C01:Z10	14001010	1401010	Controller	1	Z10	C01:Z10
C01:Z11	14001011	1401011	Controller	1	Z11	C01:Z11
C01:Z12	14001012	1401012	Controller	1	Z12	C01:Z12
C01:Z13	14001013	1401013	Controller	1	Z13	C01:Z13
C01:Z14	14001014	1401014	Controller	1	Z14	C01:Z14
C01:Z15	14001015	1401015	Controller	1	Z15	C01:Z15
C01:Z16	14001016	1401016	Controller	1	Z16	C01:Z16
C01:Z17	14001017	1401017	Controller	1	Z17	C01:Z17
C01:Z18	14001018	1401018	Controller	1	Z18	C01:Z18
C01:Z19	14001019	1401019	Controller	1	Z19	C01:Z19
C01:Z20	14001020	1401020	Controller	1	Z20	C01:Z20
C01:Z21	14001021	1401021	Controller	1	Z21	C01:Z21
C01:Z22	14001022	1401022	Controller	1	Z22	C01:Z22
C01:Z23	14001023	1401023	Controller	1	Z23	C01:Z23
C01:Z24	14001024	1401024	Controller	1	Z24	C01:Z24
C01:Z25	14001025	1401025	Controller	1	Z25	C01:Z25
C01:Z26	14001026	1401026	Controller	1	Z26	C01:Z26
C01:Z27	14001027	1401027	Controller	1	Z27	C01:Z27
C01:Z28	14001028	1401028	Controller	1	Z28	C01:Z28
C01:Z29	14001029	1401029	Controller	1	Z29	C01:Z29
C01:Z30	14001030	1401030	Controller	1	Z30	C01:Z30
C01:Z31	14001031	1401031	Controller	1	Z31	C01:Z31
C01:Z32	14001032	1401032	Controller	1	Z32	C01:Z32
C01:Z33	14001033	1401033	Controller	1	Z33	C01:Z33
C01:Z34	14001034	1401034	Controller	1	Z34	C01:Z34
C01:Z35	14001035	1401035	Controller	1	Z35	C01:Z35
C01:Z36	14001036	1401036	Controller	1	Z36	C01:Z36
C01:Z37	14001037	1401037	Controller	1	Z37	C01:Z37
C01:Z38	14001038	1401038	Controller	1	Z38	C01:Z38
C01:Z39	14001039	1401039	Controller	1	Z39	C01:Z39
C01:Z40	14001040	1401040	Controller	1	Z40	C01:Z40
C01:Z41	14001041	1401041	Controller	1	Z41	C01:Z41
C01:Z42	14001042	1401042	Controller	1	Z42	C01:Z42
C01:Z43	14001043	1401043	Controller	1	Z43	C01:Z43
C01:Z44	14001044	1401044	Controller	1	Z44	C01:Z44
C01:Z45	14001045	1401045	Controller	1	Z45	C01:Z45
C01:Z46	14001046	1401046	Controller	1	Z46	C01:Z46
C01:Z47	14001047	1401047	Controller	1	Z47	C01:Z47
C01:Z48	14001048	1401048	Controller	1	Z48	C01:Z48
C01:Z49	14001049	1401049	Controller	1	Z49	C01:Z49
C01:Z50	14001050	1401050	Controller	1	Z50	C01:Z50
C01:Z51	14001051	1401051	Controller	1	Z51	C01:Z51
C01:Z52	14001052	1401052	Controller	1	Z52	C01:Z52
C01:Z53	14001053	1401053	Controller	1	Z53	C01:Z53
C01:Z54	14001054	1401054	Controller	1	Z54	C01:Z54
C01:Z55	14001055	1401055	Controller	1	Z55	C01:Z55
C01:Z56	14001056	1401056	Controller	1	Z56	C01:Z56
C01:Z57	14001057	1401057	Controller	1	Z57	C01:Z57

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
C01:Z58	14001058	1401058	Controller	1	Z58	C01:Z58
C01:Z59	14001059	1401059	Controller	1	Z59	C01:Z59
C01:Z60	14001060	1401060	Controller	1	Z60	C01:Z60
C01:Z61	14001061	1401061	Controller	1	Z61	C01:Z61
C01:Z62	14001062	1401062	Controller	1	Z62	C01:Z62
C01:Z63	14001063	1401063	Controller	1	Z63	C01:Z63
C01:Z64	14001064	1401064	Controller	1	Z64	C01:Z64
C01:Z65	14001065	1401065	Controller	1	Z65	C01:Z65
C01:Z66	14001066	1401066	Controller	1	Z66	C01:Z66
C01:Z67	14001067	1401067	Controller	1	Z67	C01:Z67
C01:Z68	14001068	1401068	Controller	1	Z68	C01:Z68
C01:Z69	14001069	1401069	Controller	1	Z69	C01:Z69
C01:Z70	14001070	1401070	Controller	1	Z70	C01:Z70
C01:Z71	14001071	1401071	Controller	1	Z71	C01:Z71
C01:Z72	14001072	1401072	Controller	1	Z72	C01:Z72
C01:Z73	14001073	1401073	Controller	1	Z73	C01:Z73
C01:Z74	14001074	1401074	Controller	1	Z74	C01:Z74
C01:Z75	14001075	1401075	Controller	1	Z75	C01:Z75
C01:Z76	14001076	1401076	Controller	1	Z76	C01:Z76
C01:Z77	14001077	1401077	Controller	1	Z77	C01:Z77
C01:Z78	14001078	1401078	Controller	1	Z78	C01:Z78
C01:Z79	14001079	1401079	Controller	1	Z79	C01:Z79
C01:Z80	14001080	1401080	Controller	1	Z80	C01:Z80
C01:Z81	14001081	1401081	Controller	1	Z81	C01:Z81
C01:Z82	14001082	1401082	Controller	1	Z82	C01:Z82
C01:Z83	14001083	1401083	Controller	1	Z83	C01:Z83
C01:Z84	14001084	1401084	Controller	1	Z84	C01:Z84
C01:Z85	14001085	1401085	Controller	1	Z85	C01:Z85
C01:Z86	14001086	1401086	Controller	1	Z86	C01:Z86
C01:Z87	14001087	1401087	Controller	1	Z87	C01:Z87
C01:Z88	14001088	1401088	Controller	1	Z88	C01:Z88
C01:Z89	14001089	1401089	Controller	1	Z89	C01:Z89
C01:Z90	14001090	1401090	Controller	1	Z90	C01:Z90
C01:Z91	14001091	1401091	Controller	1	Z91	C01:Z91
C01:Z92	14001092	1401092	Controller	1	Z92	C01:Z92
C01:Z93	14001093	1401093	Controller	1	Z93	C01:Z93
C01:Z94	14001094	1401094	Controller	1	Z94	C01:Z94
C01:Z95	14001095	1401095	Controller	1	Z95	C01:Z95
C01:Z96	14001096	1401096	Controller	1	Z96	C01:Z96
C01:Z97	14001097	1401097	Controller	1	Z97	C01:Z97
C01:Z98	14001098	1401098	Controller	1	Z98	C01:Z98
C01:Z99	14001099	1401099	Controller	1	Z99	C01:Z99
C01:S01	14501001	1451001	Controller	1	Cabinet Tamper	C01 Cabinet Tamper
C01:S02	32001002	3201002	Controller	1	Int SiREN Tamper	C01 Int SiREN Tamper
C01:S03	32001003	3201003	Controller	1	Ext SiREN Tamper	C01 Ext SiREN Tamper
C01:S04	30101004	3011004	Controller	1	AC fail	C01 AC fail
C01:S05	30201005	3021005	Controller	1	Low Battery	C01 Low Battery
C01:S06	30001006	3001006	Controller	1	LAN Fuse	C01 LAN Fuse
C01:S07	30001007	3001007	Controller	1	Detector Fuse	C01 Detector Fuse
C01:S08	30001008	3001008	Controller	1	Low Volts	C01 Low Volts
C01:S09	30001009	3001009	Controller	1	PS Fail	C01 PS Fail
C01:S10	30901010	3091010	Controller	1	Battery Test	C01 Battery Test
C01:S11	35001011	3501011	Controller	1	LAN Comms	C01 LAN Comms
C01:S12	30601012	3061012	Controller	1	DataBase Changed	C01 DBase Changed
C01:S13	30501013	3051013	Controller	1	Reset	C01 Reset
C01:S14	35101014	3511014	Controller	1	Phone Line	C01 Phone Line
C01:S15	33001015	3301015	Controller	1	Unibus Fault	C01 Unibus Fault

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
C01:S16	60201016	6021016	Controller	1	Time Report	C01 Time Report
C01:S17	15001017	1501017	Controller	1	Unsecured	C01 Unsecured
C01:S18	15001018	1501018	Controller	1	Spare	C01 Spare
C01:S19	15001019	1501019	Controller	1	Spare	C01 Spare
C01:S20	15001020	1501020	Controller	1	Spare	C01 Spare
C01:S21	15001021	1501021	Controller	1	Spare	C01 Spare
C01:S22	15001022	1501022	Controller	1	Spare	C01 Spare
C01:S23	15001023	1501023	Controller	1	Spare	C01 Spare
C01:S24	15001024	1501024	Controller	1	Spare	C01 Spare
C01:S25	15001025	1501025	Controller	1	Spare	C01 Spare
C01:S26	15001026	1501026	Controller	1	Spare	C01 Spare
C01:S27	15001027	1501027	Controller	1	Spare	C01 Spare
C01:S28	15001028	1501028	Controller	1	Spare	C01 Spare
C01:S29	15001029	1501029	Controller	1	Spare	C01 Spare
C01:S30	15001030	1501030	Controller	1	Spare	C01 Spare
C01:S31	15001031	1501031	Controller	1	Spare	C01 Spare
C01:S32	15001032	1501032	Controller	1	Spare	C01 Spare
C01:S33	15001033	1501033	Controller	1	Spare	C01 Spare
C01:S34	43201034	4321034	Controller	1	Door1 Tamper	C01 Door1 Tamper
C01:S35	43201035	4321035	Controller	1	Door2 Tamper	C01 Door2 Tamper
C01:S36	43201036	4321036	Controller	1	Door3 Tamper	C01 Door3 Tamper
C01:S37	43201037	4321037	Controller	1	Door4 Tamper	C01 Door4 Tamper
C01:S38	43201038	4321038	Controller	1	Door5 Tamper	C01 Door5 Tamper
C01:S39	43201039	4321039	Controller	1	Door6 Tamper	C01 Door6 Tamper
C01:S40	43201040	4321040	Controller	1	Door7 Tamper	C01 Door7 Tamper
C01:S41	43201041	4321041	Controller	1	Door8 Tamper	C01 Door8 Tamper
C01:S42	42301042	4231042	Controller	1	Door1 Forced	C01 Door1 Forced
C01:S43	42301043	4231043	Controller	1	Door2 Forced	C01 Door2 Forced
C01:S44	42301044	4231044	Controller	1	Door3 Forced	C01 Door3 Forced
C01:S45	42301045	4231045	Controller	1	Door4 Forced	C01 Door4 Forced
C01:S46	42301046	4231046	Controller	1	Door5 Forced	C01 Door5 Forced
C01:S47	42301047	4231047	Controller	1	Door6 Forced	C01 Door6 Forced
C01:S48	42301048	4231048	Controller	1	Door7 Forced	C01 Door7 Forced
C01:S49	42301049	4231049	Controller	1	Door8 Forced	C01 Door8 Forced
C01:S50	42601050	4261050	Controller	1	Door1 DOTL	C01 Door1 DOTL
C01:S51	42601051	4261051	Controller	1	Door2 DOTL	C01 Door2 DOTL
C01:S52	42601052	4261052	Controller	1	Door3 DOTL	C01 Door3 DOTL
C01:S53	42601053	4261053	Controller	1	Door4 DOTL	C01 Door4 DOTL
C01:S54	42601054	4261054	Controller	1	Door5 DOTL	C01 Door5 DOTL
C01:S55	42601055	4261055	Controller	1	Door6 DOTL	C01 Door6 DOTL
C01:S56	42601056	4261056	Controller	1	Door7 DOTL	C01 Door7 DOTL
C01:S57	42601057	4261057	Controller	1	Door8 DOTL	C01 Door8 DOTL
C01:S58	15001058	1501058	Controller	1	Rdr1 Invalid	C01 Rdr1 Invalid
C01:S59	15001059	1501059	Controller	1	Rdr2 Invalid	C01 Rdr2 Invalid
C01:S60	15001060	1501060	Controller	1	Rdr3 Invalid	C01 Rdr3 Invalid
C01:S61	15001061	1501061	Controller	1	Rdr4 Invalid	C01 Rdr4 Invalid
C01:S62	15001062	1501062	Controller	1	Rdr5 Invalid	C01 Rdr5 Invalid
C01:S63	15001063	1501063	Controller	1	Rdr6 Invalid	C01 Rdr6 Invalid
C01:S64	15001064	1501064	Controller	1	Rdr7 Invalid	C01 Rdr7 Invalid
C01:S65	15001065	1501065	Controller	1	Rdr8 Invalid	C01 Rdr8 Invalid
C01:S66	15001066	1501066	Controller	1	Rdr9 Invalid	C01 Rdr9 Invalid
C01:S67	15001067	1501067	Controller	1	Rdr10 Invalid	C01 Rdr10 Invalid
C01:S68	15001068	1501068	Controller	1	Rdr11 Invalid	C01 Rdr11 Invalid
C01:S69	15001069	1501069	Controller	1	Rdr12 Invalid	C01 Rdr12 Invalid
C01:S70	15001070	1501070	Controller	1	Rdr13 Invalid	C01 Rdr13 Invalid
C01:S71	15001071	1501071	Controller	1	Rdr14 Invalid	C01 Rdr14 Invalid
C01:S72	15001072	1501072	Controller	1	Rdr15 Invalid	C01 Rdr15 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
C01:S73	15001073	1501073	Controller	1	Rdr16 Invalid	C01 Rdr16 Invalid
C01:S74	12201074	1221074	Controller	1	Rdr1 Duress	C01 Rdr1 Duress
C01:S75	12201075	1221075	Controller	1	Rdr2 Duress	C01 Rdr2 Duress
C01:S76	12201076	1221076	Controller	1	Rdr3 Duress	C01 Rdr3 Duress
C01:S77	12201077	1221077	Controller	1	Rdr4 Duress	C01 Rdr4 Duress
C01:S78	12201078	1221078	Controller	1	Rdr5 Duress	C01 Rdr5 Duress
C01:S79	12201079	1221079	Controller	1	Rdr6 Duress	C01 Rdr6 Duress
C01:S80	12201080	1221080	Controller	1	Rdr7 Duress	C01 Rdr7 Duress
C01:S81	12201081	1221081	Controller	1	Rdr8 Duress	C01 Rdr8 Duress
C01:S82	12201082	1221082	Controller	1	Rdr9 Duress	C01 Rdr9 Duress
C01:S83	12201083	1221083	Controller	1	Rdr10 Duress	C01 Rdr10 Duress
C01:S84	12201084	1221084	Controller	1	Rdr11 Duress	C01 Rdr11 Duress
C01:S85	12201085	1221085	Controller	1	Rdr12 Duress	C01 Rdr12 Duress
C01:S86	12201086	1221086	Controller	1	Rdr13 Duress	C01 Rdr13 Duress
C01:S87	12201087	1221087	Controller	1	Rdr14 Duress	C01 Rdr14 Duress
C01:S88	12201088	1221088	Controller	1	Rdr15 Duress	C01 Rdr15 Duress
C01:S89	12201089	1221089	Controller	1	Rdr16 Duress	C01 Rdr16 Duress
C01:S90	33001090	3301090	Controller	1	Rdr1 Tamper	C01 Rdr1 Tamper
C01:S91	33001091	3301091	Controller	1	Rdr2 Tamper	C01 Rdr2 Tamper
C01:S92	33001092	3301092	Controller	1	Rdr3 Tamper	C01 Rdr3 Tamper
C01:S93	33001093	3301093	Controller	1	Rdr4 Tamper	C01 Rdr4 Tamper
C01:S94	33001094	3301094	Controller	1	Rdr5 Tamper	C01 Rdr5 Tamper
C01:S95	33001095	3301095	Controller	1	Rdr6 Tamper	C01 Rdr6 Tamper
C01:S96	33001096	3301096	Controller	1	Rdr7 Tamper	C01 Rdr7 Tamper
C01:S97	33001097	3301097	Controller	1	Rdr8 Tamper	C01 Rdr8 Tamper
C01:S98	33001098	3301098	Controller	1	Rdr9 Tamper	C01 Rdr9 Tamper
C01:S99	33001099	3301099	Controller	1	Rdr10 Tamper	C01 Rdr10 Tamper
C01:S100	33001099	3301099	Controller	1	Rdr11 Tamper	C01 Rdr11 Tamper
C01:S101	33001099	3301099	Controller	1	Rdr12 Tamper	C01 Rdr12 Tamper
C01:S102	33001099	3301099	Controller	1	Rdr13 Tamper	C01 Rdr13 Tamper
C01:S103	33001099	3301099	Controller	1	Rdr14 Tamper	C01 Rdr14 Tamper
C01:S104	33001099	3301099	Controller	1	Rdr15 Tamper	C01 Rdr15 Tamper
C01:S105	33001099	3301099	Controller	1	Rdr16 Tamper	C01 Rdr16 Tamper
C01:S106	30101099	3011099	Controller	1	Ext AC fail	C01 Ext AC fail
C01:S107	30201099	3021099	Controller	1	Ext Low Battery	C01 Ext Low Battery
C01:S108	30001099	3001099	Controller	1	Ext LAN Fuse	C01 Ext LAN Fuse
C01:S109	30001099	3001099	Controller	1	Ext Detector Fuse	C01 Ext Detector Fuse
C01:S110	30001099	3001099	Controller	1	Ext Low Volts	C01 Ext Low Volts
C01:S111	30001099	3001099	Controller	1	Ext PS Fail	C01 Ext PS Fail
C01:S112	30901099	3091099	Controller	1	Ext Battery Test	C01 Ext Battery Test
C01:S113	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S114	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S115	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S116	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S117	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S118	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S119	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S120	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S121	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S122	00001099	0001099	Controller	1	Spare	C01 Spare
C01:S123	00001099	0001099	Controller	1	Spare	C01 Spare
T01:Z01	14001101	1401101	LCD Terminal	1	Z01	T01:Z01
T01:Z02	14001102	1401102	LCD Terminal	1	Z02	T01:Z02
T01:S01	14501101	1451101	LCD Terminal	1	Cabinet Tamper	T01 Cabinet Tamper
T01:S02	12001102	1201102	LCD Terminal	1	Panic	T01 Panic
T01:S03	42301103	4231103	LCD Terminal	1	Door Forced	T01 Door Forced
T01:S04	42601104	4261104	LCD Terminal	1	Door DOTL	T01 Door DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T01:S05	12201105	1221105	LCD Terminal	1	Duress	T01 Duress
T01:S06	10201106	1021106	LCD Terminal	1	Deadman	T01 Deadman
T01:S07	46101107	4611107	LCD Terminal	1	Pin Attempts	T01 Pin Attempts
T01:S08	14301108	1431108	LCD Terminal	1	LAN Comms	T01 LAN Comms
T02:Z01	14002101	1402101	LCD Terminal	2	Z01	T02:Z01
T02:Z02	14002102	1402102	LCD Terminal	2	Z02	T02:Z02
T02:S01	14502101	1452101	LCD Terminal	2	Cabinet Tamper	T02 Cabinet Tamper
T02:S02	12002102	1202102	LCD Terminal	2	Panic	T02 Panic
T02:S03	42302103	4232103	LCD Terminal	2	Door Forced	T02 Door Forced
T02:S04	42602104	4262104	LCD Terminal	2	Door DOTL	T02 Door DOTL
T02:S05	12202105	1222105	LCD Terminal	2	Duress	T02 Duress
T02:S06	10202106	1022106	LCD Terminal	2	Deadman	T02 Deadman
T02:S07	46102107	4612107	LCD Terminal	2	Pin Attempts	T02 Pin Attempts
T02:S08	14302108	1432108	LCD Terminal	2	LAN Comms	T02 LAN Comms
T03:Z01	14003101	1403101	LCD Terminal	3	Z01	T03:Z01
T03:Z02	14003102	1403102	LCD Terminal	3	Z02	T03:Z02
T03:S01	14503101	1453101	LCD Terminal	3	Cabinet Tamper	T03 Cabinet Tamper
T03:S02	12003102	1203102	LCD Terminal	3	Panic	T03 Panic
T03:S03	42303103	4233103	LCD Terminal	3	Door Forced	T03 Door Forced
T03:S04	42603104	4263104	LCD Terminal	3	Door DOTL	T03 Door DOTL
T03:S05	12203105	1223105	LCD Terminal	3	Duress	T03 Duress
T03:S06	10203106	1023106	LCD Terminal	3	Deadman	T03 Deadman
T03:S07	46103107	4613107	LCD Terminal	3	Pin Attempts	T03 Pin Attempts
T03:S08	14303108	1433108	LCD Terminal	3	LAN Comms	T03 LAN Comms
T04:Z01	14004101	1404101	LCD Terminal	4	Z01	T04:Z01
T04:Z02	14004102	1404102	LCD Terminal	4	Z02	T04:Z02
T04:S01	14504101	1454101	LCD Terminal	4	Cabinet Tamper	T04 Cabinet Tamper
T04:S02	12004102	1204102	LCD Terminal	4	Panic	T04 Panic
T04:S03	42304103	4234103	LCD Terminal	4	Door Forced	T04 Door Forced
T04:S04	42604104	4264104	LCD Terminal	4	Door DOTL	T04 Door DOTL
T04:S05	12204105	1224105	LCD Terminal	4	Duress	T04 Duress
T04:S06	10204106	1024106	LCD Terminal	4	Deadman	T04 Deadman
T04:S07	46104107	4614107	LCD Terminal	4	Pin Attempts	T04 Pin Attempts
T04:S08	14304108	1434108	LCD Terminal	4	LAN Comms	T04 LAN Comms
T05:Z01	14005101	1405101	LCD Terminal	5	Z01	T05:Z01
T05:Z02	14005102	1405102	LCD Terminal	5	Z02	T05:Z02
T05:S01	14505101	1455101	LCD Terminal	5	Cabinet Tamper	T05 Cabinet Tamper
T05:S02	12005102	1205102	LCD Terminal	5	Panic	T05 Panic
T05:S03	42305103	4235103	LCD Terminal	5	Door Forced	T05 Door Forced
T05:S04	42605104	4265104	LCD Terminal	5	Door DOTL	T05 Door DOTL
T05:S05	12205105	1225105	LCD Terminal	5	Duress	T05 Duress
T05:S06	10205106	1025106	LCD Terminal	5	Deadman	T05 Deadman
T05:S07	46105107	4615107	LCD Terminal	5	Pin Attempts	T05 Pin Attempts
T05:S08	14305108	1435108	LCD Terminal	5	LAN Comms	T05 LAN Comms
T06:Z01	14006101	1406101	LCD Terminal	6	Z01	T06:Z01
T06:Z02	14006102	1406102	LCD Terminal	6	Z02	T06:Z02
T06:S01	14506101	1456101	LCD Terminal	6	Cabinet Tamper	T06 Cabinet Tamper
T06:S02	12006102	1206102	LCD Terminal	6	Panic	T06 Panic
T06:S03	42306103	4236103	LCD Terminal	6	Door Forced	T06 Door Forced
T06:S04	42606104	4266104	LCD Terminal	6	Door DOTL	T06 Door DOTL
T06:S05	12206105	1226105	LCD Terminal	6	Duress	T06 Duress
T06:S06	10206106	1026106	LCD Terminal	6	Deadman	T06 Deadman
T06:S07	46106107	4616107	LCD Terminal	6	Pin Attempts	T06 Pin Attempts
T06:S08	14306108	1436108	LCD Terminal	6	LAN Comms	T06 LAN Comms
T07:Z01	14007101	1407101	LCD Terminal	7	Z01	T07:Z01
T07:Z02	14007102	1407102	LCD Terminal	7	Z02	T07:Z02
T07:S01	14507101	1457101	LCD Terminal	7	Cabinet Tamper	T07 Cabinet Tamper

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T07:S02	12007102	1207102	LCD Terminal	7	Panic	T07 Panic
T07:S03	42307103	4237103	LCD Terminal	7	Door Forced	T07 Door Forced
T07:S04	42607104	4267104	LCD Terminal	7	Door DOTL	T07 Door DOTL
T07:S05	12207105	1227105	LCD Terminal	7	Duress	T07 Duress
T07:S06	10207106	1027106	LCD Terminal	7	Deadman	T07 Deadman
T07:S07	46107107	4617107	LCD Terminal	7	Pin Attempts	T07 Pin Attempts
T07:S08	14307108	1437108	LCD Terminal	7	LAN Comms	T07 LAN Comms
T08:Z01	14008101	1408101	LCD Terminal	8	Z01	T08:Z01
T08:Z02	14008102	1408102	LCD Terminal	8	Z02	T08:Z02
T08:S01	14508101	1458101	LCD Terminal	8	Cabinet Tamper	T08 Cabinet Tamper
T08:S02	12008102	1208102	LCD Terminal	8	Panic	T08 Panic
T08:S03	42308103	4238103	LCD Terminal	8	Door Forced	T08 Door Forced
T08:S04	42608104	4268104	LCD Terminal	8	Door DOTL	T08 Door DOTL
T08:S05	12208105	1228105	LCD Terminal	8	Duress	T08 Duress
T08:S06	10208106	1028106	LCD Terminal	8	Deadman	T08 Deadman
T08:S07	46108107	4618107	LCD Terminal	8	Pin Attempts	T08 Pin Attempts
T08:S08	14308108	1438108	LCD Terminal	8	LAN Comms	T08 LAN Comms
T09:Z01	14009101	1409101	LCD Terminal	9	Z01	T09:Z01
T09:Z02	14009102	1409102	LCD Terminal	9	Z02	T09:Z02
T09:S01	14509101	1459101	LCD Terminal	9	Cabinet Tamper	T09 Cabinet Tamper
T09:S02	12009102	1209102	LCD Terminal	9	Panic	T09 Panic
T09:S03	42309103	4239103	LCD Terminal	9	Door Forced	T09 Door Forced
T09:S04	42609104	4269104	LCD Terminal	9	Door DOTL	T09 Door DOTL
T09:S05	12209105	1229105	LCD Terminal	9	Duress	T09 Duress
T09:S06	10209106	1029106	LCD Terminal	9	Deadman	T09 Deadman
T09:S07	46109107	4619107	LCD Terminal	9	Pin Attempts	T09 Pin Attempts
T09:S08	14309108	1439108	LCD Terminal	9	LAN Comms	T09 LAN Comms
T10:Z01	14010101	140A101	LCD Terminal	10	Z01	T10:Z01
T10:Z02	14010102	140A102	LCD Terminal	10	Z02	T10:Z02
T10:S01	14510101	145A101	LCD Terminal	10	Cabinet Tamper	T10 Cabinet Tamper
T10:S02	12010102	120A102	LCD Terminal	10	Panic	T10 Panic
T10:S03	42310103	423A103	LCD Terminal	10	Door Forced	T10 Door Forced
T10:S04	42610104	426A104	LCD Terminal	10	Door DOTL	T10 Door DOTL
T10:S05	12210105	122A105	LCD Terminal	10	Duress	T10 Duress
T10:S06	10210106	102A106	LCD Terminal	10	Deadman	T10 Deadman
T10:S07	46110107	461A107	LCD Terminal	10	Pin Attempts	T10 Pin Attempts
T10:S08	14310108	143A108	LCD Terminal	10	LAN Comms	T10 LAN Comms
T11:Z01	14011101	140B101	LCD Terminal	11	Z01	T11:Z01
T11:Z02	14011102	140B102	LCD Terminal	11	Z02	T11:Z02
T11:S01	14511101	145B101	LCD Terminal	11	Cabinet Tamper	T11 Cabinet Tamper
T11:S02	12011102	120B102	LCD Terminal	11	Panic	T11 Panic
T11:S03	42311103	423B103	LCD Terminal	11	Door Forced	T11 Door Forced
T11:S04	42611104	426B104	LCD Terminal	11	Door DOTL	T11 Door DOTL
T11:S05	12211105	122B105	LCD Terminal	11	Duress	T11 Duress
T11:S06	10211106	102B106	LCD Terminal	11	Deadman	T11 Deadman
T11:S07	46111107	461B107	LCD Terminal	11	Pin Attempts	T11 Pin Attempts
T11:S08	14311108	143B108	LCD Terminal	11	LAN Comms	T11 LAN Comms
T12:Z01	14012101	140C101	LCD Terminal	12	Z01	T12:Z01
T12:Z02	14012102	140C102	LCD Terminal	12	Z02	T12:Z02
T12:S01	14512101	145C101	LCD Terminal	12	Cabinet Tamper	T12 Cabinet Tamper
T12:S02	12012102	120C102	LCD Terminal	12	Panic	T12 Panic
T12:S03	42312103	423C103	LCD Terminal	12	Door Forced	T12 Door Forced
T12:S04	42612104	426C104	LCD Terminal	12	Door DOTL	T12 Door DOTL
T12:S05	12212105	122C105	LCD Terminal	12	Duress	T12 Duress
T12:S06	10212106	102C106	LCD Terminal	12	Deadman	T12 Deadman
T12:S07	46112107	461C107	LCD Terminal	12	Pin Attempts	T12 Pin Attempts
T12:S08	14312108	143C108	LCD Terminal	12	LAN Comms	T12 LAN Comms

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T13:Z01	14013101	140D101	LCD Terminal	13	Z01	T13:Z01
T13:Z02	14013102	140D102	LCD Terminal	13	Z02	T13:Z02
T13:S01	14513101	145D101	LCD Terminal	13	Cabinet Tamper	T13 Cabinet Tamper
T13:S02	12013102	120D102	LCD Terminal	13	Panic	T13 Panic
T13:S03	42313103	423D103	LCD Terminal	13	Door Forced	T13 Door Forced
T13:S04	42613104	426D104	LCD Terminal	13	Door DOTL	T13 Door DOTL
T13:S05	12213105	122D105	LCD Terminal	13	Duress	T13 Duress
T13:S06	10213106	102D106	LCD Terminal	13	Deadman	T13 Deadman
T13:S07	46113107	461D107	LCD Terminal	13	Pin Attempts	T13 Pin Attempts
T13:S08	14313108	143D108	LCD Terminal	13	LAN Comms	T13 LAN Comms
T14:Z01	14014101	140E101	LCD Terminal	14	Z01	T14:Z01
T14:Z02	14014102	140E102	LCD Terminal	14	Z02	T14:Z02
T14:S01	14514101	145E101	LCD Terminal	14	Cabinet Tamper	T14 Cabinet Tamper
T14:S02	12014102	120E102	LCD Terminal	14	Panic	T14 Panic
T14:S03	42314103	423E103	LCD Terminal	14	Door Forced	T14 Door Forced
T14:S04	42614104	426E104	LCD Terminal	14	Door DOTL	T14 Door DOTL
T14:S05	12214105	122E105	LCD Terminal	14	Duress	T14 Duress
T14:S06	10214106	102E106	LCD Terminal	14	Deadman	T14 Deadman
T14:S07	46114107	461E107	LCD Terminal	14	Pin Attempts	T14 Pin Attempts
T14:S08	14314108	143E108	LCD Terminal	14	LAN Comms	T14 LAN Comms
T15:Z01	14015101	140F101	LCD Terminal	15	Z01	T15:Z01
T15:Z02	14015102	140F102	LCD Terminal	15	Z02	T15:Z02
T15:S01	14515101	145F101	LCD Terminal	15	Cabinet Tamper	T15 Cabinet Tamper
T15:S02	12015102	120F102	LCD Terminal	15	Panic	T15 Panic
T15:S03	42315103	423F103	LCD Terminal	15	Door Forced	T15 Door Forced
T15:S04	42615104	426F104	LCD Terminal	15	Door DOTL	T15 Door DOTL
T15:S05	12215105	122F105	LCD Terminal	15	Duress	T15 Duress
T15:S06	10215106	102F106	LCD Terminal	15	Deadman	T15 Deadman
T15:S07	46115107	461F107	LCD Terminal	15	Pin Attempts	T15 Pin Attempts
T15:S08	14315108	143F108	LCD Terminal	15	LAN Comms	T15 LAN Comms
T16:Z01	14016101	140G101	LCD Terminal	16	Z01	T16:Z01
T16:Z02	14016102	140G102	LCD Terminal	16	Z02	T16:Z02
T16:S01	14516101	145G101	LCD Terminal	16	Cabinet Tamper	T16 Cabinet Tamper
T16:S02	12016102	120G102	LCD Terminal	16	Panic	T16 Panic
T16:S03	42316103	423G103	LCD Terminal	16	Door Forced	T16 Door Forced
T16:S04	42616104	426G104	LCD Terminal	16	Door DOTL	T16 Door DOTL
T16:S05	12216105	122G105	LCD Terminal	16	Duress	T16 Duress
T16:S06	10216106	102G106	LCD Terminal	16	Deadman	T16 Deadman
T16:S07	46116107	461G107	LCD Terminal	16	Pin Attempts	T16 Pin Attempts
T16:S08	14316108	143G108	LCD Terminal	16	LAN Comms	T16 LAN Comms
T17:Z01	14017101	140H101	LCD Terminal	17	Z01	T17:Z01
T17:Z02	14017102	140H102	LCD Terminal	17	Z02	T17:Z02
T17:S01	14517101	145H101	LCD Terminal	17	Cabinet Tamper	T17 Cabinet Tamper
T17:S02	12017102	120H102	LCD Terminal	17	Panic	T17 Panic
T17:S03	42317103	423H103	LCD Terminal	17	Door Forced	T17 Door Forced
T17:S04	42617104	426H104	LCD Terminal	17	Door DOTL	T17 Door DOTL
T17:S05	12217105	122H105	LCD Terminal	17	Duress	T17 Duress
T17:S06	10217106	102H106	LCD Terminal	17	Deadman	T17 Deadman
T17:S07	46117107	461H107	LCD Terminal	17	Pin Attempts	T17 Pin Attempts
T17:S08	14317108	143H108	LCD Terminal	17	LAN Comms	T17 LAN Comms
T18:Z01	14018101	140I101	LCD Terminal	18	Z01	T18:Z01
T18:Z02	14018102	140I102	LCD Terminal	18	Z02	T18:Z02
T18:S01	14518101	145I101	LCD Terminal	18	Cabinet Tamper	T18 Cabinet Tamper
T18:S02	12018102	120I102	LCD Terminal	18	Panic	T18 Panic
T18:S03	42318103	423I103	LCD Terminal	18	Door Forced	T18 Door Forced
T18:S04	42618104	426I104	LCD Terminal	18	Door DOTL	T18 Door DOTL
T18:S05	12218105	122I105	LCD Terminal	18	Duress	T18 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T18:S06	10218106	102I106	LCD Terminal	18	Deadman	T18 Deadman
T18:S07	46118107	461I107	LCD Terminal	18	Pin Attempts	T18 Pin Attempts
T18:S08	14318108	143I108	LCD Terminal	18	LAN Comms	T18 LAN Comms
T19:Z01	14019101	140J101	LCD Terminal	19	Z01	T19:Z01
T19:Z02	14019102	140J102	LCD Terminal	19	Z02	T19:Z02
T19:S01	14519101	145J101	LCD Terminal	19	Cabinet Tamper	T19 Cabinet Tamper
T19:S02	12019102	120J102	LCD Terminal	19	Panic	T19 Panic
T19:S03	42319103	423J103	LCD Terminal	19	Door Forced	T19 Door Forced
T19:S04	42619104	426J104	LCD Terminal	19	Door DOTL	T19 Door DOTL
T19:S05	12219105	122J105	LCD Terminal	19	Duress	T19 Duress
T19:S06	10219106	102J106	LCD Terminal	19	Deadman	T19 Deadman
T19:S07	46119107	461J107	LCD Terminal	19	Pin Attempts	T19 Pin Attempts
T19:S08	14319108	143J108	LCD Terminal	19	LAN Comms	T19 LAN Comms
T20:Z01	14020101	140K101	LCD Terminal	20	Z01	T20:Z01
T20:Z02	14020102	140K102	LCD Terminal	20	Z02	T20:Z02
T20:S01	14520101	145K101	LCD Terminal	20	Cabinet Tamper	T20 Cabinet Tamper
T20:S02	12020102	120K102	LCD Terminal	20	Panic	T20 Panic
T20:S03	42320103	423K103	LCD Terminal	20	Door Forced	T20 Door Forced
T20:S04	42620104	426K104	LCD Terminal	20	Door DOTL	T20 Door DOTL
T20:S05	12220105	122K105	LCD Terminal	20	Duress	T20 Duress
T20:S06	10220106	102K106	LCD Terminal	20	Deadman	T20 Deadman
T20:S07	46120107	461K107	LCD Terminal	20	Pin Attempts	T20 Pin Attempts
T20:S08	14320108	143K108	LCD Terminal	20	LAN Comms	T20 LAN Comms
T21:Z01	14021101	140L101	LCD Terminal	21	Z01	T21:Z01
T21:Z02	14021102	140L102	LCD Terminal	21	Z02	T21:Z02
T21:S01	14521101	145L101	LCD Terminal	21	Cabinet Tamper	T21 Cabinet Tamper
T21:S02	12021102	120L102	LCD Terminal	21	Panic	T21 Panic
T21:S03	42321103	423L103	LCD Terminal	21	Door Forced	T21 Door Forced
T21:S04	42621104	426L104	LCD Terminal	21	Door DOTL	T21 Door DOTL
T21:S05	12221105	122L105	LCD Terminal	21	Duress	T21 Duress
T21:S06	10221106	102L106	LCD Terminal	21	Deadman	T21 Deadman
T21:S07	46121107	461L107	LCD Terminal	21	Pin Attempts	T21 Pin Attempts
T21:S08	14321108	143L108	LCD Terminal	21	LAN Comms	T21 LAN Comms
T22:Z01	14022101	140M101	LCD Terminal	22	Z01	T22:Z01
T22:Z02	14022102	140M102	LCD Terminal	22	Z02	T22:Z02
T22:S01	14522101	145M101	LCD Terminal	22	Cabinet Tamper	T22 Cabinet Tamper
T22:S02	12022102	120M102	LCD Terminal	22	Panic	T22 Panic
T22:S03	42322103	423M103	LCD Terminal	22	Door Forced	T22 Door Forced
T22:S04	42622104	426M104	LCD Terminal	22	Door DOTL	T22 Door DOTL
T22:S05	12222105	122M105	LCD Terminal	22	Duress	T22 Duress
T22:S06	10222106	102M106	LCD Terminal	22	Deadman	T22 Deadman
T22:S07	46122107	461M107	LCD Terminal	22	Pin Attempts	T22 Pin Attempts
T22:S08	14322108	143M108	LCD Terminal	22	LAN Comms	T22 LAN Comms
T23:Z01	14023101	140N101	LCD Terminal	23	Z01	T23:Z01
T23:Z02	14023102	140N102	LCD Terminal	23	Z02	T23:Z02
T23:S01	14523101	145N101	LCD Terminal	23	Cabinet Tamper	T23 Cabinet Tamper
T23:S02	12023102	120N102	LCD Terminal	23	Panic	T23 Panic
T23:S03	42323103	423N103	LCD Terminal	23	Door Forced	T23 Door Forced
T23:S04	42623104	426N104	LCD Terminal	23	Door DOTL	T23 Door DOTL
T23:S05	12223105	122N105	LCD Terminal	23	Duress	T23 Duress
T23:S06	10223106	102N106	LCD Terminal	23	Deadman	T23 Deadman
T23:S07	46123107	461N107	LCD Terminal	23	Pin Attempts	T23 Pin Attempts
T23:S08	14323108	143N108	LCD Terminal	23	LAN Comms	T23 LAN Comms
T24:Z01	14024101	140O101	LCD Terminal	24	Z01	T24:Z01
T24:Z02	14024102	140O102	LCD Terminal	24	Z02	T24:Z02
T24:S01	14524101	145O101	LCD Terminal	24	Cabinet Tamper	T24 Cabinet Tamper
T24:S02	12024102	120O102	LCD Terminal	24	Panic	T24 Panic

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T24:S03	42324103	423O103	LCD Terminal	24	Door Forced	T24 Door Forced
T24:S04	42624104	426O104	LCD Terminal	24	Door DOTL	T24 Door DOTL
T24:S05	12224105	122O105	LCD Terminal	24	Duress	T24 Duress
T24:S06	10224106	102O106	LCD Terminal	24	Deadman	T24 Deadman
T24:S07	46124107	461O107	LCD Terminal	24	Pin Attempts	T24 Pin Attempts
T24:S08	14324108	143O108	LCD Terminal	24	LAN Comms	T24 LAN Comms
T25:Z01	14025101	140P101	LCD Terminal	25	Z01	T25:Z01
T25:Z02	14025102	140P102	LCD Terminal	25	Z02	T25:Z02
T25:S01	14525101	145P101	LCD Terminal	25	Cabinet Tamper	T25 Cabinet Tamper
T25:S02	12025102	120P102	LCD Terminal	25	Panic	T25 Panic
T25:S03	42325103	423P103	LCD Terminal	25	Door Forced	T25 Door Forced
T25:S04	42625104	426P104	LCD Terminal	25	Door DOTL	T25 Door DOTL
T25:S05	12225105	122P105	LCD Terminal	25	Duress	T25 Duress
T25:S06	10225106	102P106	LCD Terminal	25	Deadman	T25 Deadman
T25:S07	46125107	461P107	LCD Terminal	25	Pin Attempts	T25 Pin Attempts
T25:S08	14325108	143P108	LCD Terminal	25	LAN Comms	T25 LAN Comms
T26:Z01	14026101	140Q101	LCD Terminal	26	Z01	T26:Z01
T26:Z02	14026102	140Q102	LCD Terminal	26	Z02	T26:Z02
T26:S01	14526101	145Q101	LCD Terminal	26	Cabinet Tamper	T26 Cabinet Tamper
T26:S02	12026102	120Q102	LCD Terminal	26	Panic	T26 Panic
T26:S03	42326103	423Q103	LCD Terminal	26	Door Forced	T26 Door Forced
T26:S04	42626104	426Q104	LCD Terminal	26	Door DOTL	T26 Door DOTL
T26:S05	12226105	122Q105	LCD Terminal	26	Duress	T26 Duress
T26:S06	10226106	102Q106	LCD Terminal	26	Deadman	T26 Deadman
T26:S07	46126107	461Q107	LCD Terminal	26	Pin Attempts	T26 Pin Attempts
T26:S08	14326108	143Q108	LCD Terminal	26	LAN Comms	T26 LAN Comms
T27:Z01	14027101	140R101	LCD Terminal	27	Z01	T27:Z01
T27:Z02	14027102	140R102	LCD Terminal	27	Z02	T27:Z02
T27:S01	14527101	145R101	LCD Terminal	27	Cabinet Tamper	T27 Cabinet Tamper
T27:S02	12027102	120R102	LCD Terminal	27	Panic	T27 Panic
T27:S03	42327103	423R103	LCD Terminal	27	Door Forced	T27 Door Forced
T27:S04	42627104	426R104	LCD Terminal	27	Door DOTL	T27 Door DOTL
T27:S05	12227105	122R105	LCD Terminal	27	Duress	T27 Duress
T27:S06	10227106	102R106	LCD Terminal	27	Deadman	T27 Deadman
T27:S07	46127107	461R107	LCD Terminal	27	Pin Attempts	T27 Pin Attempts
T27:S08	14327108	143R108	LCD Terminal	27	LAN Comms	T27 LAN Comms
T28:Z01	14028101	140S101	LCD Terminal	28	Z01	T28:Z01
T28:Z02	14028102	140S102	LCD Terminal	28	Z02	T28:Z02
T28:S01	14528101	145S101	LCD Terminal	28	Cabinet Tamper	T28 Cabinet Tamper
T28:S02	12028102	120S102	LCD Terminal	28	Panic	T28 Panic
T28:S03	42328103	423S103	LCD Terminal	28	Door Forced	T28 Door Forced
T28:S04	42628104	426S104	LCD Terminal	28	Door DOTL	T28 Door DOTL
T28:S05	12228105	122S105	LCD Terminal	28	Duress	T28 Duress
T28:S06	10228106	102S106	LCD Terminal	28	Deadman	T28 Deadman
T28:S07	46128107	461S107	LCD Terminal	28	Pin Attempts	T28 Pin Attempts
T28:S08	14328108	143S108	LCD Terminal	28	LAN Comms	T28 LAN Comms
T29:Z01	14029101	140T101	LCD Terminal	29	Z01	T29:Z01
T29:Z02	14029102	140T102	LCD Terminal	29	Z02	T29:Z02
T29:S01	14529101	145T101	LCD Terminal	29	Cabinet Tamper	T29 Cabinet Tamper
T29:S02	12029102	120T102	LCD Terminal	29	Panic	T29 Panic
T29:S03	42329103	423T103	LCD Terminal	29	Door Forced	T29 Door Forced
T29:S04	42629104	426T104	LCD Terminal	29	Door DOTL	T29 Door DOTL
T29:S05	12229105	122T105	LCD Terminal	29	Duress	T29 Duress
T29:S06	10229106	102T106	LCD Terminal	29	Deadman	T29 Deadman
T29:S07	46129107	461T107	LCD Terminal	29	Pin Attempts	T29 Pin Attempts
T29:S08	14329108	143T108	LCD Terminal	29	LAN Comms	T29 LAN Comms
T30:Z01	14030101	140U101	LCD Terminal	30	Z01	T30:Z01

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T30:Z02	14030102	140U102	LCD Terminal	30	Z02	T30:Z02
T30:S01	14530101	145U101	LCD Terminal	30	Cabinet Tamper	T30 Cabinet Tamper
T30:S02	12030102	120U102	LCD Terminal	30	Panic	T30 Panic
T30:S03	42330103	423U103	LCD Terminal	30	Door Forced	T30 Door Forced
T30:S04	42630104	426U104	LCD Terminal	30	Door DOTL	T30 Door DOTL
T30:S05	12230105	122U105	LCD Terminal	30	Duress	T30 Duress
T30:S06	10230106	102U106	LCD Terminal	30	Deadman	T30 Deadman
T30:S07	46130107	461U107	LCD Terminal	30	Pin Attempts	T30 Pin Attempts
T30:S08	14330108	143U108	LCD Terminal	30	LAN Comms	T30 LAN Comms
T31:Z01	14031101	140V101	LCD Terminal	31	Z01	T31:Z01
T31:Z02	14031102	140V102	LCD Terminal	31	Z02	T31:Z02
T31:S01	14531101	145V101	LCD Terminal	31	Cabinet Tamper	T31 Cabinet Tamper
T31:S02	12031102	120V102	LCD Terminal	31	Panic	T31 Panic
T31:S03	42331103	423V103	LCD Terminal	31	Door Forced	T31 Door Forced
T31:S04	42631104	426V104	LCD Terminal	31	Door DOTL	T31 Door DOTL
T31:S05	12231105	122V105	LCD Terminal	31	Duress	T31 Duress
T31:S06	10231106	102V106	LCD Terminal	31	Deadman	T31 Deadman
T31:S07	46131107	461V107	LCD Terminal	31	Pin Attempts	T31 Pin Attempts
T31:S08	14331108	143V108	LCD Terminal	31	LAN Comms	T31 LAN Comms
T32:Z01	14032101	140W101	LCD Terminal	32	Z01	T32:Z01
T32:Z02	14032102	140W102	LCD Terminal	32	Z02	T32:Z02
T32:S01	14532101	145W101	LCD Terminal	32	Cabinet Tamper	T32 Cabinet Tamper
T32:S02	12032102	120W102	LCD Terminal	32	Panic	T32 Panic
T32:S03	42332103	423W103	LCD Terminal	32	Door Forced	T32 Door Forced
T32:S04	42632104	426W104	LCD Terminal	32	Door DOTL	T32 Door DOTL
T32:S05	12232105	122W105	LCD Terminal	32	Duress	T32 Duress
T32:S06	10232106	102W106	LCD Terminal	32	Deadman	T32 Deadman
T32:S07	46132107	461W107	LCD Terminal	32	Pin Attempts	T32 Pin Attempts
T32:S08	14332108	143W108	LCD Terminal	32	LAN Comms	T32 LAN Comms
T33:Z01	14033101	140X101	LCD Terminal	33	Z01	T33:Z01
T33:Z02	14033102	140X102	LCD Terminal	33	Z02	T33:Z02
T33:S01	14533101	145X101	LCD Terminal	33	Cabinet Tamper	T33 Cabinet Tamper
T33:S02	12033102	120X102	LCD Terminal	33	Panic	T33 Panic
T33:S03	42333103	423X103	LCD Terminal	33	Door Forced	T33 Door Forced
T33:S04	42633104	426X104	LCD Terminal	33	Door DOTL	T33 Door DOTL
T33:S05	12233105	122X105	LCD Terminal	33	Duress	T33 Duress
T33:S06	10233106	102X106	LCD Terminal	33	Deadman	T33 Deadman
T33:S07	46133107	461X107	LCD Terminal	33	Pin Attempts	T33 Pin Attempts
T33:S08	14333108	143X108	LCD Terminal	33	LAN Comms	T33 LAN Comms
T34:Z01	14034101	140Y101	LCD Terminal	34	Z01	T34:Z01
T34:Z02	14034102	140Y102	LCD Terminal	34	Z02	T34:Z02
T34:S01	14534101	145Y101	LCD Terminal	34	Cabinet Tamper	T34 Cabinet Tamper
T34:S02	12034102	120Y102	LCD Terminal	34	Panic	T34 Panic
T34:S03	42334103	423Y103	LCD Terminal	34	Door Forced	T34 Door Forced
T34:S04	42634104	426Y104	LCD Terminal	34	Door DOTL	T34 Door DOTL
T34:S05	12234105	122Y105	LCD Terminal	34	Duress	T34 Duress
T34:S06	10234106	102Y106	LCD Terminal	34	Deadman	T34 Deadman
T34:S07	46134107	461Y107	LCD Terminal	34	Pin Attempts	T34 Pin Attempts
T34:S08	14334108	143Y108	LCD Terminal	34	LAN Comms	T34 LAN Comms
T35-T99:Z01	14035101	140Z101	LCD Terminal	35	Z01	T35-T99:Z01
T35-T99:Z02	14035102	140Z102	LCD Terminal	35	Z02	T35-T99:Z02
T35-T99:S01	14535101	145Z101	LCD Terminal	35	Cabinet Tamper	T35-T99 Cabinet Tamper
T35-T99:S02	12035102	120Z102	LCD Terminal	35	Panic	T35-T99 Panic
T35-T99:S03	42335103	423Z103	LCD Terminal	35	Door Forced	T35-T99 Door Forced
T35-T99:S04	42635104	426Z104	LCD Terminal	35	Door DOTL	T35-T99 Door DOTL
T35-T99:S05	12235105	122Z105	LCD Terminal	35	Duress	T35-T99 Duress
T35-T99:S06	10235106	102Z106	LCD Terminal	35	Deadman	T35-T99 Deadman

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
T35-T99:S07	46135107	4612107	LCD Terminal	35	Pin Attempts	T35-T99 Pin Attempts
T35-T99:S08	14335108	1432108	LCD Terminal	35	LAN Comms	T35-T99 LAN Comms
K01:Z01	14001101	1401101	Touchscreen	1	Z01	K01:Z01
K01:Z02	14001102	1401102	Touchscreen	1	Z02	K01:Z02
K01:S01	14501101	1451101	Touchscreen	1	Cabinet Tamper	K01 Cabinet Tamper
K01:S02	12001102	1201102	Touchscreen	1	Panic	K01 Panic
K01:S03	42301103	4231103	Touchscreen	1	Door Forced	K01 Door Forced
K01:S04	42601104	4261104	Touchscreen	1	Door DOTL	K01 Door DOTL
K01:S05	12201105	1221105	Touchscreen	1	Duress	K01 Duress
K01:S06	10201106	1021106	Touchscreen	1	Deadman	K01 Deadman
K01:S07	46101107	4611107	Touchscreen	1	Pin Attempts	K01 Pin Attempts
K01:S08	14301108	1431108	Touchscreen	1	LAN Comms	K01 LAN Comms
K02:Z01	14002101	1402101	Touchscreen	2	Z01	K02:Z01
K02:Z02	14002102	1402102	Touchscreen	2	Z02	K02:Z02
K02:S01	14502101	1452101	Touchscreen	2	Cabinet Tamper	K02 Cabinet Tamper
K02:S02	12002102	1202102	Touchscreen	2	Panic	K02 Panic
K02:S03	42302103	4232103	Touchscreen	2	Door Forced	K02 Door Forced
K02:S04	42602104	4262104	Touchscreen	2	Door DOTL	K02 Door DOTL
K02:S05	12202105	1222105	Touchscreen	2	Duress	K02 Duress
K02:S06	10202106	1022106	Touchscreen	2	Deadman	K02 Deadman
K02:S07	46102107	4612107	Touchscreen	2	Pin Attempts	K02 Pin Attempts
K02:S08	14302108	1432108	Touchscreen	2	LAN Comms	K02 LAN Comms
K03:Z01	14003101	1403101	Touchscreen	3	Z01	K03:Z01
K03:Z02	14003102	1403102	Touchscreen	3	Z02	K03:Z02
K03:S01	14503101	1453101	Touchscreen	3	Cabinet Tamper	K03 Cabinet Tamper
K03:S02	12003102	1203102	Touchscreen	3	Panic	K03 Panic
K03:S03	42303103	4233103	Touchscreen	3	Door Forced	K03 Door Forced
K03:S04	42603104	4263104	Touchscreen	3	Door DOTL	K03 Door DOTL
K03:S05	12203105	1223105	Touchscreen	3	Duress	K03 Duress
K03:S06	10203106	1023106	Touchscreen	3	Deadman	K03 Deadman
K03:S07	46103107	4613107	Touchscreen	3	Pin Attempts	K03 Pin Attempts
K03:S08	14303108	1433108	Touchscreen	3	LAN Comms	K03 LAN Comms
K04:Z01	14004101	1404101	Touchscreen	4	Z01	K04:Z01
K04:Z02	14004102	1404102	Touchscreen	4	Z02	K04:Z02
K04:S01	14504101	1454101	Touchscreen	4	Cabinet Tamper	K04 Cabinet Tamper
K04:S02	12004102	1204102	Touchscreen	4	Panic	K04 Panic
K04:S03	42304103	4234103	Touchscreen	4	Door Forced	K04 Door Forced
K04:S04	42604104	4264104	Touchscreen	4	Door DOTL	K04 Door DOTL
K04:S05	12204105	1224105	Touchscreen	4	Duress	K04 Duress
K04:S06	10204106	1024106	Touchscreen	4	Deadman	K04 Deadman
K04:S07	46104107	4614107	Touchscreen	4	Pin Attempts	K04 Pin Attempts
K04:S08	14304108	1434108	Touchscreen	4	LAN Comms	K04 LAN Comms
K05:Z01	14005101	1405101	Touchscreen	5	Z01	K05:Z01
K05:Z02	14005102	1405102	Touchscreen	5	Z02	K05:Z02
K05:S01	14505101	1455101	Touchscreen	5	Cabinet Tamper	K05 Cabinet Tamper
K05:S02	12005102	1205102	Touchscreen	5	Panic	K05 Panic
K05:S03	42305103	4235103	Touchscreen	5	Door Forced	K05 Door Forced
K05:S04	42605104	4265104	Touchscreen	5	Door DOTL	K05 Door DOTL
K05:S05	12205105	1225105	Touchscreen	5	Duress	K05 Duress
K05:S06	10205106	1025106	Touchscreen	5	Deadman	K05 Deadman
K05:S07	46105107	4615107	Touchscreen	5	Pin Attempts	K05 Pin Attempts
K05:S08	14305108	1435108	Touchscreen	5	LAN Comms	K05 LAN Comms
K06:Z01	14006101	1406101	Touchscreen	6	Z01	K06:Z01
K06:Z02	14006102	1406102	Touchscreen	6	Z02	K06:Z02
K06:S01	14506101	1456101	Touchscreen	6	Cabinet Tamper	K06 Cabinet Tamper
K06:S02	12006102	1206102	Touchscreen	6	Panic	K06 Panic
K06:S03	42306103	4236103	Touchscreen	6	Door Forced	K06 Door Forced

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
K06:S04	42606104	4266104	Touchscreen	6	Door DOTL	K06 Door DOTL
K06:S05	12206105	1226105	Touchscreen	6	Duress	K06 Duress
K06:S06	10206106	1026106	Touchscreen	6	Deadman	K06 Deadman
K06:S07	46106107	4616107	Touchscreen	6	Pin Attempts	K06 Pin Attempts
K06:S08	14306108	1436108	Touchscreen	6	LAN Comms	K06 LAN Comms
K07:Z01	14007101	1407101	Touchscreen	7	Z01	K07:Z01
K07:Z02	14007102	1407102	Touchscreen	7	Z02	K07:Z02
K07:S01	14507101	1457101	Touchscreen	7	Cabinet Tamper	K07 Cabinet Tamper
K07:S02	12007102	1207102	Touchscreen	7	Panic	K07 Panic
K07:S03	42307103	4237103	Touchscreen	7	Door Forced	K07 Door Forced
K07:S04	42607104	4267104	Touchscreen	7	Door DOTL	K07 Door DOTL
K07:S05	12207105	1227105	Touchscreen	7	Duress	K07 Duress
K07:S06	10207106	1027106	Touchscreen	7	Deadman	K07 Deadman
K07:S07	46107107	4617107	Touchscreen	7	Pin Attempts	K07 Pin Attempts
K07:S08	14307108	1437108	Touchscreen	7	LAN Comms	K07 LAN Comms
K08:Z01	14008101	1408101	Touchscreen	8	Z01	K08:Z01
K08:Z02	14008102	1408102	Touchscreen	8	Z02	K08:Z02
K08:S01	14508101	1458101	Touchscreen	8	Cabinet Tamper	K08 Cabinet Tamper
K08:S02	12008102	1208102	Touchscreen	8	Panic	K08 Panic
K08:S03	42308103	4238103	Touchscreen	8	Door Forced	K08 Door Forced
K08:S04	42608104	4268104	Touchscreen	8	Door DOTL	K08 Door DOTL
K08:S05	12208105	1228105	Touchscreen	8	Duress	K08 Duress
K08:S06	10208106	1028106	Touchscreen	8	Deadman	K08 Deadman
K08:S07	46108107	4618107	Touchscreen	8	Pin Attempts	K08 Pin Attempts
K08:S08	14308108	1438108	Touchscreen	8	LAN Comms	K08 LAN Comms
K09:Z01	14009101	1409101	Touchscreen	9	Z01	K09:Z01
K09:Z02	14009102	1409102	Touchscreen	9	Z02	K09:Z02
K09:S01	14509101	1459101	Touchscreen	9	Cabinet Tamper	K09 Cabinet Tamper
K09:S02	12009102	1209102	Touchscreen	9	Panic	K09 Panic
K09:S03	42309103	4239103	Touchscreen	9	Door Forced	K09 Door Forced
K09:S04	42609104	4269104	Touchscreen	9	Door DOTL	K09 Door DOTL
K09:S05	12209105	1229105	Touchscreen	9	Duress	K09 Duress
K09:S06	10209106	1029106	Touchscreen	9	Deadman	K09 Deadman
K09:S07	46109107	4619107	Touchscreen	9	Pin Attempts	K09 Pin Attempts
K09:S08	14309108	1439108	Touchscreen	9	LAN Comms	K09 LAN Comms
K10:Z01	14010101	140A101	Touchscreen	10	Z01	K10:Z01
K10:Z02	14010102	140A102	Touchscreen	10	Z02	K10:Z02
K10:S01	14510101	145A101	Touchscreen	10	Cabinet Tamper	K10 Cabinet Tamper
K10:S02	12010102	120A102	Touchscreen	10	Panic	K10 Panic
K10:S03	42310103	423A103	Touchscreen	10	Door Forced	K10 Door Forced
K10:S04	42610104	426A104	Touchscreen	10	Door DOTL	K10 Door DOTL
K10:S05	12210105	122A105	Touchscreen	10	Duress	K10 Duress
K10:S06	10210106	102A106	Touchscreen	10	Deadman	K10 Deadman
K10:S07	46110107	461A107	Touchscreen	10	Pin Attempts	K10 Pin Attempts
K10:S08	14310108	143A108	Touchscreen	10	LAN Comms	K10 LAN Comms
K11:Z01	14011101	140B101	Touchscreen	11	Z01	K11:Z01
K11:Z02	14011102	140B102	Touchscreen	11	Z02	K11:Z02
K11:S01	14511101	145B101	Touchscreen	11	Cabinet Tamper	K11 Cabinet Tamper
K11:S02	12011102	120B102	Touchscreen	11	Panic	K11 Panic
K11:S03	42311103	423B103	Touchscreen	11	Door Forced	K11 Door Forced
K11:S04	42611104	426B104	Touchscreen	11	Door DOTL	K11 Door DOTL
K11:S05	12211105	122B105	Touchscreen	11	Duress	K11 Duress
K11:S06	10211106	102B106	Touchscreen	11	Deadman	K11 Deadman
K11:S07	46111107	461B107	Touchscreen	11	Pin Attempts	K11 Pin Attempts
K11:S08	14311108	143B108	Touchscreen	11	LAN Comms	K11 LAN Comms
K12:Z01	14012101	140C101	Touchscreen	12	Z01	K12:Z01
K12:Z02	14012102	140C102	Touchscreen	12	Z02	K12:Z02

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
K12:S01	14512101	145C101	Touchscreen	12	Cabinet Tamper	K12 Cabinet Tamper
K12:S02	12012102	120C102	Touchscreen	12	Panic	K12 Panic
K12:S03	42312103	423C103	Touchscreen	12	Door Forced	K12 Door Forced
K12:S04	42612104	426C104	Touchscreen	12	Door DOTL	K12 Door DOTL
K12:S05	12212105	122C105	Touchscreen	12	Duress	K12 Duress
K12:S06	10212106	102C106	Touchscreen	12	Deadman	K12 Deadman
K12:S07	46112107	461C107	Touchscreen	12	Pin Attempts	K12 Pin Attempts
K12:S08	14312108	143C108	Touchscreen	12	LAN Comms	K12 LAN Comms
K13:Z01	14013101	140D101	Touchscreen	13	Z01	K13:Z01
K13:Z02	14013102	140D102	Touchscreen	13	Z02	K13:Z02
K13:S01	14513101	145D101	Touchscreen	13	Cabinet Tamper	K13 Cabinet Tamper
K13:S02	12013102	120D102	Touchscreen	13	Panic	K13 Panic
K13:S03	42313103	423D103	Touchscreen	13	Door Forced	K13 Door Forced
K13:S04	42613104	426D104	Touchscreen	13	Door DOTL	K13 Door DOTL
K13:S05	12213105	122D105	Touchscreen	13	Duress	K13 Duress
K13:S06	10213106	102D106	Touchscreen	13	Deadman	K13 Deadman
K13:S07	46113107	461D107	Touchscreen	13	Pin Attempts	K13 Pin Attempts
K13:S08	14313108	143D108	Touchscreen	13	LAN Comms	K13 LAN Comms
K14:Z01	14014101	140E101	Touchscreen	14	Z01	K14:Z01
K14:Z02	14014102	140E102	Touchscreen	14	Z02	K14:Z02
K14:S01	14514101	145E101	Touchscreen	14	Cabinet Tamper	K14 Cabinet Tamper
K14:S02	12014102	120E102	Touchscreen	14	Panic	K14 Panic
K14:S03	42314103	423E103	Touchscreen	14	Door Forced	K14 Door Forced
K14:S04	42614104	426E104	Touchscreen	14	Door DOTL	K14 Door DOTL
K14:S05	12214105	122E105	Touchscreen	14	Duress	K14 Duress
K14:S06	10214106	102E106	Touchscreen	14	Deadman	K14 Deadman
K14:S07	46114107	461E107	Touchscreen	14	Pin Attempts	K14 Pin Attempts
K14:S08	14314108	143E108	Touchscreen	14	LAN Comms	K14 LAN Comms
K15:Z01	14015101	140F101	Touchscreen	15	Z01	K15:Z01
K15:Z02	14015102	140F102	Touchscreen	15	Z02	K15:Z02
K15:S01	14515101	145F101	Touchscreen	15	Cabinet Tamper	K15 Cabinet Tamper
K15:S02	12015102	120F102	Touchscreen	15	Panic	K15 Panic
K15:S03	42315103	423F103	Touchscreen	15	Door Forced	K15 Door Forced
K15:S04	42615104	426F104	Touchscreen	15	Door DOTL	K15 Door DOTL
K15:S05	12215105	122F105	Touchscreen	15	Duress	K15 Duress
K15:S06	10215106	102F106	Touchscreen	15	Deadman	K15 Deadman
K15:S07	46115107	461F107	Touchscreen	15	Pin Attempts	K15 Pin Attempts
K15:S08	14315108	143F108	Touchscreen	15	LAN Comms	K15 LAN Comms
K16:Z01	14016101	140G101	Touchscreen	16	Z01	K16:Z01
K16:Z02	14016102	140G102	Touchscreen	16	Z02	K16:Z02
K16:S01	14516101	145G101	Touchscreen	16	Cabinet Tamper	K16 Cabinet Tamper
K16:S02	12016102	120G102	Touchscreen	16	Panic	K16 Panic
K16:S03	42316103	423G103	Touchscreen	16	Door Forced	K16 Door Forced
K16:S04	42616104	426G104	Touchscreen	16	Door DOTL	K16 Door DOTL
K16:S05	12216105	122G105	Touchscreen	16	Duress	K16 Duress
K16:S06	10216106	102G106	Touchscreen	16	Deadman	K16 Deadman
K16:S07	46116107	461G107	Touchscreen	16	Pin Attempts	K16 Pin Attempts
K16:S08	14316108	143G108	Touchscreen	16	LAN Comms	K16 LAN Comms
K17:Z01	14017101	140H101	Touchscreen	17	Z01	K17:Z01
K17:Z02	14017102	140H102	Touchscreen	17	Z02	K17:Z02
K17:S01	14517101	145H101	Touchscreen	17	Cabinet Tamper	K17 Cabinet Tamper
K17:S02	12017102	120H102	Touchscreen	17	Panic	K17 Panic
K17:S03	42317103	423H103	Touchscreen	17	Door Forced	K17 Door Forced
K17:S04	42617104	426H104	Touchscreen	17	Door DOTL	K17 Door DOTL
K17:S05	12217105	122H105	Touchscreen	17	Duress	K17 Duress
K17:S06	10217106	102H106	Touchscreen	17	Deadman	K17 Deadman
K17:S07	46117107	461H107	Touchscreen	17	Pin Attempts	K17 Pin Attempts

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
K17:S08	14317108	143H108	Touchscreen	17	LAN Comms	K17 LAN Comms
K18:Z01	14018101	140I101	Touchscreen	18	Z01	K18:Z01
K18:Z02	14018102	140I102	Touchscreen	18	Z02	K18:Z02
K18:S01	14518101	145I101	Touchscreen	18	Cabinet Tamper	K18 Cabinet Tamper
K18:S02	12018102	120I102	Touchscreen	18	Panic	K18 Panic
K18:S03	42318103	423I103	Touchscreen	18	Door Forced	K18 Door Forced
K18:S04	42618104	426I104	Touchscreen	18	Door DOTL	K18 Door DOTL
K18:S05	12218105	122I105	Touchscreen	18	Duress	K18 Duress
K18:S06	10218106	102I106	Touchscreen	18	Deadman	K18 Deadman
K18:S07	46118107	461I107	Touchscreen	18	Pin Attempts	K18 Pin Attempts
K18:S08	14318108	143I108	Touchscreen	18	LAN Comms	K18 LAN Comms
K19:Z01	14019101	140J101	Touchscreen	19	Z01	K19:Z01
K19:Z02	14019102	140J102	Touchscreen	19	Z02	K19:Z02
K19:S01	14519101	145J101	Touchscreen	19	Cabinet Tamper	K19 Cabinet Tamper
K19:S02	12019102	120J102	Touchscreen	19	Panic	K19 Panic
K19:S03	42319103	423J103	Touchscreen	19	Door Forced	K19 Door Forced
K19:S04	42619104	426J104	Touchscreen	19	Door DOTL	K19 Door DOTL
K19:S05	12219105	122J105	Touchscreen	19	Duress	K19 Duress
K19:S06	10219106	102J106	Touchscreen	19	Deadman	K19 Deadman
K19:S07	46119107	461J107	Touchscreen	19	Pin Attempts	K19 Pin Attempts
K19:S08	14319108	143J108	Touchscreen	19	LAN Comms	K19 LAN Comms
K20:Z01	14020101	140K101	Touchscreen	20	Z01	K20:Z01
K20:Z02	14020102	140K102	Touchscreen	20	Z02	K20:Z02
K20:S01	14520101	145K101	Touchscreen	20	Cabinet Tamper	K20 Cabinet Tamper
K20:S02	12020102	120K102	Touchscreen	20	Panic	K20 Panic
K20:S03	42320103	423K103	Touchscreen	20	Door Forced	K20 Door Forced
K20:S04	42620104	426K104	Touchscreen	20	Door DOTL	K20 Door DOTL
K20:S05	12220105	122K105	Touchscreen	20	Duress	K20 Duress
K20:S06	10220106	102K106	Touchscreen	20	Deadman	K20 Deadman
K20:S07	46120107	461K107	Touchscreen	20	Pin Attempts	K20 Pin Attempts
K20:S08	14320108	143K108	Touchscreen	20	LAN Comms	K20 LAN Comms
K21:Z01	14021101	140L101	Touchscreen	21	Z01	K21:Z01
K21:Z02	14021102	140L102	Touchscreen	21	Z02	K21:Z02
K21:S01	14521101	145L101	Touchscreen	21	Cabinet Tamper	K21 Cabinet Tamper
K21:S02	12021102	120L102	Touchscreen	21	Panic	K21 Panic
K21:S03	42321103	423L103	Touchscreen	21	Door Forced	K21 Door Forced
K21:S04	42621104	426L104	Touchscreen	21	Door DOTL	K21 Door DOTL
K21:S05	12221105	122L105	Touchscreen	21	Duress	K21 Duress
K21:S06	10221106	102L106	Touchscreen	21	Deadman	K21 Deadman
K21:S07	46121107	461L107	Touchscreen	21	Pin Attempts	K21 Pin Attempts
K21:S08	14321108	143L108	Touchscreen	21	LAN Comms	K21 LAN Comms
K22:Z01	14022101	140M101	Touchscreen	22	Z01	K22:Z01
K22:Z02	14022102	140M102	Touchscreen	22	Z02	K22:Z02
K22:S01	14522101	145M101	Touchscreen	22	Cabinet Tamper	K22 Cabinet Tamper
K22:S02	12022102	120M102	Touchscreen	22	Panic	K22 Panic
K22:S03	42322103	423M103	Touchscreen	22	Door Forced	K22 Door Forced
K22:S04	42622104	426M104	Touchscreen	22	Door DOTL	K22 Door DOTL
K22:S05	12222105	122M105	Touchscreen	22	Duress	K22 Duress
K22:S06	10222106	102M106	Touchscreen	22	Deadman	K22 Deadman
K22:S07	46122107	461M107	Touchscreen	22	Pin Attempts	K22 Pin Attempts
K22:S08	14322108	143M108	Touchscreen	22	LAN Comms	K22 LAN Comms
K23:Z01	14023101	140N101	Touchscreen	23	Z01	K23:Z01
K23:Z02	14023102	140N102	Touchscreen	23	Z02	K23:Z02
K23:S01	14523101	145N101	Touchscreen	23	Cabinet Tamper	K23 Cabinet Tamper
K23:S02	12023102	120N102	Touchscreen	23	Panic	K23 Panic
K23:S03	42323103	423N103	Touchscreen	23	Door Forced	K23 Door Forced
K23:S04	42623104	426N104	Touchscreen	23	Door DOTL	K23 Door DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
K23:S05	1223105	122N105	Touchscreen	23	Duress	K23 Duress
K23:S06	10223106	102N106	Touchscreen	23	Deadman	K23 Deadman
K23:S07	46123107	461N107	Touchscreen	23	Pin Attempts	K23 Pin Attempts
K23:S08	14323108	143N108	Touchscreen	23	LAN Comms	K23 LAN Comms
K24:Z01	14024101	140O101	Touchscreen	24	Z01	K24:Z01
K24:Z02	14024102	140O102	Touchscreen	24	Z02	K24:Z02
K24:S01	14524101	145O101	Touchscreen	24	Cabinet Tamper	K24 Cabinet Tamper
K24:S02	12024102	120O102	Touchscreen	24	Panic	K24 Panic
K24:S03	42324103	423O103	Touchscreen	24	Door Forced	K24 Door Forced
K24:S04	42624104	426O104	Touchscreen	24	Door DOTL	K24 Door DOTL
K24:S05	12224105	122O105	Touchscreen	24	Duress	K24 Duress
K24:S06	10224106	102O106	Touchscreen	24	Deadman	K24 Deadman
K24:S07	46124107	461O107	Touchscreen	24	Pin Attempts	K24 Pin Attempts
K24:S08	14324108	143O108	Touchscreen	24	LAN Comms	K24 LAN Comms
K25:Z01	14025101	140P101	Touchscreen	25	Z01	K25:Z01
K25:Z02	14025102	140P102	Touchscreen	25	Z02	K25:Z02
K25:S01	14525101	145P101	Touchscreen	25	Cabinet Tamper	K25 Cabinet Tamper
K25:S02	12025102	120P102	Touchscreen	25	Panic	K25 Panic
K25:S03	42325103	423P103	Touchscreen	25	Door Forced	K25 Door Forced
K25:S04	42625104	426P104	Touchscreen	25	Door DOTL	K25 Door DOTL
K25:S05	12225105	122P105	Touchscreen	25	Duress	K25 Duress
K25:S06	10225106	102P106	Touchscreen	25	Deadman	K25 Deadman
K25:S07	46125107	461P107	Touchscreen	25	Pin Attempts	K25 Pin Attempts
K25:S08	14325108	143P108	Touchscreen	25	LAN Comms	K25 LAN Comms
K26:Z01	14026101	140Q101	Touchscreen	26	Z01	K26:Z01
K26:Z02	14026102	140Q102	Touchscreen	26	Z02	K26:Z02
K26:S01	14526101	145Q101	Touchscreen	26	Cabinet Tamper	K26 Cabinet Tamper
K26:S02	12026102	120Q102	Touchscreen	26	Panic	K26 Panic
K26:S03	42326103	423Q103	Touchscreen	26	Door Forced	K26 Door Forced
K26:S04	42626104	426Q104	Touchscreen	26	Door DOTL	K26 Door DOTL
K26:S05	12226105	122Q105	Touchscreen	26	Duress	K26 Duress
K26:S06	10226106	102Q106	Touchscreen	26	Deadman	K26 Deadman
K26:S07	46126107	461Q107	Touchscreen	26	Pin Attempts	K26 Pin Attempts
K26:S08	14326108	143Q108	Touchscreen	26	LAN Comms	K26 LAN Comms
K27:Z01	14027101	140R101	Touchscreen	27	Z01	K27:Z01
K27:Z02	14027102	140R102	Touchscreen	27	Z02	K27:Z02
K27:S01	14527101	145R101	Touchscreen	27	Cabinet Tamper	K27 Cabinet Tamper
K27:S02	12027102	120R102	Touchscreen	27	Panic	K27 Panic
K27:S03	42327103	423R103	Touchscreen	27	Door Forced	K27 Door Forced
K27:S04	42627104	426R104	Touchscreen	27	Door DOTL	K27 Door DOTL
K27:S05	12227105	122R105	Touchscreen	27	Duress	K27 Duress
K27:S06	10227106	102R106	Touchscreen	27	Deadman	K27 Deadman
K27:S07	46127107	461R107	Touchscreen	27	Pin Attempts	K27 Pin Attempts
K27:S08	14327108	143R108	Touchscreen	27	LAN Comms	K27 LAN Comms
K28:Z01	14028101	140S101	Touchscreen	28	Z01	K28:Z01
K28:Z02	14028102	140S102	Touchscreen	28	Z02	K28:Z02
K28:S01	14528101	145S101	Touchscreen	28	Cabinet Tamper	K28 Cabinet Tamper
K28:S02	12028102	120S102	Touchscreen	28	Panic	K28 Panic
K28:S03	42328103	423S103	Touchscreen	28	Door Forced	K28 Door Forced
K28:S04	42628104	426S104	Touchscreen	28	Door DOTL	K28 Door DOTL
K28:S05	12228105	122S105	Touchscreen	28	Duress	K28 Duress
K28:S06	10228106	102S106	Touchscreen	28	Deadman	K28 Deadman
K28:S07	46128107	461S107	Touchscreen	28	Pin Attempts	K28 Pin Attempts
K28:S08	14328108	143S108	Touchscreen	28	LAN Comms	K28 LAN Comms
K29:Z01	14029101	140T101	Touchscreen	29	Z01	K29:Z01
K29:Z02	14029102	140T102	Touchscreen	29	Z02	K29:Z02
K29:S01	14529101	145T101	Touchscreen	29	Cabinet Tamper	K29 Cabinet Tamper

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
K29:S02	12029102	120T102	Touchscreen	29	Panic	K29 Panic
K29:S03	42329103	423T103	Touchscreen	29	Door Forced	K29 Door Forced
K29:S04	42629104	426T104	Touchscreen	29	Door DOTL	K29 Door DOTL
K29:S05	12229105	122T105	Touchscreen	29	Duress	K29 Duress
K29:S06	10229106	102T106	Touchscreen	29	Deadman	K29 Deadman
K29:S07	46129107	461T107	Touchscreen	29	Pin Attempts	K29 Pin Attempts
K29:S08	14329108	143T108	Touchscreen	29	LAN Comms	K29 LAN Comms
K30:Z01	14030101	140U101	Touchscreen	30	Z01	K30:Z01
K30:Z02	14030102	140U102	Touchscreen	30	Z02	K30:Z02
K30:S01	14530101	145U101	Touchscreen	30	Cabinet Tamper	K30 Cabinet Tamper
K30:S02	12030102	120U102	Touchscreen	30	Panic	K30 Panic
K30:S03	42330103	423U103	Touchscreen	30	Door Forced	K30 Door Forced
K30:S04	42630104	426U104	Touchscreen	30	Door DOTL	K30 Door DOTL
K30:S05	12230105	122U105	Touchscreen	30	Duress	K30 Duress
K30:S06	10230106	102U106	Touchscreen	30	Deadman	K30 Deadman
K30:S07	46130107	461U107	Touchscreen	30	Pin Attempts	K30 Pin Attempts
K30:S08	14330108	143U108	Touchscreen	30	LAN Comms	K30 LAN Comms
K31:Z01	14031101	140V101	Touchscreen	31	Z01	K31:Z01
K31:Z02	14031102	140V102	Touchscreen	31	Z02	K31:Z02
K31:S01	14531101	145V101	Touchscreen	31	Cabinet Tamper	K31 Cabinet Tamper
K31:S02	12031102	120V102	Touchscreen	31	Panic	K31 Panic
K31:S03	42331103	423V103	Touchscreen	31	Door Forced	K31 Door Forced
K31:S04	42631104	426V104	Touchscreen	31	Door DOTL	K31 Door DOTL
K31:S05	12231105	122V105	Touchscreen	31	Duress	K31 Duress
K31:S06	10231106	102V106	Touchscreen	31	Deadman	K31 Deadman
K31:S07	46131107	461V107	Touchscreen	31	Pin Attempts	K31 Pin Attempts
K31:S08	14331108	143V108	Touchscreen	31	LAN Comms	K31 LAN Comms
K32:Z01	14032101	140W101	Touchscreen	32	Z01	K32:Z01
K32:Z02	14032102	140W102	Touchscreen	32	Z02	K32:Z02
K32:S01	14532101	145W101	Touchscreen	32	Cabinet Tamper	K32 Cabinet Tamper
K32:S02	12032102	120W102	Touchscreen	32	Panic	K32 Panic
K32:S03	42332103	423W103	Touchscreen	32	Door Forced	K32 Door Forced
K32:S04	42632104	426W104	Touchscreen	32	Door DOTL	K32 Door DOTL
K32:S05	12232105	122W105	Touchscreen	32	Duress	K32 Duress
K32:S06	10232106	102W106	Touchscreen	32	Deadman	K32 Deadman
K32:S07	46132107	461W107	Touchscreen	32	Pin Attempts	K32 Pin Attempts
K32:S08	14332108	143W108	Touchscreen	32	LAN Comms	K32 LAN Comms
K33:Z01	14033101	140X101	Touchscreen	33	Z01	K33:Z01
K33:Z02	14033102	140X102	Touchscreen	33	Z02	K33:Z02
K33:S01	14533101	145X101	Touchscreen	33	Cabinet Tamper	K33 Cabinet Tamper
K33:S02	12033102	120X102	Touchscreen	33	Panic	K33 Panic
K33:S03	42333103	423X103	Touchscreen	33	Door Forced	K33 Door Forced
K33:S04	42633104	426X104	Touchscreen	33	Door DOTL	K33 Door DOTL
K33:S05	12233105	122X105	Touchscreen	33	Duress	K33 Duress
K33:S06	10233106	102X106	Touchscreen	33	Deadman	K33 Deadman
K33:S07	46133107	461X107	Touchscreen	33	Pin Attempts	K33 Pin Attempts
K33:S08	14333108	143X108	Touchscreen	33	LAN Comms	K33 LAN Comms
K34:Z01	14034101	140Y101	Touchscreen	34	Z01	K34:Z01
K34:Z02	14034102	140Y102	Touchscreen	34	Z02	K34:Z02
K34:S01	14534101	145Y101	Touchscreen	34	Cabinet Tamper	K34 Cabinet Tamper
K34:S02	12034102	120Y102	Touchscreen	34	Panic	K34 Panic
K34:S03	42334103	423Y103	Touchscreen	34	Door Forced	K34 Door Forced
K34:S04	42634104	426Y104	Touchscreen	34	Door DOTL	K34 Door DOTL
K34:S05	12234105	122Y105	Touchscreen	34	Duress	K34 Duress
K34:S06	10234106	102Y106	Touchscreen	34	Deadman	K34 Deadman
K34:S07	46134107	461Y107	Touchscreen	34	Pin Attempts	K34 Pin Attempts
K34:S08	14334108	143Y108	Touchscreen	34	LAN Comms	K34 LAN Comms

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
K35-K99:Z01	14035101	140Z101	Touchscreen	35	Z01	K35-K99:Z01
K35-K99:Z02	14035102	140Z102	Touchscreen	35	Z02	K35-K99:Z02
K35-K99:S01	14535101	145Z101	Touchscreen	35	Cabinet Tamper	K35-K99 Cabinet Tamper
K35-K99:S02	12035102	120Z102	Touchscreen	35	Panic	K35-K99 Panic
K35-K99:S03	42335103	423Z103	Touchscreen	35	Door Forced	K35-K99 Door Forced
K35-K99:S04	42635104	426Z104	Touchscreen	35	Door DOTL	K35-K99 Door DOTL
K35-K99:S05	12235105	122Z105	Touchscreen	35	Duress	K35-K99 Duress
K35-K99:S06	10235106	102Z106	Touchscreen	35	Deadman	K35-K99 Deadman
K35-K99:S07	46135107	461Z107	Touchscreen	35	Pin Attempts	K35-K99 Pin Attempts
K35-K99:S08	14335108	143Z108	Touchscreen	35	LAN Comms	K35-K99 LAN Comms
G01:Z01	14001201	1401201	Graphic Terminal	1	Z01	G01:Z01
G01:Z02	14001202	1401202	Graphic Terminal	1	Z02	G01:Z02
G01:S01	15001201	1501201	Graphic Terminal	1	Door Reed	G01 Door Reed
G01:S02	15001202	1501202	Graphic Terminal	1	Door Tongue	G01 Door Tongue
G01:S03	43201203	4321203	Graphic Terminal	1	Door Tamper	G01 Door Tamper
G01:S04	42301204	4231204	Graphic Terminal	1	Door Forced	G01 Door Forced
G01:S05	42601205	4261205	Graphic Terminal	1	Door DOTL	G01 Door DOTL
G01:S06	14501206	1451206	Graphic Terminal	1	Cabinet Tamper	G01 Cabinet Tamper
G01:S07	30101207	3011207	Graphic Terminal	1	AC fail	G01 AC fail
G01:S08	30201208	3021208	Graphic Terminal	1	Low Battery	G01 Low Battery
G01:S09	30001209	3001209	Graphic Terminal	1	LAN Fuse	G01 LAN Fuse
G01:S10	30001210	3001210	Graphic Terminal	1	Detector Fuse	G01 Detector Fuse
G01:S11	30001211	3001211	Graphic Terminal	1	Low Volts	G01 Low Volts
G01:S12	30001212	3001212	Graphic Terminal	1	PS Fail	G01 PS Fail
G01:S13	30901213	3091213	Graphic Terminal	1	Battery Test	G01 Battery Test
G01:S14	15001214	1501214	Graphic Terminal	1	Invalid Card	G01 Invalid Card
G01:S15	12201215	1221215	Graphic Terminal	1	Duress	G01 Duress
G01:S16	15001216	1501216	Graphic Terminal	1	Reader Tamper	G01 Reader Tamper
G01:S17	12001217	1201217	Graphic Terminal	1	Panic	G01 Panic
G01:S18	46101218	4611218	Graphic Terminal	1	Pin Attempts	G01 Pin Attempts
G01:S19	15001219	1501219	Graphic Terminal	1	Temperature	G01 Temperature
G01:S20	15001220	1501220	Graphic Terminal	1	Light Level	G01 Light Level
G01:S21	14301221	1431221	Graphic Terminal	1	LAN Comms	G01 LAN Comms
G01:S22	15001222	1501222	Graphic Terminal	1	Spare1	G01 Spare1
G01:S23	15001223	1501223	Graphic Terminal	1	Spare2	G01 Spare2
G02:Z01	14002201	1402201	Graphic Terminal	2	Z01	G02:Z01
G02:Z02	14002202	1402202	Graphic Terminal	2	Z02	G02:Z02
G02:S01	15002201	1502201	Graphic Terminal	2	Door Reed	G02 Door Reed
G02:S02	15002202	1502202	Graphic Terminal	2	Door Tongue	G02 Door Tongue
G02:S03	43202203	4322203	Graphic Terminal	2	Door Tamper	G02 Door Tamper
G02:S04	42302204	4232204	Graphic Terminal	2	Door Forced	G02 Door Forced
G02:S05	42602205	4262205	Graphic Terminal	2	Door DOTL	G02 Door DOTL
G02:S06	14502206	1452206	Graphic Terminal	2	Cabinet Tamper	G02 Cabinet Tamper
G02:S07	30102207	3012207	Graphic Terminal	2	AC fail	G02 AC fail
G02:S08	30202208	3022208	Graphic Terminal	2	Low Battery	G02 Low Battery
G02:S09	30002209	3002209	Graphic Terminal	2	LAN Fuse	G02 LAN Fuse
G02:S10	30002210	3002210	Graphic Terminal	2	Detector Fuse	G02 Detector Fuse
G02:S11	30002211	3002211	Graphic Terminal	2	Low Volts	G02 Low Volts
G02:S12	30002212	3002212	Graphic Terminal	2	PS Fail	G02 PS Fail
G02:S13	30902213	3092213	Graphic Terminal	2	Battery Test	G02 Battery Test
G02:S14	15002214	1502214	Graphic Terminal	2	Invalid Card	G02 Invalid Card
G02:S15	12202215	1222215	Graphic Terminal	2	Duress	G02 Duress
G02:S16	15002216	1502216	Graphic Terminal	2	Reader Tamper	G02 Reader Tamper
G02:S17	12002217	1202217	Graphic Terminal	2	Panic	G02 Panic
G02:S18	46102218	4612218	Graphic Terminal	2	Pin Attempts	G02 Pin Attempts
G02:S19	15002219	1502219	Graphic Terminal	2	Temperature	G02 Temperature
G02:S20	15002220	1502220	Graphic Terminal	2	Light Level	G02 Light Level

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G02:S21	14302221	1432221	Graphic Terminal	2	LAN Comms	G02 LAN Comms
G02:S22	15002222	1502222	Graphic Terminal	2	Spare1	G02 Spare1
G02:S23	15002223	1502223	Graphic Terminal	2	Spare2	G02 Spare2
G03:Z01	14003201	1403201	Graphic Terminal	3	Z01	G03:Z01
G03:Z02	14003202	1403202	Graphic Terminal	3	Z02	G03:Z02
G03:S01	15003201	1503201	Graphic Terminal	3	Door Reed	G03 Door Reed
G03:S02	15003202	1503202	Graphic Terminal	3	Door Tongue	G03 Door Tongue
G03:S03	43203203	4323203	Graphic Terminal	3	Door Tamper	G03 Door Tamper
G03:S04	42303204	4233204	Graphic Terminal	3	Door Forced	G03 Door Forced
G03:S05	42603205	4263205	Graphic Terminal	3	Door DOTL	G03 Door DOTL
G03:S06	14503206	1453206	Graphic Terminal	3	Cabinet Tamper	G03 Cabinet Tamper
G03:S07	30103207	3013207	Graphic Terminal	3	AC fail	G03 AC fail
G03:S08	30203208	3023208	Graphic Terminal	3	Low Battery	G03 Low Battery
G03:S09	30003209	3003209	Graphic Terminal	3	LAN Fuse	G03 LAN Fuse
G03:S10	30003210	3003210	Graphic Terminal	3	Detector Fuse	G03 Detector Fuse
G03:S11	30003211	3003211	Graphic Terminal	3	Low Volts	G03 Low Volts
G03:S12	30003212	3003212	Graphic Terminal	3	PS Fail	G03 PS Fail
G03:S13	30903213	3093213	Graphic Terminal	3	Battery Test	G03 Battery Test
G03:S14	15003214	1503214	Graphic Terminal	3	Invalid Card	G03 Invalid Card
G03:S15	12203215	1223215	Graphic Terminal	3	Duress	G03 Duress
G03:S16	15003216	1503216	Graphic Terminal	3	Reader Tamper	G03 Reader Tamper
G03:S17	12003217	1203217	Graphic Terminal	3	Panic	G03 Panic
G03:S18	46103218	4613218	Graphic Terminal	3	Pin Attempts	G03 Pin Attempts
G03:S19	15003219	1503219	Graphic Terminal	3	Temperature	G03 Temperature
G03:S20	15003220	1503220	Graphic Terminal	3	Light Level	G03 Light Level
G03:S21	14303221	1433221	Graphic Terminal	3	LAN Comms	G03 LAN Comms
G03:S22	15003222	1503222	Graphic Terminal	3	Spare1	G03 Spare1
G03:S23	15003223	1503223	Graphic Terminal	3	Spare2	G03 Spare2
G04:Z01	14004201	1404201	Graphic Terminal	4	Z01	G04:Z01
G04:Z02	14004202	1404202	Graphic Terminal	4	Z02	G04:Z02
G04:S01	15004201	1504201	Graphic Terminal	4	Door Reed	G04 Door Reed
G04:S02	15004202	1504202	Graphic Terminal	4	Door Tongue	G04 Door Tongue
G04:S03	43204203	4324203	Graphic Terminal	4	Door Tamper	G04 Door Tamper
G04:S04	42304204	4234204	Graphic Terminal	4	Door Forced	G04 Door Forced
G04:S05	42604205	4264205	Graphic Terminal	4	Door DOTL	G04 Door DOTL
G04:S06	14504206	1454206	Graphic Terminal	4	Cabinet Tamper	G04 Cabinet Tamper
G04:S07	30104207	3014207	Graphic Terminal	4	AC fail	G04 AC fail
G04:S08	30204208	3024208	Graphic Terminal	4	Low Battery	G04 Low Battery
G04:S09	30004209	3004209	Graphic Terminal	4	LAN Fuse	G04 LAN Fuse
G04:S10	30004210	3004210	Graphic Terminal	4	Detector Fuse	G04 Detector Fuse
G04:S11	30004211	3004211	Graphic Terminal	4	Low Volts	G04 Low Volts
G04:S12	30004212	3004212	Graphic Terminal	4	PS Fail	G04 PS Fail
G04:S13	30904213	3094213	Graphic Terminal	4	Battery Test	G04 Battery Test
G04:S14	15004214	1504214	Graphic Terminal	4	Invalid Card	G04 Invalid Card
G04:S15	12204215	1224215	Graphic Terminal	4	Duress	G04 Duress
G04:S16	15004216	1504216	Graphic Terminal	4	Reader Tamper	G04 Reader Tamper
G04:S17	12004217	1204217	Graphic Terminal	4	Panic	G04 Panic
G04:S18	46104218	4614218	Graphic Terminal	4	Pin Attempts	G04 Pin Attempts
G04:S19	15004219	1504219	Graphic Terminal	4	Temperature	G04 Temperature
G04:S20	15004220	1504220	Graphic Terminal	4	Light Level	G04 Light Level
G04:S21	14304221	1434221	Graphic Terminal	4	LAN Comms	G04 LAN Comms
G04:S22	15004222	1504222	Graphic Terminal	4	Spare1	G04 Spare1
G04:S23	15004223	1504223	Graphic Terminal	4	Spare2	G04 Spare2
G05:Z01	14005201	1405201	Graphic Terminal	5	Z01	G05:Z01
G05:Z02	14005202	1405202	Graphic Terminal	5	Z02	G05:Z02
G05:S01	15005201	1505201	Graphic Terminal	5	Door Reed	G05 Door Reed
G05:S02	15005202	1505202	Graphic Terminal	5	Door Tongue	G05 Door Tongue

Integrati ID	Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
				Type	No.		
G05:S03		43205203	4325203	Graphic Terminal	5	Door Tamper	G05 Door Tamper
G05:S04		42305204	4235204	Graphic Terminal	5	Door Forced	G05 Door Forced
G05:S05		42605205	4265205	Graphic Terminal	5	Door DOTL	G05 Door DOTL
G05:S06		14505206	1455206	Graphic Terminal	5	Cabinet Tamper	G05 Cabinet Tamper
G05:S07		30105207	3015207	Graphic Terminal	5	AC fail	G05 AC fail
G05:S08		30205208	3025208	Graphic Terminal	5	Low Battery	G05 Low Battery
G05:S09		30005209	3005209	Graphic Terminal	5	LAN Fuse	G05 LAN Fuse
G05:S10		30005210	3005210	Graphic Terminal	5	Detector Fuse	G05 Detector Fuse
G05:S11		30005211	3005211	Graphic Terminal	5	Low Volts	G05 Low Volts
G05:S12		30005212	3005212	Graphic Terminal	5	PS Fail	G05 PS Fail
G05:S13		30905213	3095213	Graphic Terminal	5	Battery Test	G05 Battery Test
G05:S14		15005214	1505214	Graphic Terminal	5	Invalid Card	G05 Invalid Card
G05:S15		12205215	1225215	Graphic Terminal	5	Duress	G05 Duress
G05:S16		15005216	1505216	Graphic Terminal	5	Reader Tamper	G05 Reader Tamper
G05:S17		12005217	1205217	Graphic Terminal	5	Panic	G05 Panic
G05:S18		46105218	4615218	Graphic Terminal	5	Pin Attempts	G05 Pin Attempts
G05:S19		15005219	1505219	Graphic Terminal	5	Temperature	G05 Temperature
G05:S20		15005220	1505220	Graphic Terminal	5	Light Level	G05 Light Level
G05:S21		14305221	1435221	Graphic Terminal	5	LAN Comms	G05 LAN Comms
G05:S22		15005222	1505222	Graphic Terminal	5	Spare1	G05 Spare1
G05:S23		15005223	1505223	Graphic Terminal	5	Spare2	G05 Spare2
G06:Z01		14006201	1406201	Graphic Terminal	6	Z01	G06:Z01
G06:Z02		14006202	1406202	Graphic Terminal	6	Z02	G06:Z02
G06:S01		15006201	1506201	Graphic Terminal	6	Door Reed	G06 Door Reed
G06:S02		15006202	1506202	Graphic Terminal	6	Door Tongue	G06 Door Tongue
G06:S03		43206203	4326203	Graphic Terminal	6	Door Tamper	G06 Door Tamper
G06:S04		42306204	4236204	Graphic Terminal	6	Door Forced	G06 Door Forced
G06:S05		42606205	4266205	Graphic Terminal	6	Door DOTL	G06 Door DOTL
G06:S06		14506206	1456206	Graphic Terminal	6	Cabinet Tamper	G06 Cabinet Tamper
G06:S07		30106207	3016207	Graphic Terminal	6	AC fail	G06 AC fail
G06:S08		30206208	3026208	Graphic Terminal	6	Low Battery	G06 Low Battery
G06:S09		30006209	3006209	Graphic Terminal	6	LAN Fuse	G06 LAN Fuse
G06:S10		30006210	3006210	Graphic Terminal	6	Detector Fuse	G06 Detector Fuse
G06:S11		30006211	3006211	Graphic Terminal	6	Low Volts	G06 Low Volts
G06:S12		30006212	3006212	Graphic Terminal	6	PS Fail	G06 PS Fail
G06:S13		30906213	3096213	Graphic Terminal	6	Battery Test	G06 Battery Test
G06:S14		15006214	1506214	Graphic Terminal	6	Invalid Card	G06 Invalid Card
G06:S15		12206215	1226215	Graphic Terminal	6	Duress	G06 Duress
G06:S16		15006216	1506216	Graphic Terminal	6	Reader Tamper	G06 Reader Tamper
G06:S17		12006217	1206217	Graphic Terminal	6	Panic	G06 Panic
G06:S18		46106218	4616218	Graphic Terminal	6	Pin Attempts	G06 Pin Attempts
G06:S19		15006219	1506219	Graphic Terminal	6	Temperature	G06 Temperature
G06:S20		15006220	1506220	Graphic Terminal	6	Light Level	G06 Light Level
G06:S21		14306221	1436221	Graphic Terminal	6	LAN Comms	G06 LAN Comms
G06:S22		15006222	1506222	Graphic Terminal	6	Spare1	G06 Spare1
G06:S23		15006223	1506223	Graphic Terminal	6	Spare2	G06 Spare2
G07:Z01		14007201	1407201	Graphic Terminal	7	Z01	G07:Z01
G07:Z02		14007202	1407202	Graphic Terminal	7	Z02	G07:Z02
G07:S01		15007201	1507201	Graphic Terminal	7	Door Reed	G07 Door Reed
G07:S02		15007202	1507202	Graphic Terminal	7	Door Tongue	G07 Door Tongue
G07:S03		43207203	4327203	Graphic Terminal	7	Door Tamper	G07 Door Tamper
G07:S04		42307204	4237204	Graphic Terminal	7	Door Forced	G07 Door Forced
G07:S05		42607205	4267205	Graphic Terminal	7	Door DOTL	G07 Door DOTL
G07:S06		14507206	1457206	Graphic Terminal	7	Cabinet Tamper	G07 Cabinet Tamper
G07:S07		30107207	3017207	Graphic Terminal	7	AC fail	G07 AC fail
G07:S08		30207208	3027208	Graphic Terminal	7	Low Battery	G07 Low Battery
G07:S09		30007209	3007209	Graphic Terminal	7	LAN Fuse	G07 LAN Fuse

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G07:S10	30007210	3007210	Graphic Terminal	7	Detector Fuse	G07 Detector Fuse
G07:S11	30007211	3007211	Graphic Terminal	7	Low Volts	G07 Low Volts
G07:S12	30007212	3007212	Graphic Terminal	7	PS Fail	G07 PS Fail
G07:S13	30907213	3097213	Graphic Terminal	7	Battery Test	G07 Battery Test
G07:S14	15007214	1507214	Graphic Terminal	7	Invalid Card	G07 Invalid Card
G07:S15	12207215	1227215	Graphic Terminal	7	Duress	G07 Duress
G07:S16	15007216	1507216	Graphic Terminal	7	Reader Tamper	G07 Reader Tamper
G07:S17	12007217	1207217	Graphic Terminal	7	Panic	G07 Panic
G07:S18	46107218	4617218	Graphic Terminal	7	Pin Attempts	G07 Pin Attempts
G07:S19	15007219	1507219	Graphic Terminal	7	Temperature	G07 Temperature
G07:S20	15007220	1507220	Graphic Terminal	7	Light Level	G07 Light Level
G07:S21	14307221	1437221	Graphic Terminal	7	LAN Comms	G07 LAN Comms
G07:S22	15007222	1507222	Graphic Terminal	7	Spare1	G07 Spare1
G07:S23	15007223	1507223	Graphic Terminal	7	Spare2	G07 Spare2
G08:Z01	14008201	1408201	Graphic Terminal	8	Z01	G08:Z01
G08:Z02	14008202	1408202	Graphic Terminal	8	Z02	G08:Z02
G08:S01	15008201	1508201	Graphic Terminal	8	Door Reed	G08 Door Reed
G08:S02	15008202	1508202	Graphic Terminal	8	Door Tongue	G08 Door Tongue
G08:S03	43208203	4328203	Graphic Terminal	8	Door Tamper	G08 Door Tamper
G08:S04	42308204	4238204	Graphic Terminal	8	Door Forced	G08 Door Forced
G08:S05	42608205	4268205	Graphic Terminal	8	Door DOTL	G08 Door DOTL
G08:S06	14508206	1458206	Graphic Terminal	8	Cabinet Tamper	G08 Cabinet Tamper
G08:S07	30108207	3018207	Graphic Terminal	8	AC fail	G08 AC fail
G08:S08	30208208	3028208	Graphic Terminal	8	Low Battery	G08 Low Battery
G08:S09	30008209	3008209	Graphic Terminal	8	LAN Fuse	G08 LAN Fuse
G08:S10	30008210	3008210	Graphic Terminal	8	Detector Fuse	G08 Detector Fuse
G08:S11	30008211	3008211	Graphic Terminal	8	Low Volts	G08 Low Volts
G08:S12	30008212	3008212	Graphic Terminal	8	PS Fail	G08 PS Fail
G08:S13	30908213	3098213	Graphic Terminal	8	Battery Test	G08 Battery Test
G08:S14	15008214	1508214	Graphic Terminal	8	Invalid Card	G08 Invalid Card
G08:S15	12208215	1228215	Graphic Terminal	8	Duress	G08 Duress
G08:S16	15008216	1508216	Graphic Terminal	8	Reader Tamper	G08 Reader Tamper
G08:S17	12008217	1208217	Graphic Terminal	8	Panic	G08 Panic
G08:S18	46108218	4618218	Graphic Terminal	8	Pin Attempts	G08 Pin Attempts
G08:S19	15008219	1508219	Graphic Terminal	8	Temperature	G08 Temperature
G08:S20	15008220	1508220	Graphic Terminal	8	Light Level	G08 Light Level
G08:S21	14308221	1438221	Graphic Terminal	8	LAN Comms	G08 LAN Comms
G08:S22	15008222	1508222	Graphic Terminal	8	Spare1	G08 Spare1
G08:S23	15008223	1508223	Graphic Terminal	8	Spare2	G08 Spare2
G09:Z01	14009201	1409201	Graphic Terminal	9	Z01	G09:Z01
G09:Z02	14009202	1409202	Graphic Terminal	9	Z02	G09:Z02
G09:S01	15009201	1509201	Graphic Terminal	9	Door Reed	G09 Door Reed
G09:S02	15009202	1509202	Graphic Terminal	9	Door Tongue	G09 Door Tongue
G09:S03	43209203	4329203	Graphic Terminal	9	Door Tamper	G09 Door Tamper
G09:S04	42309204	4239204	Graphic Terminal	9	Door Forced	G09 Door Forced
G09:S05	42609205	4269205	Graphic Terminal	9	Door DOTL	G09 Door DOTL
G09:S06	14509206	1459206	Graphic Terminal	9	Cabinet Tamper	G09 Cabinet Tamper
G09:S07	30109207	3019207	Graphic Terminal	9	AC fail	G09 AC fail
G09:S08	30209208	3029208	Graphic Terminal	9	Low Battery	G09 Low Battery
G09:S09	30009209	3009209	Graphic Terminal	9	LAN Fuse	G09 LAN Fuse
G09:S10	30009210	3009210	Graphic Terminal	9	Detector Fuse	G09 Detector Fuse
G09:S11	30009211	3009211	Graphic Terminal	9	Low Volts	G09 Low Volts
G09:S12	30009212	3009212	Graphic Terminal	9	PS Fail	G09 PS Fail
G09:S13	30909213	3099213	Graphic Terminal	9	Battery Test	G09 Battery Test
G09:S14	15009214	1509214	Graphic Terminal	9	Invalid Card	G09 Invalid Card
G09:S15	12209215	1229215	Graphic Terminal	9	Duress	G09 Duress
G09:S16	15009216	1509216	Graphic Terminal	9	Reader Tamper	G09 Reader Tamper

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G09:S17	12009217	1209217	Graphic Terminal	9	Panic	G09 Panic
G09:S18	46109218	4619218	Graphic Terminal	9	Pin Attempts	G09 Pin Attempts
G09:S19	15009219	1509219	Graphic Terminal	9	Temperature	G09 Temperature
G09:S20	15009220	1509220	Graphic Terminal	9	Light Level	G09 Light Level
G09:S21	14309221	1439221	Graphic Terminal	9	LAN Comms	G09 LAN Comms
G09:S22	15009222	1509222	Graphic Terminal	9	Spare1	G09 Spare1
G09:S23	15009223	1509223	Graphic Terminal	9	Spare2	G09 Spare2
G10:Z01	14010201	140A201	Graphic Terminal	10	Z01	G10:Z01
G10:Z02	14010202	140A202	Graphic Terminal	10	Z02	G10:Z02
G10:S01	15010201	150A201	Graphic Terminal	10	Door Reed	G10 Door Reed
G10:S02	15010202	150A202	Graphic Terminal	10	Door Tongue	G10 Door Tongue
G10:S03	43210203	432A203	Graphic Terminal	10	Door Tamper	G10 Door Tamper
G10:S04	42310204	423A204	Graphic Terminal	10	Door Forced	G10 Door Forced
G10:S05	42610205	426A205	Graphic Terminal	10	Door DOTL	G10 Door DOTL
G10:S06	14510206	145A206	Graphic Terminal	10	Cabinet Tamper	G10 Cabinet Tamper
G10:S07	30110207	301A207	Graphic Terminal	10	AC fail	G10 AC fail
G10:S08	30210208	302A208	Graphic Terminal	10	Low Battery	G10 Low Battery
G10:S09	30010209	300A209	Graphic Terminal	10	LAN Fuse	G10 LAN Fuse
G10:S10	30010210	300A210	Graphic Terminal	10	Detector Fuse	G10 Detector Fuse
G10:S11	30010211	300A211	Graphic Terminal	10	Low Volts	G10 Low Volts
G10:S12	30010212	300A212	Graphic Terminal	10	PS Fail	G10 PS Fail
G10:S13	30910213	309A213	Graphic Terminal	10	Battery Test	G10 Battery Test
G10:S14	15010214	150A214	Graphic Terminal	10	Invalid Card	G10 Invalid Card
G10:S15	12210215	122A215	Graphic Terminal	10	Duress	G10 Duress
G10:S16	15010216	150A216	Graphic Terminal	10	Reader Tamper	G10 Reader Tamper
G10:S17	12010217	120A217	Graphic Terminal	10	Panic	G10 Panic
G10:S18	46110218	461A218	Graphic Terminal	10	Pin Attempts	G10 Pin Attempts
G10:S19	15010219	150A219	Graphic Terminal	10	Temperature	G10 Temperature
G10:S20	15010220	150A220	Graphic Terminal	10	Light Level	G10 Light Level
G10:S21	14310221	143A221	Graphic Terminal	10	LAN Comms	G10 LAN Comms
G10:S22	15010222	150A222	Graphic Terminal	10	Spare1	G10 Spare1
G10:S23	15010223	150A223	Graphic Terminal	10	Spare2	G10 Spare2
G11:Z01	14011201	140B201	Graphic Terminal	11	Z01	G11:Z01
G11:Z02	14011202	140B202	Graphic Terminal	11	Z02	G11:Z02
G11:S01	15011201	150B201	Graphic Terminal	11	Door Reed	G11 Door Reed
G11:S02	15011202	150B202	Graphic Terminal	11	Door Tongue	G11 Door Tongue
G11:S03	43211203	432B203	Graphic Terminal	11	Door Tamper	G11 Door Tamper
G11:S04	42311204	423B204	Graphic Terminal	11	Door Forced	G11 Door Forced
G11:S05	42611205	426B205	Graphic Terminal	11	Door DOTL	G11 Door DOTL
G11:S06	14511206	145B206	Graphic Terminal	11	Cabinet Tamper	G11 Cabinet Tamper
G11:S07	30111207	301B207	Graphic Terminal	11	AC fail	G11 AC fail
G11:S08	30211208	302B208	Graphic Terminal	11	Low Battery	G11 Low Battery
G11:S09	30011209	300B209	Graphic Terminal	11	LAN Fuse	G11 LAN Fuse
G11:S10	30011210	300B210	Graphic Terminal	11	Detector Fuse	G11 Detector Fuse
G11:S11	30011211	300B211	Graphic Terminal	11	Low Volts	G11 Low Volts
G11:S12	30011212	300B212	Graphic Terminal	11	PS Fail	G11 PS Fail
G11:S13	30911213	309B213	Graphic Terminal	11	Battery Test	G11 Battery Test
G11:S14	15011214	150B214	Graphic Terminal	11	Invalid Card	G11 Invalid Card
G11:S15	12211215	122B215	Graphic Terminal	11	Duress	G11 Duress
G11:S16	15011216	150B216	Graphic Terminal	11	Reader Tamper	G11 Reader Tamper
G11:S17	12011217	120B217	Graphic Terminal	11	Panic	G11 Panic
G11:S18	46111218	461B218	Graphic Terminal	11	Pin Attempts	G11 Pin Attempts
G11:S19	15011219	150B219	Graphic Terminal	11	Temperature	G11 Temperature
G11:S20	15011220	150B220	Graphic Terminal	11	Light Level	G11 Light Level
G11:S21	14311221	143B221	Graphic Terminal	11	LAN Comms	G11 LAN Comms
G11:S22	15011222	150B222	Graphic Terminal	11	Spare1	G11 Spare1
G11:S23	15011223	150B223	Graphic Terminal	11	Spare2	G11 Spare2

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G12:Z01	14012201	140C201	Graphic Terminal	12	Z01	G12:Z01
G12:Z02	14012202	140C202	Graphic Terminal	12	Z02	G12:Z02
G12:S01	15012201	150C201	Graphic Terminal	12	Door Reed	G12 Door Reed
G12:S02	15012202	150C202	Graphic Terminal	12	Door Tongue	G12 Door Tongue
G12:S03	43212203	432C203	Graphic Terminal	12	Door Tamper	G12 Door Tamper
G12:S04	42312204	423C204	Graphic Terminal	12	Door Forced	G12 Door Forced
G12:S05	42612205	426C205	Graphic Terminal	12	Door DOTL	G12 Door DOTL
G12:S06	14512206	145C206	Graphic Terminal	12	Cabinet Tamper	G12 Cabinet Tamper
G12:S07	30112207	301C207	Graphic Terminal	12	AC fail	G12 AC fail
G12:S08	30212208	302C208	Graphic Terminal	12	Low Battery	G12 Low Battery
G12:S09	30012209	300C209	Graphic Terminal	12	LAN Fuse	G12 LAN Fuse
G12:S10	30012210	300C210	Graphic Terminal	12	Detector Fuse	G12 Detector Fuse
G12:S11	30012211	300C211	Graphic Terminal	12	Low Volts	G12 Low Volts
G12:S12	30012212	300C212	Graphic Terminal	12	PS Fail	G12 PS Fail
G12:S13	30912213	309C213	Graphic Terminal	12	Battery Test	G12 Battery Test
G12:S14	15012214	150C214	Graphic Terminal	12	Invalid Card	G12 Invalid Card
G12:S15	12212215	122C215	Graphic Terminal	12	Duress	G12 Duress
G12:S16	15012216	150C216	Graphic Terminal	12	Reader Tamper	G12 Reader Tamper
G12:S17	12012217	120C217	Graphic Terminal	12	Panic	G12 Panic
G12:S18	46112218	461C218	Graphic Terminal	12	Pin Attempts	G12 Pin Attempts
G12:S19	15012219	150C219	Graphic Terminal	12	Temperature	G12 Temperature
G12:S20	15012220	150C220	Graphic Terminal	12	Light Level	G12 Light Level
G12:S21	14312221	143C221	Graphic Terminal	12	LAN Comms	G12 LAN Comms
G12:S22	15012222	150C222	Graphic Terminal	12	Spare1	G12 Spare1
G12:S23	15012223	150C223	Graphic Terminal	12	Spare2	G12 Spare2
G13:Z01	14013201	140D201	Graphic Terminal	13	Z01	G13:Z01
G13:Z02	14013202	140D202	Graphic Terminal	13	Z02	G13:Z02
G13:S01	15013201	150D201	Graphic Terminal	13	Door Reed	G13 Door Reed
G13:S02	15013202	150D202	Graphic Terminal	13	Door Tongue	G13 Door Tongue
G13:S03	43213203	432D203	Graphic Terminal	13	Door Tamper	G13 Door Tamper
G13:S04	42313204	423D204	Graphic Terminal	13	Door Forced	G13 Door Forced
G13:S05	42613205	426D205	Graphic Terminal	13	Door DOTL	G13 Door DOTL
G13:S06	14513206	145D206	Graphic Terminal	13	Cabinet Tamper	G13 Cabinet Tamper
G13:S07	30113207	301D207	Graphic Terminal	13	AC fail	G13 AC fail
G13:S08	30213208	302D208	Graphic Terminal	13	Low Battery	G13 Low Battery
G13:S09	30013209	300D209	Graphic Terminal	13	LAN Fuse	G13 LAN Fuse
G13:S10	30013210	300D210	Graphic Terminal	13	Detector Fuse	G13 Detector Fuse
G13:S11	30013211	300D211	Graphic Terminal	13	Low Volts	G13 Low Volts
G13:S12	30013212	300D212	Graphic Terminal	13	PS Fail	G13 PS Fail
G13:S13	30913213	309D213	Graphic Terminal	13	Battery Test	G13 Battery Test
G13:S14	15013214	150D214	Graphic Terminal	13	Invalid Card	G13 Invalid Card
G13:S15	12213215	122D215	Graphic Terminal	13	Duress	G13 Duress
G13:S16	15013216	150D216	Graphic Terminal	13	Reader Tamper	G13 Reader Tamper
G13:S17	12013217	120D217	Graphic Terminal	13	Panic	G13 Panic
G13:S18	46113218	461D218	Graphic Terminal	13	Pin Attempts	G13 Pin Attempts
G13:S19	15013219	150D219	Graphic Terminal	13	Temperature	G13 Temperature
G13:S20	15013220	150D220	Graphic Terminal	13	Light Level	G13 Light Level
G13:S21	14313221	143D221	Graphic Terminal	13	LAN Comms	G13 LAN Comms
G13:S22	15013222	150D222	Graphic Terminal	13	Spare1	G13 Spare1
G13:S23	15013223	150D223	Graphic Terminal	13	Spare2	G13 Spare2
G14:Z01	14014201	140E201	Graphic Terminal	14	Z01	G14:Z01
G14:Z02	14014202	140E202	Graphic Terminal	14	Z02	G14:Z02
G14:S01	15014201	150E201	Graphic Terminal	14	Door Reed	G14 Door Reed
G14:S02	15014202	150E202	Graphic Terminal	14	Door Tongue	G14 Door Tongue
G14:S03	43214203	432E203	Graphic Terminal	14	Door Tamper	G14 Door Tamper
G14:S04	42314204	423E204	Graphic Terminal	14	Door Forced	G14 Door Forced
G14:S05	42614205	426E205	Graphic Terminal	14	Door DOTL	G14 Door DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G14:S06	14514206	145E206	Graphic Terminal	14	Cabinet Tamper	G14 Cabinet Tamper
G14:S07	30114207	301E207	Graphic Terminal	14	AC fail	G14 AC fail
G14:S08	30214208	302E208	Graphic Terminal	14	Low Battery	G14 Low Battery
G14:S09	30014209	300E209	Graphic Terminal	14	LAN Fuse	G14 LAN Fuse
G14:S10	30014210	300E210	Graphic Terminal	14	Detector Fuse	G14 Detector Fuse
G14:S11	30014211	300E211	Graphic Terminal	14	Low Volts	G14 Low Volts
G14:S12	30014212	300E212	Graphic Terminal	14	PS Fail	G14 PS Fail
G14:S13	30914213	309E213	Graphic Terminal	14	Battery Test	G14 Battery Test
G14:S14	15014214	150E214	Graphic Terminal	14	Invalid Card	G14 Invalid Card
G14:S15	12214215	122E215	Graphic Terminal	14	Duress	G14 Duress
G14:S16	15014216	150E216	Graphic Terminal	14	Reader Tamper	G14 Reader Tamper
G14:S17	12014217	120E217	Graphic Terminal	14	Panic	G14 Panic
G14:S18	46114218	461E218	Graphic Terminal	14	Pin Attempts	G14 Pin Attempts
G14:S19	15014219	150E219	Graphic Terminal	14	Temperature	G14 Temperature
G14:S20	15014220	150E220	Graphic Terminal	14	Light Level	G14 Light Level
G14:S21	14314221	143E221	Graphic Terminal	14	LAN Comms	G14 LAN Comms
G14:S22	15014222	150E222	Graphic Terminal	14	Spare1	G14 Spare1
G14:S23	15014223	150E223	Graphic Terminal	14	Spare2	G14 Spare2
G15:Z01	14015201	140F201	Graphic Terminal	15	Z01	G15:Z01
G15:Z02	14015202	140F202	Graphic Terminal	15	Z02	G15:Z02
G15:S01	15015201	150F201	Graphic Terminal	15	Door Reed	G15 Door Reed
G15:S02	15015202	150F202	Graphic Terminal	15	Door Tongue	G15 Door Tongue
G15:S03	43215203	432F203	Graphic Terminal	15	Door Tamper	G15 Door Tamper
G15:S04	42315204	423F204	Graphic Terminal	15	Door Forced	G15 Door Forced
G15:S05	42615205	426F205	Graphic Terminal	15	Door DOTL	G15 Door DOTL
G15:S06	14515206	145F206	Graphic Terminal	15	Cabinet Tamper	G15 Cabinet Tamper
G15:S07	30115207	301F207	Graphic Terminal	15	AC fail	G15 AC fail
G15:S08	30215208	302F208	Graphic Terminal	15	Low Battery	G15 Low Battery
G15:S09	30015209	300F209	Graphic Terminal	15	LAN Fuse	G15 LAN Fuse
G15:S10	30015210	300F210	Graphic Terminal	15	Detector Fuse	G15 Detector Fuse
G15:S11	30015211	300F211	Graphic Terminal	15	Low Volts	G15 Low Volts
G15:S12	30015212	300F212	Graphic Terminal	15	PS Fail	G15 PS Fail
G15:S13	30915213	309F213	Graphic Terminal	15	Battery Test	G15 Battery Test
G15:S14	15015214	150F214	Graphic Terminal	15	Invalid Card	G15 Invalid Card
G15:S15	12215215	122F215	Graphic Terminal	15	Duress	G15 Duress
G15:S16	15015216	150F216	Graphic Terminal	15	Reader Tamper	G15 Reader Tamper
G15:S17	12015217	120F217	Graphic Terminal	15	Panic	G15 Panic
G15:S18	46115218	461F218	Graphic Terminal	15	Pin Attempts	G15 Pin Attempts
G15:S19	15015219	150F219	Graphic Terminal	15	Temperature	G15 Temperature
G15:S20	15015220	150F220	Graphic Terminal	15	Light Level	G15 Light Level
G15:S21	14315221	143F221	Graphic Terminal	15	LAN Comms	G15 LAN Comms
G15:S22	15015222	150F222	Graphic Terminal	15	Spare1	G15 Spare1
G15:S23	15015223	150F223	Graphic Terminal	15	Spare2	G15 Spare2
G16:Z01	14016201	140G201	Graphic Terminal	16	Z01	G16:Z01
G16:Z02	14016202	140G202	Graphic Terminal	16	Z02	G16:Z02
G16:S01	15016201	150G201	Graphic Terminal	16	Door Reed	G16 Door Reed
G16:S02	15016202	150G202	Graphic Terminal	16	Door Tongue	G16 Door Tongue
G16:S03	43216203	432G203	Graphic Terminal	16	Door Tamper	G16 Door Tamper
G16:S04	42316204	423G204	Graphic Terminal	16	Door Forced	G16 Door Forced
G16:S05	42616205	426G205	Graphic Terminal	16	Door DOTL	G16 Door DOTL
G16:S06	14516206	145G206	Graphic Terminal	16	Cabinet Tamper	G16 Cabinet Tamper
G16:S07	30116207	301G207	Graphic Terminal	16	AC fail	G16 AC fail
G16:S08	30216208	302G208	Graphic Terminal	16	Low Battery	G16 Low Battery
G16:S09	30016209	300G209	Graphic Terminal	16	LAN Fuse	G16 LAN Fuse
G16:S10	30016210	300G210	Graphic Terminal	16	Detector Fuse	G16 Detector Fuse
G16:S11	30016211	300G211	Graphic Terminal	16	Low Volts	G16 Low Volts
G16:S12	30016212	300G212	Graphic Terminal	16	PS Fail	G16 PS Fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G16:S13	30916213	309G213	Graphic Terminal	16	Battery Test	G16 Battery Test
G16:S14	15016214	150G214	Graphic Terminal	16	Invalid Card	G16 Invalid Card
G16:S15	12216215	122G215	Graphic Terminal	16	Duress	G16 Duress
G16:S16	15016216	150G216	Graphic Terminal	16	Reader Tamper	G16 Reader Tamper
G16:S17	12016217	120G217	Graphic Terminal	16	Panic	G16 Panic
G16:S18	46116218	461G218	Graphic Terminal	16	Pin Attempts	G16 Pin Attempts
G16:S19	15016219	150G219	Graphic Terminal	16	Temperature	G16 Temperature
G16:S20	15016220	150G220	Graphic Terminal	16	Light Level	G16 Light Level
G16:S21	14316221	143G221	Graphic Terminal	16	LAN Comms	G16 LAN Comms
G16:S22	15016222	150G222	Graphic Terminal	16	Spare1	G16 Spare1
G16:S23	15016223	150G223	Graphic Terminal	16	Spare2	G16 Spare2
G17:Z01	14017201	140H201	Graphic Terminal	17	Z01	G17:Z01
G17:Z02	14017202	140H202	Graphic Terminal	17	Z02	G17:Z02
G17:S01	15017201	150H201	Graphic Terminal	17	Door Reed	G17 Door Reed
G17:S02	15017202	150H202	Graphic Terminal	17	Door Tongue	G17 Door Tongue
G17:S03	43217203	432H203	Graphic Terminal	17	Door Tamper	G17 Door Tamper
G17:S04	42317204	423H204	Graphic Terminal	17	Door Forced	G17 Door Forced
G17:S05	42617205	426H205	Graphic Terminal	17	Door DOTL	G17 Door DOTL
G17:S06	14517206	145H206	Graphic Terminal	17	Cabinet Tamper	G17 Cabinet Tamper
G17:S07	30117207	301H207	Graphic Terminal	17	AC fail	G17 AC fail
G17:S08	30217208	302H208	Graphic Terminal	17	Low Battery	G17 Low Battery
G17:S09	30017209	300H209	Graphic Terminal	17	LAN Fuse	G17 LAN Fuse
G17:S10	30017210	300H210	Graphic Terminal	17	Detector Fuse	G17 Detector Fuse
G17:S11	30017211	300H211	Graphic Terminal	17	Low Volts	G17 Low Volts
G17:S12	30017212	300H212	Graphic Terminal	17	PS Fail	G17 PS Fail
G17:S13	30917213	309H213	Graphic Terminal	17	Battery Test	G17 Battery Test
G17:S14	15017214	150H214	Graphic Terminal	17	Invalid Card	G17 Invalid Card
G17:S15	12217215	122H215	Graphic Terminal	17	Duress	G17 Duress
G17:S16	15017216	150H216	Graphic Terminal	17	Reader Tamper	G17 Reader Tamper
G17:S17	12017217	120H217	Graphic Terminal	17	Panic	G17 Panic
G17:S18	46117218	461H218	Graphic Terminal	17	Pin Attempts	G17 Pin Attempts
G17:S19	15017219	150H219	Graphic Terminal	17	Temperature	G17 Temperature
G17:S20	15017220	150H220	Graphic Terminal	17	Light Level	G17 Light Level
G17:S21	14317221	143H221	Graphic Terminal	17	LAN Comms	G17 LAN Comms
G17:S22	15017222	150H222	Graphic Terminal	17	Spare1	G17 Spare1
G17:S23	15017223	150H223	Graphic Terminal	17	Spare2	G17 Spare2
G18:Z01	14018201	140I201	Graphic Terminal	18	Z01	G18:Z01
G18:Z02	14018202	140I202	Graphic Terminal	18	Z02	G18:Z02
G18:S01	15018201	150I201	Graphic Terminal	18	Door Reed	G18 Door Reed
G18:S02	15018202	150I202	Graphic Terminal	18	Door Tongue	G18 Door Tongue
G18:S03	43218203	432I203	Graphic Terminal	18	Door Tamper	G18 Door Tamper
G18:S04	42318204	423I204	Graphic Terminal	18	Door Forced	G18 Door Forced
G18:S05	42618205	426I205	Graphic Terminal	18	Door DOTL	G18 Door DOTL
G18:S06	14518206	145I206	Graphic Terminal	18	Cabinet Tamper	G18 Cabinet Tamper
G18:S07	30118207	301I207	Graphic Terminal	18	AC fail	G18 AC fail
G18:S08	30218208	302I208	Graphic Terminal	18	Low Battery	G18 Low Battery
G18:S09	30018209	300I209	Graphic Terminal	18	LAN Fuse	G18 LAN Fuse
G18:S10	30018210	300I210	Graphic Terminal	18	Detector Fuse	G18 Detector Fuse
G18:S11	30018211	300I211	Graphic Terminal	18	Low Volts	G18 Low Volts
G18:S12	30018212	300I212	Graphic Terminal	18	PS Fail	G18 PS Fail
G18:S13	30918213	309I213	Graphic Terminal	18	Battery Test	G18 Battery Test
G18:S14	15018214	150I214	Graphic Terminal	18	Invalid Card	G18 Invalid Card
G18:S15	12218215	122I215	Graphic Terminal	18	Duress	G18 Duress
G18:S16	15018216	150I216	Graphic Terminal	18	Reader Tamper	G18 Reader Tamper
G18:S17	12018217	120I217	Graphic Terminal	18	Panic	G18 Panic
G18:S18	46118218	461I218	Graphic Terminal	18	Pin Attempts	G18 Pin Attempts
G18:S19	15018219	150I219	Graphic Terminal	18	Temperature	G18 Temperature

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G18:S20	15018220	150I220	Graphic Terminal	18	Light Level	G18 Light Level
G18:S21	14318221	143I221	Graphic Terminal	18	LAN Comms	G18 LAN Comms
G18:S22	15018222	150I222	Graphic Terminal	18	Spare1	G18 Spare1
G18:S23	15018223	150I223	Graphic Terminal	18	Spare2	G18 Spare2
G19:Z01	14019201	140J201	Graphic Terminal	19	Z01	G19:Z01
G19:Z02	14019202	140J202	Graphic Terminal	19	Z02	G19:Z02
G19:S01	15019201	150J201	Graphic Terminal	19	Door Reed	G19 Door Reed
G19:S02	15019202	150J202	Graphic Terminal	19	Door Tongue	G19 Door Tongue
G19:S03	43219203	432J203	Graphic Terminal	19	Door Tamper	G19 Door Tamper
G19:S04	42319204	423J204	Graphic Terminal	19	Door Forced	G19 Door Forced
G19:S05	42619205	426J205	Graphic Terminal	19	Door DOTL	G19 Door DOTL
G19:S06	14519206	145J206	Graphic Terminal	19	Cabinet Tamper	G19 Cabinet Tamper
G19:S07	30119207	301J207	Graphic Terminal	19	AC fail	G19 AC fail
G19:S08	30219208	302J208	Graphic Terminal	19	Low Battery	G19 Low Battery
G19:S09	30019209	300J209	Graphic Terminal	19	LAN Fuse	G19 LAN Fuse
G19:S10	30019210	300J210	Graphic Terminal	19	Detector Fuse	G19 Detector Fuse
G19:S11	30019211	300J211	Graphic Terminal	19	Low Volts	G19 Low Volts
G19:S12	30019212	300J212	Graphic Terminal	19	PS Fail	G19 PS Fail
G19:S13	30919213	309J213	Graphic Terminal	19	Battery Test	G19 Battery Test
G19:S14	15019214	150J214	Graphic Terminal	19	Invalid Card	G19 Invalid Card
G19:S15	12219215	122J215	Graphic Terminal	19	Duress	G19 Duress
G19:S16	15019216	150J216	Graphic Terminal	19	Reader Tamper	G19 Reader Tamper
G19:S17	12019217	120J217	Graphic Terminal	19	Panic	G19 Panic
G19:S18	46119218	461J218	Graphic Terminal	19	Pin Attempts	G19 Pin Attempts
G19:S19	15019219	150J219	Graphic Terminal	19	Temperature	G19 Temperature
G19:S20	15019220	150J220	Graphic Terminal	19	Light Level	G19 Light Level
G19:S21	14319221	143J221	Graphic Terminal	19	LAN Comms	G19 LAN Comms
G19:S22	15019222	150J222	Graphic Terminal	19	Spare1	G19 Spare1
G19:S23	15019223	150J223	Graphic Terminal	19	Spare2	G19 Spare2
G20:Z01	14020201	140K201	Graphic Terminal	20	Z01	G20:Z01
G20:Z02	14020202	140K202	Graphic Terminal	20	Z02	G20:Z02
G20:S01	15020201	150K201	Graphic Terminal	20	Door Reed	G20 Door Reed
G20:S02	15020202	150K202	Graphic Terminal	20	Door Tongue	G20 Door Tongue
G20:S03	43220203	432K203	Graphic Terminal	20	Door Tamper	G20 Door Tamper
G20:S04	42320204	423K204	Graphic Terminal	20	Door Forced	G20 Door Forced
G20:S05	42620205	426K205	Graphic Terminal	20	Door DOTL	G20 Door DOTL
G20:S06	14520206	145K206	Graphic Terminal	20	Cabinet Tamper	G20 Cabinet Tamper
G20:S07	30120207	301K207	Graphic Terminal	20	AC fail	G20 AC fail
G20:S08	30220208	302K208	Graphic Terminal	20	Low Battery	G20 Low Battery
G20:S09	30020209	300K209	Graphic Terminal	20	LAN Fuse	G20 LAN Fuse
G20:S10	30020210	300K210	Graphic Terminal	20	Detector Fuse	G20 Detector Fuse
G20:S11	30020211	300K211	Graphic Terminal	20	Low Volts	G20 Low Volts
G20:S12	30020212	300K212	Graphic Terminal	20	PS Fail	G20 PS Fail
G20:S13	30920213	309K213	Graphic Terminal	20	Battery Test	G20 Battery Test
G20:S14	15020214	150K214	Graphic Terminal	20	Invalid Card	G20 Invalid Card
G20:S15	12220215	122K215	Graphic Terminal	20	Duress	G20 Duress
G20:S16	15020216	150K216	Graphic Terminal	20	Reader Tamper	G20 Reader Tamper
G20:S17	12020217	120K217	Graphic Terminal	20	Panic	G20 Panic
G20:S18	46120218	461K218	Graphic Terminal	20	Pin Attempts	G20 Pin Attempts
G20:S19	15020219	150K219	Graphic Terminal	20	Temperature	G20 Temperature
G20:S20	15020220	150K220	Graphic Terminal	20	Light Level	G20 Light Level
G20:S21	14320221	143K221	Graphic Terminal	20	LAN Comms	G20 LAN Comms
G20:S22	15020222	150K222	Graphic Terminal	20	Spare1	G20 Spare1
G20:S23	15020223	150K223	Graphic Terminal	20	Spare2	G20 Spare2
G21:Z01	14021201	140L201	Graphic Terminal	21	Z01	G21:Z01
G21:Z02	14021202	140L202	Graphic Terminal	21	Z02	G21:Z02
G21:S01	15021201	150L201	Graphic Terminal	21	Door Reed	G21 Door Reed

Integrati ID	Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
				Type	No.		
G21:S02		15021202	150L202	Graphic Terminal	21	Door Tongue	G21 Door Tongue
G21:S03		43221203	432L203	Graphic Terminal	21	Door Tamper	G21 Door Tamper
G21:S04		42321204	423L204	Graphic Terminal	21	Door Forced	G21 Door Forced
G21:S05		42621205	426L205	Graphic Terminal	21	Door DOTL	G21 Door DOTL
G21:S06		14521206	145L206	Graphic Terminal	21	Cabinet Tamper	G21 Cabinet Tamper
G21:S07		30121207	301L207	Graphic Terminal	21	AC fail	G21 AC fail
G21:S08		30221208	302L208	Graphic Terminal	21	Low Battery	G21 Low Battery
G21:S09		30021209	300L209	Graphic Terminal	21	LAN Fuse	G21 LAN Fuse
G21:S10		30021210	300L210	Graphic Terminal	21	Detector Fuse	G21 Detector Fuse
G21:S11		30021211	300L211	Graphic Terminal	21	Low Volts	G21 Low Volts
G21:S12		30021212	300L212	Graphic Terminal	21	PS Fail	G21 PS Fail
G21:S13		30921213	309L213	Graphic Terminal	21	Battery Test	G21 Battery Test
G21:S14		15021214	150L214	Graphic Terminal	21	Invalid Card	G21 Invalid Card
G21:S15		12221215	122L215	Graphic Terminal	21	Duress	G21 Duress
G21:S16		15021216	150L216	Graphic Terminal	21	Reader Tamper	G21 Reader Tamper
G21:S17		12021217	120L217	Graphic Terminal	21	Panic	G21 Panic
G21:S18		46121218	461L218	Graphic Terminal	21	Pin Attempts	G21 Pin Attempts
G21:S19		15021219	150L219	Graphic Terminal	21	Temperature	G21 Temperature
G21:S20		15021220	150L220	Graphic Terminal	21	Light Level	G21 Light Level
G21:S21		14321221	143L221	Graphic Terminal	21	LAN Comms	G21 LAN Comms
G21:S22		15021222	150L222	Graphic Terminal	21	Spare1	G21 Spare1
G21:S23		15021223	150L223	Graphic Terminal	21	Spare2	G21 Spare2
G22:Z01		14022201	140M201	Graphic Terminal	22	Z01	G22:Z01
G22:Z02		14022202	140M202	Graphic Terminal	22	Z02	G22:Z02
G22:S01		15022201	150M201	Graphic Terminal	22	Door Reed	G22 Door Reed
G22:S02		15022202	150M202	Graphic Terminal	22	Door Tongue	G22 Door Tongue
G22:S03		43222203	432M203	Graphic Terminal	22	Door Tamper	G22 Door Tamper
G22:S04		42322204	423M204	Graphic Terminal	22	Door Forced	G22 Door Forced
G22:S05		42622205	426M205	Graphic Terminal	22	Door DOTL	G22 Door DOTL
G22:S06		14522206	145M206	Graphic Terminal	22	Cabinet Tamper	G22 Cabinet Tamper
G22:S07		30122207	301M207	Graphic Terminal	22	AC fail	G22 AC fail
G22:S08		30222208	302M208	Graphic Terminal	22	Low Battery	G22 Low Battery
G22:S09		30022209	300M209	Graphic Terminal	22	LAN Fuse	G22 LAN Fuse
G22:S10		30022210	300M210	Graphic Terminal	22	Detector Fuse	G22 Detector Fuse
G22:S11		30022211	300M211	Graphic Terminal	22	Low Volts	G22 Low Volts
G22:S12		30022212	300M212	Graphic Terminal	22	PS Fail	G22 PS Fail
G22:S13		30922213	309M213	Graphic Terminal	22	Battery Test	G22 Battery Test
G22:S14		15022214	150M214	Graphic Terminal	22	Invalid Card	G22 Invalid Card
G22:S15		12222215	122M215	Graphic Terminal	22	Duress	G22 Duress
G22:S16		15022216	150M216	Graphic Terminal	22	Reader Tamper	G22 Reader Tamper
G22:S17		12022217	120M217	Graphic Terminal	22	Panic	G22 Panic
G22:S18		46122218	461M218	Graphic Terminal	22	Pin Attempts	G22 Pin Attempts
G22:S19		15022219	150M219	Graphic Terminal	22	Temperature	G22 Temperature
G22:S20		15022220	150M220	Graphic Terminal	22	Light Level	G22 Light Level
G22:S21		14322221	143M221	Graphic Terminal	22	LAN Comms	G22 LAN Comms
G22:S22		15022222	150M222	Graphic Terminal	22	Spare1	G22 Spare1
G22:S23		15022223	150M223	Graphic Terminal	22	Spare2	G22 Spare2
G23:Z01		14023201	140N201	Graphic Terminal	23	Z01	G23:Z01
G23:Z02		14023202	140N202	Graphic Terminal	23	Z02	G23:Z02
G23:S01		15023201	150N201	Graphic Terminal	23	Door Reed	G23 Door Reed
G23:S02		15023202	150N202	Graphic Terminal	23	Door Tongue	G23 Door Tongue
G23:S03		43223203	432N203	Graphic Terminal	23	Door Tamper	G23 Door Tamper
G23:S04		42323204	423N204	Graphic Terminal	23	Door Forced	G23 Door Forced
G23:S05		42623205	426N205	Graphic Terminal	23	Door DOTL	G23 Door DOTL
G23:S06		14523206	145N206	Graphic Terminal	23	Cabinet Tamper	G23 Cabinet Tamper
G23:S07		30123207	301N207	Graphic Terminal	23	AC fail	G23 AC fail
G23:S08		30223208	302N208	Graphic Terminal	23	Low Battery	G23 Low Battery

Integrati ID	Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
				Type	No.		
G23:S09		30023209	300N209	Graphic Terminal	23	LAN Fuse	G23 LAN Fuse
G23:S10		30023210	300N210	Graphic Terminal	23	Detector Fuse	G23 Detector Fuse
G23:S11		30023211	300N211	Graphic Terminal	23	Low Volts	G23 Low Volts
G23:S12		30023212	300N212	Graphic Terminal	23	PS Fail	G23 PS Fail
G23:S13		30923213	309N213	Graphic Terminal	23	Battery Test	G23 Battery Test
G23:S14		15023214	150N214	Graphic Terminal	23	Invalid Card	G23 Invalid Card
G23:S15		12223215	122N215	Graphic Terminal	23	Duress	G23 Duress
G23:S16		15023216	150N216	Graphic Terminal	23	Reader Tamper	G23 Reader Tamper
G23:S17		12023217	120N217	Graphic Terminal	23	Panic	G23 Panic
G23:S18		46123218	461N218	Graphic Terminal	23	Pin Attempts	G23 Pin Attempts
G23:S19		15023219	150N219	Graphic Terminal	23	Temperature	G23 Temperature
G23:S20		15023220	150N220	Graphic Terminal	23	Light Level	G23 Light Level
G23:S21		14323221	143N221	Graphic Terminal	23	LAN Comms	G23 LAN Comms
G23:S22		15023222	150N222	Graphic Terminal	23	Spare1	G23 Spare1
G23:S23		15023223	150N223	Graphic Terminal	23	Spare2	G23 Spare2
G24:Z01		14024201	140O201	Graphic Terminal	24	Z01	G24:Z01
G24:Z02		14024202	140O202	Graphic Terminal	24	Z02	G24:Z02
G24:S01		15024201	150O201	Graphic Terminal	24	Door Reed	G24 Door Reed
G24:S02		15024202	150O202	Graphic Terminal	24	Door Tongue	G24 Door Tongue
G24:S03		43224203	432O203	Graphic Terminal	24	Door Tamper	G24 Door Tamper
G24:S04		42324204	423O204	Graphic Terminal	24	Door Forced	G24 Door Forced
G24:S05		42624205	426O205	Graphic Terminal	24	Door DOTL	G24 Door DOTL
G24:S06		14524206	145O206	Graphic Terminal	24	Cabinet Tamper	G24 Cabinet Tamper
G24:S07		30124207	301O207	Graphic Terminal	24	AC fail	G24 AC fail
G24:S08		30224208	302O208	Graphic Terminal	24	Low Battery	G24 Low Battery
G24:S09		30024209	300O209	Graphic Terminal	24	LAN Fuse	G24 LAN Fuse
G24:S10		30024210	300O210	Graphic Terminal	24	Detector Fuse	G24 Detector Fuse
G24:S11		30024211	300O211	Graphic Terminal	24	Low Volts	G24 Low Volts
G24:S12		30024212	300O212	Graphic Terminal	24	PS Fail	G24 PS Fail
G24:S13		30924213	309O213	Graphic Terminal	24	Battery Test	G24 Battery Test
G24:S14		15024214	150O214	Graphic Terminal	24	Invalid Card	G24 Invalid Card
G24:S15		12224215	122O215	Graphic Terminal	24	Duress	G24 Duress
G24:S16		15024216	150O216	Graphic Terminal	24	Reader Tamper	G24 Reader Tamper
G24:S17		12024217	120O217	Graphic Terminal	24	Panic	G24 Panic
G24:S18		46124218	461O218	Graphic Terminal	24	Pin Attempts	G24 Pin Attempts
G24:S19		15024219	150O219	Graphic Terminal	24	Temperature	G24 Temperature
G24:S20		15024220	150O220	Graphic Terminal	24	Light Level	G24 Light Level
G24:S21		14324221	143O221	Graphic Terminal	24	LAN Comms	G24 LAN Comms
G24:S22		15024222	150O222	Graphic Terminal	24	Spare1	G24 Spare1
G24:S23		15024223	150O223	Graphic Terminal	24	Spare2	G24 Spare2
G25:Z01		14025201	140P201	Graphic Terminal	25	Z01	G25:Z01
G25:Z02		14025202	140P202	Graphic Terminal	25	Z02	G25:Z02
G25:S01		15025201	150P201	Graphic Terminal	25	Door Reed	G25 Door Reed
G25:S02		15025202	150P202	Graphic Terminal	25	Door Tongue	G25 Door Tongue
G25:S03		43225203	432P203	Graphic Terminal	25	Door Tamper	G25 Door Tamper
G25:S04		42325204	423P204	Graphic Terminal	25	Door Forced	G25 Door Forced
G25:S05		42625205	426P205	Graphic Terminal	25	Door DOTL	G25 Door DOTL
G25:S06		14525206	145P206	Graphic Terminal	25	Cabinet Tamper	G25 Cabinet Tamper
G25:S07		30125207	301P207	Graphic Terminal	25	AC fail	G25 AC fail
G25:S08		30225208	302P208	Graphic Terminal	25	Low Battery	G25 Low Battery
G25:S09		30025209	300P209	Graphic Terminal	25	LAN Fuse	G25 LAN Fuse
G25:S10		30025210	300P210	Graphic Terminal	25	Detector Fuse	G25 Detector Fuse
G25:S11		30025211	300P211	Graphic Terminal	25	Low Volts	G25 Low Volts
G25:S12		30025212	300P212	Graphic Terminal	25	PS Fail	G25 PS Fail
G25:S13		30925213	309P213	Graphic Terminal	25	Battery Test	G25 Battery Test
G25:S14		15025214	150P214	Graphic Terminal	25	Invalid Card	G25 Invalid Card
G25:S15		12225215	122P215	Graphic Terminal	25	Duress	G25 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G25:S16	15025216	150P216	Graphic Terminal	25	Reader Tamper	G25 Reader Tamper
G25:S17	12025217	120P217	Graphic Terminal	25	Panic	G25 Panic
G25:S18	46125218	461P218	Graphic Terminal	25	Pin Attempts	G25 Pin Attempts
G25:S19	15025219	150P219	Graphic Terminal	25	Temperature	G25 Temperature
G25:S20	15025220	150P220	Graphic Terminal	25	Light Level	G25 Light Level
G25:S21	14325221	143P221	Graphic Terminal	25	LAN Comms	G25 LAN Comms
G25:S22	15025222	150P222	Graphic Terminal	25	Spare1	G25 Spare1
G25:S23	15025223	150P223	Graphic Terminal	25	Spare2	G25 Spare2
G26:Z01	14026201	140Q201	Graphic Terminal	26	Z01	G26:Z01
G26:Z02	14026202	140Q202	Graphic Terminal	26	Z02	G26:Z02
G26:S01	15026201	150Q201	Graphic Terminal	26	Door Reed	G26 Door Reed
G26:S02	15026202	150Q202	Graphic Terminal	26	Door Tongue	G26 Door Tongue
G26:S03	43226203	432Q203	Graphic Terminal	26	Door Tamper	G26 Door Tamper
G26:S04	42326204	423Q204	Graphic Terminal	26	Door Forced	G26 Door Forced
G26:S05	42626205	426Q205	Graphic Terminal	26	Door DOTL	G26 Door DOTL
G26:S06	14526206	145Q206	Graphic Terminal	26	Cabinet Tamper	G26 Cabinet Tamper
G26:S07	30126207	301Q207	Graphic Terminal	26	AC fail	G26 AC fail
G26:S08	30226208	302Q208	Graphic Terminal	26	Low Battery	G26 Low Battery
G26:S09	30026209	300Q209	Graphic Terminal	26	LAN Fuse	G26 LAN Fuse
G26:S10	30026210	300Q210	Graphic Terminal	26	Detector Fuse	G26 Detector Fuse
G26:S11	30026211	300Q211	Graphic Terminal	26	Low Volts	G26 Low Volts
G26:S12	30026212	300Q212	Graphic Terminal	26	PS Fail	G26 PS Fail
G26:S13	30926213	309Q213	Graphic Terminal	26	Battery Test	G26 Battery Test
G26:S14	15026214	150Q214	Graphic Terminal	26	Invalid Card	G26 Invalid Card
G26:S15	12226215	122Q215	Graphic Terminal	26	Duress	G26 Duress
G26:S16	15026216	150Q216	Graphic Terminal	26	Reader Tamper	G26 Reader Tamper
G26:S17	12026217	120Q217	Graphic Terminal	26	Panic	G26 Panic
G26:S18	46126218	461Q218	Graphic Terminal	26	Pin Attempts	G26 Pin Attempts
G26:S19	15026219	150Q219	Graphic Terminal	26	Temperature	G26 Temperature
G26:S20	15026220	150Q220	Graphic Terminal	26	Light Level	G26 Light Level
G26:S21	14326221	143Q221	Graphic Terminal	26	LAN Comms	G26 LAN Comms
G26:S22	15026222	150Q222	Graphic Terminal	26	Spare1	G26 Spare1
G26:S23	15026223	150Q223	Graphic Terminal	26	Spare2	G26 Spare2
G27:Z01	14027201	140R201	Graphic Terminal	27	Z01	G27:Z01
G27:Z02	14027202	140R202	Graphic Terminal	27	Z02	G27:Z02
G27:S01	15027201	150R201	Graphic Terminal	27	Door Reed	G27 Door Reed
G27:S02	15027202	150R202	Graphic Terminal	27	Door Tongue	G27 Door Tongue
G27:S03	43227203	432R203	Graphic Terminal	27	Door Tamper	G27 Door Tamper
G27:S04	42327204	423R204	Graphic Terminal	27	Door Forced	G27 Door Forced
G27:S05	42627205	426R205	Graphic Terminal	27	Door DOTL	G27 Door DOTL
G27:S06	14527206	145R206	Graphic Terminal	27	Cabinet Tamper	G27 Cabinet Tamper
G27:S07	30127207	301R207	Graphic Terminal	27	AC fail	G27 AC fail
G27:S08	30227208	302R208	Graphic Terminal	27	Low Battery	G27 Low Battery
G27:S09	30027209	300R209	Graphic Terminal	27	LAN Fuse	G27 LAN Fuse
G27:S10	30027210	300R210	Graphic Terminal	27	Detector Fuse	G27 Detector Fuse
G27:S11	30027211	300R211	Graphic Terminal	27	Low Volts	G27 Low Volts
G27:S12	30027212	300R212	Graphic Terminal	27	PS Fail	G27 PS Fail
G27:S13	30927213	309R213	Graphic Terminal	27	Battery Test	G27 Battery Test
G27:S14	15027214	150R214	Graphic Terminal	27	Invalid Card	G27 Invalid Card
G27:S15	12227215	122R215	Graphic Terminal	27	Duress	G27 Duress
G27:S16	15027216	150R216	Graphic Terminal	27	Reader Tamper	G27 Reader Tamper
G27:S17	12027217	120R217	Graphic Terminal	27	Panic	G27 Panic
G27:S18	46127218	461R218	Graphic Terminal	27	Pin Attempts	G27 Pin Attempts
G27:S19	15027219	150R219	Graphic Terminal	27	Temperature	G27 Temperature
G27:S20	15027220	150R220	Graphic Terminal	27	Light Level	G27 Light Level
G27:S21	14327221	143R221	Graphic Terminal	27	LAN Comms	G27 LAN Comms
G27:S22	15027222	150R222	Graphic Terminal	27	Spare1	G27 Spare1

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G27:S23	15027223	150R223	Graphic Terminal	27	Spare2	G27 Spare2
G28:Z01	14028201	140S201	Graphic Terminal	28	Z01	G28:Z01
G28:Z02	14028202	140S202	Graphic Terminal	28	Z02	G28:Z02
G28:S01	15028201	150S201	Graphic Terminal	28	Door Reed	G28 Door Reed
G28:S02	15028202	150S202	Graphic Terminal	28	Door Tongue	G28 Door Tongue
G28:S03	43228203	432S203	Graphic Terminal	28	Door Tamper	G28 Door Tamper
G28:S04	42328204	423S204	Graphic Terminal	28	Door Forced	G28 Door Forced
G28:S05	42628205	426S205	Graphic Terminal	28	Door DOTL	G28 Door DOTL
G28:S06	14528206	145S206	Graphic Terminal	28	Cabinet Tamper	G28 Cabinet Tamper
G28:S07	30128207	301S207	Graphic Terminal	28	AC fail	G28 AC fail
G28:S08	30228208	302S208	Graphic Terminal	28	Low Battery	G28 Low Battery
G28:S09	30028209	300S209	Graphic Terminal	28	LAN Fuse	G28 LAN Fuse
G28:S10	30028210	300S210	Graphic Terminal	28	Detector Fuse	G28 Detector Fuse
G28:S11	30028211	300S211	Graphic Terminal	28	Low Volts	G28 Low Volts
G28:S12	30028212	300S212	Graphic Terminal	28	PS Fail	G28 PS Fail
G28:S13	30928213	309S213	Graphic Terminal	28	Battery Test	G28 Battery Test
G28:S14	15028214	150S214	Graphic Terminal	28	Invalid Card	G28 Invalid Card
G28:S15	12228215	122S215	Graphic Terminal	28	Duress	G28 Duress
G28:S16	15028216	150S216	Graphic Terminal	28	Reader Tamper	G28 Reader Tamper
G28:S17	12028217	120S217	Graphic Terminal	28	Panic	G28 Panic
G28:S18	46128218	461S218	Graphic Terminal	28	Pin Attempts	G28 Pin Attempts
G28:S19	15028219	150S219	Graphic Terminal	28	Temperature	G28 Temperature
G28:S20	15028220	150S220	Graphic Terminal	28	Light Level	G28 Light Level
G28:S21	14328221	143S221	Graphic Terminal	28	LAN Comms	G28 LAN Comms
G28:S22	15028222	150S222	Graphic Terminal	28	Spare1	G28 Spare1
G28:S23	15028223	150S223	Graphic Terminal	28	Spare2	G28 Spare2
G29:Z01	14029201	140T201	Graphic Terminal	29	Z01	G29:Z01
G29:Z02	14029202	140T202	Graphic Terminal	29	Z02	G29:Z02
G29:S01	15029201	150T201	Graphic Terminal	29	Door Reed	G29 Door Reed
G29:S02	15029202	150T202	Graphic Terminal	29	Door Tongue	G29 Door Tongue
G29:S03	43229203	432T203	Graphic Terminal	29	Door Tamper	G29 Door Tamper
G29:S04	42329204	423T204	Graphic Terminal	29	Door Forced	G29 Door Forced
G29:S05	42629205	426T205	Graphic Terminal	29	Door DOTL	G29 Door DOTL
G29:S06	14529206	145T206	Graphic Terminal	29	Cabinet Tamper	G29 Cabinet Tamper
G29:S07	30129207	301T207	Graphic Terminal	29	AC fail	G29 AC fail
G29:S08	30229208	302T208	Graphic Terminal	29	Low Battery	G29 Low Battery
G29:S09	30029209	300T209	Graphic Terminal	29	LAN Fuse	G29 LAN Fuse
G29:S10	30029210	300T210	Graphic Terminal	29	Detector Fuse	G29 Detector Fuse
G29:S11	30029211	300T211	Graphic Terminal	29	Low Volts	G29 Low Volts
G29:S12	30029212	300T212	Graphic Terminal	29	PS Fail	G29 PS Fail
G29:S13	30929213	309T213	Graphic Terminal	29	Battery Test	G29 Battery Test
G29:S14	15029214	150T214	Graphic Terminal	29	Invalid Card	G29 Invalid Card
G29:S15	12229215	122T215	Graphic Terminal	29	Duress	G29 Duress
G29:S16	15029216	150T216	Graphic Terminal	29	Reader Tamper	G29 Reader Tamper
G29:S17	12029217	120T217	Graphic Terminal	29	Panic	G29 Panic
G29:S18	46129218	461T218	Graphic Terminal	29	Pin Attempts	G29 Pin Attempts
G29:S19	15029219	150T219	Graphic Terminal	29	Temperature	G29 Temperature
G29:S20	15029220	150T220	Graphic Terminal	29	Light Level	G29 Light Level
G29:S21	14329221	143T221	Graphic Terminal	29	LAN Comms	G29 LAN Comms
G29:S22	15029222	150T222	Graphic Terminal	29	Spare1	G29 Spare1
G29:S23	15029223	150T223	Graphic Terminal	29	Spare2	G29 Spare2
G30:Z01	14030201	140U201	Graphic Terminal	30	Z01	G30:Z01
G30:Z02	14030202	140U202	Graphic Terminal	30	Z02	G30:Z02
G30:S01	15030201	150U201	Graphic Terminal	30	Door Reed	G30 Door Reed
G30:S02	15030202	150U202	Graphic Terminal	30	Door Tongue	G30 Door Tongue
G30:S03	43230203	432U203	Graphic Terminal	30	Door Tamper	G30 Door Tamper
G30:S04	42330204	423U204	Graphic Terminal	30	Door Forced	G30 Door Forced

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G30:S05	42630205	426U205	Graphic Terminal	30	Door DOTL	G30 Door DOTL
G30:S06	14530206	145U206	Graphic Terminal	30	Cabinet Tamper	G30 Cabinet Tamper
G30:S07	30130207	301U207	Graphic Terminal	30	AC fail	G30 AC fail
G30:S08	30230208	302U208	Graphic Terminal	30	Low Battery	G30 Low Battery
G30:S09	30030209	300U209	Graphic Terminal	30	LAN Fuse	G30 LAN Fuse
G30:S10	30030210	300U210	Graphic Terminal	30	Detector Fuse	G30 Detector Fuse
G30:S11	30030211	300U211	Graphic Terminal	30	Low Volts	G30 Low Volts
G30:S12	30030212	300U212	Graphic Terminal	30	PS Fail	G30 PS Fail
G30:S13	30930213	309U213	Graphic Terminal	30	Battery Test	G30 Battery Test
G30:S14	15030214	150U214	Graphic Terminal	30	Invalid Card	G30 Invalid Card
G30:S15	12230215	122U215	Graphic Terminal	30	Duress	G30 Duress
G30:S16	15030216	150U216	Graphic Terminal	30	Reader Tamper	G30 Reader Tamper
G30:S17	12030217	120U217	Graphic Terminal	30	Panic	G30 Panic
G30:S18	46130218	461U218	Graphic Terminal	30	Pin Attempts	G30 Pin Attempts
G30:S19	15030219	150U219	Graphic Terminal	30	Temperature	G30 Temperature
G30:S20	15030220	150U220	Graphic Terminal	30	Light Level	G30 Light Level
G30:S21	14330221	143U221	Graphic Terminal	30	LAN Comms	G30 LAN Comms
G30:S22	15030222	150U222	Graphic Terminal	30	Spare1	G30 Spare1
G30:S23	15030223	150U223	Graphic Terminal	30	Spare2	G30 Spare2
G31:Z01	14031201	140V201	Graphic Terminal	31	Z01	G31:Z01
G31:Z02	14031202	140V202	Graphic Terminal	31	Z02	G31:Z02
G31:S01	15031201	150V201	Graphic Terminal	31	Door Reed	G31 Door Reed
G31:S02	15031202	150V202	Graphic Terminal	31	Door Tongue	G31 Door Tongue
G31:S03	43231203	432V203	Graphic Terminal	31	Door Tamper	G31 Door Tamper
G31:S04	42331204	423V204	Graphic Terminal	31	Door Forced	G31 Door Forced
G31:S05	42631205	426V205	Graphic Terminal	31	Door DOTL	G31 Door DOTL
G31:S06	14531206	145V206	Graphic Terminal	31	Cabinet Tamper	G31 Cabinet Tamper
G31:S07	30131207	301V207	Graphic Terminal	31	AC fail	G31 AC fail
G31:S08	30231208	302V208	Graphic Terminal	31	Low Battery	G31 Low Battery
G31:S09	30031209	300V209	Graphic Terminal	31	LAN Fuse	G31 LAN Fuse
G31:S10	30031210	300V210	Graphic Terminal	31	Detector Fuse	G31 Detector Fuse
G31:S11	30031211	300V211	Graphic Terminal	31	Low Volts	G31 Low Volts
G31:S12	30031212	300V212	Graphic Terminal	31	PS Fail	G31 PS Fail
G31:S13	30931213	309V213	Graphic Terminal	31	Battery Test	G31 Battery Test
G31:S14	15031214	150V214	Graphic Terminal	31	Invalid Card	G31 Invalid Card
G31:S15	12231215	122V215	Graphic Terminal	31	Duress	G31 Duress
G31:S16	15031216	150V216	Graphic Terminal	31	Reader Tamper	G31 Reader Tamper
G31:S17	12031217	120V217	Graphic Terminal	31	Panic	G31 Panic
G31:S18	46131218	461V218	Graphic Terminal	31	Pin Attempts	G31 Pin Attempts
G31:S19	15031219	150V219	Graphic Terminal	31	Temperature	G31 Temperature
G31:S20	15031220	150V220	Graphic Terminal	31	Light Level	G31 Light Level
G31:S21	14331221	143V221	Graphic Terminal	31	LAN Comms	G31 LAN Comms
G31:S22	15031222	150V222	Graphic Terminal	31	Spare1	G31 Spare1
G31:S23	15031223	150V223	Graphic Terminal	31	Spare2	G31 Spare2
G32:Z01	14032201	140W201	Graphic Terminal	32	Z01	G32:Z01
G32:Z02	14032202	140W202	Graphic Terminal	32	Z02	G32:Z02
G32:S01	15032201	150W201	Graphic Terminal	32	Door Reed	G32 Door Reed
G32:S02	15032202	150W202	Graphic Terminal	32	Door Tongue	G32 Door Tongue
G32:S03	43232203	432W203	Graphic Terminal	32	Door Tamper	G32 Door Tamper
G32:S04	42332204	423W204	Graphic Terminal	32	Door Forced	G32 Door Forced
G32:S05	42632205	426W205	Graphic Terminal	32	Door DOTL	G32 Door DOTL
G32:S06	14532206	145W206	Graphic Terminal	32	Cabinet Tamper	G32 Cabinet Tamper
G32:S07	30132207	301W207	Graphic Terminal	32	AC fail	G32 AC fail
G32:S08	30232208	302W208	Graphic Terminal	32	Low Battery	G32 Low Battery
G32:S09	30032209	300W209	Graphic Terminal	32	LAN Fuse	G32 LAN Fuse
G32:S10	30032210	300W210	Graphic Terminal	32	Detector Fuse	G32 Detector Fuse
G32:S11	30032211	300W211	Graphic Terminal	32	Low Volts	G32 Low Volts

Integrati ID	Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
				Type	No.		
G32:S12		30032212	300W212	Graphic Terminal	32	PS Fail	G32 PS Fail
G32:S13		30932213	309W213	Graphic Terminal	32	Battery Test	G32 Battery Test
G32:S14		15032214	150W214	Graphic Terminal	32	Invalid Card	G32 Invalid Card
G32:S15		12232215	122W215	Graphic Terminal	32	Duress	G32 Duress
G32:S16		15032216	150W216	Graphic Terminal	32	Reader Tamper	G32 Reader Tamper
G32:S17		12032217	120W217	Graphic Terminal	32	Panic	G32 Panic
G32:S18		46132218	461W218	Graphic Terminal	32	Pin Attempts	G32 Pin Attempts
G32:S19		15032219	150W219	Graphic Terminal	32	Temperature	G32 Temperature
G32:S20		15032220	150W220	Graphic Terminal	32	Light Level	G32 Light Level
G32:S21		14332221	143W221	Graphic Terminal	32	LAN Comms	G32 LAN Comms
G32:S22		15032222	150W222	Graphic Terminal	32	Spare1	G32 Spare1
G32:S23		15032223	150W223	Graphic Terminal	32	Spare2	G32 Spare2
G33:Z01		14033201	140X201	Graphic Terminal	33	Z01	G33:Z01
G33:Z02		14033202	140X202	Graphic Terminal	33	Z02	G33:Z02
G33:S01		15033201	150X201	Graphic Terminal	33	Door Reed	G33 Door Reed
G33:S02		15033202	150X202	Graphic Terminal	33	Door Tongue	G33 Door Tongue
G33:S03		43233203	432X203	Graphic Terminal	33	Door Tamper	G33 Door Tamper
G33:S04		42333204	423X204	Graphic Terminal	33	Door Forced	G33 Door Forced
G33:S05		42633205	426X205	Graphic Terminal	33	Door DOTL	G33 Door DOTL
G33:S06		14533206	145X206	Graphic Terminal	33	Cabinet Tamper	G33 Cabinet Tamper
G33:S07		30133207	301X207	Graphic Terminal	33	AC fail	G33 AC fail
G33:S08		30233208	302X208	Graphic Terminal	33	Low Battery	G33 Low Battery
G33:S09		30033209	300X209	Graphic Terminal	33	LAN Fuse	G33 LAN Fuse
G33:S10		30033210	300X210	Graphic Terminal	33	Detector Fuse	G33 Detector Fuse
G33:S11		30033211	300X211	Graphic Terminal	33	Low Volts	G33 Low Volts
G33:S12		30033212	300X212	Graphic Terminal	33	PS Fail	G33 PS Fail
G33:S13		30933213	309X213	Graphic Terminal	33	Battery Test	G33 Battery Test
G33:S14		15033214	150X214	Graphic Terminal	33	Invalid Card	G33 Invalid Card
G33:S15		12233215	122X215	Graphic Terminal	33	Duress	G33 Duress
G33:S16		15033216	150X216	Graphic Terminal	33	Reader Tamper	G33 Reader Tamper
G33:S17		12033217	120X217	Graphic Terminal	33	Panic	G33 Panic
G33:S18		46133218	461X218	Graphic Terminal	33	Pin Attempts	G33 Pin Attempts
G33:S19		15033219	150X219	Graphic Terminal	33	Temperature	G33 Temperature
G33:S20		15033220	150X220	Graphic Terminal	33	Light Level	G33 Light Level
G33:S21		14333221	143X221	Graphic Terminal	33	LAN Comms	G33 LAN Comms
G33:S22		15033222	150X222	Graphic Terminal	33	Spare1	G33 Spare1
G33:S23		15033223	150X223	Graphic Terminal	33	Spare2	G33 Spare2
G34:Z01		14034201	140Y201	Graphic Terminal	34	Z01	G34:Z01
G34:Z02		14034202	140Y202	Graphic Terminal	34	Z02	G34:Z02
G34:S01		15034201	150Y201	Graphic Terminal	34	Door Reed	G34 Door Reed
G34:S02		15034202	150Y202	Graphic Terminal	34	Door Tongue	G34 Door Tongue
G34:S03		43234203	432Y203	Graphic Terminal	34	Door Tamper	G34 Door Tamper
G34:S04		42334204	423Y204	Graphic Terminal	34	Door Forced	G34 Door Forced
G34:S05		42634205	426Y205	Graphic Terminal	34	Door DOTL	G34 Door DOTL
G34:S06		14534206	145Y206	Graphic Terminal	34	Cabinet Tamper	G34 Cabinet Tamper
G34:S07		30134207	301Y207	Graphic Terminal	34	AC fail	G34 AC fail
G34:S08		30234208	302Y208	Graphic Terminal	34	Low Battery	G34 Low Battery
G34:S09		30034209	300Y209	Graphic Terminal	34	LAN Fuse	G34 LAN Fuse
G34:S10		30034210	300Y210	Graphic Terminal	34	Detector Fuse	G34 Detector Fuse
G34:S11		30034211	300Y211	Graphic Terminal	34	Low Volts	G34 Low Volts
G34:S12		30034212	300Y212	Graphic Terminal	34	PS Fail	G34 PS Fail
G34:S13		30934213	309Y213	Graphic Terminal	34	Battery Test	G34 Battery Test
G34:S14		15034214	150Y214	Graphic Terminal	34	Invalid Card	G34 Invalid Card
G34:S15		12234215	122Y215	Graphic Terminal	34	Duress	G34 Duress
G34:S16		15034216	150Y216	Graphic Terminal	34	Reader Tamper	G34 Reader Tamper
G34:S17		12034217	120Y217	Graphic Terminal	34	Panic	G34 Panic
G34:S18		46134218	461Y218	Graphic Terminal	34	Pin Attempts	G34 Pin Attempts

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
G34:S19	15034219	150Y219	Graphic Terminal	34	Temperature	G34 Temperature
G34:S20	15034220	150Y220	Graphic Terminal	34	Light Level	G34 Light Level
G34:S21	14334221	143Y221	Graphic Terminal	34	LAN Comms	G34 LAN Comms
G34:S22	15034222	150Y222	Graphic Terminal	34	Spare1	G34 Spare1
G34:S23	15034223	150Y223	Graphic Terminal	34	Spare2	G34 Spare2
G35-G99:Z01	14035201	140Z201	Graphic Terminal	35	Z01	G35-G99:Z01
G35-G99:Z02	14035202	140Z202	Graphic Terminal	35	Z02	G35-G99:Z02
G35-G99:S01	15035201	150Z201	Graphic Terminal	35	Door Reed	G35-G99 Door Reed
G35-G99:S02	15035202	150Z202	Graphic Terminal	35	Door Tongue	G35-G99 Door Tongue
G35-G99:S03	43235203	432Z203	Graphic Terminal	35	Door Tamper	G35-G99 Door Tamper
G35-G99:S04	42335204	423Z204	Graphic Terminal	35	Door Forced	G35-G99 Door Forced
G35-G99:S05	42635205	426Z205	Graphic Terminal	35	Door DOTL	G35-G99 Door DOTL
G35-G99:S06	14535206	145Z206	Graphic Terminal	35	Cabinet Tamper	G35-G99 Cabinet Tamper
G35-G99:S07	30135207	301Z207	Graphic Terminal	35	AC fail	G35-G99 AC fail
G35-G99:S08	30235208	302Z208	Graphic Terminal	35	Low Battery	G35-G99 Low Battery
G35-G99:S09	30035209	300Z209	Graphic Terminal	35	LAN Fuse	G35-G99 LAN Fuse
G35-G99:S10	30035210	300Z210	Graphic Terminal	35	Detector Fuse	G35-G99 Detector Fuse
G35-G99:S11	30035211	300Z211	Graphic Terminal	35	Low Volts	G35-G99 Low Volts
G35-G99:S12	30035212	300Z212	Graphic Terminal	35	PS Fail	G35-G99 PS Fail
G35-G99:S13	30935213	309Z213	Graphic Terminal	35	Battery Test	G35-G99 Battery Test
G35-G99:S14	15035214	150Z214	Graphic Terminal	35	Invalid Card	G35-G99 Invalid Card
G35-G99:S15	12235215	122Z215	Graphic Terminal	35	Duress	G35-G99 Duress
G35-G99:S16	15035216	150Z216	Graphic Terminal	35	Reader Tamper	G35-G99 Reader Tamper
G35-G99:S17	12035217	120Z217	Graphic Terminal	35	Panic	G35-G99 Panic
G35-G99:S18	46135218	461Z218	Graphic Terminal	35	Pin Attempts	G35-G99 Pin Attempts
G35-G99:S19	15035219	150Z219	Graphic Terminal	35	Temperature	G35-G99 Temperature
G35-G99:S20	15035220	150Z220	Graphic Terminal	35	Light Level	G35-G99 Light Level
G35-G99:S21	14335221	143Z221	Graphic Terminal	35	LAN Comms	G35-G99 LAN Comms
G35-G99:S22	15035222	150Z222	Graphic Terminal	35	Spare1	G35-G99 Spare1
G35-G99:S23	15035223	150Z223	Graphic Terminal	35	Spare2	G35-G99 Spare2
E01:Z01	14001301	1401301	Expander	1	Z01	E01:Z01
E01:Z02	14001302	1401302	Expander	1	Z02	E01:Z02
E01:Z03	14001303	1401303	Expander	1	Z03	E01:Z03
E01:Z04	14001304	1401304	Expander	1	Z04	E01:Z04
E01:Z05	14001305	1401305	Expander	1	Z05	E01:Z05
E01:Z06	14001306	1401306	Expander	1	Z06	E01:Z06
E01:Z07	14001307	1401307	Expander	1	Z07	E01:Z07
E01:Z08	14001308	1401308	Expander	1	Z08	E01:Z08
E01:Z09	14001309	1401309	Expander	1	Z09	E01:Z09
E01:Z10	14001310	1401310	Expander	1	Z10	E01:Z10
E01:Z11	14001311	1401311	Expander	1	Z11	E01:Z11
E01:Z12	14001312	1401312	Expander	1	Z12	E01:Z12
E01:Z13	14001313	1401313	Expander	1	Z13	E01:Z13
E01:Z14	14001314	1401314	Expander	1	Z14	E01:Z14
E01:Z15	14001315	1401315	Expander	1	Z15	E01:Z15
E01:Z16	14001316	1401316	Expander	1	Z16	E01:Z16
E01:Z17	14001317	1401317	Expander	1	Z17	E01:Z17
E01:Z18	14001318	1401318	Expander	1	Z18	E01:Z18
E01:Z19	14001319	1401319	Expander	1	Z19	E01:Z19
E01:Z20	14001320	1401320	Expander	1	Z20	E01:Z20
E01:Z21	14001321	1401321	Expander	1	Z21	E01:Z21
E01:Z22	14001322	1401322	Expander	1	Z22	E01:Z22
E01:Z23	14001323	1401323	Expander	1	Z23	E01:Z23
E01:Z24	14001324	1401324	Expander	1	Z24	E01:Z24
E01:Z25	14001325	1401325	Expander	1	Z25	E01:Z25
E01:Z26	14001326	1401326	Expander	1	Z26	E01:Z26
E01:Z27	14001327	1401327	Expander	1	Z27	E01:Z27

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E01:Z28	14001328	1401328	Expander	1	Z28	E01:Z28
E01:Z29	14001329	1401329	Expander	1	Z29	E01:Z29
E01:Z30	14001330	1401330	Expander	1	Z30	E01:Z30
E01:Z31	14001331	1401331	Expander	1	Z31	E01:Z31
E01:Z32	14001332	1401332	Expander	1	Z32	E01:Z32
E01:S01	14501301	1451301	Expander	1	Cabinet Tamper	E01 Cabinet Tamper
E01:S02	32001302	3201302	Expander	1	Int SiREN Tamper	E01 Int SiREN Tamper
E01:S03	32001303	3201303	Expander	1	Ext SiREN Tamper	E01 Ext SiREN Tamper
E01:S04	30101304	3011304	Expander	1	AC fail	E01 AC fail
E01:S05	30201305	3021305	Expander	1	Low Battery	E01 Low Battery
E01:S06	30001306	3001306	Expander	1	LAN Fuse	E01 LAN Fuse
E01:S07	30001307	3001307	Expander	1	Detector Fuse	E01 Detector Fuse
E01:S08	30001308	3001308	Expander	1	Low Volts	E01 Low Volts
E01:S09	30001309	3001309	Expander	1	PS Fail	E01 PS Fail
E01:S10	30901310	3091310	Expander	1	Battery Test	E01 Battery Test
E01:S11	30101311	3011311	Expander	1	Ext AC fail	E01 Ext AC fail
E01:S12	30201312	3021312	Expander	1	Ext Low Battery	E01 Ext Low Battery
E01:S13	30001313	3001313	Expander	1	Ext LAN Fuse	E01 Ext LAN Fuse
E01:S14	30001314	3001314	Expander	1	Ext Detector Fuse	E01 Ext Detector Fuse
E01:S15	30001315	3001315	Expander	1	Ext Low Volts	E01 Ext Low Volts
E01:S16	30001316	3001316	Expander	1	Ext PS Fail	E01 Ext PS Fail
E01:S17	30901317	3091317	Expander	1	Ext Battery Test	E01 Ext Battery Test
E01:S18	33301318	3331318	Expander	1	Unibus Fault	E01 Unibus Fault
E01:S19	14301319	1431319	Expander	1	LAN Comms	E01 LAN Comms
E01:S20	15001320	1501320	Expander	1	Spare1	E01 Spare1
E01:S21	15001321	1501321	Expander	1	Spare2	E01 Spare2
E02:Z01	14002301	1402301	Expander	2	Z01	E02:Z01
E02:Z02	14002302	1402302	Expander	2	Z02	E02:Z02
E02:Z03	14002303	1402303	Expander	2	Z03	E02:Z03
E02:Z04	14002304	1402304	Expander	2	Z04	E02:Z04
E02:Z05	14002305	1402305	Expander	2	Z05	E02:Z05
E02:Z06	14002306	1402306	Expander	2	Z06	E02:Z06
E02:Z07	14002307	1402307	Expander	2	Z07	E02:Z07
E02:Z08	14002308	1402308	Expander	2	Z08	E02:Z08
E02:Z09	14002309	1402309	Expander	2	Z09	E02:Z09
E02:Z10	14002310	1402310	Expander	2	Z10	E02:Z10
E02:Z11	14002311	1402311	Expander	2	Z11	E02:Z11
E02:Z12	14002312	1402312	Expander	2	Z12	E02:Z12
E02:Z13	14002313	1402313	Expander	2	Z13	E02:Z13
E02:Z14	14002314	1402314	Expander	2	Z14	E02:Z14
E02:Z15	14002315	1402315	Expander	2	Z15	E02:Z15
E02:Z16	14002316	1402316	Expander	2	Z16	E02:Z16
E02:Z17	14002317	1402317	Expander	2	Z17	E02:Z17
E02:Z18	14002318	1402318	Expander	2	Z18	E02:Z18
E02:Z19	14002319	1402319	Expander	2	Z19	E02:Z19
E02:Z20	14002320	1402320	Expander	2	Z20	E02:Z20
E02:Z21	14002321	1402321	Expander	2	Z21	E02:Z21
E02:Z22	14002322	1402322	Expander	2	Z22	E02:Z22
E02:Z23	14002323	1402323	Expander	2	Z23	E02:Z23
E02:Z24	14002324	1402324	Expander	2	Z24	E02:Z24
E02:Z25	14002325	1402325	Expander	2	Z25	E02:Z25
E02:Z26	14002326	1402326	Expander	2	Z26	E02:Z26
E02:Z27	14002327	1402327	Expander	2	Z27	E02:Z27
E02:Z28	14002328	1402328	Expander	2	Z28	E02:Z28
E02:Z29	14002329	1402329	Expander	2	Z29	E02:Z29
E02:Z30	14002330	1402330	Expander	2	Z30	E02:Z30
E02:Z31	14002331	1402331	Expander	2	Z31	E02:Z31

Integrati ID	Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
				Type	No.		
E02:Z32		14002332	1402332	Expander	2	Z32	E02:Z32
E02:S01		14502301	1452301	Expander	2	Cabinet Tamper	E02 Cabinet Tamper
E02:S02		32002302	3202302	Expander	2	Int SiREN Tamper	E02 Int SiREN Tamper
E02:S03		32002303	3202303	Expander	2	Ext SiREN Tamper	E02 Ext SiREN Tamper
E02:S04		30102304	3012304	Expander	2	AC fail	E02 AC fail
E02:S05		30202305	3022305	Expander	2	Low Battery	E02 Low Battery
E02:S06		30002306	3002306	Expander	2	LAN Fuse	E02 LAN Fuse
E02:S07		30002307	3002307	Expander	2	Detector Fuse	E02 Detector Fuse
E02:S08		30002308	3002308	Expander	2	Low Volts	E02 Low Volts
E02:S09		30002309	3002309	Expander	2	PS Fail	E02 PS Fail
E02:S10		30902310	3092310	Expander	2	Battery Test	E02 Battery Test
E02:S11		30102311	3012311	Expander	2	Ext AC fail	E02 Ext AC fail
E02:S12		30202312	3022312	Expander	2	Ext Low Battery	E02 Ext Low Battery
E02:S13		30002313	3002313	Expander	2	Ext LAN Fuse	E02 Ext LAN Fuse
E02:S14		30002314	3002314	Expander	2	Ext Detector Fuse	E02 Ext Detector Fuse
E02:S15		30002315	3002315	Expander	2	Ext Low Volts	E02 Ext Low Volts
E02:S16		30002316	3002316	Expander	2	Ext PS Fail	E02 Ext PS Fail
E02:S17		30902317	3092317	Expander	2	Ext Battery Test	E02 Ext Battery Test
E02:S18		33302318	3332318	Expander	2	Unibus Fault	E02 Unibus Fault
E02:S19		14302319	1432319	Expander	2	LAN Comms	E02 LAN Comms
E02:S20		15002320	1502320	Expander	2	Spare1	E02 Spare1
E02:S21		15002321	1502321	Expander	2	Spare2	E02 Spare2
E03:Z01		14003301	1403301	Expander	3	Z01	E03:Z01
E03:Z02		14003302	1403302	Expander	3	Z02	E03:Z02
E03:Z03		14003303	1403303	Expander	3	Z03	E03:Z03
E03:Z04		14003304	1403304	Expander	3	Z04	E03:Z04
E03:Z05		14003305	1403305	Expander	3	Z05	E03:Z05
E03:Z06		14003306	1403306	Expander	3	Z06	E03:Z06
E03:Z07		14003307	1403307	Expander	3	Z07	E03:Z07
E03:Z08		14003308	1403308	Expander	3	Z08	E03:Z08
E03:Z09		14003309	1403309	Expander	3	Z09	E03:Z09
E03:Z10		14003310	1403310	Expander	3	Z10	E03:Z10
E03:Z11		14003311	1403311	Expander	3	Z11	E03:Z11
E03:Z12		14003312	1403312	Expander	3	Z12	E03:Z12
E03:Z13		14003313	1403313	Expander	3	Z13	E03:Z13
E03:Z14		14003314	1403314	Expander	3	Z14	E03:Z14
E03:Z15		14003315	1403315	Expander	3	Z15	E03:Z15
E03:Z16		14003316	1403316	Expander	3	Z16	E03:Z16
E03:Z17		14003317	1403317	Expander	3	Z17	E03:Z17
E03:Z18		14003318	1403318	Expander	3	Z18	E03:Z18
E03:Z19		14003319	1403319	Expander	3	Z19	E03:Z19
E03:Z20		14003320	1403320	Expander	3	Z20	E03:Z20
E03:Z21		14003321	1403321	Expander	3	Z21	E03:Z21
E03:Z22		14003322	1403322	Expander	3	Z22	E03:Z22
E03:Z23		14003323	1403323	Expander	3	Z23	E03:Z23
E03:Z24		14003324	1403324	Expander	3	Z24	E03:Z24
E03:Z25		14003325	1403325	Expander	3	Z25	E03:Z25
E03:Z26		14003326	1403326	Expander	3	Z26	E03:Z26
E03:Z27		14003327	1403327	Expander	3	Z27	E03:Z27
E03:Z28		14003328	1403328	Expander	3	Z28	E03:Z28
E03:Z29		14003329	1403329	Expander	3	Z29	E03:Z29
E03:Z30		14003330	1403330	Expander	3	Z30	E03:Z30
E03:Z31		14003331	1403331	Expander	3	Z31	E03:Z31
E03:Z32		14003332	1403332	Expander	3	Z32	E03:Z32
E03:S01		14503301	1453301	Expander	3	Cabinet Tamper	E03 Cabinet Tamper
E03:S02		32003302	3203302	Expander	3	Int SiREN Tamper	E03 Int SiREN Tamper
E03:S03		32003303	3203303	Expander	3	Ext SiREN Tamper	E03 Ext SiREN Tamper

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E03:S04	30103304	3013304	Expander	3	AC fail	E03 AC fail
E03:S05	30203305	3023305	Expander	3	Low Battery	E03 Low Battery
E03:S06	30003306	3003306	Expander	3	LAN Fuse	E03 LAN Fuse
E03:S07	30003307	3003307	Expander	3	Detector Fuse	E03 Detector Fuse
E03:S08	30003308	3003308	Expander	3	Low Volts	E03 Low Volts
E03:S09	30003309	3003309	Expander	3	PS Fail	E03 PS Fail
E03:S10	30903310	3093310	Expander	3	Battery Test	E03 Battery Test
E03:S11	30103311	3013311	Expander	3	Ext AC fail	E03 Ext AC fail
E03:S12	30203312	3023312	Expander	3	Ext Low Battery	E03 Ext Low Battery
E03:S13	30003313	3003313	Expander	3	Ext LAN Fuse	E03 Ext LAN Fuse
E03:S14	30003314	3003314	Expander	3	Ext Detector Fuse	E03 Ext Detector Fuse
E03:S15	30003315	3003315	Expander	3	Ext Low Volts	E03 Ext Low Volts
E03:S16	30003316	3003316	Expander	3	Ext PS Fail	E03 Ext PS Fail
E03:S17	30903317	3093317	Expander	3	Ext Battery Test	E03 Ext Battery Test
E03:S18	33303318	3333318	Expander	3	Unibus Fault	E03 Unibus Fault
E03:S19	14303319	1433319	Expander	3	LAN Comms	E03 LAN Comms
E03:S20	15003320	1503320	Expander	3	Spare1	E03 Spare1
E03:S21	15003321	1503321	Expander	3	Spare2	E03 Spare2
E04:Z01	14004301	1404301	Expander	4	Z01	E04:Z01
E04:Z02	14004302	1404302	Expander	4	Z02	E04:Z02
E04:Z03	14004303	1404303	Expander	4	Z03	E04:Z03
E04:Z04	14004304	1404304	Expander	4	Z04	E04:Z04
E04:Z05	14004305	1404305	Expander	4	Z05	E04:Z05
E04:Z06	14004306	1404306	Expander	4	Z06	E04:Z06
E04:Z07	14004307	1404307	Expander	4	Z07	E04:Z07
E04:Z08	14004308	1404308	Expander	4	Z08	E04:Z08
E04:Z09	14004309	1404309	Expander	4	Z09	E04:Z09
E04:Z10	14004310	1404310	Expander	4	Z10	E04:Z10
E04:Z11	14004311	1404311	Expander	4	Z11	E04:Z11
E04:Z12	14004312	1404312	Expander	4	Z12	E04:Z12
E04:Z13	14004313	1404313	Expander	4	Z13	E04:Z13
E04:Z14	14004314	1404314	Expander	4	Z14	E04:Z14
E04:Z15	14004315	1404315	Expander	4	Z15	E04:Z15
E04:Z16	14004316	1404316	Expander	4	Z16	E04:Z16
E04:Z17	14004317	1404317	Expander	4	Z17	E04:Z17
E04:Z18	14004318	1404318	Expander	4	Z18	E04:Z18
E04:Z19	14004319	1404319	Expander	4	Z19	E04:Z19
E04:Z20	14004320	1404320	Expander	4	Z20	E04:Z20
E04:Z21	14004321	1404321	Expander	4	Z21	E04:Z21
E04:Z22	14004322	1404322	Expander	4	Z22	E04:Z22
E04:Z23	14004323	1404323	Expander	4	Z23	E04:Z23
E04:Z24	14004324	1404324	Expander	4	Z24	E04:Z24
E04:Z25	14004325	1404325	Expander	4	Z25	E04:Z25
E04:Z26	14004326	1404326	Expander	4	Z26	E04:Z26
E04:Z27	14004327	1404327	Expander	4	Z27	E04:Z27
E04:Z28	14004328	1404328	Expander	4	Z28	E04:Z28
E04:Z29	14004329	1404329	Expander	4	Z29	E04:Z29
E04:Z30	14004330	1404330	Expander	4	Z30	E04:Z30
E04:Z31	14004331	1404331	Expander	4	Z31	E04:Z31
E04:Z32	14004332	1404332	Expander	4	Z32	E04:Z32
E04:S01	14504301	1454301	Expander	4	Cabinet Tamper	E04 Cabinet Tamper
E04:S02	32004302	3204302	Expander	4	Int SiREN Tamper	E04 Int SiREN Tamper
E04:S03	32004303	3204303	Expander	4	Ext SiREN Tamper	E04 Ext SiREN Tamper
E04:S04	30104304	3014304	Expander	4	AC fail	E04 AC fail
E04:S05	30204305	3024305	Expander	4	Low Battery	E04 Low Battery
E04:S06	30004306	3004306	Expander	4	LAN Fuse	E04 LAN Fuse
E04:S07	30004307	3004307	Expander	4	Detector Fuse	E04 Detector Fuse

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E04:S08	30004308	3004308	Expander	4	Low Volts	E04 Low Volts
E04:S09	30004309	3004309	Expander	4	PS Fail	E04 PS Fail
E04:S10	30904310	3094310	Expander	4	Battery Test	E04 Battery Test
E04:S11	30104311	3014311	Expander	4	Ext AC fail	E04 Ext AC fail
E04:S12	30204312	3024312	Expander	4	Ext Low Battery	E04 Ext Low Battery
E04:S13	30004313	3004313	Expander	4	Ext LAN Fuse	E04 Ext LAN Fuse
E04:S14	30004314	3004314	Expander	4	Ext Detector Fuse	E04 Ext Detector Fuse
E04:S15	30004315	3004315	Expander	4	Ext Low Volts	E04 Ext Low Volts
E04:S16	30004316	3004316	Expander	4	Ext PS Fail	E04 Ext PS Fail
E04:S17	30904317	3094317	Expander	4	Ext Battery Test	E04 Ext Battery Test
E04:S18	33304318	3334318	Expander	4	Unibus Fault	E04 Unibus Fault
E04:S19	14304319	1434319	Expander	4	LAN Comms	E04 LAN Comms
E04:S20	15004320	1504320	Expander	4	Spare1	E04 Spare1
E04:S21	15004321	1504321	Expander	4	Spare2	E04 Spare2
E05:Z01	14005301	1405301	Expander	5	Z01	E05:Z01
E05:Z02	14005302	1405302	Expander	5	Z02	E05:Z02
E05:Z03	14005303	1405303	Expander	5	Z03	E05:Z03
E05:Z04	14005304	1405304	Expander	5	Z04	E05:Z04
E05:Z05	14005305	1405305	Expander	5	Z05	E05:Z05
E05:Z06	14005306	1405306	Expander	5	Z06	E05:Z06
E05:Z07	14005307	1405307	Expander	5	Z07	E05:Z07
E05:Z08	14005308	1405308	Expander	5	Z08	E05:Z08
E05:Z09	14005309	1405309	Expander	5	Z09	E05:Z09
E05:Z10	14005310	1405310	Expander	5	Z10	E05:Z10
E05:Z11	14005311	1405311	Expander	5	Z11	E05:Z11
E05:Z12	14005312	1405312	Expander	5	Z12	E05:Z12
E05:Z13	14005313	1405313	Expander	5	Z13	E05:Z13
E05:Z14	14005314	1405314	Expander	5	Z14	E05:Z14
E05:Z15	14005315	1405315	Expander	5	Z15	E05:Z15
E05:Z16	14005316	1405316	Expander	5	Z16	E05:Z16
E05:Z17	14005317	1405317	Expander	5	Z17	E05:Z17
E05:Z18	14005318	1405318	Expander	5	Z18	E05:Z18
E05:Z19	14005319	1405319	Expander	5	Z19	E05:Z19
E05:Z20	14005320	1405320	Expander	5	Z20	E05:Z20
E05:Z21	14005321	1405321	Expander	5	Z21	E05:Z21
E05:Z22	14005322	1405322	Expander	5	Z22	E05:Z22
E05:Z23	14005323	1405323	Expander	5	Z23	E05:Z23
E05:Z24	14005324	1405324	Expander	5	Z24	E05:Z24
E05:Z25	14005325	1405325	Expander	5	Z25	E05:Z25
E05:Z26	14005326	1405326	Expander	5	Z26	E05:Z26
E05:Z27	14005327	1405327	Expander	5	Z27	E05:Z27
E05:Z28	14005328	1405328	Expander	5	Z28	E05:Z28
E05:Z29	14005329	1405329	Expander	5	Z29	E05:Z29
E05:Z30	14005330	1405330	Expander	5	Z30	E05:Z30
E05:Z31	14005331	1405331	Expander	5	Z31	E05:Z31
E05:Z32	14005332	1405332	Expander	5	Z32	E05:Z32
E05:S01	14505301	1455301	Expander	5	Cabinet Tamper	E05 Cabinet Tamper
E05:S02	32005302	3205302	Expander	5	Int SIREN Tamper	E05 Int SIREN Tamper
E05:S03	32005303	3205303	Expander	5	Ext SIREN Tamper	E05 Ext SIREN Tamper
E05:S04	30105304	3015304	Expander	5	AC fail	E05 AC fail
E05:S05	30205305	3025305	Expander	5	Low Battery	E05 Low Battery
E05:S06	30005306	3005306	Expander	5	LAN Fuse	E05 LAN Fuse
E05:S07	30005307	3005307	Expander	5	Detector Fuse	E05 Detector Fuse
E05:S08	30005308	3005308	Expander	5	Low Volts	E05 Low Volts
E05:S09	30005309	3005309	Expander	5	PS Fail	E05 PS Fail
E05:S10	30905310	3095310	Expander	5	Battery Test	E05 Battery Test
E05:S11	30105311	3015311	Expander	5	Ext AC fail	E05 Ext AC fail

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E05:S12	30205312	3025312	Expander	5	Ext Low Battery	E05 Ext Low Battery
E05:S13	30005313	3005313	Expander	5	Ext LAN Fuse	E05 Ext LAN Fuse
E05:S14	30005314	3005314	Expander	5	Ext Detector Fuse	E05 Ext Detector Fuse
E05:S15	30005315	3005315	Expander	5	Ext Low Volts	E05 Ext Low Volts
E05:S16	30005316	3005316	Expander	5	Ext PS Fail	E05 Ext PS Fail
E05:S17	30905317	3095317	Expander	5	Ext Battery Test	E05 Ext Battery Test
E05:S18	33305318	3335318	Expander	5	Unibus Fault	E05 Unibus Fault
E05:S19	14305319	1435319	Expander	5	LAN Comms	E05 LAN Comms
E05:S20	15005320	1505320	Expander	5	Spare1	E05 Spare1
E05:S21	15005321	1505321	Expander	5	Spare2	E05 Spare2
E06:Z01	14006301	1406301	Expander	6	Z01	E06:Z01
E06:Z02	14006302	1406302	Expander	6	Z02	E06:Z02
E06:Z03	14006303	1406303	Expander	6	Z03	E06:Z03
E06:Z04	14006304	1406304	Expander	6	Z04	E06:Z04
E06:Z05	14006305	1406305	Expander	6	Z05	E06:Z05
E06:Z06	14006306	1406306	Expander	6	Z06	E06:Z06
E06:Z07	14006307	1406307	Expander	6	Z07	E06:Z07
E06:Z08	14006308	1406308	Expander	6	Z08	E06:Z08
E06:Z09	14006309	1406309	Expander	6	Z09	E06:Z09
E06:Z10	14006310	1406310	Expander	6	Z10	E06:Z10
E06:Z11	14006311	1406311	Expander	6	Z11	E06:Z11
E06:Z12	14006312	1406312	Expander	6	Z12	E06:Z12
E06:Z13	14006313	1406313	Expander	6	Z13	E06:Z13
E06:Z14	14006314	1406314	Expander	6	Z14	E06:Z14
E06:Z15	14006315	1406315	Expander	6	Z15	E06:Z15
E06:Z16	14006316	1406316	Expander	6	Z16	E06:Z16
E06:Z17	14006317	1406317	Expander	6	Z17	E06:Z17
E06:Z18	14006318	1406318	Expander	6	Z18	E06:Z18
E06:Z19	14006319	1406319	Expander	6	Z19	E06:Z19
E06:Z20	14006320	1406320	Expander	6	Z20	E06:Z20
E06:Z21	14006321	1406321	Expander	6	Z21	E06:Z21
E06:Z22	14006322	1406322	Expander	6	Z22	E06:Z22
E06:Z23	14006323	1406323	Expander	6	Z23	E06:Z23
E06:Z24	14006324	1406324	Expander	6	Z24	E06:Z24
E06:Z25	14006325	1406325	Expander	6	Z25	E06:Z25
E06:Z26	14006326	1406326	Expander	6	Z26	E06:Z26
E06:Z27	14006327	1406327	Expander	6	Z27	E06:Z27
E06:Z28	14006328	1406328	Expander	6	Z28	E06:Z28
E06:Z29	14006329	1406329	Expander	6	Z29	E06:Z29
E06:Z30	14006330	1406330	Expander	6	Z30	E06:Z30
E06:Z31	14006331	1406331	Expander	6	Z31	E06:Z31
E06:Z32	14006332	1406332	Expander	6	Z32	E06:Z32
E06:S01	14506301	1456301	Expander	6	Cabinet Tamper	E06 Cabinet Tamper
E06:S02	32006302	3206302	Expander	6	Int SiREN Tamper	E06 Int SiREN Tamper
E06:S03	32006303	3206303	Expander	6	Ext SiREN Tamper	E06 Ext SiREN Tamper
E06:S04	30106304	3016304	Expander	6	AC fail	E06 AC fail
E06:S05	30206305	3026305	Expander	6	Low Battery	E06 Low Battery
E06:S06	30006306	3006306	Expander	6	LAN Fuse	E06 LAN Fuse
E06:S07	30006307	3006307	Expander	6	Detector Fuse	E06 Detector Fuse
E06:S08	30006308	3006308	Expander	6	Low Volts	E06 Low Volts
E06:S09	30006309	3006309	Expander	6	PS Fail	E06 PS Fail
E06:S10	30906310	3096310	Expander	6	Battery Test	E06 Battery Test
E06:S11	30106311	3016311	Expander	6	Ext AC fail	E06 Ext AC fail
E06:S12	30206312	3026312	Expander	6	Ext Low Battery	E06 Ext Low Battery
E06:S13	30006313	3006313	Expander	6	Ext LAN Fuse	E06 Ext LAN Fuse
E06:S14	30006314	3006314	Expander	6	Ext Detector Fuse	E06 Ext Detector Fuse
E06:S15	30006315	3006315	Expander	6	Ext Low Volts	E06 Ext Low Volts

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E06:S16	30006316	3006316	Expander	6	Ext PS Fail	E06 Ext PS Fail
E06:S17	30906317	3096317	Expander	6	Ext Battery Test	E06 Ext Battery Test
E06:S18	33306318	3336318	Expander	6	Unibus Fault	E06 Unibus Fault
E06:S19	14306319	1436319	Expander	6	LAN Comms	E06 LAN Comms
E06:S20	15006320	1506320	Expander	6	Spare1	E06 Spare1
E06:S21	15006321	1506321	Expander	6	Spare2	E06 Spare2
E07:Z01	14007301	1407301	Expander	7	Z01	E07:Z01
E07:Z02	14007302	1407302	Expander	7	Z02	E07:Z02
E07:Z03	14007303	1407303	Expander	7	Z03	E07:Z03
E07:Z04	14007304	1407304	Expander	7	Z04	E07:Z04
E07:Z05	14007305	1407305	Expander	7	Z05	E07:Z05
E07:Z06	14007306	1407306	Expander	7	Z06	E07:Z06
E07:Z07	14007307	1407307	Expander	7	Z07	E07:Z07
E07:Z08	14007308	1407308	Expander	7	Z08	E07:Z08
E07:Z09	14007309	1407309	Expander	7	Z09	E07:Z09
E07:Z10	14007310	1407310	Expander	7	Z10	E07:Z10
E07:Z11	14007311	1407311	Expander	7	Z11	E07:Z11
E07:Z12	14007312	1407312	Expander	7	Z12	E07:Z12
E07:Z13	14007313	1407313	Expander	7	Z13	E07:Z13
E07:Z14	14007314	1407314	Expander	7	Z14	E07:Z14
E07:Z15	14007315	1407315	Expander	7	Z15	E07:Z15
E07:Z16	14007316	1407316	Expander	7	Z16	E07:Z16
E07:Z17	14007317	1407317	Expander	7	Z17	E07:Z17
E07:Z18	14007318	1407318	Expander	7	Z18	E07:Z18
E07:Z19	14007319	1407319	Expander	7	Z19	E07:Z19
E07:Z20	14007320	1407320	Expander	7	Z20	E07:Z20
E07:Z21	14007321	1407321	Expander	7	Z21	E07:Z21
E07:Z22	14007322	1407322	Expander	7	Z22	E07:Z22
E07:Z23	14007323	1407323	Expander	7	Z23	E07:Z23
E07:Z24	14007324	1407324	Expander	7	Z24	E07:Z24
E07:Z25	14007325	1407325	Expander	7	Z25	E07:Z25
E07:Z26	14007326	1407326	Expander	7	Z26	E07:Z26
E07:Z27	14007327	1407327	Expander	7	Z27	E07:Z27
E07:Z28	14007328	1407328	Expander	7	Z28	E07:Z28
E07:Z29	14007329	1407329	Expander	7	Z29	E07:Z29
E07:Z30	14007330	1407330	Expander	7	Z30	E07:Z30
E07:Z31	14007331	1407331	Expander	7	Z31	E07:Z31
E07:Z32	14007332	1407332	Expander	7	Z32	E07:Z32
E07:S01	14507301	1457301	Expander	7	Cabinet Tamper	E07 Cabinet Tamper
E07:S02	32007302	3207302	Expander	7	Int SiREN Tamper	E07 Int SiREN Tamper
E07:S03	32007303	3207303	Expander	7	Ext SiREN Tamper	E07 Ext SiREN Tamper
E07:S04	30107304	3017304	Expander	7	AC fail	E07 AC fail
E07:S05	30207305	3027305	Expander	7	Low Battery	E07 Low Battery
E07:S06	30007306	3007306	Expander	7	LAN Fuse	E07 LAN Fuse
E07:S07	30007307	3007307	Expander	7	Detector Fuse	E07 Detector Fuse
E07:S08	30007308	3007308	Expander	7	Low Volts	E07 Low Volts
E07:S09	30007309	3007309	Expander	7	PS Fail	E07 PS Fail
E07:S10	30907310	3097310	Expander	7	Battery Test	E07 Battery Test
E07:S11	30107311	3017311	Expander	7	Ext AC fail	E07 Ext AC fail
E07:S12	30207312	3027312	Expander	7	Ext Low Battery	E07 Ext Low Battery
E07:S13	30007313	3007313	Expander	7	Ext LAN Fuse	E07 Ext LAN Fuse
E07:S14	30007314	3007314	Expander	7	Ext Detector Fuse	E07 Ext Detector Fuse
E07:S15	30007315	3007315	Expander	7	Ext Low Volts	E07 Ext Low Volts
E07:S16	30007316	3007316	Expander	7	Ext PS Fail	E07 Ext PS Fail
E07:S17	30907317	3097317	Expander	7	Ext Battery Test	E07 Ext Battery Test
E07:S18	33307318	3337318	Expander	7	Unibus Fault	E07 Unibus Fault
E07:S19	14307319	1437319	Expander	7	LAN Comms	E07 LAN Comms

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E07:S20	15007320	1507320	Expander	7	Spare1	E07 Spare1
E07:S21	15007321	1507321	Expander	7	Spare2	E07 Spare2
E08:Z01	14008301	1408301	Expander	8	Z01	E08:Z01
E08:Z02	14008302	1408302	Expander	8	Z02	E08:Z02
E08:Z03	14008303	1408303	Expander	8	Z03	E08:Z03
E08:Z04	14008304	1408304	Expander	8	Z04	E08:Z04
E08:Z05	14008305	1408305	Expander	8	Z05	E08:Z05
E08:Z06	14008306	1408306	Expander	8	Z06	E08:Z06
E08:Z07	14008307	1408307	Expander	8	Z07	E08:Z07
E08:Z08	14008308	1408308	Expander	8	Z08	E08:Z08
E08:Z09	14008309	1408309	Expander	8	Z09	E08:Z09
E08:Z10	14008310	1408310	Expander	8	Z10	E08:Z10
E08:Z11	14008311	1408311	Expander	8	Z11	E08:Z11
E08:Z12	14008312	1408312	Expander	8	Z12	E08:Z12
E08:Z13	14008313	1408313	Expander	8	Z13	E08:Z13
E08:Z14	14008314	1408314	Expander	8	Z14	E08:Z14
E08:Z15	14008315	1408315	Expander	8	Z15	E08:Z15
E08:Z16	14008316	1408316	Expander	8	Z16	E08:Z16
E08:Z17	14008317	1408317	Expander	8	Z17	E08:Z17
E08:Z18	14008318	1408318	Expander	8	Z18	E08:Z18
E08:Z19	14008319	1408319	Expander	8	Z19	E08:Z19
E08:Z20	14008320	1408320	Expander	8	Z20	E08:Z20
E08:Z21	14008321	1408321	Expander	8	Z21	E08:Z21
E08:Z22	14008322	1408322	Expander	8	Z22	E08:Z22
E08:Z23	14008323	1408323	Expander	8	Z23	E08:Z23
E08:Z24	14008324	1408324	Expander	8	Z24	E08:Z24
E08:Z25	14008325	1408325	Expander	8	Z25	E08:Z25
E08:Z26	14008326	1408326	Expander	8	Z26	E08:Z26
E08:Z27	14008327	1408327	Expander	8	Z27	E08:Z27
E08:Z28	14008328	1408328	Expander	8	Z28	E08:Z28
E08:Z29	14008329	1408329	Expander	8	Z29	E08:Z29
E08:Z30	14008330	1408330	Expander	8	Z30	E08:Z30
E08:Z31	14008331	1408331	Expander	8	Z31	E08:Z31
E08:Z32	14008332	1408332	Expander	8	Z32	E08:Z32
E08:S01	14508301	1458301	Expander	8	Cabinet Tamper	E08 Cabinet Tamper
E08:S02	32008302	3208302	Expander	8	Int SiREN Tamper	E08 Int SiREN Tamper
E08:S03	32008303	3208303	Expander	8	Ext SiREN Tamper	E08 Ext SiREN Tamper
E08:S04	30108304	3018304	Expander	8	AC fail	E08 AC fail
E08:S05	30208305	3028305	Expander	8	Low Battery	E08 Low Battery
E08:S06	30008306	3008306	Expander	8	LAN Fuse	E08 LAN Fuse
E08:S07	30008307	3008307	Expander	8	Detector Fuse	E08 Detector Fuse
E08:S08	30008308	3008308	Expander	8	Low Volts	E08 Low Volts
E08:S09	30008309	3008309	Expander	8	PS Fail	E08 PS Fail
E08:S10	30908310	3098310	Expander	8	Battery Test	E08 Battery Test
E08:S11	30108311	3018311	Expander	8	Ext AC fail	E08 Ext AC fail
E08:S12	30208312	3028312	Expander	8	Ext Low Battery	E08 Ext Low Battery
E08:S13	30008313	3008313	Expander	8	Ext LAN Fuse	E08 Ext LAN Fuse
E08:S14	30008314	3008314	Expander	8	Ext Detector Fuse	E08 Ext Detector Fuse
E08:S15	30008315	3008315	Expander	8	Ext Low Volts	E08 Ext Low Volts
E08:S16	30008316	3008316	Expander	8	Ext PS Fail	E08 Ext PS Fail
E08:S17	30908317	3098317	Expander	8	Ext Battery Test	E08 Ext Battery Test
E08:S18	33308318	3338318	Expander	8	Unibus Fault	E08 Unibus Fault
E08:S19	14308319	1438319	Expander	8	LAN Comms	E08 LAN Comms
E08:S20	15008320	1508320	Expander	8	Spare1	E08 Spare1
E08:S21	15008321	1508321	Expander	8	Spare2	E08 Spare2
E09:Z01	14009301	1409301	Expander	9	Z01	E09:Z01
E09:Z02	14009302	1409302	Expander	9	Z02	E09:Z02

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E09:Z03	14009303	1409303	Expander	9	Z03	E09:Z03
E09:Z04	14009304	1409304	Expander	9	Z04	E09:Z04
E09:Z05	14009305	1409305	Expander	9	Z05	E09:Z05
E09:Z06	14009306	1409306	Expander	9	Z06	E09:Z06
E09:Z07	14009307	1409307	Expander	9	Z07	E09:Z07
E09:Z08	14009308	1409308	Expander	9	Z08	E09:Z08
E09:Z09	14009309	1409309	Expander	9	Z09	E09:Z09
E09:Z10	14009310	1409310	Expander	9	Z10	E09:Z10
E09:Z11	14009311	1409311	Expander	9	Z11	E09:Z11
E09:Z12	14009312	1409312	Expander	9	Z12	E09:Z12
E09:Z13	14009313	1409313	Expander	9	Z13	E09:Z13
E09:Z14	14009314	1409314	Expander	9	Z14	E09:Z14
E09:Z15	14009315	1409315	Expander	9	Z15	E09:Z15
E09:Z16	14009316	1409316	Expander	9	Z16	E09:Z16
E09:Z17	14009317	1409317	Expander	9	Z17	E09:Z17
E09:Z18	14009318	1409318	Expander	9	Z18	E09:Z18
E09:Z19	14009319	1409319	Expander	9	Z19	E09:Z19
E09:Z20	14009320	1409320	Expander	9	Z20	E09:Z20
E09:Z21	14009321	1409321	Expander	9	Z21	E09:Z21
E09:Z22	14009322	1409322	Expander	9	Z22	E09:Z22
E09:Z23	14009323	1409323	Expander	9	Z23	E09:Z23
E09:Z24	14009324	1409324	Expander	9	Z24	E09:Z24
E09:Z25	14009325	1409325	Expander	9	Z25	E09:Z25
E09:Z26	14009326	1409326	Expander	9	Z26	E09:Z26
E09:Z27	14009327	1409327	Expander	9	Z27	E09:Z27
E09:Z28	14009328	1409328	Expander	9	Z28	E09:Z28
E09:Z29	14009329	1409329	Expander	9	Z29	E09:Z29
E09:Z30	14009330	1409330	Expander	9	Z30	E09:Z30
E09:Z31	14009331	1409331	Expander	9	Z31	E09:Z31
E09:Z32	14009332	1409332	Expander	9	Z32	E09:Z32
E09:S01	14509301	1459301	Expander	9	Cabinet Tamper	E09 Cabinet Tamper
E09:S02	32009302	3209302	Expander	9	Int SiREN Tamper	E09 Int SiREN Tamper
E09:S03	32009303	3209303	Expander	9	Ext SiREN Tamper	E09 Ext SiREN Tamper
E09:S04	30109304	3019304	Expander	9	AC fail	E09 AC fail
E09:S05	30209305	3029305	Expander	9	Low Battery	E09 Low Battery
E09:S06	30009306	3009306	Expander	9	LAN Fuse	E09 LAN Fuse
E09:S07	30009307	3009307	Expander	9	Detector Fuse	E09 Detector Fuse
E09:S08	30009308	3009308	Expander	9	Low Volts	E09 Low Volts
E09:S09	30009309	3009309	Expander	9	PS Fail	E09 PS Fail
E09:S10	30909310	3099310	Expander	9	Battery Test	E09 Battery Test
E09:S11	30109311	3019311	Expander	9	Ext AC fail	E09 Ext AC fail
E09:S12	30209312	3029312	Expander	9	Ext Low Battery	E09 Ext Low Battery
E09:S13	30009313	3009313	Expander	9	Ext LAN Fuse	E09 Ext LAN Fuse
E09:S14	30009314	3009314	Expander	9	Ext Detector Fuse	E09 Ext Detector Fuse
E09:S15	30009315	3009315	Expander	9	Ext Low Volts	E09 Ext Low Volts
E09:S16	30009316	3009316	Expander	9	Ext PS Fail	E09 Ext PS Fail
E09:S17	30909317	3099317	Expander	9	Ext Battery Test	E09 Ext Battery Test
E09:S18	33309318	3339318	Expander	9	Unibus Fault	E09 Unibus Fault
E09:S19	14309319	1439319	Expander	9	LAN Comms	E09 LAN Comms
E09:S20	15009320	1509320	Expander	9	Spare1	E09 Spare1
E09:S21	15009321	1509321	Expander	9	Spare2	E09 Spare2
E10:Z01	14010301	140A301	Expander	10	Z01	E10:Z01
E10:Z02	14010302	140A302	Expander	10	Z02	E10:Z02
E10:Z03	14010303	140A303	Expander	10	Z03	E10:Z03
E10:Z04	14010304	140A304	Expander	10	Z04	E10:Z04
E10:Z05	14010305	140A305	Expander	10	Z05	E10:Z05
E10:Z06	14010306	140A306	Expander	10	Z06	E10:Z06

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E10:Z07	14010307	140A307	Expander	10	Z07	E10:Z07
E10:Z08	14010308	140A308	Expander	10	Z08	E10:Z08
E10:Z09	14010309	140A309	Expander	10	Z09	E10:Z09
E10:Z10	14010310	140A310	Expander	10	Z10	E10:Z10
E10:Z11	14010311	140A311	Expander	10	Z11	E10:Z11
E10:Z12	14010312	140A312	Expander	10	Z12	E10:Z12
E10:Z13	14010313	140A313	Expander	10	Z13	E10:Z13
E10:Z14	14010314	140A314	Expander	10	Z14	E10:Z14
E10:Z15	14010315	140A315	Expander	10	Z15	E10:Z15
E10:Z16	14010316	140A316	Expander	10	Z16	E10:Z16
E10:Z17	14010317	140A317	Expander	10	Z17	E10:Z17
E10:Z18	14010318	140A318	Expander	10	Z18	E10:Z18
E10:Z19	14010319	140A319	Expander	10	Z19	E10:Z19
E10:Z20	14010320	140A320	Expander	10	Z20	E10:Z20
E10:Z21	14010321	140A321	Expander	10	Z21	E10:Z21
E10:Z22	14010322	140A322	Expander	10	Z22	E10:Z22
E10:Z23	14010323	140A323	Expander	10	Z23	E10:Z23
E10:Z24	14010324	140A324	Expander	10	Z24	E10:Z24
E10:Z25	14010325	140A325	Expander	10	Z25	E10:Z25
E10:Z26	14010326	140A326	Expander	10	Z26	E10:Z26
E10:Z27	14010327	140A327	Expander	10	Z27	E10:Z27
E10:Z28	14010328	140A328	Expander	10	Z28	E10:Z28
E10:Z29	14010329	140A329	Expander	10	Z29	E10:Z29
E10:Z30	14010330	140A330	Expander	10	Z30	E10:Z30
E10:Z31	14010331	140A331	Expander	10	Z31	E10:Z31
E10:Z32	14010332	140A332	Expander	10	Z32	E10:Z32
E10:S01	14510301	145A301	Expander	10	Cabinet Tamper	E10 Cabinet Tamper
E10:S02	32010302	320A302	Expander	10	Int SiREN Tamper	E10 Int SiREN Tamper
E10:S03	32010303	320A303	Expander	10	Ext SiREN Tamper	E10 Ext SiREN Tamper
E10:S04	30110304	301A304	Expander	10	AC fail	E10 AC fail
E10:S05	30210305	302A305	Expander	10	Low Battery	E10 Low Battery
E10:S06	30010306	300A306	Expander	10	LAN Fuse	E10 LAN Fuse
E10:S07	30010307	300A307	Expander	10	Detector Fuse	E10 Detector Fuse
E10:S08	30010308	300A308	Expander	10	Low Volts	E10 Low Volts
E10:S09	30010309	300A309	Expander	10	PS Fail	E10 PS Fail
E10:S10	30910310	309A310	Expander	10	Battery Test	E10 Battery Test
E10:S11	30110311	301A311	Expander	10	Ext AC fail	E10 Ext AC fail
E10:S12	30210312	302A312	Expander	10	Ext Low Battery	E10 Ext Low Battery
E10:S13	30010313	300A313	Expander	10	Ext LAN Fuse	E10 Ext LAN Fuse
E10:S14	30010314	300A314	Expander	10	Ext Detector Fuse	E10 Ext Detector Fuse
E10:S15	30010315	300A315	Expander	10	Ext Low Volts	E10 Ext Low Volts
E10:S16	30010316	300A316	Expander	10	Ext PS Fail	E10 Ext PS Fail
E10:S17	30910317	309A317	Expander	10	Ext Battery Test	E10 Ext Battery Test
E10:S18	33310318	333A318	Expander	10	Unibus Fault	E10 Unibus Fault
E10:S19	14310319	143A319	Expander	10	LAN Comms	E10 LAN Comms
E10:S20	15010320	150A320	Expander	10	Spare1	E10 Spare1
E10:S21	15010321	150A321	Expander	10	Spare2	E10 Spare2
E11:Z01	14011301	140B301	Expander	11	Z01	E11:Z01
E11:Z02	14011302	140B302	Expander	11	Z02	E11:Z02
E11:Z03	14011303	140B303	Expander	11	Z03	E11:Z03
E11:Z04	14011304	140B304	Expander	11	Z04	E11:Z04
E11:Z05	14011305	140B305	Expander	11	Z05	E11:Z05
E11:Z06	14011306	140B306	Expander	11	Z06	E11:Z06
E11:Z07	14011307	140B307	Expander	11	Z07	E11:Z07
E11:Z08	14011308	140B308	Expander	11	Z08	E11:Z08
E11:Z09	14011309	140B309	Expander	11	Z09	E11:Z09
E11:Z10	14011310	140B310	Expander	11	Z10	E11:Z10

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E11:Z11	14011311	140B311	Expander	11	Z11	E11:Z11
E11:Z12	14011312	140B312	Expander	11	Z12	E11:Z12
E11:Z13	14011313	140B313	Expander	11	Z13	E11:Z13
E11:Z14	14011314	140B314	Expander	11	Z14	E11:Z14
E11:Z15	14011315	140B315	Expander	11	Z15	E11:Z15
E11:Z16	14011316	140B316	Expander	11	Z16	E11:Z16
E11:Z17	14011317	140B317	Expander	11	Z17	E11:Z17
E11:Z18	14011318	140B318	Expander	11	Z18	E11:Z18
E11:Z19	14011319	140B319	Expander	11	Z19	E11:Z19
E11:Z20	14011320	140B320	Expander	11	Z20	E11:Z20
E11:Z21	14011321	140B321	Expander	11	Z21	E11:Z21
E11:Z22	14011322	140B322	Expander	11	Z22	E11:Z22
E11:Z23	14011323	140B323	Expander	11	Z23	E11:Z23
E11:Z24	14011324	140B324	Expander	11	Z24	E11:Z24
E11:Z25	14011325	140B325	Expander	11	Z25	E11:Z25
E11:Z26	14011326	140B326	Expander	11	Z26	E11:Z26
E11:Z27	14011327	140B327	Expander	11	Z27	E11:Z27
E11:Z28	14011328	140B328	Expander	11	Z28	E11:Z28
E11:Z29	14011329	140B329	Expander	11	Z29	E11:Z29
E11:Z30	14011330	140B330	Expander	11	Z30	E11:Z30
E11:Z31	14011331	140B331	Expander	11	Z31	E11:Z31
E11:Z32	14011332	140B332	Expander	11	Z32	E11:Z32
E11:S01	14511301	145B301	Expander	11	Cabinet Tamper	E11 Cabinet Tamper
E11:S02	32011302	320B302	Expander	11	Int SIREN Tamper	E11 Int SIREN Tamper
E11:S03	32011303	320B303	Expander	11	Ext SIREN Tamper	E11 Ext SIREN Tamper
E11:S04	30111304	301B304	Expander	11	AC fail	E11 AC fail
E11:S05	30211305	302B305	Expander	11	Low Battery	E11 Low Battery
E11:S06	30011306	300B306	Expander	11	LAN Fuse	E11 LAN Fuse
E11:S07	30011307	300B307	Expander	11	Detector Fuse	E11 Detector Fuse
E11:S08	30011308	300B308	Expander	11	Low Volts	E11 Low Volts
E11:S09	30011309	300B309	Expander	11	PS Fail	E11 PS Fail
E11:S10	30911310	309B310	Expander	11	Battery Test	E11 Battery Test
E11:S11	30111311	301B311	Expander	11	Ext AC fail	E11 Ext AC fail
E11:S12	30211312	302B312	Expander	11	Ext Low Battery	E11 Ext Low Battery
E11:S13	30011313	300B313	Expander	11	Ext LAN Fuse	E11 Ext LAN Fuse
E11:S14	30011314	300B314	Expander	11	Ext Detector Fuse	E11 Ext Detector Fuse
E11:S15	30011315	300B315	Expander	11	Ext Low Volts	E11 Ext Low Volts
E11:S16	30011316	300B316	Expander	11	Ext PS Fail	E11 Ext PS Fail
E11:S17	30911317	309B317	Expander	11	Ext Battery Test	E11 Ext Battery Test
E11:S18	33311318	333B318	Expander	11	Unibus Fault	E11 Unibus Fault
E11:S19	14311319	143B319	Expander	11	LAN Comms	E11 LAN Comms
E11:S20	15011320	150B320	Expander	11	Spare1	E11 Spare1
E11:S21	15011321	150B321	Expander	11	Spare2	E11 Spare2
E12:Z01	14012301	140C301	Expander	12	Z01	E12:Z01
E12:Z02	14012302	140C302	Expander	12	Z02	E12:Z02
E12:Z03	14012303	140C303	Expander	12	Z03	E12:Z03
E12:Z04	14012304	140C304	Expander	12	Z04	E12:Z04
E12:Z05	14012305	140C305	Expander	12	Z05	E12:Z05
E12:Z06	14012306	140C306	Expander	12	Z06	E12:Z06
E12:Z07	14012307	140C307	Expander	12	Z07	E12:Z07
E12:Z08	14012308	140C308	Expander	12	Z08	E12:Z08
E12:Z09	14012309	140C309	Expander	12	Z09	E12:Z09
E12:Z10	14012310	140C310	Expander	12	Z10	E12:Z10
E12:Z11	14012311	140C311	Expander	12	Z11	E12:Z11
E12:Z12	14012312	140C312	Expander	12	Z12	E12:Z12
E12:Z13	14012313	140C313	Expander	12	Z13	E12:Z13
E12:Z14	14012314	140C314	Expander	12	Z14	E12:Z14

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E12:Z15	14012315	140C315	Expander	12	Z15	E12:Z15
E12:Z16	14012316	140C316	Expander	12	Z16	E12:Z16
E12:Z17	14012317	140C317	Expander	12	Z17	E12:Z17
E12:Z18	14012318	140C318	Expander	12	Z18	E12:Z18
E12:Z19	14012319	140C319	Expander	12	Z19	E12:Z19
E12:Z20	14012320	140C320	Expander	12	Z20	E12:Z20
E12:Z21	14012321	140C321	Expander	12	Z21	E12:Z21
E12:Z22	14012322	140C322	Expander	12	Z22	E12:Z22
E12:Z23	14012323	140C323	Expander	12	Z23	E12:Z23
E12:Z24	14012324	140C324	Expander	12	Z24	E12:Z24
E12:Z25	14012325	140C325	Expander	12	Z25	E12:Z25
E12:Z26	14012326	140C326	Expander	12	Z26	E12:Z26
E12:Z27	14012327	140C327	Expander	12	Z27	E12:Z27
E12:Z28	14012328	140C328	Expander	12	Z28	E12:Z28
E12:Z29	14012329	140C329	Expander	12	Z29	E12:Z29
E12:Z30	14012330	140C330	Expander	12	Z30	E12:Z30
E12:Z31	14012331	140C331	Expander	12	Z31	E12:Z31
E12:Z32	14012332	140C332	Expander	12	Z32	E12:Z32
E12:S01	14512301	145C301	Expander	12	Cabinet Tamper	E12 Cabinet Tamper
E12:S02	32012302	320C302	Expander	12	Int SiREN Tamper	E12 Int SiREN Tamper
E12:S03	32012303	320C303	Expander	12	Ext SiREN Tamper	E12 Ext SiREN Tamper
E12:S04	30112304	301C304	Expander	12	AC fail	E12 AC fail
E12:S05	30212305	302C305	Expander	12	Low Battery	E12 Low Battery
E12:S06	30012306	300C306	Expander	12	LAN Fuse	E12 LAN Fuse
E12:S07	30012307	300C307	Expander	12	Detector Fuse	E12 Detector Fuse
E12:S08	30012308	300C308	Expander	12	Low Volts	E12 Low Volts
E12:S09	30012309	300C309	Expander	12	PS Fail	E12 PS Fail
E12:S10	30912310	309C310	Expander	12	Battery Test	E12 Battery Test
E12:S11	30112311	301C311	Expander	12	Ext AC fail	E12 Ext AC fail
E12:S12	30212312	302C312	Expander	12	Ext Low Battery	E12 Ext Low Battery
E12:S13	30012313	300C313	Expander	12	Ext LAN Fuse	E12 Ext LAN Fuse
E12:S14	30012314	300C314	Expander	12	Ext Detector Fuse	E12 Ext Detector Fuse
E12:S15	30012315	300C315	Expander	12	Ext Low Volts	E12 Ext Low Volts
E12:S16	30012316	300C316	Expander	12	Ext PS Fail	E12 Ext PS Fail
E12:S17	30912317	309C317	Expander	12	Ext Battery Test	E12 Ext Battery Test
E12:S18	33312318	333C318	Expander	12	Unibus Fault	E12 Unibus Fault
E12:S19	14312319	143C319	Expander	12	LAN Comms	E12 LAN Comms
E12:S20	15012320	150C320	Expander	12	Spare1	E12 Spare1
E12:S21	15012321	150C321	Expander	12	Spare2	E12 Spare2
E13:Z01	14013301	140D301	Expander	13	Z01	E13:Z01
E13:Z02	14013302	140D302	Expander	13	Z02	E13:Z02
E13:Z03	14013303	140D303	Expander	13	Z03	E13:Z03
E13:Z04	14013304	140D304	Expander	13	Z04	E13:Z04
E13:Z05	14013305	140D305	Expander	13	Z05	E13:Z05
E13:Z06	14013306	140D306	Expander	13	Z06	E13:Z06
E13:Z07	14013307	140D307	Expander	13	Z07	E13:Z07
E13:Z08	14013308	140D308	Expander	13	Z08	E13:Z08
E13:Z09	14013309	140D309	Expander	13	Z09	E13:Z09
E13:Z10	14013310	140D310	Expander	13	Z10	E13:Z10
E13:Z11	14013311	140D311	Expander	13	Z11	E13:Z11
E13:Z12	14013312	140D312	Expander	13	Z12	E13:Z12
E13:Z13	14013313	140D313	Expander	13	Z13	E13:Z13
E13:Z14	14013314	140D314	Expander	13	Z14	E13:Z14
E13:Z15	14013315	140D315	Expander	13	Z15	E13:Z15
E13:Z16	14013316	140D316	Expander	13	Z16	E13:Z16
E13:Z17	14013317	140D317	Expander	13	Z17	E13:Z17
E13:Z18	14013318	140D318	Expander	13	Z18	E13:Z18

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E13:Z19	14013319	140D319	Expander	13	Z19	E13:Z19
E13:Z20	14013320	140D320	Expander	13	Z20	E13:Z20
E13:Z21	14013321	140D321	Expander	13	Z21	E13:Z21
E13:Z22	14013322	140D322	Expander	13	Z22	E13:Z22
E13:Z23	14013323	140D323	Expander	13	Z23	E13:Z23
E13:Z24	14013324	140D324	Expander	13	Z24	E13:Z24
E13:Z25	14013325	140D325	Expander	13	Z25	E13:Z25
E13:Z26	14013326	140D326	Expander	13	Z26	E13:Z26
E13:Z27	14013327	140D327	Expander	13	Z27	E13:Z27
E13:Z28	14013328	140D328	Expander	13	Z28	E13:Z28
E13:Z29	14013329	140D329	Expander	13	Z29	E13:Z29
E13:Z30	14013330	140D330	Expander	13	Z30	E13:Z30
E13:Z31	14013331	140D331	Expander	13	Z31	E13:Z31
E13:Z32	14013332	140D332	Expander	13	Z32	E13:Z32
E13:S01	14513301	145D301	Expander	13	Cabinet Tamper	E13 Cabinet Tamper
E13:S02	32013302	320D302	Expander	13	Int SiREN Tamper	E13 Int SiREN Tamper
E13:S03	32013303	320D303	Expander	13	Ext SiREN Tamper	E13 Ext SiREN Tamper
E13:S04	30113304	301D304	Expander	13	AC fail	E13 AC fail
E13:S05	30213305	302D305	Expander	13	Low Battery	E13 Low Battery
E13:S06	30013306	300D306	Expander	13	LAN Fuse	E13 LAN Fuse
E13:S07	30013307	300D307	Expander	13	Detector Fuse	E13 Detector Fuse
E13:S08	30013308	300D308	Expander	13	Low Volts	E13 Low Volts
E13:S09	30013309	300D309	Expander	13	PS Fail	E13 PS Fail
E13:S10	30913310	309D310	Expander	13	Battery Test	E13 Battery Test
E13:S11	30113311	301D311	Expander	13	Ext AC fail	E13 Ext AC fail
E13:S12	30213312	302D312	Expander	13	Ext Low Battery	E13 Ext Low Battery
E13:S13	30013313	300D313	Expander	13	Ext LAN Fuse	E13 Ext LAN Fuse
E13:S14	30013314	300D314	Expander	13	Ext Detector Fuse	E13 Ext Detector Fuse
E13:S15	30013315	300D315	Expander	13	Ext Low Volts	E13 Ext Low Volts
E13:S16	30013316	300D316	Expander	13	Ext PS Fail	E13 Ext PS Fail
E13:S17	30913317	309D317	Expander	13	Ext Battery Test	E13 Ext Battery Test
E13:S18	33313318	333D318	Expander	13	Unibus Fault	E13 Unibus Fault
E13:S19	14313319	143D319	Expander	13	LAN Comms	E13 LAN Comms
E13:S20	15013320	150D320	Expander	13	Spare1	E13 Spare1
E13:S21	15013321	150D321	Expander	13	Spare2	E13 Spare2
E14:Z01	14014301	140E301	Expander	14	Z01	E14:Z01
E14:Z02	14014302	140E302	Expander	14	Z02	E14:Z02
E14:Z03	14014303	140E303	Expander	14	Z03	E14:Z03
E14:Z04	14014304	140E304	Expander	14	Z04	E14:Z04
E14:Z05	14014305	140E305	Expander	14	Z05	E14:Z05
E14:Z06	14014306	140E306	Expander	14	Z06	E14:Z06
E14:Z07	14014307	140E307	Expander	14	Z07	E14:Z07
E14:Z08	14014308	140E308	Expander	14	Z08	E14:Z08
E14:Z09	14014309	140E309	Expander	14	Z09	E14:Z09
E14:Z10	14014310	140E310	Expander	14	Z10	E14:Z10
E14:Z11	14014311	140E311	Expander	14	Z11	E14:Z11
E14:Z12	14014312	140E312	Expander	14	Z12	E14:Z12
E14:Z13	14014313	140E313	Expander	14	Z13	E14:Z13
E14:Z14	14014314	140E314	Expander	14	Z14	E14:Z14
E14:Z15	14014315	140E315	Expander	14	Z15	E14:Z15
E14:Z16	14014316	140E316	Expander	14	Z16	E14:Z16
E14:Z17	14014317	140E317	Expander	14	Z17	E14:Z17
E14:Z18	14014318	140E318	Expander	14	Z18	E14:Z18
E14:Z19	14014319	140E319	Expander	14	Z19	E14:Z19
E14:Z20	14014320	140E320	Expander	14	Z20	E14:Z20
E14:Z21	14014321	140E321	Expander	14	Z21	E14:Z21
E14:Z22	14014322	140E322	Expander	14	Z22	E14:Z22

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E14:Z23	14014323	140E323	Expander	14	Z23	E14:Z23
E14:Z24	14014324	140E324	Expander	14	Z24	E14:Z24
E14:Z25	14014325	140E325	Expander	14	Z25	E14:Z25
E14:Z26	14014326	140E326	Expander	14	Z26	E14:Z26
E14:Z27	14014327	140E327	Expander	14	Z27	E14:Z27
E14:Z28	14014328	140E328	Expander	14	Z28	E14:Z28
E14:Z29	14014329	140E329	Expander	14	Z29	E14:Z29
E14:Z30	14014330	140E330	Expander	14	Z30	E14:Z30
E14:Z31	14014331	140E331	Expander	14	Z31	E14:Z31
E14:Z32	14014332	140E332	Expander	14	Z32	E14:Z32
E14:S01	14514301	145E301	Expander	14	Cabinet Tamper	E14 Cabinet Tamper
E14:S02	32014302	320E302	Expander	14	Int SiREN Tamper	E14 Int SiREN Tamper
E14:S03	32014303	320E303	Expander	14	Ext SiREN Tamper	E14 Ext SiREN Tamper
E14:S04	30114304	301E304	Expander	14	AC fail	E14 AC fail
E14:S05	30214305	302E305	Expander	14	Low Battery	E14 Low Battery
E14:S06	30014306	300E306	Expander	14	LAN Fuse	E14 LAN Fuse
E14:S07	30014307	300E307	Expander	14	Detector Fuse	E14 Detector Fuse
E14:S08	30014308	300E308	Expander	14	Low Volts	E14 Low Volts
E14:S09	30014309	300E309	Expander	14	PS Fail	E14 PS Fail
E14:S10	30914310	309E310	Expander	14	Battery Test	E14 Battery Test
E14:S11	30114311	301E311	Expander	14	Ext AC fail	E14 Ext AC fail
E14:S12	30214312	302E312	Expander	14	Ext Low Battery	E14 Ext Low Battery
E14:S13	30014313	300E313	Expander	14	Ext LAN Fuse	E14 Ext LAN Fuse
E14:S14	30014314	300E314	Expander	14	Ext Detector Fuse	E14 Ext Detector Fuse
E14:S15	30014315	300E315	Expander	14	Ext Low Volts	E14 Ext Low Volts
E14:S16	30014316	300E316	Expander	14	Ext PS Fail	E14 Ext PS Fail
E14:S17	30914317	309E317	Expander	14	Ext Battery Test	E14 Ext Battery Test
E14:S18	33314318	333E318	Expander	14	Unibus Fault	E14 Unibus Fault
E14:S19	14314319	143E319	Expander	14	LAN Comms	E14 LAN Comms
E14:S20	15014320	150E320	Expander	14	Spare1	E14 Spare1
E14:S21	15014321	150E321	Expander	14	Spare2	E14 Spare2
E15:Z01	14015301	140F301	Expander	15	Z01	E15:Z01
E15:Z02	14015302	140F302	Expander	15	Z02	E15:Z02
E15:Z03	14015303	140F303	Expander	15	Z03	E15:Z03
E15:Z04	14015304	140F304	Expander	15	Z04	E15:Z04
E15:Z05	14015305	140F305	Expander	15	Z05	E15:Z05
E15:Z06	14015306	140F306	Expander	15	Z06	E15:Z06
E15:Z07	14015307	140F307	Expander	15	Z07	E15:Z07
E15:Z08	14015308	140F308	Expander	15	Z08	E15:Z08
E15:Z09	14015309	140F309	Expander	15	Z09	E15:Z09
E15:Z10	14015310	140F310	Expander	15	Z10	E15:Z10
E15:Z11	14015311	140F311	Expander	15	Z11	E15:Z11
E15:Z12	14015312	140F312	Expander	15	Z12	E15:Z12
E15:Z13	14015313	140F313	Expander	15	Z13	E15:Z13
E15:Z14	14015314	140F314	Expander	15	Z14	E15:Z14
E15:Z15	14015315	140F315	Expander	15	Z15	E15:Z15
E15:Z16	14015316	140F316	Expander	15	Z16	E15:Z16
E15:Z17	14015317	140F317	Expander	15	Z17	E15:Z17
E15:Z18	14015318	140F318	Expander	15	Z18	E15:Z18
E15:Z19	14015319	140F319	Expander	15	Z19	E15:Z19
E15:Z20	14015320	140F320	Expander	15	Z20	E15:Z20
E15:Z21	14015321	140F321	Expander	15	Z21	E15:Z21
E15:Z22	14015322	140F322	Expander	15	Z22	E15:Z22
E15:Z23	14015323	140F323	Expander	15	Z23	E15:Z23
E15:Z24	14015324	140F324	Expander	15	Z24	E15:Z24
E15:Z25	14015325	140F325	Expander	15	Z25	E15:Z25
E15:Z26	14015326	140F326	Expander	15	Z26	E15:Z26

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E15:Z27	14015327	140F327	Expander	15	Z27	E15:Z27
E15:Z28	14015328	140F328	Expander	15	Z28	E15:Z28
E15:Z29	14015329	140F329	Expander	15	Z29	E15:Z29
E15:Z30	14015330	140F330	Expander	15	Z30	E15:Z30
E15:Z31	14015331	140F331	Expander	15	Z31	E15:Z31
E15:Z32	14015332	140F332	Expander	15	Z32	E15:Z32
E15:S01	14515301	145F301	Expander	15	Cabinet Tamper	E15 Cabinet Tamper
E15:S02	32015302	320F302	Expander	15	Int SiREN Tamper	E15 Int SiREN Tamper
E15:S03	32015303	320F303	Expander	15	Ext SiREN Tamper	E15 Ext SiREN Tamper
E15:S04	30115304	301F304	Expander	15	AC fail	E15 AC fail
E15:S05	30215305	302F305	Expander	15	Low Battery	E15 Low Battery
E15:S06	30015306	300F306	Expander	15	LAN Fuse	E15 LAN Fuse
E15:S07	30015307	300F307	Expander	15	Detector Fuse	E15 Detector Fuse
E15:S08	30015308	300F308	Expander	15	Low Volts	E15 Low Volts
E15:S09	30015309	300F309	Expander	15	PS Fail	E15 PS Fail
E15:S10	30915310	309F310	Expander	15	Battery Test	E15 Battery Test
E15:S11	30115311	301F311	Expander	15	Ext AC fail	E15 Ext AC fail
E15:S12	30215312	302F312	Expander	15	Ext Low Battery	E15 Ext Low Battery
E15:S13	30015313	300F313	Expander	15	Ext LAN Fuse	E15 Ext LAN Fuse
E15:S14	30015314	300F314	Expander	15	Ext Detector Fuse	E15 Ext Detector Fuse
E15:S15	30015315	300F315	Expander	15	Ext Low Volts	E15 Ext Low Volts
E15:S16	30015316	300F316	Expander	15	Ext PS Fail	E15 Ext PS Fail
E15:S17	30915317	309F317	Expander	15	Ext Battery Test	E15 Ext Battery Test
E15:S18	33315318	333F318	Expander	15	Unibus Fault	E15 Unibus Fault
E15:S19	14315319	143F319	Expander	15	LAN Comms	E15 LAN Comms
E15:S20	15015320	150F320	Expander	15	Spare1	E15 Spare1
E15:S21	15015321	150F321	Expander	15	Spare2	E15 Spare2
E16:Z01	14016301	140G301	Expander	16	Z01	E16:Z01
E16:Z02	14016302	140G302	Expander	16	Z02	E16:Z02
E16:Z03	14016303	140G303	Expander	16	Z03	E16:Z03
E16:Z04	14016304	140G304	Expander	16	Z04	E16:Z04
E16:Z05	14016305	140G305	Expander	16	Z05	E16:Z05
E16:Z06	14016306	140G306	Expander	16	Z06	E16:Z06
E16:Z07	14016307	140G307	Expander	16	Z07	E16:Z07
E16:Z08	14016308	140G308	Expander	16	Z08	E16:Z08
E16:Z09	14016309	140G309	Expander	16	Z09	E16:Z09
E16:Z10	14016310	140G310	Expander	16	Z10	E16:Z10
E16:Z11	14016311	140G311	Expander	16	Z11	E16:Z11
E16:Z12	14016312	140G312	Expander	16	Z12	E16:Z12
E16:Z13	14016313	140G313	Expander	16	Z13	E16:Z13
E16:Z14	14016314	140G314	Expander	16	Z14	E16:Z14
E16:Z15	14016315	140G315	Expander	16	Z15	E16:Z15
E16:Z16	14016316	140G316	Expander	16	Z16	E16:Z16
E16:Z17	14016317	140G317	Expander	16	Z17	E16:Z17
E16:Z18	14016318	140G318	Expander	16	Z18	E16:Z18
E16:Z19	14016319	140G319	Expander	16	Z19	E16:Z19
E16:Z20	14016320	140G320	Expander	16	Z20	E16:Z20
E16:Z21	14016321	140G321	Expander	16	Z21	E16:Z21
E16:Z22	14016322	140G322	Expander	16	Z22	E16:Z22
E16:Z23	14016323	140G323	Expander	16	Z23	E16:Z23
E16:Z24	14016324	140G324	Expander	16	Z24	E16:Z24
E16:Z25	14016325	140G325	Expander	16	Z25	E16:Z25
E16:Z26	14016326	140G326	Expander	16	Z26	E16:Z26
E16:Z27	14016327	140G327	Expander	16	Z27	E16:Z27
E16:Z28	14016328	140G328	Expander	16	Z28	E16:Z28
E16:Z29	14016329	140G329	Expander	16	Z29	E16:Z29
E16:Z30	14016330	140G330	Expander	16	Z30	E16:Z30

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E16:Z31	14016331	140G331	Expander	16	Z31	E16:Z31
E16:Z32	14016332	140G332	Expander	16	Z32	E16:Z32
E16:S01	14516301	145G301	Expander	16	Cabinet Tamper	E16 Cabinet Tamper
E16:S02	32016302	320G302	Expander	16	Int SiREN Tamper	E16 Int SiREN Tamper
E16:S03	32016303	320G303	Expander	16	Ext SiREN Tamper	E16 Ext SiREN Tamper
E16:S04	30116304	301G304	Expander	16	AC fail	E16 AC fail
E16:S05	30216305	302G305	Expander	16	Low Battery	E16 Low Battery
E16:S06	30016306	300G306	Expander	16	LAN Fuse	E16 LAN Fuse
E16:S07	30016307	300G307	Expander	16	Detector Fuse	E16 Detector Fuse
E16:S08	30016308	300G308	Expander	16	Low Volts	E16 Low Volts
E16:S09	30016309	300G309	Expander	16	PS Fail	E16 PS Fail
E16:S10	30916310	309G310	Expander	16	Battery Test	E16 Battery Test
E16:S11	30116311	301G311	Expander	16	Ext AC fail	E16 Ext AC fail
E16:S12	30216312	302G312	Expander	16	Ext Low Battery	E16 Ext Low Battery
E16:S13	30016313	300G313	Expander	16	Ext LAN Fuse	E16 Ext LAN Fuse
E16:S14	30016314	300G314	Expander	16	Ext Detector Fuse	E16 Ext Detector Fuse
E16:S15	30016315	300G315	Expander	16	Ext Low Volts	E16 Ext Low Volts
E16:S16	30016316	300G316	Expander	16	Ext PS Fail	E16 Ext PS Fail
E16:S17	30916317	309G317	Expander	16	Ext Battery Test	E16 Ext Battery Test
E16:S18	33316318	333G318	Expander	16	Unibus Fault	E16 Unibus Fault
E16:S19	14316319	143G319	Expander	16	LAN Comms	E16 LAN Comms
E16:S20	15016320	150G320	Expander	16	Spare1	E16 Spare1
E16:S21	15016321	150G321	Expander	16	Spare2	E16 Spare2
E17:Z01	14017301	140H301	Expander	17	Z01	E17:Z01
E17:Z02	14017302	140H302	Expander	17	Z02	E17:Z02
E17:Z03	14017303	140H303	Expander	17	Z03	E17:Z03
E17:Z04	14017304	140H304	Expander	17	Z04	E17:Z04
E17:Z05	14017305	140H305	Expander	17	Z05	E17:Z05
E17:Z06	14017306	140H306	Expander	17	Z06	E17:Z06
E17:Z07	14017307	140H307	Expander	17	Z07	E17:Z07
E17:Z08	14017308	140H308	Expander	17	Z08	E17:Z08
E17:Z09	14017309	140H309	Expander	17	Z09	E17:Z09
E17:Z10	14017310	140H310	Expander	17	Z10	E17:Z10
E17:Z11	14017311	140H311	Expander	17	Z11	E17:Z11
E17:Z12	14017312	140H312	Expander	17	Z12	E17:Z12
E17:Z13	14017313	140H313	Expander	17	Z13	E17:Z13
E17:Z14	14017314	140H314	Expander	17	Z14	E17:Z14
E17:Z15	14017315	140H315	Expander	17	Z15	E17:Z15
E17:Z16	14017316	140H316	Expander	17	Z16	E17:Z16
E17:Z17	14017317	140H317	Expander	17	Z17	E17:Z17
E17:Z18	14017318	140H318	Expander	17	Z18	E17:Z18
E17:Z19	14017319	140H319	Expander	17	Z19	E17:Z19
E17:Z20	14017320	140H320	Expander	17	Z20	E17:Z20
E17:Z21	14017321	140H321	Expander	17	Z21	E17:Z21
E17:Z22	14017322	140H322	Expander	17	Z22	E17:Z22
E17:Z23	14017323	140H323	Expander	17	Z23	E17:Z23
E17:Z24	14017324	140H324	Expander	17	Z24	E17:Z24
E17:Z25	14017325	140H325	Expander	17	Z25	E17:Z25
E17:Z26	14017326	140H326	Expander	17	Z26	E17:Z26
E17:Z27	14017327	140H327	Expander	17	Z27	E17:Z27
E17:Z28	14017328	140H328	Expander	17	Z28	E17:Z28
E17:Z29	14017329	140H329	Expander	17	Z29	E17:Z29
E17:Z30	14017330	140H330	Expander	17	Z30	E17:Z30
E17:Z31	14017331	140H331	Expander	17	Z31	E17:Z31
E17:Z32	14017332	140H332	Expander	17	Z32	E17:Z32
E17:S01	14517301	145H301	Expander	17	Cabinet Tamper	E17 Cabinet Tamper
E17:S02	32017302	320H302	Expander	17	Int SiREN Tamper	E17 Int SiREN Tamper

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E17:S03	32017303	320H303	Expander	17	Ext SiREN Tamper	E17 Ext SiREN Tamper
E17:S04	30117304	301H304	Expander	17	AC fail	E17 AC fail
E17:S05	30217305	302H305	Expander	17	Low Battery	E17 Low Battery
E17:S06	30017306	300H306	Expander	17	LAN Fuse	E17 LAN Fuse
E17:S07	30017307	300H307	Expander	17	Detector Fuse	E17 Detector Fuse
E17:S08	30017308	300H308	Expander	17	Low Volts	E17 Low Volts
E17:S09	30017309	300H309	Expander	17	PS Fail	E17 PS Fail
E17:S10	30917310	309H310	Expander	17	Battery Test	E17 Battery Test
E17:S11	30117311	301H311	Expander	17	Ext AC fail	E17 Ext AC fail
E17:S12	30217312	302H312	Expander	17	Ext Low Battery	E17 Ext Low Battery
E17:S13	30017313	300H313	Expander	17	Ext LAN Fuse	E17 Ext LAN Fuse
E17:S14	30017314	300H314	Expander	17	Ext Detector Fuse	E17 Ext Detector Fuse
E17:S15	30017315	300H315	Expander	17	Ext Low Volts	E17 Ext Low Volts
E17:S16	30017316	300H316	Expander	17	Ext PS Fail	E17 Ext PS Fail
E17:S17	30917317	309H317	Expander	17	Ext Battery Test	E17 Ext Battery Test
E17:S18	33317318	333H318	Expander	17	Unibus Fault	E17 Unibus Fault
E17:S19	14317319	143H319	Expander	17	LAN Comms	E17 LAN Comms
E17:S20	15017320	150H320	Expander	17	Spare1	E17 Spare1
E17:S21	15017321	150H321	Expander	17	Spare2	E17 Spare2
E18:Z01	14018301	140I301	Expander	18	Z01	E18:Z01
E18:Z02	14018302	140I302	Expander	18	Z02	E18:Z02
E18:Z03	14018303	140I303	Expander	18	Z03	E18:Z03
E18:Z04	14018304	140I304	Expander	18	Z04	E18:Z04
E18:Z05	14018305	140I305	Expander	18	Z05	E18:Z05
E18:Z06	14018306	140I306	Expander	18	Z06	E18:Z06
E18:Z07	14018307	140I307	Expander	18	Z07	E18:Z07
E18:Z08	14018308	140I308	Expander	18	Z08	E18:Z08
E18:Z09	14018309	140I309	Expander	18	Z09	E18:Z09
E18:Z10	14018310	140I310	Expander	18	Z10	E18:Z10
E18:Z11	14018311	140I311	Expander	18	Z11	E18:Z11
E18:Z12	14018312	140I312	Expander	18	Z12	E18:Z12
E18:Z13	14018313	140I313	Expander	18	Z13	E18:Z13
E18:Z14	14018314	140I314	Expander	18	Z14	E18:Z14
E18:Z15	14018315	140I315	Expander	18	Z15	E18:Z15
E18:Z16	14018316	140I316	Expander	18	Z16	E18:Z16
E18:Z17	14018317	140I317	Expander	18	Z17	E18:Z17
E18:Z18	14018318	140I318	Expander	18	Z18	E18:Z18
E18:Z19	14018319	140I319	Expander	18	Z19	E18:Z19
E18:Z20	14018320	140I320	Expander	18	Z20	E18:Z20
E18:Z21	14018321	140I321	Expander	18	Z21	E18:Z21
E18:Z22	14018322	140I322	Expander	18	Z22	E18:Z22
E18:Z23	14018323	140I323	Expander	18	Z23	E18:Z23
E18:Z24	14018324	140I324	Expander	18	Z24	E18:Z24
E18:Z25	14018325	140I325	Expander	18	Z25	E18:Z25
E18:Z26	14018326	140I326	Expander	18	Z26	E18:Z26
E18:Z27	14018327	140I327	Expander	18	Z27	E18:Z27
E18:Z28	14018328	140I328	Expander	18	Z28	E18:Z28
E18:Z29	14018329	140I329	Expander	18	Z29	E18:Z29
E18:Z30	14018330	140I330	Expander	18	Z30	E18:Z30
E18:Z31	14018331	140I331	Expander	18	Z31	E18:Z31
E18:Z32	14018332	140I332	Expander	18	Z32	E18:Z32
E18:S01	14518301	145I301	Expander	18	Cabinet Tamper	E18 Cabinet Tamper
E18:S02	32018302	320I302	Expander	18	Int SiREN Tamper	E18 Int SiREN Tamper
E18:S03	32018303	320I303	Expander	18	Ext SiREN Tamper	E18 Ext SiREN Tamper
E18:S04	30118304	301I304	Expander	18	AC fail	E18 AC fail
E18:S05	30218305	302I305	Expander	18	Low Battery	E18 Low Battery
E18:S06	30018306	300I306	Expander	18	LAN Fuse	E18 LAN Fuse

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E18:S07	30018307	300I307	Expander	18	Detector Fuse	E18 Detector Fuse
E18:S08	30018308	300I308	Expander	18	Low Volts	E18 Low Volts
E18:S09	30018309	300I309	Expander	18	PS Fail	E18 PS Fail
E18:S10	30918310	309I310	Expander	18	Battery Test	E18 Battery Test
E18:S11	30118311	301I311	Expander	18	Ext AC fail	E18 Ext AC fail
E18:S12	30218312	302I312	Expander	18	Ext Low Battery	E18 Ext Low Battery
E18:S13	30018313	300I313	Expander	18	Ext LAN Fuse	E18 Ext LAN Fuse
E18:S14	30018314	300I314	Expander	18	Ext Detector Fuse	E18 Ext Detector Fuse
E18:S15	30018315	300I315	Expander	18	Ext Low Volts	E18 Ext Low Volts
E18:S16	30018316	300I316	Expander	18	Ext PS Fail	E18 Ext PS Fail
E18:S17	30918317	309I317	Expander	18	Ext Battery Test	E18 Ext Battery Test
E18:S18	33318318	333I318	Expander	18	Unibus Fault	E18 Unibus Fault
E18:S19	14318319	143I319	Expander	18	LAN Comms	E18 LAN Comms
E18:S20	15018320	150I320	Expander	18	Spare1	E18 Spare1
E18:S21	15018321	150I321	Expander	18	Spare2	E18 Spare2
E19:Z01	14019301	140J301	Expander	19	Z01	E19:Z01
E19:Z02	14019302	140J302	Expander	19	Z02	E19:Z02
E19:Z03	14019303	140J303	Expander	19	Z03	E19:Z03
E19:Z04	14019304	140J304	Expander	19	Z04	E19:Z04
E19:Z05	14019305	140J305	Expander	19	Z05	E19:Z05
E19:Z06	14019306	140J306	Expander	19	Z06	E19:Z06
E19:Z07	14019307	140J307	Expander	19	Z07	E19:Z07
E19:Z08	14019308	140J308	Expander	19	Z08	E19:Z08
E19:Z09	14019309	140J309	Expander	19	Z09	E19:Z09
E19:Z10	14019310	140J310	Expander	19	Z10	E19:Z10
E19:Z11	14019311	140J311	Expander	19	Z11	E19:Z11
E19:Z12	14019312	140J312	Expander	19	Z12	E19:Z12
E19:Z13	14019313	140J313	Expander	19	Z13	E19:Z13
E19:Z14	14019314	140J314	Expander	19	Z14	E19:Z14
E19:Z15	14019315	140J315	Expander	19	Z15	E19:Z15
E19:Z16	14019316	140J316	Expander	19	Z16	E19:Z16
E19:Z17	14019317	140J317	Expander	19	Z17	E19:Z17
E19:Z18	14019318	140J318	Expander	19	Z18	E19:Z18
E19:Z19	14019319	140J319	Expander	19	Z19	E19:Z19
E19:Z20	14019320	140J320	Expander	19	Z20	E19:Z20
E19:Z21	14019321	140J321	Expander	19	Z21	E19:Z21
E19:Z22	14019322	140J322	Expander	19	Z22	E19:Z22
E19:Z23	14019323	140J323	Expander	19	Z23	E19:Z23
E19:Z24	14019324	140J324	Expander	19	Z24	E19:Z24
E19:Z25	14019325	140J325	Expander	19	Z25	E19:Z25
E19:Z26	14019326	140J326	Expander	19	Z26	E19:Z26
E19:Z27	14019327	140J327	Expander	19	Z27	E19:Z27
E19:Z28	14019328	140J328	Expander	19	Z28	E19:Z28
E19:Z29	14019329	140J329	Expander	19	Z29	E19:Z29
E19:Z30	14019330	140J330	Expander	19	Z30	E19:Z30
E19:Z31	14019331	140J331	Expander	19	Z31	E19:Z31
E19:Z32	14019332	140J332	Expander	19	Z32	E19:Z32
E19:S01	14519301	145J301	Expander	19	Cabinet Tamper	E19 Cabinet Tamper
E19:S02	32019302	320J302	Expander	19	Int SIREN Tamper	E19 Int SIREN Tamper
E19:S03	32019303	320J303	Expander	19	Ext SIREN Tamper	E19 Ext SIREN Tamper
E19:S04	30119304	301J304	Expander	19	AC fail	E19 AC fail
E19:S05	30219305	302J305	Expander	19	Low Battery	E19 Low Battery
E19:S06	30019306	300J306	Expander	19	LAN Fuse	E19 LAN Fuse
E19:S07	30019307	300J307	Expander	19	Detector Fuse	E19 Detector Fuse
E19:S08	30019308	300J308	Expander	19	Low Volts	E19 Low Volts
E19:S09	30019309	300J309	Expander	19	PS Fail	E19 PS Fail
E19:S10	30919310	309J310	Expander	19	Battery Test	E19 Battery Test

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E19:S11	30119311	301J311	Expander	19	Ext AC fail	E19 Ext AC fail
E19:S12	30219312	302J312	Expander	19	Ext Low Battery	E19 Ext Low Battery
E19:S13	30019313	300J313	Expander	19	Ext LAN Fuse	E19 Ext LAN Fuse
E19:S14	30019314	300J314	Expander	19	Ext Detector Fuse	E19 Ext Detector Fuse
E19:S15	30019315	300J315	Expander	19	Ext Low Volts	E19 Ext Low Volts
E19:S16	30019316	300J316	Expander	19	Ext PS Fail	E19 Ext PS Fail
E19:S17	30919317	309J317	Expander	19	Ext Battery Test	E19 Ext Battery Test
E19:S18	33319318	333J318	Expander	19	Unibus Fault	E19 Unibus Fault
E19:S19	14319319	143J319	Expander	19	LAN Comms	E19 LAN Comms
E19:S20	15019320	150J320	Expander	19	Spare1	E19 Spare1
E19:S21	15019321	150J321	Expander	19	Spare2	E19 Spare2
E20:Z01	14020301	140K301	Expander	20	Z01	E20:Z01
E20:Z02	14020302	140K302	Expander	20	Z02	E20:Z02
E20:Z03	14020303	140K303	Expander	20	Z03	E20:Z03
E20:Z04	14020304	140K304	Expander	20	Z04	E20:Z04
E20:Z05	14020305	140K305	Expander	20	Z05	E20:Z05
E20:Z06	14020306	140K306	Expander	20	Z06	E20:Z06
E20:Z07	14020307	140K307	Expander	20	Z07	E20:Z07
E20:Z08	14020308	140K308	Expander	20	Z08	E20:Z08
E20:Z09	14020309	140K309	Expander	20	Z09	E20:Z09
E20:Z10	14020310	140K310	Expander	20	Z10	E20:Z10
E20:Z11	14020311	140K311	Expander	20	Z11	E20:Z11
E20:Z12	14020312	140K312	Expander	20	Z12	E20:Z12
E20:Z13	14020313	140K313	Expander	20	Z13	E20:Z13
E20:Z14	14020314	140K314	Expander	20	Z14	E20:Z14
E20:Z15	14020315	140K315	Expander	20	Z15	E20:Z15
E20:Z16	14020316	140K316	Expander	20	Z16	E20:Z16
E20:Z17	14020317	140K317	Expander	20	Z17	E20:Z17
E20:Z18	14020318	140K318	Expander	20	Z18	E20:Z18
E20:Z19	14020319	140K319	Expander	20	Z19	E20:Z19
E20:Z20	14020320	140K320	Expander	20	Z20	E20:Z20
E20:Z21	14020321	140K321	Expander	20	Z21	E20:Z21
E20:Z22	14020322	140K322	Expander	20	Z22	E20:Z22
E20:Z23	14020323	140K323	Expander	20	Z23	E20:Z23
E20:Z24	14020324	140K324	Expander	20	Z24	E20:Z24
E20:Z25	14020325	140K325	Expander	20	Z25	E20:Z25
E20:Z26	14020326	140K326	Expander	20	Z26	E20:Z26
E20:Z27	14020327	140K327	Expander	20	Z27	E20:Z27
E20:Z28	14020328	140K328	Expander	20	Z28	E20:Z28
E20:Z29	14020329	140K329	Expander	20	Z29	E20:Z29
E20:Z30	14020330	140K330	Expander	20	Z30	E20:Z30
E20:Z31	14020331	140K331	Expander	20	Z31	E20:Z31
E20:Z32	14020332	140K332	Expander	20	Z32	E20:Z32
E20:S01	14520301	145K301	Expander	20	Cabinet Tamper	E20 Cabinet Tamper
E20:S02	32020302	320K302	Expander	20	Int SiREN Tamper	E20 Int SiREN Tamper
E20:S03	32020303	320K303	Expander	20	Ext SiREN Tamper	E20 Ext SiREN Tamper
E20:S04	30120304	301K304	Expander	20	AC fail	E20 AC fail
E20:S05	30220305	302K305	Expander	20	Low Battery	E20 Low Battery
E20:S06	30020306	300K306	Expander	20	LAN Fuse	E20 LAN Fuse
E20:S07	30020307	300K307	Expander	20	Detector Fuse	E20 Detector Fuse
E20:S08	30020308	300K308	Expander	20	Low Volts	E20 Low Volts
E20:S09	30020309	300K309	Expander	20	PS Fail	E20 PS Fail
E20:S10	30920310	309K310	Expander	20	Battery Test	E20 Battery Test
E20:S11	30120311	301K311	Expander	20	Ext AC fail	E20 Ext AC fail
E20:S12	30220312	302K312	Expander	20	Ext Low Battery	E20 Ext Low Battery
E20:S13	30020313	300K313	Expander	20	Ext LAN Fuse	E20 Ext LAN Fuse
E20:S14	30020314	300K314	Expander	20	Ext Detector Fuse	E20 Ext Detector Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E20:S15	30020315	300K315	Expander	20	Ext Low Volts	E20 Ext Low Volts
E20:S16	30020316	300K316	Expander	20	Ext PS Fail	E20 Ext PS Fail
E20:S17	30920317	309K317	Expander	20	Ext Battery Test	E20 Ext Battery Test
E20:S18	33320318	333K318	Expander	20	Unibus Fault	E20 Unibus Fault
E20:S19	14320319	143K319	Expander	20	LAN Comms	E20 LAN Comms
E20:S20	15020320	150K320	Expander	20	Spare1	E20 Spare1
E20:S21	15020321	150K321	Expander	20	Spare2	E20 Spare2
E21:Z01	14021301	140L301	Expander	21	Z01	E21:Z01
E21:Z02	14021302	140L302	Expander	21	Z02	E21:Z02
E21:Z03	14021303	140L303	Expander	21	Z03	E21:Z03
E21:Z04	14021304	140L304	Expander	21	Z04	E21:Z04
E21:Z05	14021305	140L305	Expander	21	Z05	E21:Z05
E21:Z06	14021306	140L306	Expander	21	Z06	E21:Z06
E21:Z07	14021307	140L307	Expander	21	Z07	E21:Z07
E21:Z08	14021308	140L308	Expander	21	Z08	E21:Z08
E21:Z09	14021309	140L309	Expander	21	Z09	E21:Z09
E21:Z10	14021310	140L310	Expander	21	Z10	E21:Z10
E21:Z11	14021311	140L311	Expander	21	Z11	E21:Z11
E21:Z12	14021312	140L312	Expander	21	Z12	E21:Z12
E21:Z13	14021313	140L313	Expander	21	Z13	E21:Z13
E21:Z14	14021314	140L314	Expander	21	Z14	E21:Z14
E21:Z15	14021315	140L315	Expander	21	Z15	E21:Z15
E21:Z16	14021316	140L316	Expander	21	Z16	E21:Z16
E21:Z17	14021317	140L317	Expander	21	Z17	E21:Z17
E21:Z18	14021318	140L318	Expander	21	Z18	E21:Z18
E21:Z19	14021319	140L319	Expander	21	Z19	E21:Z19
E21:Z20	14021320	140L320	Expander	21	Z20	E21:Z20
E21:Z21	14021321	140L321	Expander	21	Z21	E21:Z21
E21:Z22	14021322	140L322	Expander	21	Z22	E21:Z22
E21:Z23	14021323	140L323	Expander	21	Z23	E21:Z23
E21:Z24	14021324	140L324	Expander	21	Z24	E21:Z24
E21:Z25	14021325	140L325	Expander	21	Z25	E21:Z25
E21:Z26	14021326	140L326	Expander	21	Z26	E21:Z26
E21:Z27	14021327	140L327	Expander	21	Z27	E21:Z27
E21:Z28	14021328	140L328	Expander	21	Z28	E21:Z28
E21:Z29	14021329	140L329	Expander	21	Z29	E21:Z29
E21:Z30	14021330	140L330	Expander	21	Z30	E21:Z30
E21:Z31	14021331	140L331	Expander	21	Z31	E21:Z31
E21:Z32	14021332	140L332	Expander	21	Z32	E21:Z32
E21:S01	14521301	145L301	Expander	21	Cabinet Tamper	E21 Cabinet Tamper
E21:S02	32021302	320L302	Expander	21	Int SiREN Tamper	E21 Int SiREN Tamper
E21:S03	32021303	320L303	Expander	21	Ext SiREN Tamper	E21 Ext SiREN Tamper
E21:S04	30121304	301L304	Expander	21	AC fail	E21 AC fail
E21:S05	30221305	302L305	Expander	21	Low Battery	E21 Low Battery
E21:S06	30021306	300L306	Expander	21	LAN Fuse	E21 LAN Fuse
E21:S07	30021307	300L307	Expander	21	Detector Fuse	E21 Detector Fuse
E21:S08	30021308	300L308	Expander	21	Low Volts	E21 Low Volts
E21:S09	30021309	300L309	Expander	21	PS Fail	E21 PS Fail
E21:S10	30921310	309L310	Expander	21	Battery Test	E21 Battery Test
E21:S11	30121311	301L311	Expander	21	Ext AC fail	E21 Ext AC fail
E21:S12	30221312	302L312	Expander	21	Ext Low Battery	E21 Ext Low Battery
E21:S13	30021313	300L313	Expander	21	Ext LAN Fuse	E21 Ext LAN Fuse
E21:S14	30021314	300L314	Expander	21	Ext Detector Fuse	E21 Ext Detector Fuse
E21:S15	30021315	300L315	Expander	21	Ext Low Volts	E21 Ext Low Volts
E21:S16	30021316	300L316	Expander	21	Ext PS Fail	E21 Ext PS Fail
E21:S17	30921317	309L317	Expander	21	Ext Battery Test	E21 Ext Battery Test
E21:S18	33321318	333L318	Expander	21	Unibus Fault	E21 Unibus Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E21:S19	14321319	143L319	Expander	21	LAN Comms	E21 LAN Comms
E21:S20	15021320	150L320	Expander	21	Spare1	E21 Spare1
E21:S21	15021321	150L321	Expander	21	Spare2	E21 Spare2
E22:Z01	14022301	140M301	Expander	22	Z01	E22:Z01
E22:Z02	14022302	140M302	Expander	22	Z02	E22:Z02
E22:Z03	14022303	140M303	Expander	22	Z03	E22:Z03
E22:Z04	14022304	140M304	Expander	22	Z04	E22:Z04
E22:Z05	14022305	140M305	Expander	22	Z05	E22:Z05
E22:Z06	14022306	140M306	Expander	22	Z06	E22:Z06
E22:Z07	14022307	140M307	Expander	22	Z07	E22:Z07
E22:Z08	14022308	140M308	Expander	22	Z08	E22:Z08
E22:Z09	14022309	140M309	Expander	22	Z09	E22:Z09
E22:Z10	14022310	140M310	Expander	22	Z10	E22:Z10
E22:Z11	14022311	140M311	Expander	22	Z11	E22:Z11
E22:Z12	14022312	140M312	Expander	22	Z12	E22:Z12
E22:Z13	14022313	140M313	Expander	22	Z13	E22:Z13
E22:Z14	14022314	140M314	Expander	22	Z14	E22:Z14
E22:Z15	14022315	140M315	Expander	22	Z15	E22:Z15
E22:Z16	14022316	140M316	Expander	22	Z16	E22:Z16
E22:Z17	14022317	140M317	Expander	22	Z17	E22:Z17
E22:Z18	14022318	140M318	Expander	22	Z18	E22:Z18
E22:Z19	14022319	140M319	Expander	22	Z19	E22:Z19
E22:Z20	14022320	140M320	Expander	22	Z20	E22:Z20
E22:Z21	14022321	140M321	Expander	22	Z21	E22:Z21
E22:Z22	14022322	140M322	Expander	22	Z22	E22:Z22
E22:Z23	14022323	140M323	Expander	22	Z23	E22:Z23
E22:Z24	14022324	140M324	Expander	22	Z24	E22:Z24
E22:Z25	14022325	140M325	Expander	22	Z25	E22:Z25
E22:Z26	14022326	140M326	Expander	22	Z26	E22:Z26
E22:Z27	14022327	140M327	Expander	22	Z27	E22:Z27
E22:Z28	14022328	140M328	Expander	22	Z28	E22:Z28
E22:Z29	14022329	140M329	Expander	22	Z29	E22:Z29
E22:Z30	14022330	140M330	Expander	22	Z30	E22:Z30
E22:Z31	14022331	140M331	Expander	22	Z31	E22:Z31
E22:Z32	14022332	140M332	Expander	22	Z32	E22:Z32
E22:S01	14522301	145M301	Expander	22	Cabinet Tamper	E22 Cabinet Tamper
E22:S02	32022302	320M302	Expander	22	Int SiREN Tamper	E22 Int SiREN Tamper
E22:S03	32022303	320M303	Expander	22	Ext SiREN Tamper	E22 Ext SiREN Tamper
E22:S04	30122304	301M304	Expander	22	AC fail	E22 AC fail
E22:S05	30222305	302M305	Expander	22	Low Battery	E22 Low Battery
E22:S06	30022306	300M306	Expander	22	LAN Fuse	E22 LAN Fuse
E22:S07	30022307	300M307	Expander	22	Detector Fuse	E22 Detector Fuse
E22:S08	30022308	300M308	Expander	22	Low Volts	E22 Low Volts
E22:S09	30022309	300M309	Expander	22	PS Fail	E22 PS Fail
E22:S10	30922310	309M310	Expander	22	Battery Test	E22 Battery Test
E22:S11	30122311	301M311	Expander	22	Ext AC fail	E22 Ext AC fail
E22:S12	30222312	302M312	Expander	22	Ext Low Battery	E22 Ext Low Battery
E22:S13	30022313	300M313	Expander	22	Ext LAN Fuse	E22 Ext LAN Fuse
E22:S14	30022314	300M314	Expander	22	Ext Detector Fuse	E22 Ext Detector Fuse
E22:S15	30022315	300M315	Expander	22	Ext Low Volts	E22 Ext Low Volts
E22:S16	30022316	300M316	Expander	22	Ext PS Fail	E22 Ext PS Fail
E22:S17	30922317	309M317	Expander	22	Ext Battery Test	E22 Ext Battery Test
E22:S18	33322318	333M318	Expander	22	Unibus Fault	E22 Unibus Fault
E22:S19	14322319	143M319	Expander	22	LAN Comms	E22 LAN Comms
E22:S20	15022320	150M320	Expander	22	Spare1	E22 Spare1
E22:S21	15022321	150M321	Expander	22	Spare2	E22 Spare2
E23:Z01	14023301	140N301	Expander	23	Z01	E23:Z01

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E23:Z02	14023302	140N302	Expander	23	Z02	E23:Z02
E23:Z03	14023303	140N303	Expander	23	Z03	E23:Z03
E23:Z04	14023304	140N304	Expander	23	Z04	E23:Z04
E23:Z05	14023305	140N305	Expander	23	Z05	E23:Z05
E23:Z06	14023306	140N306	Expander	23	Z06	E23:Z06
E23:Z07	14023307	140N307	Expander	23	Z07	E23:Z07
E23:Z08	14023308	140N308	Expander	23	Z08	E23:Z08
E23:Z09	14023309	140N309	Expander	23	Z09	E23:Z09
E23:Z10	14023310	140N310	Expander	23	Z10	E23:Z10
E23:Z11	14023311	140N311	Expander	23	Z11	E23:Z11
E23:Z12	14023312	140N312	Expander	23	Z12	E23:Z12
E23:Z13	14023313	140N313	Expander	23	Z13	E23:Z13
E23:Z14	14023314	140N314	Expander	23	Z14	E23:Z14
E23:Z15	14023315	140N315	Expander	23	Z15	E23:Z15
E23:Z16	14023316	140N316	Expander	23	Z16	E23:Z16
E23:Z17	14023317	140N317	Expander	23	Z17	E23:Z17
E23:Z18	14023318	140N318	Expander	23	Z18	E23:Z18
E23:Z19	14023319	140N319	Expander	23	Z19	E23:Z19
E23:Z20	14023320	140N320	Expander	23	Z20	E23:Z20
E23:Z21	14023321	140N321	Expander	23	Z21	E23:Z21
E23:Z22	14023322	140N322	Expander	23	Z22	E23:Z22
E23:Z23	14023323	140N323	Expander	23	Z23	E23:Z23
E23:Z24	14023324	140N324	Expander	23	Z24	E23:Z24
E23:Z25	14023325	140N325	Expander	23	Z25	E23:Z25
E23:Z26	14023326	140N326	Expander	23	Z26	E23:Z26
E23:Z27	14023327	140N327	Expander	23	Z27	E23:Z27
E23:Z28	14023328	140N328	Expander	23	Z28	E23:Z28
E23:Z29	14023329	140N329	Expander	23	Z29	E23:Z29
E23:Z30	14023330	140N330	Expander	23	Z30	E23:Z30
E23:Z31	14023331	140N331	Expander	23	Z31	E23:Z31
E23:Z32	14023332	140N332	Expander	23	Z32	E23:Z32
E23:S01	14523301	145N301	Expander	23	Cabinet Tamper	E23 Cabinet Tamper
E23:S02	32023302	320N302	Expander	23	Int SiREN Tamper	E23 Int SiREN Tamper
E23:S03	32023303	320N303	Expander	23	Ext SiREN Tamper	E23 Ext SiREN Tamper
E23:S04	30123304	301N304	Expander	23	AC fail	E23 AC fail
E23:S05	30223305	302N305	Expander	23	Low Battery	E23 Low Battery
E23:S06	30023306	300N306	Expander	23	LAN Fuse	E23 LAN Fuse
E23:S07	30023307	300N307	Expander	23	Detector Fuse	E23 Detector Fuse
E23:S08	30023308	300N308	Expander	23	Low Volts	E23 Low Volts
E23:S09	30023309	300N309	Expander	23	PS Fail	E23 PS Fail
E23:S10	30923310	309N310	Expander	23	Battery Test	E23 Battery Test
E23:S11	30123311	301N311	Expander	23	Ext AC fail	E23 Ext AC fail
E23:S12	30223312	302N312	Expander	23	Ext Low Battery	E23 Ext Low Battery
E23:S13	30023313	300N313	Expander	23	Ext LAN Fuse	E23 Ext LAN Fuse
E23:S14	30023314	300N314	Expander	23	Ext Detector Fuse	E23 Ext Detector Fuse
E23:S15	30023315	300N315	Expander	23	Ext Low Volts	E23 Ext Low Volts
E23:S16	30023316	300N316	Expander	23	Ext PS Fail	E23 Ext PS Fail
E23:S17	30923317	309N317	Expander	23	Ext Battery Test	E23 Ext Battery Test
E23:S18	33323318	333N318	Expander	23	Unibus Fault	E23 Unibus Fault
E23:S19	14323319	143N319	Expander	23	LAN Comms	E23 LAN Comms
E23:S20	15023320	150N320	Expander	23	Spare1	E23 Spare1
E23:S21	15023321	150N321	Expander	23	Spare2	E23 Spare2
E24:Z01	14024301	140O301	Expander	24	Z01	E24:Z01
E24:Z02	14024302	140O302	Expander	24	Z02	E24:Z02
E24:Z03	14024303	140O303	Expander	24	Z03	E24:Z03
E24:Z04	14024304	140O304	Expander	24	Z04	E24:Z04
E24:Z05	14024305	140O305	Expander	24	Z05	E24:Z05

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E24:Z06	14024306	1400306	Expander	24	Z06	E24:Z06
E24:Z07	14024307	1400307	Expander	24	Z07	E24:Z07
E24:Z08	14024308	1400308	Expander	24	Z08	E24:Z08
E24:Z09	14024309	1400309	Expander	24	Z09	E24:Z09
E24:Z10	14024310	1400310	Expander	24	Z10	E24:Z10
E24:Z11	14024311	1400311	Expander	24	Z11	E24:Z11
E24:Z12	14024312	1400312	Expander	24	Z12	E24:Z12
E24:Z13	14024313	1400313	Expander	24	Z13	E24:Z13
E24:Z14	14024314	1400314	Expander	24	Z14	E24:Z14
E24:Z15	14024315	1400315	Expander	24	Z15	E24:Z15
E24:Z16	14024316	1400316	Expander	24	Z16	E24:Z16
E24:Z17	14024317	1400317	Expander	24	Z17	E24:Z17
E24:Z18	14024318	1400318	Expander	24	Z18	E24:Z18
E24:Z19	14024319	1400319	Expander	24	Z19	E24:Z19
E24:Z20	14024320	1400320	Expander	24	Z20	E24:Z20
E24:Z21	14024321	1400321	Expander	24	Z21	E24:Z21
E24:Z22	14024322	1400322	Expander	24	Z22	E24:Z22
E24:Z23	14024323	1400323	Expander	24	Z23	E24:Z23
E24:Z24	14024324	1400324	Expander	24	Z24	E24:Z24
E24:Z25	14024325	1400325	Expander	24	Z25	E24:Z25
E24:Z26	14024326	1400326	Expander	24	Z26	E24:Z26
E24:Z27	14024327	1400327	Expander	24	Z27	E24:Z27
E24:Z28	14024328	1400328	Expander	24	Z28	E24:Z28
E24:Z29	14024329	1400329	Expander	24	Z29	E24:Z29
E24:Z30	14024330	1400330	Expander	24	Z30	E24:Z30
E24:Z31	14024331	1400331	Expander	24	Z31	E24:Z31
E24:Z32	14024332	1400332	Expander	24	Z32	E24:Z32
E24:S01	14524301	1450301	Expander	24	Cabinet Tamper	E24 Cabinet Tamper
E24:S02	32024302	3200302	Expander	24	Int SiREN Tamper	E24 Int SiREN Tamper
E24:S03	32024303	3200303	Expander	24	Ext SiREN Tamper	E24 Ext SiREN Tamper
E24:S04	30124304	3010304	Expander	24	AC fail	E24 AC fail
E24:S05	30224305	3020305	Expander	24	Low Battery	E24 Low Battery
E24:S06	30024306	3000306	Expander	24	LAN Fuse	E24 LAN Fuse
E24:S07	30024307	3000307	Expander	24	Detector Fuse	E24 Detector Fuse
E24:S08	30024308	3000308	Expander	24	Low Volts	E24 Low Volts
E24:S09	30024309	3000309	Expander	24	PS Fail	E24 PS Fail
E24:S10	30924310	3090310	Expander	24	Battery Test	E24 Battery Test
E24:S11	30124311	3010311	Expander	24	Ext AC fail	E24 Ext AC fail
E24:S12	30224312	3020312	Expander	24	Ext Low Battery	E24 Ext Low Battery
E24:S13	30024313	3000313	Expander	24	Ext LAN Fuse	E24 Ext LAN Fuse
E24:S14	30024314	3000314	Expander	24	Ext Detector Fuse	E24 Ext Detector Fuse
E24:S15	30024315	3000315	Expander	24	Ext Low Volts	E24 Ext Low Volts
E24:S16	30024316	3000316	Expander	24	Ext PS Fail	E24 Ext PS Fail
E24:S17	30924317	3090317	Expander	24	Ext Battery Test	E24 Ext Battery Test
E24:S18	33324318	3330318	Expander	24	Unibus Fault	E24 Unibus Fault
E24:S19	14324319	1430319	Expander	24	LAN Comms	E24 LAN Comms
E24:S20	15024320	1500320	Expander	24	Spare1	E24 Spare1
E24:S21	15024321	1500321	Expander	24	Spare2	E24 Spare2
E25:Z01	14025301	140P301	Expander	25	Z01	E25:Z01
E25:Z02	14025302	140P302	Expander	25	Z02	E25:Z02
E25:Z03	14025303	140P303	Expander	25	Z03	E25:Z03
E25:Z04	14025304	140P304	Expander	25	Z04	E25:Z04
E25:Z05	14025305	140P305	Expander	25	Z05	E25:Z05
E25:Z06	14025306	140P306	Expander	25	Z06	E25:Z06
E25:Z07	14025307	140P307	Expander	25	Z07	E25:Z07
E25:Z08	14025308	140P308	Expander	25	Z08	E25:Z08
E25:Z09	14025309	140P309	Expander	25	Z09	E25:Z09

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E25:Z10	14025310	140P310	Expander	25	Z10	E25:Z10
E25:Z11	14025311	140P311	Expander	25	Z11	E25:Z11
E25:Z12	14025312	140P312	Expander	25	Z12	E25:Z12
E25:Z13	14025313	140P313	Expander	25	Z13	E25:Z13
E25:Z14	14025314	140P314	Expander	25	Z14	E25:Z14
E25:Z15	14025315	140P315	Expander	25	Z15	E25:Z15
E25:Z16	14025316	140P316	Expander	25	Z16	E25:Z16
E25:Z17	14025317	140P317	Expander	25	Z17	E25:Z17
E25:Z18	14025318	140P318	Expander	25	Z18	E25:Z18
E25:Z19	14025319	140P319	Expander	25	Z19	E25:Z19
E25:Z20	14025320	140P320	Expander	25	Z20	E25:Z20
E25:Z21	14025321	140P321	Expander	25	Z21	E25:Z21
E25:Z22	14025322	140P322	Expander	25	Z22	E25:Z22
E25:Z23	14025323	140P323	Expander	25	Z23	E25:Z23
E25:Z24	14025324	140P324	Expander	25	Z24	E25:Z24
E25:Z25	14025325	140P325	Expander	25	Z25	E25:Z25
E25:Z26	14025326	140P326	Expander	25	Z26	E25:Z26
E25:Z27	14025327	140P327	Expander	25	Z27	E25:Z27
E25:Z28	14025328	140P328	Expander	25	Z28	E25:Z28
E25:Z29	14025329	140P329	Expander	25	Z29	E25:Z29
E25:Z30	14025330	140P330	Expander	25	Z30	E25:Z30
E25:Z31	14025331	140P331	Expander	25	Z31	E25:Z31
E25:Z32	14025332	140P332	Expander	25	Z32	E25:Z32
E25:S01	14525301	145P301	Expander	25	Cabinet Tamper	E25 Cabinet Tamper
E25:S02	32025302	320P302	Expander	25	Int SiREN Tamper	E25 Int SiREN Tamper
E25:S03	32025303	320P303	Expander	25	Ext SiREN Tamper	E25 Ext SiREN Tamper
E25:S04	30125304	301P304	Expander	25	AC fail	E25 AC fail
E25:S05	30225305	302P305	Expander	25	Low Battery	E25 Low Battery
E25:S06	30025306	300P306	Expander	25	LAN Fuse	E25 LAN Fuse
E25:S07	30025307	300P307	Expander	25	Detector Fuse	E25 Detector Fuse
E25:S08	30025308	300P308	Expander	25	Low Volts	E25 Low Volts
E25:S09	30025309	300P309	Expander	25	PS Fail	E25 PS Fail
E25:S10	30925310	309P310	Expander	25	Battery Test	E25 Battery Test
E25:S11	30125311	301P311	Expander	25	Ext AC fail	E25 Ext AC fail
E25:S12	30225312	302P312	Expander	25	Ext Low Battery	E25 Ext Low Battery
E25:S13	30025313	300P313	Expander	25	Ext LAN Fuse	E25 Ext LAN Fuse
E25:S14	30025314	300P314	Expander	25	Ext Detector Fuse	E25 Ext Detector Fuse
E25:S15	30025315	300P315	Expander	25	Ext Low Volts	E25 Ext Low Volts
E25:S16	30025316	300P316	Expander	25	Ext PS Fail	E25 Ext PS Fail
E25:S17	30925317	309P317	Expander	25	Ext Battery Test	E25 Ext Battery Test
E25:S18	33325318	333P318	Expander	25	Unibus Fault	E25 Unibus Fault
E25:S19	14325319	143P319	Expander	25	LAN Comms	E25 LAN Comms
E25:S20	15025320	150P320	Expander	25	Spare1	E25 Spare1
E25:S21	15025321	150P321	Expander	25	Spare2	E25 Spare2
E26:Z01	14026301	140Q301	Expander	26	Z01	E26:Z01
E26:Z02	14026302	140Q302	Expander	26	Z02	E26:Z02
E26:Z03	14026303	140Q303	Expander	26	Z03	E26:Z03
E26:Z04	14026304	140Q304	Expander	26	Z04	E26:Z04
E26:Z05	14026305	140Q305	Expander	26	Z05	E26:Z05
E26:Z06	14026306	140Q306	Expander	26	Z06	E26:Z06
E26:Z07	14026307	140Q307	Expander	26	Z07	E26:Z07
E26:Z08	14026308	140Q308	Expander	26	Z08	E26:Z08
E26:Z09	14026309	140Q309	Expander	26	Z09	E26:Z09
E26:Z10	14026310	140Q310	Expander	26	Z10	E26:Z10
E26:Z11	14026311	140Q311	Expander	26	Z11	E26:Z11
E26:Z12	14026312	140Q312	Expander	26	Z12	E26:Z12
E26:Z13	14026313	140Q313	Expander	26	Z13	E26:Z13

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E26:Z14	14026314	140Q314	Expander	26	Z14	E26:Z14
E26:Z15	14026315	140Q315	Expander	26	Z15	E26:Z15
E26:Z16	14026316	140Q316	Expander	26	Z16	E26:Z16
E26:Z17	14026317	140Q317	Expander	26	Z17	E26:Z17
E26:Z18	14026318	140Q318	Expander	26	Z18	E26:Z18
E26:Z19	14026319	140Q319	Expander	26	Z19	E26:Z19
E26:Z20	14026320	140Q320	Expander	26	Z20	E26:Z20
E26:Z21	14026321	140Q321	Expander	26	Z21	E26:Z21
E26:Z22	14026322	140Q322	Expander	26	Z22	E26:Z22
E26:Z23	14026323	140Q323	Expander	26	Z23	E26:Z23
E26:Z24	14026324	140Q324	Expander	26	Z24	E26:Z24
E26:Z25	14026325	140Q325	Expander	26	Z25	E26:Z25
E26:Z26	14026326	140Q326	Expander	26	Z26	E26:Z26
E26:Z27	14026327	140Q327	Expander	26	Z27	E26:Z27
E26:Z28	14026328	140Q328	Expander	26	Z28	E26:Z28
E26:Z29	14026329	140Q329	Expander	26	Z29	E26:Z29
E26:Z30	14026330	140Q330	Expander	26	Z30	E26:Z30
E26:Z31	14026331	140Q331	Expander	26	Z31	E26:Z31
E26:Z32	14026332	140Q332	Expander	26	Z32	E26:Z32
E26:S01	14526301	145Q301	Expander	26	Cabinet Tamper	E26 Cabinet Tamper
E26:S02	32026302	320Q302	Expander	26	Int SIREN Tamper	E26 Int SIREN Tamper
E26:S03	32026303	320Q303	Expander	26	Ext SIREN Tamper	E26 Ext SIREN Tamper
E26:S04	30126304	301Q304	Expander	26	AC fail	E26 AC fail
E26:S05	30226305	302Q305	Expander	26	Low Battery	E26 Low Battery
E26:S06	30026306	300Q306	Expander	26	LAN Fuse	E26 LAN Fuse
E26:S07	30026307	300Q307	Expander	26	Detector Fuse	E26 Detector Fuse
E26:S08	30026308	300Q308	Expander	26	Low Volts	E26 Low Volts
E26:S09	30026309	300Q309	Expander	26	PS Fail	E26 PS Fail
E26:S10	30926310	309Q310	Expander	26	Battery Test	E26 Battery Test
E26:S11	30126311	301Q311	Expander	26	Ext AC fail	E26 Ext AC fail
E26:S12	30226312	302Q312	Expander	26	Ext Low Battery	E26 Ext Low Battery
E26:S13	30026313	300Q313	Expander	26	Ext LAN Fuse	E26 Ext LAN Fuse
E26:S14	30026314	300Q314	Expander	26	Ext Detector Fuse	E26 Ext Detector Fuse
E26:S15	30026315	300Q315	Expander	26	Ext Low Volts	E26 Ext Low Volts
E26:S16	30026316	300Q316	Expander	26	Ext PS Fail	E26 Ext PS Fail
E26:S17	30926317	309Q317	Expander	26	Ext Battery Test	E26 Ext Battery Test
E26:S18	33326318	333Q318	Expander	26	Unibus Fault	E26 Unibus Fault
E26:S19	14326319	143Q319	Expander	26	LAN Comms	E26 LAN Comms
E26:S20	15026320	150Q320	Expander	26	Spare1	E26 Spare1
E26:S21	15026321	150Q321	Expander	26	Spare2	E26 Spare2
E27:Z01	14027301	140R301	Expander	27	Z01	E27:Z01
E27:Z02	14027302	140R302	Expander	27	Z02	E27:Z02
E27:Z03	14027303	140R303	Expander	27	Z03	E27:Z03
E27:Z04	14027304	140R304	Expander	27	Z04	E27:Z04
E27:Z05	14027305	140R305	Expander	27	Z05	E27:Z05
E27:Z06	14027306	140R306	Expander	27	Z06	E27:Z06
E27:Z07	14027307	140R307	Expander	27	Z07	E27:Z07
E27:Z08	14027308	140R308	Expander	27	Z08	E27:Z08
E27:Z09	14027309	140R309	Expander	27	Z09	E27:Z09
E27:Z10	14027310	140R310	Expander	27	Z10	E27:Z10
E27:Z11	14027311	140R311	Expander	27	Z11	E27:Z11
E27:Z12	14027312	140R312	Expander	27	Z12	E27:Z12
E27:Z13	14027313	140R313	Expander	27	Z13	E27:Z13
E27:Z14	14027314	140R314	Expander	27	Z14	E27:Z14
E27:Z15	14027315	140R315	Expander	27	Z15	E27:Z15
E27:Z16	14027316	140R316	Expander	27	Z16	E27:Z16
E27:Z17	14027317	140R317	Expander	27	Z17	E27:Z17

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E27:Z18	14027318	140R318	Expander	27	Z18	E27:Z18
E27:Z19	14027319	140R319	Expander	27	Z19	E27:Z19
E27:Z20	14027320	140R320	Expander	27	Z20	E27:Z20
E27:Z21	14027321	140R321	Expander	27	Z21	E27:Z21
E27:Z22	14027322	140R322	Expander	27	Z22	E27:Z22
E27:Z23	14027323	140R323	Expander	27	Z23	E27:Z23
E27:Z24	14027324	140R324	Expander	27	Z24	E27:Z24
E27:Z25	14027325	140R325	Expander	27	Z25	E27:Z25
E27:Z26	14027326	140R326	Expander	27	Z26	E27:Z26
E27:Z27	14027327	140R327	Expander	27	Z27	E27:Z27
E27:Z28	14027328	140R328	Expander	27	Z28	E27:Z28
E27:Z29	14027329	140R329	Expander	27	Z29	E27:Z29
E27:Z30	14027330	140R330	Expander	27	Z30	E27:Z30
E27:Z31	14027331	140R331	Expander	27	Z31	E27:Z31
E27:Z32	14027332	140R332	Expander	27	Z32	E27:Z32
E27:S01	14527301	145R301	Expander	27	Cabinet Tamper	E27 Cabinet Tamper
E27:S02	32027302	320R302	Expander	27	Int SiREN Tamper	E27 Int SiREN Tamper
E27:S03	32027303	320R303	Expander	27	Ext SiREN Tamper	E27 Ext SiREN Tamper
E27:S04	30127304	301R304	Expander	27	AC fail	E27 AC fail
E27:S05	30227305	302R305	Expander	27	Low Battery	E27 Low Battery
E27:S06	30027306	300R306	Expander	27	LAN Fuse	E27 LAN Fuse
E27:S07	30027307	300R307	Expander	27	Detector Fuse	E27 Detector Fuse
E27:S08	30027308	300R308	Expander	27	Low Volts	E27 Low Volts
E27:S09	30027309	300R309	Expander	27	PS Fail	E27 PS Fail
E27:S10	30927310	309R310	Expander	27	Battery Test	E27 Battery Test
E27:S11	30127311	301R311	Expander	27	Ext AC fail	E27 Ext AC fail
E27:S12	30227312	302R312	Expander	27	Ext Low Battery	E27 Ext Low Battery
E27:S13	30027313	300R313	Expander	27	Ext LAN Fuse	E27 Ext LAN Fuse
E27:S14	30027314	300R314	Expander	27	Ext Detector Fuse	E27 Ext Detector Fuse
E27:S15	30027315	300R315	Expander	27	Ext Low Volts	E27 Ext Low Volts
E27:S16	30027316	300R316	Expander	27	Ext PS Fail	E27 Ext PS Fail
E27:S17	30927317	309R317	Expander	27	Ext Battery Test	E27 Ext Battery Test
E27:S18	33327318	333R318	Expander	27	Unibus Fault	E27 Unibus Fault
E27:S19	14327319	143R319	Expander	27	LAN Comms	E27 LAN Comms
E27:S20	15027320	150R320	Expander	27	Spare1	E27 Spare1
E27:S21	15027321	150R321	Expander	27	Spare2	E27 Spare2
E28:Z01	14028301	140S301	Expander	28	Z01	E28:Z01
E28:Z02	14028302	140S302	Expander	28	Z02	E28:Z02
E28:Z03	14028303	140S303	Expander	28	Z03	E28:Z03
E28:Z04	14028304	140S304	Expander	28	Z04	E28:Z04
E28:Z05	14028305	140S305	Expander	28	Z05	E28:Z05
E28:Z06	14028306	140S306	Expander	28	Z06	E28:Z06
E28:Z07	14028307	140S307	Expander	28	Z07	E28:Z07
E28:Z08	14028308	140S308	Expander	28	Z08	E28:Z08
E28:Z09	14028309	140S309	Expander	28	Z09	E28:Z09
E28:Z10	14028310	140S310	Expander	28	Z10	E28:Z10
E28:Z11	14028311	140S311	Expander	28	Z11	E28:Z11
E28:Z12	14028312	140S312	Expander	28	Z12	E28:Z12
E28:Z13	14028313	140S313	Expander	28	Z13	E28:Z13
E28:Z14	14028314	140S314	Expander	28	Z14	E28:Z14
E28:Z15	14028315	140S315	Expander	28	Z15	E28:Z15
E28:Z16	14028316	140S316	Expander	28	Z16	E28:Z16
E28:Z17	14028317	140S317	Expander	28	Z17	E28:Z17
E28:Z18	14028318	140S318	Expander	28	Z18	E28:Z18
E28:Z19	14028319	140S319	Expander	28	Z19	E28:Z19
E28:Z20	14028320	140S320	Expander	28	Z20	E28:Z20
E28:Z21	14028321	140S321	Expander	28	Z21	E28:Z21

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E28:Z22	14028322	140S322	Expander	28	Z22	E28:Z22
E28:Z23	14028323	140S323	Expander	28	Z23	E28:Z23
E28:Z24	14028324	140S324	Expander	28	Z24	E28:Z24
E28:Z25	14028325	140S325	Expander	28	Z25	E28:Z25
E28:Z26	14028326	140S326	Expander	28	Z26	E28:Z26
E28:Z27	14028327	140S327	Expander	28	Z27	E28:Z27
E28:Z28	14028328	140S328	Expander	28	Z28	E28:Z28
E28:Z29	14028329	140S329	Expander	28	Z29	E28:Z29
E28:Z30	14028330	140S330	Expander	28	Z30	E28:Z30
E28:Z31	14028331	140S331	Expander	28	Z31	E28:Z31
E28:Z32	14028332	140S332	Expander	28	Z32	E28:Z32
E28:S01	14528301	145S301	Expander	28	Cabinet Tamper	E28 Cabinet Tamper
E28:S02	32028302	320S302	Expander	28	Int SiREN Tamper	E28 Int SiREN Tamper
E28:S03	32028303	320S303	Expander	28	Ext SiREN Tamper	E28 Ext SiREN Tamper
E28:S04	30128304	301S304	Expander	28	AC fail	E28 AC fail
E28:S05	30228305	302S305	Expander	28	Low Battery	E28 Low Battery
E28:S06	30028306	300S306	Expander	28	LAN Fuse	E28 LAN Fuse
E28:S07	30028307	300S307	Expander	28	Detector Fuse	E28 Detector Fuse
E28:S08	30028308	300S308	Expander	28	Low Volts	E28 Low Volts
E28:S09	30028309	300S309	Expander	28	PS Fail	E28 PS Fail
E28:S10	30928310	309S310	Expander	28	Battery Test	E28 Battery Test
E28:S11	30128311	301S311	Expander	28	Ext AC fail	E28 Ext AC fail
E28:S12	30228312	302S312	Expander	28	Ext Low Battery	E28 Ext Low Battery
E28:S13	30028313	300S313	Expander	28	Ext LAN Fuse	E28 Ext LAN Fuse
E28:S14	30028314	300S314	Expander	28	Ext Detector Fuse	E28 Ext Detector Fuse
E28:S15	30028315	300S315	Expander	28	Ext Low Volts	E28 Ext Low Volts
E28:S16	30028316	300S316	Expander	28	Ext PS Fail	E28 Ext PS Fail
E28:S17	30928317	309S317	Expander	28	Ext Battery Test	E28 Ext Battery Test
E28:S18	33328318	333S318	Expander	28	Unibus Fault	E28 Unibus Fault
E28:S19	14328319	143S319	Expander	28	LAN Comms	E28 LAN Comms
E28:S20	15028320	150S320	Expander	28	Spare1	E28 Spare1
E28:S21	15028321	150S321	Expander	28	Spare2	E28 Spare2
E29:Z01	14029301	140T301	Expander	29	Z01	E29:Z01
E29:Z02	14029302	140T302	Expander	29	Z02	E29:Z02
E29:Z03	14029303	140T303	Expander	29	Z03	E29:Z03
E29:Z04	14029304	140T304	Expander	29	Z04	E29:Z04
E29:Z05	14029305	140T305	Expander	29	Z05	E29:Z05
E29:Z06	14029306	140T306	Expander	29	Z06	E29:Z06
E29:Z07	14029307	140T307	Expander	29	Z07	E29:Z07
E29:Z08	14029308	140T308	Expander	29	Z08	E29:Z08
E29:Z09	14029309	140T309	Expander	29	Z09	E29:Z09
E29:Z10	14029310	140T310	Expander	29	Z10	E29:Z10
E29:Z11	14029311	140T311	Expander	29	Z11	E29:Z11
E29:Z12	14029312	140T312	Expander	29	Z12	E29:Z12
E29:Z13	14029313	140T313	Expander	29	Z13	E29:Z13
E29:Z14	14029314	140T314	Expander	29	Z14	E29:Z14
E29:Z15	14029315	140T315	Expander	29	Z15	E29:Z15
E29:Z16	14029316	140T316	Expander	29	Z16	E29:Z16
E29:Z17	14029317	140T317	Expander	29	Z17	E29:Z17
E29:Z18	14029318	140T318	Expander	29	Z18	E29:Z18
E29:Z19	14029319	140T319	Expander	29	Z19	E29:Z19
E29:Z20	14029320	140T320	Expander	29	Z20	E29:Z20
E29:Z21	14029321	140T321	Expander	29	Z21	E29:Z21
E29:Z22	14029322	140T322	Expander	29	Z22	E29:Z22
E29:Z23	14029323	140T323	Expander	29	Z23	E29:Z23
E29:Z24	14029324	140T324	Expander	29	Z24	E29:Z24
E29:Z25	14029325	140T325	Expander	29	Z25	E29:Z25

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E29:Z26	14029326	140T326	Expander	29	Z26	E29:Z26
E29:Z27	14029327	140T327	Expander	29	Z27	E29:Z27
E29:Z28	14029328	140T328	Expander	29	Z28	E29:Z28
E29:Z29	14029329	140T329	Expander	29	Z29	E29:Z29
E29:Z30	14029330	140T330	Expander	29	Z30	E29:Z30
E29:Z31	14029331	140T331	Expander	29	Z31	E29:Z31
E29:Z32	14029332	140T332	Expander	29	Z32	E29:Z32
E29:S01	14529301	145T301	Expander	29	Cabinet Tamper	E29 Cabinet Tamper
E29:S02	32029302	320T302	Expander	29	Int SiREN Tamper	E29 Int SiREN Tamper
E29:S03	32029303	320T303	Expander	29	Ext SiREN Tamper	E29 Ext SiREN Tamper
E29:S04	30129304	301T304	Expander	29	AC fail	E29 AC fail
E29:S05	30229305	302T305	Expander	29	Low Battery	E29 Low Battery
E29:S06	30029306	300T306	Expander	29	LAN Fuse	E29 LAN Fuse
E29:S07	30029307	300T307	Expander	29	Detector Fuse	E29 Detector Fuse
E29:S08	30029308	300T308	Expander	29	Low Volts	E29 Low Volts
E29:S09	30029309	300T309	Expander	29	PS Fail	E29 PS Fail
E29:S10	30929310	309T310	Expander	29	Battery Test	E29 Battery Test
E29:S11	30129311	301T311	Expander	29	Ext AC fail	E29 Ext AC fail
E29:S12	30229312	302T312	Expander	29	Ext Low Battery	E29 Ext Low Battery
E29:S13	30029313	300T313	Expander	29	Ext LAN Fuse	E29 Ext LAN Fuse
E29:S14	30029314	300T314	Expander	29	Ext Detector Fuse	E29 Ext Detector Fuse
E29:S15	30029315	300T315	Expander	29	Ext Low Volts	E29 Ext Low Volts
E29:S16	30029316	300T316	Expander	29	Ext PS Fail	E29 Ext PS Fail
E29:S17	30929317	309T317	Expander	29	Ext Battery Test	E29 Ext Battery Test
E29:S18	33329318	333T318	Expander	29	Unibus Fault	E29 Unibus Fault
E29:S19	14329319	143T319	Expander	29	LAN Comms	E29 LAN Comms
E29:S20	15029320	150T320	Expander	29	Spare1	E29 Spare1
E29:S21	15029321	150T321	Expander	29	Spare2	E29 Spare2
E30:Z01	14030301	140U301	Expander	30	Z01	E30:Z01
E30:Z02	14030302	140U302	Expander	30	Z02	E30:Z02
E30:Z03	14030303	140U303	Expander	30	Z03	E30:Z03
E30:Z04	14030304	140U304	Expander	30	Z04	E30:Z04
E30:Z05	14030305	140U305	Expander	30	Z05	E30:Z05
E30:Z06	14030306	140U306	Expander	30	Z06	E30:Z06
E30:Z07	14030307	140U307	Expander	30	Z07	E30:Z07
E30:Z08	14030308	140U308	Expander	30	Z08	E30:Z08
E30:Z09	14030309	140U309	Expander	30	Z09	E30:Z09
E30:Z10	14030310	140U310	Expander	30	Z10	E30:Z10
E30:Z11	14030311	140U311	Expander	30	Z11	E30:Z11
E30:Z12	14030312	140U312	Expander	30	Z12	E30:Z12
E30:Z13	14030313	140U313	Expander	30	Z13	E30:Z13
E30:Z14	14030314	140U314	Expander	30	Z14	E30:Z14
E30:Z15	14030315	140U315	Expander	30	Z15	E30:Z15
E30:Z16	14030316	140U316	Expander	30	Z16	E30:Z16
E30:Z17	14030317	140U317	Expander	30	Z17	E30:Z17
E30:Z18	14030318	140U318	Expander	30	Z18	E30:Z18
E30:Z19	14030319	140U319	Expander	30	Z19	E30:Z19
E30:Z20	14030320	140U320	Expander	30	Z20	E30:Z20
E30:Z21	14030321	140U321	Expander	30	Z21	E30:Z21
E30:Z22	14030322	140U322	Expander	30	Z22	E30:Z22
E30:Z23	14030323	140U323	Expander	30	Z23	E30:Z23
E30:Z24	14030324	140U324	Expander	30	Z24	E30:Z24
E30:Z25	14030325	140U325	Expander	30	Z25	E30:Z25
E30:Z26	14030326	140U326	Expander	30	Z26	E30:Z26
E30:Z27	14030327	140U327	Expander	30	Z27	E30:Z27
E30:Z28	14030328	140U328	Expander	30	Z28	E30:Z28
E30:Z29	14030329	140U329	Expander	30	Z29	E30:Z29

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E30:Z30	14030330	140U330	Expander	30	Z30	E30:Z30
E30:Z31	14030331	140U331	Expander	30	Z31	E30:Z31
E30:Z32	14030332	140U332	Expander	30	Z32	E30:Z32
E30:S01	14530301	145U301	Expander	30	Cabinet Tamper	E30 Cabinet Tamper
E30:S02	32030302	320U302	Expander	30	Int SiREN Tamper	E30 Int SiREN Tamper
E30:S03	32030303	320U303	Expander	30	Ext SiREN Tamper	E30 Ext SiREN Tamper
E30:S04	30130304	301U304	Expander	30	AC fail	E30 AC fail
E30:S05	30230305	302U305	Expander	30	Low Battery	E30 Low Battery
E30:S06	30030306	300U306	Expander	30	LAN Fuse	E30 LAN Fuse
E30:S07	30030307	300U307	Expander	30	Detector Fuse	E30 Detector Fuse
E30:S08	30030308	300U308	Expander	30	Low Volts	E30 Low Volts
E30:S09	30030309	300U309	Expander	30	PS Fail	E30 PS Fail
E30:S10	30930310	309U310	Expander	30	Battery Test	E30 Battery Test
E30:S11	30130311	301U311	Expander	30	Ext AC fail	E30 Ext AC fail
E30:S12	30230312	302U312	Expander	30	Ext Low Battery	E30 Ext Low Battery
E30:S13	30030313	300U313	Expander	30	Ext LAN Fuse	E30 Ext LAN Fuse
E30:S14	30030314	300U314	Expander	30	Ext Detector Fuse	E30 Ext Detector Fuse
E30:S15	30030315	300U315	Expander	30	Ext Low Volts	E30 Ext Low Volts
E30:S16	30030316	300U316	Expander	30	Ext PS Fail	E30 Ext PS Fail
E30:S17	30930317	309U317	Expander	30	Ext Battery Test	E30 Ext Battery Test
E30:S18	33330318	333U318	Expander	30	Unibus Fault	E30 Unibus Fault
E30:S19	14330319	143U319	Expander	30	LAN Comms	E30 LAN Comms
E30:S20	15030320	150U320	Expander	30	Spare1	E30 Spare1
E30:S21	15030321	150U321	Expander	30	Spare2	E30 Spare2
E31:Z01	14031301	140V301	Expander	31	Z01	E31:Z01
E31:Z02	14031302	140V302	Expander	31	Z02	E31:Z02
E31:Z03	14031303	140V303	Expander	31	Z03	E31:Z03
E31:Z04	14031304	140V304	Expander	31	Z04	E31:Z04
E31:Z05	14031305	140V305	Expander	31	Z05	E31:Z05
E31:Z06	14031306	140V306	Expander	31	Z06	E31:Z06
E31:Z07	14031307	140V307	Expander	31	Z07	E31:Z07
E31:Z08	14031308	140V308	Expander	31	Z08	E31:Z08
E31:Z09	14031309	140V309	Expander	31	Z09	E31:Z09
E31:Z10	14031310	140V310	Expander	31	Z10	E31:Z10
E31:Z11	14031311	140V311	Expander	31	Z11	E31:Z11
E31:Z12	14031312	140V312	Expander	31	Z12	E31:Z12
E31:Z13	14031313	140V313	Expander	31	Z13	E31:Z13
E31:Z14	14031314	140V314	Expander	31	Z14	E31:Z14
E31:Z15	14031315	140V315	Expander	31	Z15	E31:Z15
E31:Z16	14031316	140V316	Expander	31	Z16	E31:Z16
E31:Z17	14031317	140V317	Expander	31	Z17	E31:Z17
E31:Z18	14031318	140V318	Expander	31	Z18	E31:Z18
E31:Z19	14031319	140V319	Expander	31	Z19	E31:Z19
E31:Z20	14031320	140V320	Expander	31	Z20	E31:Z20
E31:Z21	14031321	140V321	Expander	31	Z21	E31:Z21
E31:Z22	14031322	140V322	Expander	31	Z22	E31:Z22
E31:Z23	14031323	140V323	Expander	31	Z23	E31:Z23
E31:Z24	14031324	140V324	Expander	31	Z24	E31:Z24
E31:Z25	14031325	140V325	Expander	31	Z25	E31:Z25
E31:Z26	14031326	140V326	Expander	31	Z26	E31:Z26
E31:Z27	14031327	140V327	Expander	31	Z27	E31:Z27
E31:Z28	14031328	140V328	Expander	31	Z28	E31:Z28
E31:Z29	14031329	140V329	Expander	31	Z29	E31:Z29
E31:Z30	14031330	140V330	Expander	31	Z30	E31:Z30
E31:Z31	14031331	140V331	Expander	31	Z31	E31:Z31
E31:Z32	14031332	140V332	Expander	31	Z32	E31:Z32
E31:S01	14531301	145V301	Expander	31	Cabinet Tamper	E31 Cabinet Tamper

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E31:S02	32031302	320V302	Expander	31	Int SiREN Tamper	E31 Int SiREN Tamper
E31:S03	32031303	320V303	Expander	31	Ext SiREN Tamper	E31 Ext SiREN Tamper
E31:S04	30131304	301V304	Expander	31	AC fail	E31 AC fail
E31:S05	30231305	302V305	Expander	31	Low Battery	E31 Low Battery
E31:S06	30031306	300V306	Expander	31	LAN Fuse	E31 LAN Fuse
E31:S07	30031307	300V307	Expander	31	Detector Fuse	E31 Detector Fuse
E31:S08	30031308	300V308	Expander	31	Low Volts	E31 Low Volts
E31:S09	30031309	300V309	Expander	31	PS Fail	E31 PS Fail
E31:S10	30931310	309V310	Expander	31	Battery Test	E31 Battery Test
E31:S11	30131311	301V311	Expander	31	Ext AC fail	E31 Ext AC fail
E31:S12	30231312	302V312	Expander	31	Ext Low Battery	E31 Ext Low Battery
E31:S13	30031313	300V313	Expander	31	Ext LAN Fuse	E31 Ext LAN Fuse
E31:S14	30031314	300V314	Expander	31	Ext Detector Fuse	E31 Ext Detector Fuse
E31:S15	30031315	300V315	Expander	31	Ext Low Volts	E31 Ext Low Volts
E31:S16	30031316	300V316	Expander	31	Ext PS Fail	E31 Ext PS Fail
E31:S17	30931317	309V317	Expander	31	Ext Battery Test	E31 Ext Battery Test
E31:S18	33331318	333V318	Expander	31	Unibus Fault	E31 Unibus Fault
E31:S19	14331319	143V319	Expander	31	LAN Comms	E31 LAN Comms
E31:S20	15031320	150V320	Expander	31	Spare1	E31 Spare1
E31:S21	15031321	150V321	Expander	31	Spare2	E31 Spare2
E32:Z01	14032301	140W301	Expander	32	Z01	E32:Z01
E32:Z02	14032302	140W302	Expander	32	Z02	E32:Z02
E32:Z03	14032303	140W303	Expander	32	Z03	E32:Z03
E32:Z04	14032304	140W304	Expander	32	Z04	E32:Z04
E32:Z05	14032305	140W305	Expander	32	Z05	E32:Z05
E32:Z06	14032306	140W306	Expander	32	Z06	E32:Z06
E32:Z07	14032307	140W307	Expander	32	Z07	E32:Z07
E32:Z08	14032308	140W308	Expander	32	Z08	E32:Z08
E32:Z09	14032309	140W309	Expander	32	Z09	E32:Z09
E32:Z10	14032310	140W310	Expander	32	Z10	E32:Z10
E32:Z11	14032311	140W311	Expander	32	Z11	E32:Z11
E32:Z12	14032312	140W312	Expander	32	Z12	E32:Z12
E32:Z13	14032313	140W313	Expander	32	Z13	E32:Z13
E32:Z14	14032314	140W314	Expander	32	Z14	E32:Z14
E32:Z15	14032315	140W315	Expander	32	Z15	E32:Z15
E32:Z16	14032316	140W316	Expander	32	Z16	E32:Z16
E32:Z17	14032317	140W317	Expander	32	Z17	E32:Z17
E32:Z18	14032318	140W318	Expander	32	Z18	E32:Z18
E32:Z19	14032319	140W319	Expander	32	Z19	E32:Z19
E32:Z20	14032320	140W320	Expander	32	Z20	E32:Z20
E32:Z21	14032321	140W321	Expander	32	Z21	E32:Z21
E32:Z22	14032322	140W322	Expander	32	Z22	E32:Z22
E32:Z23	14032323	140W323	Expander	32	Z23	E32:Z23
E32:Z24	14032324	140W324	Expander	32	Z24	E32:Z24
E32:Z25	14032325	140W325	Expander	32	Z25	E32:Z25
E32:Z26	14032326	140W326	Expander	32	Z26	E32:Z26
E32:Z27	14032327	140W327	Expander	32	Z27	E32:Z27
E32:Z28	14032328	140W328	Expander	32	Z28	E32:Z28
E32:Z29	14032329	140W329	Expander	32	Z29	E32:Z29
E32:Z30	14032330	140W330	Expander	32	Z30	E32:Z30
E32:Z31	14032331	140W331	Expander	32	Z31	E32:Z31
E32:Z32	14032332	140W332	Expander	32	Z32	E32:Z32
E32:S01	14532301	145W301	Expander	32	Cabinet Tamper	E32 Cabinet Tamper
E32:S02	32032302	320W302	Expander	32	Int SiREN Tamper	E32 Int SiREN Tamper
E32:S03	32032303	320W303	Expander	32	Ext SiREN Tamper	E32 Ext SiREN Tamper
E32:S04	30132304	301W304	Expander	32	AC fail	E32 AC fail
E32:S05	30232305	302W305	Expander	32	Low Battery	E32 Low Battery

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E32:S06	30032306	300W306	Expander	32	LAN Fuse	E32 LAN Fuse
E32:S07	30032307	300W307	Expander	32	Detector Fuse	E32 Detector Fuse
E32:S08	30032308	300W308	Expander	32	Low Volts	E32 Low Volts
E32:S09	30032309	300W309	Expander	32	PS Fail	E32 PS Fail
E32:S10	30932310	309W310	Expander	32	Battery Test	E32 Battery Test
E32:S11	30132311	301W311	Expander	32	Ext AC fail	E32 Ext AC fail
E32:S12	30232312	302W312	Expander	32	Ext Low Battery	E32 Ext Low Battery
E32:S13	30032313	300W313	Expander	32	Ext LAN Fuse	E32 Ext LAN Fuse
E32:S14	30032314	300W314	Expander	32	Ext Detector Fuse	E32 Ext Detector Fuse
E32:S15	30032315	300W315	Expander	32	Ext Low Volts	E32 Ext Low Volts
E32:S16	30032316	300W316	Expander	32	Ext PS Fail	E32 Ext PS Fail
E32:S17	30932317	309W317	Expander	32	Ext Battery Test	E32 Ext Battery Test
E32:S18	33332318	333W318	Expander	32	Unibus Fault	E32 Unibus Fault
E32:S19	14332319	143W319	Expander	32	LAN Comms	E32 LAN Comms
E32:S20	15032320	150W320	Expander	32	Spare1	E32 Spare1
E32:S21	15032321	150W321	Expander	32	Spare2	E32 Spare2
E33:Z01	14033301	140X301	Expander	33	Z01	E33:Z01
E33:Z02	14033302	140X302	Expander	33	Z02	E33:Z02
E33:Z03	14033303	140X303	Expander	33	Z03	E33:Z03
E33:Z04	14033304	140X304	Expander	33	Z04	E33:Z04
E33:Z05	14033305	140X305	Expander	33	Z05	E33:Z05
E33:Z06	14033306	140X306	Expander	33	Z06	E33:Z06
E33:Z07	14033307	140X307	Expander	33	Z07	E33:Z07
E33:Z08	14033308	140X308	Expander	33	Z08	E33:Z08
E33:Z09	14033309	140X309	Expander	33	Z09	E33:Z09
E33:Z10	14033310	140X310	Expander	33	Z10	E33:Z10
E33:Z11	14033311	140X311	Expander	33	Z11	E33:Z11
E33:Z12	14033312	140X312	Expander	33	Z12	E33:Z12
E33:Z13	14033313	140X313	Expander	33	Z13	E33:Z13
E33:Z14	14033314	140X314	Expander	33	Z14	E33:Z14
E33:Z15	14033315	140X315	Expander	33	Z15	E33:Z15
E33:Z16	14033316	140X316	Expander	33	Z16	E33:Z16
E33:Z17	14033317	140X317	Expander	33	Z17	E33:Z17
E33:Z18	14033318	140X318	Expander	33	Z18	E33:Z18
E33:Z19	14033319	140X319	Expander	33	Z19	E33:Z19
E33:Z20	14033320	140X320	Expander	33	Z20	E33:Z20
E33:Z21	14033321	140X321	Expander	33	Z21	E33:Z21
E33:Z22	14033322	140X322	Expander	33	Z22	E33:Z22
E33:Z23	14033323	140X323	Expander	33	Z23	E33:Z23
E33:Z24	14033324	140X324	Expander	33	Z24	E33:Z24
E33:Z25	14033325	140X325	Expander	33	Z25	E33:Z25
E33:Z26	14033326	140X326	Expander	33	Z26	E33:Z26
E33:Z27	14033327	140X327	Expander	33	Z27	E33:Z27
E33:Z28	14033328	140X328	Expander	33	Z28	E33:Z28
E33:Z29	14033329	140X329	Expander	33	Z29	E33:Z29
E33:Z30	14033330	140X330	Expander	33	Z30	E33:Z30
E33:Z31	14033331	140X331	Expander	33	Z31	E33:Z31
E33:Z32	14033332	140X332	Expander	33	Z32	E33:Z32
E33:S01	14533301	145X301	Expander	33	Cabinet Tamper	E33 Cabinet Tamper
E33:S02	32033302	320X302	Expander	33	Int SIREN Tamper	E33 Int SIREN Tamper
E33:S03	32033303	320X303	Expander	33	Ext SIREN Tamper	E33 Ext SIREN Tamper
E33:S04	30133304	301X304	Expander	33	AC fail	E33 AC fail
E33:S05	30233305	302X305	Expander	33	Low Battery	E33 Low Battery
E33:S06	30033306	300X306	Expander	33	LAN Fuse	E33 LAN Fuse
E33:S07	30033307	300X307	Expander	33	Detector Fuse	E33 Detector Fuse
E33:S08	30033308	300X308	Expander	33	Low Volts	E33 Low Volts
E33:S09	30033309	300X309	Expander	33	PS Fail	E33 PS Fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E33:S10	30933310	309X310	Expander	33	Battery Test	E33 Battery Test
E33:S11	30133311	301X311	Expander	33	Ext AC fail	E33 Ext AC fail
E33:S12	30233312	302X312	Expander	33	Ext Low Battery	E33 Ext Low Battery
E33:S13	30033313	300X313	Expander	33	Ext LAN Fuse	E33 Ext LAN Fuse
E33:S14	30033314	300X314	Expander	33	Ext Detector Fuse	E33 Ext Detector Fuse
E33:S15	30033315	300X315	Expander	33	Ext Low Volts	E33 Ext Low Volts
E33:S16	30033316	300X316	Expander	33	Ext PS Fail	E33 Ext PS Fail
E33:S17	30933317	309X317	Expander	33	Ext Battery Test	E33 Ext Battery Test
E33:S18	33333318	333X318	Expander	33	Unibus Fault	E33 Unibus Fault
E33:S19	14333319	143X319	Expander	33	LAN Comms	E33 LAN Comms
E33:S20	15033320	150X320	Expander	33	Spare1	E33 Spare1
E33:S21	15033321	150X321	Expander	33	Spare2	E33 Spare2
E34:Z01	14034301	140Y301	Expander	34	Z01	E34:Z01
E34:Z02	14034302	140Y302	Expander	34	Z02	E34:Z02
E34:Z03	14034303	140Y303	Expander	34	Z03	E34:Z03
E34:Z04	14034304	140Y304	Expander	34	Z04	E34:Z04
E34:Z05	14034305	140Y305	Expander	34	Z05	E34:Z05
E34:Z06	14034306	140Y306	Expander	34	Z06	E34:Z06
E34:Z07	14034307	140Y307	Expander	34	Z07	E34:Z07
E34:Z08	14034308	140Y308	Expander	34	Z08	E34:Z08
E34:Z09	14034309	140Y309	Expander	34	Z09	E34:Z09
E34:Z10	14034310	140Y310	Expander	34	Z10	E34:Z10
E34:Z11	14034311	140Y311	Expander	34	Z11	E34:Z11
E34:Z12	14034312	140Y312	Expander	34	Z12	E34:Z12
E34:Z13	14034313	140Y313	Expander	34	Z13	E34:Z13
E34:Z14	14034314	140Y314	Expander	34	Z14	E34:Z14
E34:Z15	14034315	140Y315	Expander	34	Z15	E34:Z15
E34:Z16	14034316	140Y316	Expander	34	Z16	E34:Z16
E34:Z17	14034317	140Y317	Expander	34	Z17	E34:Z17
E34:Z18	14034318	140Y318	Expander	34	Z18	E34:Z18
E34:Z19	14034319	140Y319	Expander	34	Z19	E34:Z19
E34:Z20	14034320	140Y320	Expander	34	Z20	E34:Z20
E34:Z21	14034321	140Y321	Expander	34	Z21	E34:Z21
E34:Z22	14034322	140Y322	Expander	34	Z22	E34:Z22
E34:Z23	14034323	140Y323	Expander	34	Z23	E34:Z23
E34:Z24	14034324	140Y324	Expander	34	Z24	E34:Z24
E34:Z25	14034325	140Y325	Expander	34	Z25	E34:Z25
E34:Z26	14034326	140Y326	Expander	34	Z26	E34:Z26
E34:Z27	14034327	140Y327	Expander	34	Z27	E34:Z27
E34:Z28	14034328	140Y328	Expander	34	Z28	E34:Z28
E34:Z29	14034329	140Y329	Expander	34	Z29	E34:Z29
E34:Z30	14034330	140Y330	Expander	34	Z30	E34:Z30
E34:Z31	14034331	140Y331	Expander	34	Z31	E34:Z31
E34:Z32	14034332	140Y332	Expander	34	Z32	E34:Z32
E34:S01	14534301	145Y301	Expander	34	Cabinet Tamper	E34 Cabinet Tamper
E34:S02	32034302	320Y302	Expander	34	Int SiREN Tamper	E34 Int SiREN Tamper
E34:S03	32034303	320Y303	Expander	34	Ext SiREN Tamper	E34 Ext SiREN Tamper
E34:S04	30134304	301Y304	Expander	34	AC fail	E34 AC fail
E34:S05	30234305	302Y305	Expander	34	Low Battery	E34 Low Battery
E34:S06	30034306	300Y306	Expander	34	LAN Fuse	E34 LAN Fuse
E34:S07	30034307	300Y307	Expander	34	Detector Fuse	E34 Detector Fuse
E34:S08	30034308	300Y308	Expander	34	Low Volts	E34 Low Volts
E34:S09	30034309	300Y309	Expander	34	PS Fail	E34 PS Fail
E34:S10	30934310	309Y310	Expander	34	Battery Test	E34 Battery Test
E34:S11	30134311	301Y311	Expander	34	Ext AC fail	E34 Ext AC fail
E34:S12	30234312	302Y312	Expander	34	Ext Low Battery	E34 Ext Low Battery
E34:S13	30034313	300Y313	Expander	34	Ext LAN Fuse	E34 Ext LAN Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E34:S14	30034314	300Y314	Expander	34	Ext Detector Fuse	E34 Ext Detector Fuse
E34:S15	30034315	300Y315	Expander	34	Ext Low Volts	E34 Ext Low Volts
E34:S16	30034316	300Y316	Expander	34	Ext PS Fail	E34 Ext PS Fail
E34:S17	30934317	309Y317	Expander	34	Ext Battery Test	E34 Ext Battery Test
E34:S18	33334318	333Y318	Expander	34	Unibus Fault	E34 Unibus Fault
E34:S19	14334319	143Y319	Expander	34	LAN Comms	E34 LAN Comms
E34:S20	15034320	150Y320	Expander	34	Spare1	E34 Spare1
E34:S21	15034321	150Y321	Expander	34	Spare2	E34 Spare2
E35-E99:Z01	14035301	140Z301	Expander	35	Z01	E35-E99:Z01
E35-E99:Z02	14035302	140Z302	Expander	35	Z02	E35-E99:Z02
E35-E99:Z03	14035303	140Z303	Expander	35	Z03	E35-E99:Z03
E35-E99:Z04	14035304	140Z304	Expander	35	Z04	E35-E99:Z04
E35-E99:Z05	14035305	140Z305	Expander	35	Z05	E35-E99:Z05
E35-E99:Z06	14035306	140Z306	Expander	35	Z06	E35-E99:Z06
E35-E99:Z07	14035307	140Z307	Expander	35	Z07	E35-E99:Z07
E35-E99:Z08	14035308	140Z308	Expander	35	Z08	E35-E99:Z08
E35-E99:Z09	14035309	140Z309	Expander	35	Z09	E35-E99:Z09
E35-E99:Z10	14035310	140Z310	Expander	35	Z10	E35-E99:Z10
E35-E99:Z11	14035311	140Z311	Expander	35	Z11	E35-E99:Z11
E35-E99:Z12	14035312	140Z312	Expander	35	Z12	E35-E99:Z12
E35-E99:Z13	14035313	140Z313	Expander	35	Z13	E35-E99:Z13
E35-E99:Z14	14035314	140Z314	Expander	35	Z14	E35-E99:Z14
E35-E99:Z15	14035315	140Z315	Expander	35	Z15	E35-E99:Z15
E35-E99:Z16	14035316	140Z316	Expander	35	Z16	E35-E99:Z16
E35-E99:Z17	14035317	140Z317	Expander	35	Z17	E35-E99:Z17
E35-E99:Z18	14035318	140Z318	Expander	35	Z18	E35-E99:Z18
E35-E99:Z19	14035319	140Z319	Expander	35	Z19	E35-E99:Z19
E35-E99:Z20	14035320	140Z320	Expander	35	Z20	E35-E99:Z20
E35-E99:Z21	14035321	140Z321	Expander	35	Z21	E35-E99:Z21
E35-E99:Z22	14035322	140Z322	Expander	35	Z22	E35-E99:Z22
E35-E99:Z23	14035323	140Z323	Expander	35	Z23	E35-E99:Z23
E35-E99:Z24	14035324	140Z324	Expander	35	Z24	E35-E99:Z24
E35-E99:Z25	14035325	140Z325	Expander	35	Z25	E35-E99:Z25
E35-E99:Z26	14035326	140Z326	Expander	35	Z26	E35-E99:Z26
E35-E99:Z27	14035327	140Z327	Expander	35	Z27	E35-E99:Z27
E35-E99:Z28	14035328	140Z328	Expander	35	Z28	E35-E99:Z28
E35-E99:Z29	14035329	140Z329	Expander	35	Z29	E35-E99:Z29
E35-E99:Z30	14035330	140Z330	Expander	35	Z30	E35-E99:Z30
E35-E99:Z31	14035331	140Z331	Expander	35	Z31	E35-E99:Z31
E35-E99:Z32	14035332	140Z332	Expander	35	Z32	E35-E99:Z32
E35-E99:S01	14535301	145Z301	Expander	35	Cabinet Tamper	E35-E99 Cabinet Tamper
E35-E99:S02	32035302	320Z302	Expander	35	Int SiREN Tamper	E35-E99 Int SiREN Tamper
E35-E99:S03	32035303	320Z303	Expander	35	Ext SiREN Tamper	E35-E99 Ext SiREN Tamper
E35-E99:S04	30135304	301Z304	Expander	35	AC fail	E35-E99 AC fail
E35-E99:S05	30235305	302Z305	Expander	35	Low Battery	E35-E99 Low Battery
E35-E99:S06	30035306	300Z306	Expander	35	LAN Fuse	E35-E99 LAN Fuse
E35-E99:S07	30035307	300Z307	Expander	35	Detector Fuse	E35-E99 Detector Fuse
E35-E99:S08	30035308	300Z308	Expander	35	Low Volts	E35-E99 Low Volts
E35-E99:S09	30035309	300Z309	Expander	35	PS Fail	E35-E99 PS Fail
E35-E99:S10	30935310	309Z310	Expander	35	Battery Test	E35-E99 Battery Test
E35-E99:S11	30135311	301Z311	Expander	35	Ext AC fail	E35-E99 Ext AC fail
E35-E99:S12	30235312	302Z312	Expander	35	Ext Low Battery	E35-E99 Ext Low Battery
E35-E99:S13	30035313	300Z313	Expander	35	Ext LAN Fuse	E35-E99 Ext LAN Fuse
E35-E99:S14	30035314	300Z314	Expander	35	Ext Detector Fuse	E35-E99 Ext Detector Fuse
E35-E99:S15	30035315	300Z315	Expander	35	Ext Low Volts	E35-E99 Ext Low Volts
E35-E99:S16	30035316	300Z316	Expander	35	Ext PS Fail	E35-E99 Ext PS Fail
E35-E99:S17	30935317	309Z317	Expander	35	Ext Battery Test	E35-E99 Ext Battery Test

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
E35-E99:S18	3335318	333Z318	Expander	35	Unibus Fault	E35-E99 Unibus Fault
E35-E99:S19	1435319	143Z319	Expander	35	LAN Comms	E35-E99 LAN Comms
E35-E99:S20	1505320	150Z320	Expander	35	Spare1	E35-E99 Spare1
E35-E99:S21	1505321	150Z321	Expander	35	Spare2	E35-E99 Spare2
S01:Z01	14001301	1401301	Encrypted Exp	1	Z01	S01:Z01
S01:Z02	14001302	1401302	Encrypted Exp	1	Z02	S01:Z02
S01:Z03	14001303	1401303	Encrypted Exp	1	Z03	S01:Z03
S01:Z04	14001304	1401304	Encrypted Exp	1	Z04	S01:Z04
S01:Z05	14001305	1401305	Encrypted Exp	1	Z05	S01:Z05
S01:Z06	14001306	1401306	Encrypted Exp	1	Z06	S01:Z06
S01:Z07	14001307	1401307	Encrypted Exp	1	Z07	S01:Z07
S01:Z08	14001308	1401308	Encrypted Exp	1	Z08	S01:Z08
S01:Z09	14001309	1401309	Encrypted Exp	1	Z09	S01:Z09
S01:Z10	14001310	1401310	Encrypted Exp	1	Z10	S01:Z10
S01:Z11	14001311	1401311	Encrypted Exp	1	Z11	S01:Z11
S01:Z12	14001312	1401312	Encrypted Exp	1	Z12	S01:Z12
S01:Z13	14001313	1401313	Encrypted Exp	1	Z13	S01:Z13
S01:Z14	14001314	1401314	Encrypted Exp	1	Z14	S01:Z14
S01:Z15	14001315	1401315	Encrypted Exp	1	Z15	S01:Z15
S01:Z16	14001316	1401316	Encrypted Exp	1	Z16	S01:Z16
S01:S01	14501301	1451301	Encrypted Exp	1	Cabinet Tamper	S01 Cabinet Tamper
S01:S02	32001302	3201302	Encrypted Exp	1	Int SiREN Tamper	S01 Int SiREN Tamper
S01:S03	32001303	3201303	Encrypted Exp	1	Ext SiREN Tamper	S01 Ext SiREN Tamper
S01:S04	30101304	3011304	Encrypted Exp	1	AC fail	S01 AC fail
S01:S05	30201305	3021305	Encrypted Exp	1	Low Battery	S01 Low Battery
S01:S06	30001306	3001306	Encrypted Exp	1	LAN Fuse	S01 LAN Fuse
S01:S07	30001307	3001307	Encrypted Exp	1	Detector Fuse	S01 Detector Fuse
S01:S08	30901308	3091308	Encrypted Exp	1	Battery Test	S01 Battery Test
S01:S09	14501309	1451309	Encrypted Exp	1	Seismic Tamper	S01 Seismic Tamper
S01:S10	33801310	3381310	Encrypted Exp	1	ELM Low Volts	S01 ELM Low Volts
S01:S11	38001311	3801311	Encrypted Exp	1	ELM Serial Number	S01 ELM Serial Number
S01:S12	38201312	3821312	Encrypted Exp	1	ELM Poll Fail	S01 ELM Poll Fail
S01:S13	38301313	3831313	Encrypted Exp	1	ELM Default Key	S01 ELM Default Key
S01:S14	00001314	0001314	Encrypted Exp	1	ELM Extra	S01 ELM Extra
S01:S15	00001315	0001315	Encrypted Exp	1	ELM Security	S01 ELM Security
S01:S16	14301316	1431316	Encrypted Exp	1	LAN Comms	S01 LAN Comms
S02:Z01	14002301	1402301	Encrypted Exp	2	Z01	S02:Z01
S02:Z02	14002302	1402302	Encrypted Exp	2	Z02	S02:Z02
S02:Z03	14002303	1402303	Encrypted Exp	2	Z03	S02:Z03
S02:Z04	14002304	1402304	Encrypted Exp	2	Z04	S02:Z04
S02:Z05	14002305	1402305	Encrypted Exp	2	Z05	S02:Z05
S02:Z06	14002306	1402306	Encrypted Exp	2	Z06	S02:Z06
S02:Z07	14002307	1402307	Encrypted Exp	2	Z07	S02:Z07
S02:Z08	14002308	1402308	Encrypted Exp	2	Z08	S02:Z08
S02:Z09	14002309	1402309	Encrypted Exp	2	Z09	S02:Z09
S02:Z10	14002310	1402310	Encrypted Exp	2	Z10	S02:Z10
S02:Z11	14002311	1402311	Encrypted Exp	2	Z11	S02:Z11
S02:Z12	14002312	1402312	Encrypted Exp	2	Z12	S02:Z12
S02:Z13	14002313	1402313	Encrypted Exp	2	Z13	S02:Z13
S02:Z14	14002314	1402314	Encrypted Exp	2	Z14	S02:Z14
S02:Z15	14002315	1402315	Encrypted Exp	2	Z15	S02:Z15
S02:Z16	14002316	1402316	Encrypted Exp	2	Z16	S02:Z16
S02:S01	14502301	1452301	Encrypted Exp	2	Cabinet Tamper	S02 Cabinet Tamper
S02:S02	32002302	3202302	Encrypted Exp	2	Int SiREN Tamper	S02 Int SiREN Tamper
S02:S03	32002303	3202303	Encrypted Exp	2	Ext SiREN Tamper	S02 Ext SiREN Tamper

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S02:S04	30102304	3012304	Encrypted Exp	2	AC fail	S02 AC fail
S02:S05	30202305	3022305	Encrypted Exp	2	Low Battery	S02 Low Battery
S02:S06	30002306	3002306	Encrypted Exp	2	LAN Fuse	S02 LAN Fuse
S02:S07	30002307	3002307	Encrypted Exp	2	Detector Fuse	S02 Detector Fuse
S02:S08	30902308	3092308	Encrypted Exp	2	Battery Test	S02 Battery Test
S02:S09	14502309	1452309	Encrypted Exp	2	Seismic Tamper	S02 Seismic Tamper
S02:S10	33802310	3382310	Encrypted Exp	2	ELM Low Volts	S02 ELM Low Volts
S02:S11	38002311	3802311	Encrypted Exp	2	ELM Serial Number	S02 ELM Serial Number
S02:S12	38202312	3822312	Encrypted Exp	2	ELM Poll Fail	S02 ELM Poll Fail
S02:S13	38302313	3832313	Encrypted Exp	2	ELM Default Key	S02 ELM Default Key
S02:S14	00002314	0002314	Encrypted Exp	2	ELM Extra	S02 ELM Extra
S02:S15	00002315	0002315	Encrypted Exp	2	ELM Security	S02 ELM Security
S02:S16	14302316	1432316	Encrypted Exp	2	LAN Comms	S02 LAN Comms
S03:Z01	14003301	1403301	Encrypted Exp	3	Z01	S03:Z01
S03:Z02	14003302	1403302	Encrypted Exp	3	Z02	S03:Z02
S03:Z03	14003303	1403303	Encrypted Exp	3	Z03	S03:Z03
S03:Z04	14003304	1403304	Encrypted Exp	3	Z04	S03:Z04
S03:Z05	14003305	1403305	Encrypted Exp	3	Z05	S03:Z05
S03:Z06	14003306	1403306	Encrypted Exp	3	Z06	S03:Z06
S03:Z07	14003307	1403307	Encrypted Exp	3	Z07	S03:Z07
S03:Z08	14003308	1403308	Encrypted Exp	3	Z08	S03:Z08
S03:Z09	14003309	1403309	Encrypted Exp	3	Z09	S03:Z09
S03:Z10	14003310	1403310	Encrypted Exp	3	Z10	S03:Z10
S03:Z11	14003311	1403311	Encrypted Exp	3	Z11	S03:Z11
S03:Z12	14003312	1403312	Encrypted Exp	3	Z12	S03:Z12
S03:Z13	14003313	1403313	Encrypted Exp	3	Z13	S03:Z13
S03:Z14	14003314	1403314	Encrypted Exp	3	Z14	S03:Z14
S03:Z15	14003315	1403315	Encrypted Exp	3	Z15	S03:Z15
S03:Z16	14003316	1403316	Encrypted Exp	3	Z16	S03:Z16
S03:S01	14503301	1453301	Encrypted Exp	3	Cabinet Tamper	S03 Cabinet Tamper
S03:S02	32003302	3203302	Encrypted Exp	3	Int SiREN Tamper	S03 Int SiREN Tamper
S03:S03	32003303	3203303	Encrypted Exp	3	Ext SiREN Tamper	S03 Ext SiREN Tamper
S03:S04	30103304	3013304	Encrypted Exp	3	AC fail	S03 AC fail
S03:S05	30203305	3023305	Encrypted Exp	3	Low Battery	S03 Low Battery
S03:S06	30003306	3003306	Encrypted Exp	3	LAN Fuse	S03 LAN Fuse
S03:S07	30003307	3003307	Encrypted Exp	3	Detector Fuse	S03 Detector Fuse
S03:S08	30903308	3093308	Encrypted Exp	3	Battery Test	S03 Battery Test
S03:S09	14503309	1453309	Encrypted Exp	3	Seismic Tamper	S03 Seismic Tamper
S03:S10	33803310	3383310	Encrypted Exp	3	ELM Low Volts	S03 ELM Low Volts
S03:S11	38003311	3803311	Encrypted Exp	3	ELM Serial Number	S03 ELM Serial Number
S03:S12	38203312	3823312	Encrypted Exp	3	ELM Poll Fail	S03 ELM Poll Fail
S03:S13	38303313	3833313	Encrypted Exp	3	ELM Default Key	S03 ELM Default Key
S03:S14	00003314	0003314	Encrypted Exp	3	ELM Extra	S03 ELM Extra
S03:S15	00003315	0003315	Encrypted Exp	3	ELM Security	S03 ELM Security
S03:S16	14303316	1433316	Encrypted Exp	3	LAN Comms	S03 LAN Comms
S04:Z01	14004301	1404301	Encrypted Exp	4	Z01	S04:Z01
S04:Z02	14004302	1404302	Encrypted Exp	4	Z02	S04:Z02
S04:Z03	14004303	1404303	Encrypted Exp	4	Z03	S04:Z03
S04:Z04	14004304	1404304	Encrypted Exp	4	Z04	S04:Z04
S04:Z05	14004305	1404305	Encrypted Exp	4	Z05	S04:Z05
S04:Z06	14004306	1404306	Encrypted Exp	4	Z06	S04:Z06
S04:Z07	14004307	1404307	Encrypted Exp	4	Z07	S04:Z07
S04:Z08	14004308	1404308	Encrypted Exp	4	Z08	S04:Z08
S04:Z09	14004309	1404309	Encrypted Exp	4	Z09	S04:Z09
S04:Z10	14004310	1404310	Encrypted Exp	4	Z10	S04:Z10

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S04:Z11	14004311	1404311	Encrypted Exp	4	Z11	S04:Z11
S04:Z12	14004312	1404312	Encrypted Exp	4	Z12	S04:Z12
S04:Z13	14004313	1404313	Encrypted Exp	4	Z13	S04:Z13
S04:Z14	14004314	1404314	Encrypted Exp	4	Z14	S04:Z14
S04:Z15	14004315	1404315	Encrypted Exp	4	Z15	S04:Z15
S04:Z16	14004316	1404316	Encrypted Exp	4	Z16	S04:Z16
S04:S01	14504301	1454301	Encrypted Exp	4	Cabinet Tamper	S04 Cabinet Tamper
S04:S02	32004302	3204302	Encrypted Exp	4	Int SiREN Tamper	S04 Int SiREN Tamper
S04:S03	32004303	3204303	Encrypted Exp	4	Ext SiREN Tamper	S04 Ext SiREN Tamper
S04:S04	30104304	3014304	Encrypted Exp	4	AC fail	S04 AC fail
S04:S05	30204305	3024305	Encrypted Exp	4	Low Battery	S04 Low Battery
S04:S06	30004306	3004306	Encrypted Exp	4	LAN Fuse	S04 LAN Fuse
S04:S07	30004307	3004307	Encrypted Exp	4	Detector Fuse	S04 Detector Fuse
S04:S08	30904308	3094308	Encrypted Exp	4	Battery Test	S04 Battery Test
S04:S09	14504309	1454309	Encrypted Exp	4	Seismic Tamper	S04 Seismic Tamper
S04:S10	33804310	3384310	Encrypted Exp	4	ELM Low Volts	S04 ELM Low Volts
S04:S11	38004311	3804311	Encrypted Exp	4	ELM Serial Number	S04 ELM Serial Number
S04:S12	38204312	3824312	Encrypted Exp	4	ELM Poll Fail	S04 ELM Poll Fail
S04:S13	38304313	3834313	Encrypted Exp	4	ELM Default Key	S04 ELM Default Key
S04:S14	00004314	0004314	Encrypted Exp	4	ELM Extra	S04 ELM Extra
S04:S15	00004315	0004315	Encrypted Exp	4	ELM Security	S04 ELM Security
S04:S16	14304316	1434316	Encrypted Exp	4	LAN Comms	S04 LAN Comms
S05:Z01	14005301	1405301	Encrypted Exp	5	Z01	S05:Z01
S05:Z02	14005302	1405302	Encrypted Exp	5	Z02	S05:Z02
S05:Z03	14005303	1405303	Encrypted Exp	5	Z03	S05:Z03
S05:Z04	14005304	1405304	Encrypted Exp	5	Z04	S05:Z04
S05:Z05	14005305	1405305	Encrypted Exp	5	Z05	S05:Z05
S05:Z06	14005306	1405306	Encrypted Exp	5	Z06	S05:Z06
S05:Z07	14005307	1405307	Encrypted Exp	5	Z07	S05:Z07
S05:Z08	14005308	1405308	Encrypted Exp	5	Z08	S05:Z08
S05:Z09	14005309	1405309	Encrypted Exp	5	Z09	S05:Z09
S05:Z10	14005310	1405310	Encrypted Exp	5	Z10	S05:Z10
S05:Z11	14005311	1405311	Encrypted Exp	5	Z11	S05:Z11
S05:Z12	14005312	1405312	Encrypted Exp	5	Z12	S05:Z12
S05:Z13	14005313	1405313	Encrypted Exp	5	Z13	S05:Z13
S05:Z14	14005314	1405314	Encrypted Exp	5	Z14	S05:Z14
S05:Z15	14005315	1405315	Encrypted Exp	5	Z15	S05:Z15
S05:Z16	14005316	1405316	Encrypted Exp	5	Z16	S05:Z16
S05:S01	14505301	1455301	Encrypted Exp	5	Cabinet Tamper	S05 Cabinet Tamper
S05:S02	32005302	3205302	Encrypted Exp	5	Int SiREN Tamper	S05 Int SiREN Tamper
S05:S03	32005303	3205303	Encrypted Exp	5	Ext SiREN Tamper	S05 Ext SiREN Tamper
S05:S04	30105304	3015304	Encrypted Exp	5	AC fail	S05 AC fail
S05:S05	30205305	3025305	Encrypted Exp	5	Low Battery	S05 Low Battery
S05:S06	30005306	3005306	Encrypted Exp	5	LAN Fuse	S05 LAN Fuse
S05:S07	30005307	3005307	Encrypted Exp	5	Detector Fuse	S05 Detector Fuse
S05:S08	30905308	3095308	Encrypted Exp	5	Battery Test	S05 Battery Test
S05:S09	14505309	1455309	Encrypted Exp	5	Seismic Tamper	S05 Seismic Tamper
S05:S10	33805310	3385310	Encrypted Exp	5	ELM Low Volts	S05 ELM Low Volts
S05:S11	38005311	3805311	Encrypted Exp	5	ELM Serial Number	S05 ELM Serial Number
S05:S12	38205312	3825312	Encrypted Exp	5	ELM Poll Fail	S05 ELM Poll Fail
S05:S13	38305313	3835313	Encrypted Exp	5	ELM Default Key	S05 ELM Default Key
S05:S14	00005314	0005314	Encrypted Exp	5	ELM Extra	S05 ELM Extra
S05:S15	00005315	0005315	Encrypted Exp	5	ELM Security	S05 ELM Security
S05:S16	14305316	1435316	Encrypted Exp	5	LAN Comms	S05 LAN Comms
S06:Z01	14006301	1406301	Encrypted Exp	6	Z01	S06:Z01

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S06:Z02	14006302	1406302	Encrypted Exp	6	Z02	S06:Z02
S06:Z03	14006303	1406303	Encrypted Exp	6	Z03	S06:Z03
S06:Z04	14006304	1406304	Encrypted Exp	6	Z04	S06:Z04
S06:Z05	14006305	1406305	Encrypted Exp	6	Z05	S06:Z05
S06:Z06	14006306	1406306	Encrypted Exp	6	Z06	S06:Z06
S06:Z07	14006307	1406307	Encrypted Exp	6	Z07	S06:Z07
S06:Z08	14006308	1406308	Encrypted Exp	6	Z08	S06:Z08
S06:Z09	14006309	1406309	Encrypted Exp	6	Z09	S06:Z09
S06:Z10	14006310	1406310	Encrypted Exp	6	Z10	S06:Z10
S06:Z11	14006311	1406311	Encrypted Exp	6	Z11	S06:Z11
S06:Z12	14006312	1406312	Encrypted Exp	6	Z12	S06:Z12
S06:Z13	14006313	1406313	Encrypted Exp	6	Z13	S06:Z13
S06:Z14	14006314	1406314	Encrypted Exp	6	Z14	S06:Z14
S06:Z15	14006315	1406315	Encrypted Exp	6	Z15	S06:Z15
S06:Z16	14006316	1406316	Encrypted Exp	6	Z16	S06:Z16
S06:S01	14506301	1456301	Encrypted Exp	6	Cabinet Tamper	S06 Cabinet Tamper
S06:S02	32006302	3206302	Encrypted Exp	6	Int SiREN Tamper	S06 Int SiREN Tamper
S06:S03	32006303	3206303	Encrypted Exp	6	Ext SiREN Tamper	S06 Ext SiREN Tamper
S06:S04	30106304	3016304	Encrypted Exp	6	AC fail	S06 AC fail
S06:S05	30206305	3026305	Encrypted Exp	6	Low Battery	S06 Low Battery
S06:S06	30006306	3006306	Encrypted Exp	6	LAN Fuse	S06 LAN Fuse
S06:S07	30006307	3006307	Encrypted Exp	6	Detector Fuse	S06 Detector Fuse
S06:S08	30906308	3096308	Encrypted Exp	6	Battery Test	S06 Battery Test
S06:S09	14506309	1456309	Encrypted Exp	6	Seismic Tamper	S06 Seismic Tamper
S06:S10	33806310	3386310	Encrypted Exp	6	ELM Low Volts	S06 ELM Low Volts
S06:S11	38006311	3806311	Encrypted Exp	6	ELM Serial Number	S06 ELM Serial Number
S06:S12	38206312	3826312	Encrypted Exp	6	ELM Poll Fail	S06 ELM Poll Fail
S06:S13	38306313	3836313	Encrypted Exp	6	ELM Default Key	S06 ELM Default Key
S06:S14	00006314	0006314	Encrypted Exp	6	ELM Extra	S06 ELM Extra
S06:S15	00006315	0006315	Encrypted Exp	6	ELM Security	S06 ELM Security
S06:S16	14306316	1436316	Encrypted Exp	6	LAN Comms	S06 LAN Comms
S07:Z01	14007301	1407301	Encrypted Exp	7	Z01	S07:Z01
S07:Z02	14007302	1407302	Encrypted Exp	7	Z02	S07:Z02
S07:Z03	14007303	1407303	Encrypted Exp	7	Z03	S07:Z03
S07:Z04	14007304	1407304	Encrypted Exp	7	Z04	S07:Z04
S07:Z05	14007305	1407305	Encrypted Exp	7	Z05	S07:Z05
S07:Z06	14007306	1407306	Encrypted Exp	7	Z06	S07:Z06
S07:Z07	14007307	1407307	Encrypted Exp	7	Z07	S07:Z07
S07:Z08	14007308	1407308	Encrypted Exp	7	Z08	S07:Z08
S07:Z09	14007309	1407309	Encrypted Exp	7	Z09	S07:Z09
S07:Z10	14007310	1407310	Encrypted Exp	7	Z10	S07:Z10
S07:Z11	14007311	1407311	Encrypted Exp	7	Z11	S07:Z11
S07:Z12	14007312	1407312	Encrypted Exp	7	Z12	S07:Z12
S07:Z13	14007313	1407313	Encrypted Exp	7	Z13	S07:Z13
S07:Z14	14007314	1407314	Encrypted Exp	7	Z14	S07:Z14
S07:Z15	14007315	1407315	Encrypted Exp	7	Z15	S07:Z15
S07:Z16	14007316	1407316	Encrypted Exp	7	Z16	S07:Z16
S07:S01	14507301	1457301	Encrypted Exp	7	Cabinet Tamper	S07 Cabinet Tamper
S07:S02	32007302	3207302	Encrypted Exp	7	Int SiREN Tamper	S07 Int SiREN Tamper
S07:S03	32007303	3207303	Encrypted Exp	7	Ext SiREN Tamper	S07 Ext SiREN Tamper
S07:S04	30107304	3017304	Encrypted Exp	7	AC fail	S07 AC fail
S07:S05	30207305	3027305	Encrypted Exp	7	Low Battery	S07 Low Battery
S07:S06	30007306	3007306	Encrypted Exp	7	LAN Fuse	S07 LAN Fuse
S07:S07	30007307	3007307	Encrypted Exp	7	Detector Fuse	S07 Detector Fuse
S07:S08	30907308	3097308	Encrypted Exp	7	Battery Test	S07 Battery Test

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S07:S09	14507309	1457309	Encrypted Exp	7	Seismic Tamper	S07 Seismic Tamper
S07:S10	33807310	3387310	Encrypted Exp	7	ELM Low Volts	S07 ELM Low Volts
S07:S11	38007311	3807311	Encrypted Exp	7	ELM Serial Number	S07 ELM Serial Number
S07:S12	38207312	3827312	Encrypted Exp	7	ELM Poll Fail	S07 ELM Poll Fail
S07:S13	38307313	3837313	Encrypted Exp	7	ELM Default Key	S07 ELM Default Key
S07:S14	00007314	0007314	Encrypted Exp	7	ELM Extra	S07 ELM Extra
S07:S15	00007315	0007315	Encrypted Exp	7	ELM Security	S07 ELM Security
S07:S16	14307316	1437316	Encrypted Exp	7	LAN Comms	S07 LAN Comms
S08:Z01	14008301	1408301	Encrypted Exp	8	Z01	S08:Z01
S08:Z02	14008302	1408302	Encrypted Exp	8	Z02	S08:Z02
S08:Z03	14008303	1408303	Encrypted Exp	8	Z03	S08:Z03
S08:Z04	14008304	1408304	Encrypted Exp	8	Z04	S08:Z04
S08:Z05	14008305	1408305	Encrypted Exp	8	Z05	S08:Z05
S08:Z06	14008306	1408306	Encrypted Exp	8	Z06	S08:Z06
S08:Z07	14008307	1408307	Encrypted Exp	8	Z07	S08:Z07
S08:Z08	14008308	1408308	Encrypted Exp	8	Z08	S08:Z08
S08:Z09	14008309	1408309	Encrypted Exp	8	Z09	S08:Z09
S08:Z10	14008310	1408310	Encrypted Exp	8	Z10	S08:Z10
S08:Z11	14008311	1408311	Encrypted Exp	8	Z11	S08:Z11
S08:Z12	14008312	1408312	Encrypted Exp	8	Z12	S08:Z12
S08:Z13	14008313	1408313	Encrypted Exp	8	Z13	S08:Z13
S08:Z14	14008314	1408314	Encrypted Exp	8	Z14	S08:Z14
S08:Z15	14008315	1408315	Encrypted Exp	8	Z15	S08:Z15
S08:Z16	14008316	1408316	Encrypted Exp	8	Z16	S08:Z16
S08:S01	14508301	1458301	Encrypted Exp	8	Cabinet Tamper	S08 Cabinet Tamper
S08:S02	32008302	3208302	Encrypted Exp	8	Int SiREN Tamper	S08 Int SiREN Tamper
S08:S03	32008303	3208303	Encrypted Exp	8	Ext SiREN Tamper	S08 Ext SiREN Tamper
S08:S04	30108304	3018304	Encrypted Exp	8	AC fail	S08 AC fail
S08:S05	30208305	3028305	Encrypted Exp	8	Low Battery	S08 Low Battery
S08:S06	30008306	3008306	Encrypted Exp	8	LAN Fuse	S08 LAN Fuse
S08:S07	30008307	3008307	Encrypted Exp	8	Detector Fuse	S08 Detector Fuse
S08:S08	30908308	3098308	Encrypted Exp	8	Battery Test	S08 Battery Test
S08:S09	14508309	1458309	Encrypted Exp	8	Seismic Tamper	S08 Seismic Tamper
S08:S10	33808310	3388310	Encrypted Exp	8	ELM Low Volts	S08 ELM Low Volts
S08:S11	38008311	3808311	Encrypted Exp	8	ELM Serial Number	S08 ELM Serial Number
S08:S12	38208312	3828312	Encrypted Exp	8	ELM Poll Fail	S08 ELM Poll Fail
S08:S13	38308313	3838313	Encrypted Exp	8	ELM Default Key	S08 ELM Default Key
S08:S14	00008314	0008314	Encrypted Exp	8	ELM Extra	S08 ELM Extra
S08:S15	00008315	0008315	Encrypted Exp	8	ELM Security	S08 ELM Security
S08:S16	14308316	1438316	Encrypted Exp	8	LAN Comms	S08 LAN Comms
S09:Z01	14009301	1409301	Encrypted Exp	9	Z01	S09:Z01
S09:Z02	14009302	1409302	Encrypted Exp	9	Z02	S09:Z02
S09:Z03	14009303	1409303	Encrypted Exp	9	Z03	S09:Z03
S09:Z04	14009304	1409304	Encrypted Exp	9	Z04	S09:Z04
S09:Z05	14009305	1409305	Encrypted Exp	9	Z05	S09:Z05
S09:Z06	14009306	1409306	Encrypted Exp	9	Z06	S09:Z06
S09:Z07	14009307	1409307	Encrypted Exp	9	Z07	S09:Z07
S09:Z08	14009308	1409308	Encrypted Exp	9	Z08	S09:Z08
S09:Z09	14009309	1409309	Encrypted Exp	9	Z09	S09:Z09
S09:Z10	14009310	1409310	Encrypted Exp	9	Z10	S09:Z10
S09:Z11	14009311	1409311	Encrypted Exp	9	Z11	S09:Z11
S09:Z12	14009312	1409312	Encrypted Exp	9	Z12	S09:Z12
S09:Z13	14009313	1409313	Encrypted Exp	9	Z13	S09:Z13
S09:Z14	14009314	1409314	Encrypted Exp	9	Z14	S09:Z14
S09:Z15	14009315	1409315	Encrypted Exp	9	Z15	S09:Z15

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S09:Z16	14009316	1409316	Encrypted Exp	9	Z16	S09:Z16
S09:S01	14509301	1459301	Encrypted Exp	9	Cabinet Tamper	S09 Cabinet Tamper
S09:S02	32009302	3209302	Encrypted Exp	9	Int SiREN Tamper	S09 Int SiREN Tamper
S09:S03	32009303	3209303	Encrypted Exp	9	Ext SiREN Tamper	S09 Ext SiREN Tamper
S09:S04	30109304	3019304	Encrypted Exp	9	AC fail	S09 AC fail
S09:S05	30209305	3029305	Encrypted Exp	9	Low Battery	S09 Low Battery
S09:S06	30009306	3009306	Encrypted Exp	9	LAN Fuse	S09 LAN Fuse
S09:S07	30009307	3009307	Encrypted Exp	9	Detector Fuse	S09 Detector Fuse
S09:S08	30909308	3099308	Encrypted Exp	9	Battery Test	S09 Battery Test
S09:S09	14509309	1459309	Encrypted Exp	9	Seismic Tamper	S09 Seismic Tamper
S09:S10	33809310	3389310	Encrypted Exp	9	ELM Low Volts	S09 ELM Low Volts
S09:S11	38009311	3809311	Encrypted Exp	9	ELM Serial Number	S09 ELM Serial Number
S09:S12	38209312	3829312	Encrypted Exp	9	ELM Poll Fail	S09 ELM Poll Fail
S09:S13	38309313	3839313	Encrypted Exp	9	ELM Default Key	S09 ELM Default Key
S09:S14	00009314	0009314	Encrypted Exp	9	ELM Extra	S09 ELM Extra
S09:S15	00009315	0009315	Encrypted Exp	9	ELM Security	S09 ELM Security
S09:S16	14309316	1439316	Encrypted Exp	9	LAN Comms	S09 LAN Comms
S10:Z01	14010301	140A301	Encrypted Exp	10	Z01	S10:Z01
S10:Z02	14010302	140A302	Encrypted Exp	10	Z02	S10:Z02
S10:Z03	14010303	140A303	Encrypted Exp	10	Z03	S10:Z03
S10:Z04	14010304	140A304	Encrypted Exp	10	Z04	S10:Z04
S10:Z05	14010305	140A305	Encrypted Exp	10	Z05	S10:Z05
S10:Z06	14010306	140A306	Encrypted Exp	10	Z06	S10:Z06
S10:Z07	14010307	140A307	Encrypted Exp	10	Z07	S10:Z07
S10:Z08	14010308	140A308	Encrypted Exp	10	Z08	S10:Z08
S10:Z09	14010309	140A309	Encrypted Exp	10	Z09	S10:Z09
S10:Z10	14010310	140A310	Encrypted Exp	10	Z10	S10:Z10
S10:Z11	14010311	140A311	Encrypted Exp	10	Z11	S10:Z11
S10:Z12	14010312	140A312	Encrypted Exp	10	Z12	S10:Z12
S10:Z13	14010313	140A313	Encrypted Exp	10	Z13	S10:Z13
S10:Z14	14010314	140A314	Encrypted Exp	10	Z14	S10:Z14
S10:Z15	14010315	140A315	Encrypted Exp	10	Z15	S10:Z15
S10:Z16	14010316	140A316	Encrypted Exp	10	Z16	S10:Z16
S10:S01	14510301	145A301	Encrypted Exp	10	Cabinet Tamper	S10 Cabinet Tamper
S10:S02	32010302	320A302	Encrypted Exp	10	Int SiREN Tamper	S10 Int SiREN Tamper
S10:S03	32010303	320A303	Encrypted Exp	10	Ext SiREN Tamper	S10 Ext SiREN Tamper
S10:S04	30110304	301A304	Encrypted Exp	10	AC fail	S10 AC fail
S10:S05	30210305	302A305	Encrypted Exp	10	Low Battery	S10 Low Battery
S10:S06	30010306	300A306	Encrypted Exp	10	LAN Fuse	S10 LAN Fuse
S10:S07	30010307	300A307	Encrypted Exp	10	Detector Fuse	S10 Detector Fuse
S10:S08	30910308	309A308	Encrypted Exp	10	Battery Test	S10 Battery Test
S10:S09	14510309	145A309	Encrypted Exp	10	Seismic Tamper	S10 Seismic Tamper
S10:S10	33810310	338A310	Encrypted Exp	10	ELM Low Volts	S10 ELM Low Volts
S10:S11	38010311	380A311	Encrypted Exp	10	ELM Serial Number	S10 ELM Serial Number
S10:S12	38210312	382A312	Encrypted Exp	10	ELM Poll Fail	S10 ELM Poll Fail
S10:S13	38310313	383A313	Encrypted Exp	10	ELM Default Key	S10 ELM Default Key
S10:S14	00010314	000A314	Encrypted Exp	10	ELM Extra	S10 ELM Extra
S10:S15	00010315	000A315	Encrypted Exp	10	ELM Security	S10 ELM Security
S10:S16	14310316	143A316	Encrypted Exp	10	LAN Comms	S10 LAN Comms
S11:Z01	14011301	140B301	Encrypted Exp	11	Z01	S11:Z01
S11:Z02	14011302	140B302	Encrypted Exp	11	Z02	S11:Z02
S11:Z03	14011303	140B303	Encrypted Exp	11	Z03	S11:Z03
S11:Z04	14011304	140B304	Encrypted Exp	11	Z04	S11:Z04
S11:Z05	14011305	140B305	Encrypted Exp	11	Z05	S11:Z05
S11:Z06	14011306	140B306	Encrypted Exp	11	Z06	S11:Z06

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S11:Z07	14011307	140B307	Encrypted Exp	11	Z07	S11:Z07
S11:Z08	14011308	140B308	Encrypted Exp	11	Z08	S11:Z08
S11:Z09	14011309	140B309	Encrypted Exp	11	Z09	S11:Z09
S11:Z10	14011310	140B310	Encrypted Exp	11	Z10	S11:Z10
S11:Z11	14011311	140B311	Encrypted Exp	11	Z11	S11:Z11
S11:Z12	14011312	140B312	Encrypted Exp	11	Z12	S11:Z12
S11:Z13	14011313	140B313	Encrypted Exp	11	Z13	S11:Z13
S11:Z14	14011314	140B314	Encrypted Exp	11	Z14	S11:Z14
S11:Z15	14011315	140B315	Encrypted Exp	11	Z15	S11:Z15
S11:Z16	14011316	140B316	Encrypted Exp	11	Z16	S11:Z16
S11:S01	14511301	145B301	Encrypted Exp	11	Cabinet Tamper	S11 Cabinet Tamper
S11:S02	32011302	320B302	Encrypted Exp	11	Int SiREN Tamper	S11 Int SiREN Tamper
S11:S03	32011303	320B303	Encrypted Exp	11	Ext SiREN Tamper	S11 Ext SiREN Tamper
S11:S04	30111304	301B304	Encrypted Exp	11	AC fail	S11 AC fail
S11:S05	30211305	302B305	Encrypted Exp	11	Low Battery	S11 Low Battery
S11:S06	30011306	300B306	Encrypted Exp	11	LAN Fuse	S11 LAN Fuse
S11:S07	30011307	300B307	Encrypted Exp	11	Detector Fuse	S11 Detector Fuse
S11:S08	30911308	309B308	Encrypted Exp	11	Battery Test	S11 Battery Test
S11:S09	14511309	145B309	Encrypted Exp	11	Seismic Tamper	S11 Seismic Tamper
S11:S10	33811310	338B310	Encrypted Exp	11	ELM Low Volts	S11 ELM Low Volts
S11:S11	38011311	380B311	Encrypted Exp	11	ELM Serial Number	S11 ELM Serial Number
S11:S12	38211312	382B312	Encrypted Exp	11	ELM Poll Fail	S11 ELM Poll Fail
S11:S13	38311313	383B313	Encrypted Exp	11	ELM Default Key	S11 ELM Default Key
S11:S14	00011314	000B314	Encrypted Exp	11	ELM Extra	S11 ELM Extra
S11:S15	00011315	000B315	Encrypted Exp	11	ELM Security	S11 ELM Security
S11:S16	14311316	143B316	Encrypted Exp	11	LAN Comms	S11 LAN Comms
S12:Z01	14012301	140C301	Encrypted Exp	12	Z01	S12:Z01
S12:Z02	14012302	140C302	Encrypted Exp	12	Z02	S12:Z02
S12:Z03	14012303	140C303	Encrypted Exp	12	Z03	S12:Z03
S12:Z04	14012304	140C304	Encrypted Exp	12	Z04	S12:Z04
S12:Z05	14012305	140C305	Encrypted Exp	12	Z05	S12:Z05
S12:Z06	14012306	140C306	Encrypted Exp	12	Z06	S12:Z06
S12:Z07	14012307	140C307	Encrypted Exp	12	Z07	S12:Z07
S12:Z08	14012308	140C308	Encrypted Exp	12	Z08	S12:Z08
S12:Z09	14012309	140C309	Encrypted Exp	12	Z09	S12:Z09
S12:Z10	14012310	140C310	Encrypted Exp	12	Z10	S12:Z10
S12:Z11	14012311	140C311	Encrypted Exp	12	Z11	S12:Z11
S12:Z12	14012312	140C312	Encrypted Exp	12	Z12	S12:Z12
S12:Z13	14012313	140C313	Encrypted Exp	12	Z13	S12:Z13
S12:Z14	14012314	140C314	Encrypted Exp	12	Z14	S12:Z14
S12:Z15	14012315	140C315	Encrypted Exp	12	Z15	S12:Z15
S12:Z16	14012316	140C316	Encrypted Exp	12	Z16	S12:Z16
S12:S01	14512301	145C301	Encrypted Exp	12	Cabinet Tamper	S12 Cabinet Tamper
S12:S02	32012302	320C302	Encrypted Exp	12	Int SiREN Tamper	S12 Int SiREN Tamper
S12:S03	32012303	320C303	Encrypted Exp	12	Ext SiREN Tamper	S12 Ext SiREN Tamper
S12:S04	30112304	301C304	Encrypted Exp	12	AC fail	S12 AC fail
S12:S05	30212305	302C305	Encrypted Exp	12	Low Battery	S12 Low Battery
S12:S06	30012306	300C306	Encrypted Exp	12	LAN Fuse	S12 LAN Fuse
S12:S07	30012307	300C307	Encrypted Exp	12	Detector Fuse	S12 Detector Fuse
S12:S08	30912308	309C308	Encrypted Exp	12	Battery Test	S12 Battery Test
S12:S09	14512309	145C309	Encrypted Exp	12	Seismic Tamper	S12 Seismic Tamper
S12:S10	33812310	338C310	Encrypted Exp	12	ELM Low Volts	S12 ELM Low Volts
S12:S11	38012311	380C311	Encrypted Exp	12	ELM Serial Number	S12 ELM Serial Number
S12:S12	38212312	382C312	Encrypted Exp	12	ELM Poll Fail	S12 ELM Poll Fail
S12:S13	38312313	383C313	Encrypted Exp	12	ELM Default Key	S12 ELM Default Key

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S12:S14	00012314	000C314	Encrypted Exp	12	ELM Extra	S12 ELM Extra
S12:S15	00012315	000C315	Encrypted Exp	12	ELM Security	S12 ELM Security
S12:S16	14312316	143C316	Encrypted Exp	12	LAN Comms	S12 LAN Comms
S13:Z01	14013301	140D301	Encrypted Exp	13	Z01	S13:Z01
S13:Z02	14013302	140D302	Encrypted Exp	13	Z02	S13:Z02
S13:Z03	14013303	140D303	Encrypted Exp	13	Z03	S13:Z03
S13:Z04	14013304	140D304	Encrypted Exp	13	Z04	S13:Z04
S13:Z05	14013305	140D305	Encrypted Exp	13	Z05	S13:Z05
S13:Z06	14013306	140D306	Encrypted Exp	13	Z06	S13:Z06
S13:Z07	14013307	140D307	Encrypted Exp	13	Z07	S13:Z07
S13:Z08	14013308	140D308	Encrypted Exp	13	Z08	S13:Z08
S13:Z09	14013309	140D309	Encrypted Exp	13	Z09	S13:Z09
S13:Z10	14013310	140D310	Encrypted Exp	13	Z10	S13:Z10
S13:Z11	14013311	140D311	Encrypted Exp	13	Z11	S13:Z11
S13:Z12	14013312	140D312	Encrypted Exp	13	Z12	S13:Z12
S13:Z13	14013313	140D313	Encrypted Exp	13	Z13	S13:Z13
S13:Z14	14013314	140D314	Encrypted Exp	13	Z14	S13:Z14
S13:Z15	14013315	140D315	Encrypted Exp	13	Z15	S13:Z15
S13:Z16	14013316	140D316	Encrypted Exp	13	Z16	S13:Z16
S13:S01	14513301	145D301	Encrypted Exp	13	Cabinet Tamper	S13 Cabinet Tamper
S13:S02	32013302	320D302	Encrypted Exp	13	Int SiREN Tamper	S13 Int SiREN Tamper
S13:S03	32013303	320D303	Encrypted Exp	13	Ext SiREN Tamper	S13 Ext SiREN Tamper
S13:S04	30113304	301D304	Encrypted Exp	13	AC fail	S13 AC fail
S13:S05	30213305	302D305	Encrypted Exp	13	Low Battery	S13 Low Battery
S13:S06	30013306	300D306	Encrypted Exp	13	LAN Fuse	S13 LAN Fuse
S13:S07	30013307	300D307	Encrypted Exp	13	Detector Fuse	S13 Detector Fuse
S13:S08	30913308	309D308	Encrypted Exp	13	Battery Test	S13 Battery Test
S13:S09	14513309	145D309	Encrypted Exp	13	Seismic Tamper	S13 Seismic Tamper
S13:S10	33813310	338D310	Encrypted Exp	13	ELM Low Volts	S13 ELM Low Volts
S13:S11	38013311	380D311	Encrypted Exp	13	ELM Serial Number	S13 ELM Serial Number
S13:S12	38213312	382D312	Encrypted Exp	13	ELM Poll Fail	S13 ELM Poll Fail
S13:S13	38313313	383D313	Encrypted Exp	13	ELM Default Key	S13 ELM Default Key
S13:S14	00013314	000D314	Encrypted Exp	13	ELM Extra	S13 ELM Extra
S13:S15	00013315	000D315	Encrypted Exp	13	ELM Security	S13 ELM Security
S13:S16	14313316	143D316	Encrypted Exp	13	LAN Comms	S13 LAN Comms
S14:Z01	14014301	140E301	Encrypted Exp	14	Z01	S14:Z01
S14:Z02	14014302	140E302	Encrypted Exp	14	Z02	S14:Z02
S14:Z03	14014303	140E303	Encrypted Exp	14	Z03	S14:Z03
S14:Z04	14014304	140E304	Encrypted Exp	14	Z04	S14:Z04
S14:Z05	14014305	140E305	Encrypted Exp	14	Z05	S14:Z05
S14:Z06	14014306	140E306	Encrypted Exp	14	Z06	S14:Z06
S14:Z07	14014307	140E307	Encrypted Exp	14	Z07	S14:Z07
S14:Z08	14014308	140E308	Encrypted Exp	14	Z08	S14:Z08
S14:Z09	14014309	140E309	Encrypted Exp	14	Z09	S14:Z09
S14:Z10	14014310	140E310	Encrypted Exp	14	Z10	S14:Z10
S14:Z11	14014311	140E311	Encrypted Exp	14	Z11	S14:Z11
S14:Z12	14014312	140E312	Encrypted Exp	14	Z12	S14:Z12
S14:Z13	14014313	140E313	Encrypted Exp	14	Z13	S14:Z13
S14:Z14	14014314	140E314	Encrypted Exp	14	Z14	S14:Z14
S14:Z15	14014315	140E315	Encrypted Exp	14	Z15	S14:Z15
S14:Z16	14014316	140E316	Encrypted Exp	14	Z16	S14:Z16
S14:S01	14514301	145E301	Encrypted Exp	14	Cabinet Tamper	S14 Cabinet Tamper
S14:S02	32014302	320E302	Encrypted Exp	14	Int SiREN Tamper	S14 Int SiREN Tamper
S14:S03	32014303	320E303	Encrypted Exp	14	Ext SiREN Tamper	S14 Ext SiREN Tamper
S14:S04	30114304	301E304	Encrypted Exp	14	AC fail	S14 AC fail

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S14:S05	30214305	302E305	Encrypted Exp	14	Low Battery	S14 Low Battery
S14:S06	30014306	300E306	Encrypted Exp	14	LAN Fuse	S14 LAN Fuse
S14:S07	30014307	300E307	Encrypted Exp	14	Detector Fuse	S14 Detector Fuse
S14:S08	30914308	309E308	Encrypted Exp	14	Battery Test	S14 Battery Test
S14:S09	14514309	145E309	Encrypted Exp	14	Seismic Tamper	S14 Seismic Tamper
S14:S10	33814310	338E310	Encrypted Exp	14	ELM Low Volts	S14 ELM Low Volts
S14:S11	38014311	380E311	Encrypted Exp	14	ELM Serial Number	S14 ELM Serial Number
S14:S12	38214312	382E312	Encrypted Exp	14	ELM Poll Fail	S14 ELM Poll Fail
S14:S13	38314313	383E313	Encrypted Exp	14	ELM Default Key	S14 ELM Default Key
S14:S14	00014314	000E314	Encrypted Exp	14	ELM Extra	S14 ELM Extra
S14:S15	00014315	000E315	Encrypted Exp	14	ELM Security	S14 ELM Security
S14:S16	14314316	143E316	Encrypted Exp	14	LAN Comms	S14 LAN Comms
S15:Z01	14015301	140F301	Encrypted Exp	15	Z01	S15:Z01
S15:Z02	14015302	140F302	Encrypted Exp	15	Z02	S15:Z02
S15:Z03	14015303	140F303	Encrypted Exp	15	Z03	S15:Z03
S15:Z04	14015304	140F304	Encrypted Exp	15	Z04	S15:Z04
S15:Z05	14015305	140F305	Encrypted Exp	15	Z05	S15:Z05
S15:Z06	14015306	140F306	Encrypted Exp	15	Z06	S15:Z06
S15:Z07	14015307	140F307	Encrypted Exp	15	Z07	S15:Z07
S15:Z08	14015308	140F308	Encrypted Exp	15	Z08	S15:Z08
S15:Z09	14015309	140F309	Encrypted Exp	15	Z09	S15:Z09
S15:Z10	14015310	140F310	Encrypted Exp	15	Z10	S15:Z10
S15:Z11	14015311	140F311	Encrypted Exp	15	Z11	S15:Z11
S15:Z12	14015312	140F312	Encrypted Exp	15	Z12	S15:Z12
S15:Z13	14015313	140F313	Encrypted Exp	15	Z13	S15:Z13
S15:Z14	14015314	140F314	Encrypted Exp	15	Z14	S15:Z14
S15:Z15	14015315	140F315	Encrypted Exp	15	Z15	S15:Z15
S15:Z16	14015316	140F316	Encrypted Exp	15	Z16	S15:Z16
S15:S01	14515301	145F301	Encrypted Exp	15	Cabinet Tamper	S15 Cabinet Tamper
S15:S02	32015302	320F302	Encrypted Exp	15	Int SiREN Tamper	S15 Int SiREN Tamper
S15:S03	32015303	320F303	Encrypted Exp	15	Ext SiREN Tamper	S15 Ext SiREN Tamper
S15:S04	30115304	301F304	Encrypted Exp	15	AC fail	S15 AC fail
S15:S05	30215305	302F305	Encrypted Exp	15	Low Battery	S15 Low Battery
S15:S06	30015306	300F306	Encrypted Exp	15	LAN Fuse	S15 LAN Fuse
S15:S07	30015307	300F307	Encrypted Exp	15	Detector Fuse	S15 Detector Fuse
S15:S08	30915308	309F308	Encrypted Exp	15	Battery Test	S15 Battery Test
S15:S09	14515309	145F309	Encrypted Exp	15	Seismic Tamper	S15 Seismic Tamper
S15:S10	33815310	338F310	Encrypted Exp	15	ELM Low Volts	S15 ELM Low Volts
S15:S11	38015311	380F311	Encrypted Exp	15	ELM Serial Number	S15 ELM Serial Number
S15:S12	38215312	382F312	Encrypted Exp	15	ELM Poll Fail	S15 ELM Poll Fail
S15:S13	38315313	383F313	Encrypted Exp	15	ELM Default Key	S15 ELM Default Key
S15:S14	00015314	000F314	Encrypted Exp	15	ELM Extra	S15 ELM Extra
S15:S15	00015315	000F315	Encrypted Exp	15	ELM Security	S15 ELM Security
S15:S16	14315316	143F316	Encrypted Exp	15	LAN Comms	S15 LAN Comms
S16:Z01	14016301	140G301	Encrypted Exp	16	Z01	S16:Z01
S16:Z02	14016302	140G302	Encrypted Exp	16	Z02	S16:Z02
S16:Z03	14016303	140G303	Encrypted Exp	16	Z03	S16:Z03
S16:Z04	14016304	140G304	Encrypted Exp	16	Z04	S16:Z04
S16:Z05	14016305	140G305	Encrypted Exp	16	Z05	S16:Z05
S16:Z06	14016306	140G306	Encrypted Exp	16	Z06	S16:Z06
S16:Z07	14016307	140G307	Encrypted Exp	16	Z07	S16:Z07
S16:Z08	14016308	140G308	Encrypted Exp	16	Z08	S16:Z08
S16:Z09	14016309	140G309	Encrypted Exp	16	Z09	S16:Z09
S16:Z10	14016310	140G310	Encrypted Exp	16	Z10	S16:Z10
S16:Z11	14016311	140G311	Encrypted Exp	16	Z11	S16:Z11

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S16:Z12	14016312	140G312	Encrypted Exp	16	Z12	S16:Z12
S16:Z13	14016313	140G313	Encrypted Exp	16	Z13	S16:Z13
S16:Z14	14016314	140G314	Encrypted Exp	16	Z14	S16:Z14
S16:Z15	14016315	140G315	Encrypted Exp	16	Z15	S16:Z15
S16:Z16	14016316	140G316	Encrypted Exp	16	Z16	S16:Z16
S16:S01	14516301	145G301	Encrypted Exp	16	Cabinet Tamper	S16 Cabinet Tamper
S16:S02	32016302	320G302	Encrypted Exp	16	Int SiREN Tamper	S16 Int SiREN Tamper
S16:S03	32016303	320G303	Encrypted Exp	16	Ext SiREN Tamper	S16 Ext SiREN Tamper
S16:S04	30116304	301G304	Encrypted Exp	16	AC fail	S16 AC fail
S16:S05	30216305	302G305	Encrypted Exp	16	Low Battery	S16 Low Battery
S16:S06	30016306	300G306	Encrypted Exp	16	LAN Fuse	S16 LAN Fuse
S16:S07	30016307	300G307	Encrypted Exp	16	Detector Fuse	S16 Detector Fuse
S16:S08	30916308	309G308	Encrypted Exp	16	Battery Test	S16 Battery Test
S16:S09	14516309	145G309	Encrypted Exp	16	Seismic Tamper	S16 Seismic Tamper
S16:S10	33816310	338G310	Encrypted Exp	16	ELM Low Volts	S16 ELM Low Volts
S16:S11	38016311	380G311	Encrypted Exp	16	ELM Serial Number	S16 ELM Serial Number
S16:S12	38216312	382G312	Encrypted Exp	16	ELM Poll Fail	S16 ELM Poll Fail
S16:S13	38316313	383G313	Encrypted Exp	16	ELM Default Key	S16 ELM Default Key
S16:S14	00016314	000G314	Encrypted Exp	16	ELM Extra	S16 ELM Extra
S16:S15	00016315	000G315	Encrypted Exp	16	ELM Security	S16 ELM Security
S16:S16	14316316	143G316	Encrypted Exp	16	LAN Comms	S16 LAN Comms
S17:Z01	14017301	140H301	Encrypted Exp	17	Z01	S17:Z01
S17:Z02	14017302	140H302	Encrypted Exp	17	Z02	S17:Z02
S17:Z03	14017303	140H303	Encrypted Exp	17	Z03	S17:Z03
S17:Z04	14017304	140H304	Encrypted Exp	17	Z04	S17:Z04
S17:Z05	14017305	140H305	Encrypted Exp	17	Z05	S17:Z05
S17:Z06	14017306	140H306	Encrypted Exp	17	Z06	S17:Z06
S17:Z07	14017307	140H307	Encrypted Exp	17	Z07	S17:Z07
S17:Z08	14017308	140H308	Encrypted Exp	17	Z08	S17:Z08
S17:Z09	14017309	140H309	Encrypted Exp	17	Z09	S17:Z09
S17:Z10	14017310	140H310	Encrypted Exp	17	Z10	S17:Z10
S17:Z11	14017311	140H311	Encrypted Exp	17	Z11	S17:Z11
S17:Z12	14017312	140H312	Encrypted Exp	17	Z12	S17:Z12
S17:Z13	14017313	140H313	Encrypted Exp	17	Z13	S17:Z13
S17:Z14	14017314	140H314	Encrypted Exp	17	Z14	S17:Z14
S17:Z15	14017315	140H315	Encrypted Exp	17	Z15	S17:Z15
S17:Z16	14017316	140H316	Encrypted Exp	17	Z16	S17:Z16
S17:S01	14517301	145H301	Encrypted Exp	17	Cabinet Tamper	S17 Cabinet Tamper
S17:S02	32017302	320H302	Encrypted Exp	17	Int SiREN Tamper	S17 Int SiREN Tamper
S17:S03	32017303	320H303	Encrypted Exp	17	Ext SiREN Tamper	S17 Ext SiREN Tamper
S17:S04	30117304	301H304	Encrypted Exp	17	AC fail	S17 AC fail
S17:S05	30217305	302H305	Encrypted Exp	17	Low Battery	S17 Low Battery
S17:S06	30017306	300H306	Encrypted Exp	17	LAN Fuse	S17 LAN Fuse
S17:S07	30017307	300H307	Encrypted Exp	17	Detector Fuse	S17 Detector Fuse
S17:S08	30917308	309H308	Encrypted Exp	17	Battery Test	S17 Battery Test
S17:S09	14517309	145H309	Encrypted Exp	17	Seismic Tamper	S17 Seismic Tamper
S17:S10	33817310	338H310	Encrypted Exp	17	ELM Low Volts	S17 ELM Low Volts
S17:S11	38017311	380H311	Encrypted Exp	17	ELM Serial Number	S17 ELM Serial Number
S17:S12	38217312	382H312	Encrypted Exp	17	ELM Poll Fail	S17 ELM Poll Fail
S17:S13	38317313	383H313	Encrypted Exp	17	ELM Default Key	S17 ELM Default Key
S17:S14	00017314	000H314	Encrypted Exp	17	ELM Extra	S17 ELM Extra
S17:S15	00017315	000H315	Encrypted Exp	17	ELM Security	S17 ELM Security
S17:S16	14317316	143H316	Encrypted Exp	17	LAN Comms	S17 LAN Comms
S18:Z01	14018301	140I301	Encrypted Exp	18	Z01	S18:Z01
S18:Z02	14018302	140I302	Encrypted Exp	18	Z02	S18:Z02

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S18:Z03	14018303	140I303	Encrypted Exp	18	Z03	S18:Z03
S18:Z04	14018304	140I304	Encrypted Exp	18	Z04	S18:Z04
S18:Z05	14018305	140I305	Encrypted Exp	18	Z05	S18:Z05
S18:Z06	14018306	140I306	Encrypted Exp	18	Z06	S18:Z06
S18:Z07	14018307	140I307	Encrypted Exp	18	Z07	S18:Z07
S18:Z08	14018308	140I308	Encrypted Exp	18	Z08	S18:Z08
S18:Z09	14018309	140I309	Encrypted Exp	18	Z09	S18:Z09
S18:Z10	14018310	140I310	Encrypted Exp	18	Z10	S18:Z10
S18:Z11	14018311	140I311	Encrypted Exp	18	Z11	S18:Z11
S18:Z12	14018312	140I312	Encrypted Exp	18	Z12	S18:Z12
S18:Z13	14018313	140I313	Encrypted Exp	18	Z13	S18:Z13
S18:Z14	14018314	140I314	Encrypted Exp	18	Z14	S18:Z14
S18:Z15	14018315	140I315	Encrypted Exp	18	Z15	S18:Z15
S18:Z16	14018316	140I316	Encrypted Exp	18	Z16	S18:Z16
S18:S01	14518301	145I301	Encrypted Exp	18	Cabinet Tamper	S18 Cabinet Tamper
S18:S02	32018302	320I302	Encrypted Exp	18	Int SiREN Tamper	S18 Int SiREN Tamper
S18:S03	32018303	320I303	Encrypted Exp	18	Ext SiREN Tamper	S18 Ext SiREN Tamper
S18:S04	30118304	301I304	Encrypted Exp	18	AC fail	S18 AC fail
S18:S05	30218305	302I305	Encrypted Exp	18	Low Battery	S18 Low Battery
S18:S06	30018306	300I306	Encrypted Exp	18	LAN Fuse	S18 LAN Fuse
S18:S07	30018307	300I307	Encrypted Exp	18	Detector Fuse	S18 Detector Fuse
S18:S08	30918308	309I308	Encrypted Exp	18	Battery Test	S18 Battery Test
S18:S09	14518309	145I309	Encrypted Exp	18	Seismic Tamper	S18 Seismic Tamper
S18:S10	33818310	338I310	Encrypted Exp	18	ELM Low Volts	S18 ELM Low Volts
S18:S11	38018311	380I311	Encrypted Exp	18	ELM Serial Number	S18 ELM Serial Number
S18:S12	38218312	382I312	Encrypted Exp	18	ELM Poll Fail	S18 ELM Poll Fail
S18:S13	38318313	383I313	Encrypted Exp	18	ELM Default Key	S18 ELM Default Key
S18:S14	00018314	000I314	Encrypted Exp	18	ELM Extra	S18 ELM Extra
S18:S15	00018315	000I315	Encrypted Exp	18	ELM Security	S18 ELM Security
S18:S16	14318316	143I316	Encrypted Exp	18	LAN Comms	S18 LAN Comms
S19:Z01	14019301	140J301	Encrypted Exp	19	Z01	S19:Z01
S19:Z02	14019302	140J302	Encrypted Exp	19	Z02	S19:Z02
S19:Z03	14019303	140J303	Encrypted Exp	19	Z03	S19:Z03
S19:Z04	14019304	140J304	Encrypted Exp	19	Z04	S19:Z04
S19:Z05	14019305	140J305	Encrypted Exp	19	Z05	S19:Z05
S19:Z06	14019306	140J306	Encrypted Exp	19	Z06	S19:Z06
S19:Z07	14019307	140J307	Encrypted Exp	19	Z07	S19:Z07
S19:Z08	14019308	140J308	Encrypted Exp	19	Z08	S19:Z08
S19:Z09	14019309	140J309	Encrypted Exp	19	Z09	S19:Z09
S19:Z10	14019310	140J310	Encrypted Exp	19	Z10	S19:Z10
S19:Z11	14019311	140J311	Encrypted Exp	19	Z11	S19:Z11
S19:Z12	14019312	140J312	Encrypted Exp	19	Z12	S19:Z12
S19:Z13	14019313	140J313	Encrypted Exp	19	Z13	S19:Z13
S19:Z14	14019314	140J314	Encrypted Exp	19	Z14	S19:Z14
S19:Z15	14019315	140J315	Encrypted Exp	19	Z15	S19:Z15
S19:Z16	14019316	140J316	Encrypted Exp	19	Z16	S19:Z16
S19:S01	14519301	145J301	Encrypted Exp	19	Cabinet Tamper	S19 Cabinet Tamper
S19:S02	32019302	320J302	Encrypted Exp	19	Int SiREN Tamper	S19 Int SiREN Tamper
S19:S03	32019303	320J303	Encrypted Exp	19	Ext SiREN Tamper	S19 Ext SiREN Tamper
S19:S04	30119304	301J304	Encrypted Exp	19	AC fail	S19 AC fail
S19:S05	30219305	302J305	Encrypted Exp	19	Low Battery	S19 Low Battery
S19:S06	30019306	300J306	Encrypted Exp	19	LAN Fuse	S19 LAN Fuse
S19:S07	30019307	300J307	Encrypted Exp	19	Detector Fuse	S19 Detector Fuse
S19:S08	30919308	309J308	Encrypted Exp	19	Battery Test	S19 Battery Test
S19:S09	14519309	145J309	Encrypted Exp	19	Seismic Tamper	S19 Seismic Tamper

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
S19:S10	33819310	338J310	Encrypted Exp	19	ELM Low Volts	S19 ELM Low Volts
S19:S11	38019311	380J311	Encrypted Exp	19	ELM Serial Number	S19 ELM Serial Number
S19:S12	38219312	382J312	Encrypted Exp	19	ELM Poll Fail	S19 ELM Poll Fail
S19:S13	38319313	383J313	Encrypted Exp	19	ELM Default Key	S19 ELM Default Key
S19:S14	00019314	000J314	Encrypted Exp	19	ELM Extra	S19 ELM Extra
S19:S15	00019315	000J315	Encrypted Exp	19	ELM Security	S19 ELM Security
S19:S16	14319316	143J316	Encrypted Exp	19	LAN Comms	S19 LAN Comms
S20:Z01	14020301	140K301	Encrypted Exp	20	Z01	S20:Z01
S20:Z02	14020302	140K302	Encrypted Exp	20	Z02	S20:Z02
S20:Z03	14020303	140K303	Encrypted Exp	20	Z03	S20:Z03
S20:Z04	14020304	140K304	Encrypted Exp	20	Z04	S20:Z04
S20:Z05	14020305	140K305	Encrypted Exp	20	Z05	S20:Z05
S20:Z06	14020306	140K306	Encrypted Exp	20	Z06	S20:Z06
S20:Z07	14020307	140K307	Encrypted Exp	20	Z07	S20:Z07
S20:Z08	14020308	140K308	Encrypted Exp	20	Z08	S20:Z08
S20:Z09	14020309	140K309	Encrypted Exp	20	Z09	S20:Z09
S20:Z10	14020310	140K310	Encrypted Exp	20	Z10	S20:Z10
S20:Z11	14020311	140K311	Encrypted Exp	20	Z11	S20:Z11
S20:Z12	14020312	140K312	Encrypted Exp	20	Z12	S20:Z12
S20:Z13	14020313	140K313	Encrypted Exp	20	Z13	S20:Z13
S20:Z14	14020314	140K314	Encrypted Exp	20	Z14	S20:Z14
S20:Z15	14020315	140K315	Encrypted Exp	20	Z15	S20:Z15
S20:Z16	14020316	140K316	Encrypted Exp	20	Z16	S20:Z16
S20:S01	14520301	145K301	Encrypted Exp	20	Cabinet Tamper	S20 Cabinet Tamper
S20:S02	32020302	320K302	Encrypted Exp	20	Int SiREN Tamper	S20 Int SiREN Tamper
S20:S03	32020303	320K303	Encrypted Exp	20	Ext SiREN Tamper	S20 Ext SiREN Tamper
S20:S04	30120304	301K304	Encrypted Exp	20	AC fail	S20 AC fail
S20:S05	30220305	302K305	Encrypted Exp	20	Low Battery	S20 Low Battery
S20:S06	30020306	300K306	Encrypted Exp	20	LAN Fuse	S20 LAN Fuse
S20:S07	30020307	300K307	Encrypted Exp	20	Detector Fuse	S20 Detector Fuse
S20:S08	30920308	309K308	Encrypted Exp	20	Battery Test	S20 Battery Test
S20:S09	14520309	145K309	Encrypted Exp	20	Seismic Tamper	S20 Seismic Tamper
S20:S10	33820310	338K310	Encrypted Exp	20	ELM Low Volts	S20 ELM Low Volts
S20:S11	38020311	380K311	Encrypted Exp	20	ELM Serial Number	S20 ELM Serial Number
S20:S12	38220312	382K312	Encrypted Exp	20	ELM Poll Fail	S20 ELM Poll Fail
S20:S13	38320313	383K313	Encrypted Exp	20	ELM Default Key	S20 ELM Default Key
S20:S14	00020314	000K314	Encrypted Exp	20	ELM Extra	S20 ELM Extra
S20:S15	00020315	000K315	Encrypted Exp	20	ELM Security	S20 ELM Security
S20:S16	14320316	143K316	Encrypted Exp	20	LAN Comms	S20 LAN Comms
S21:Z01	14021301	140L301	Encrypted Exp	21	Z01	S21:Z01
S21:Z02	14021302	140L302	Encrypted Exp	21	Z02	S21:Z02
S21:Z03	14021303	140L303	Encrypted Exp	21	Z03	S21:Z03
S21:Z04	14021304	140L304	Encrypted Exp	21	Z04	S21:Z04
S21:Z05	14021305	140L305	Encrypted Exp	21	Z05	S21:Z05
S21:Z06	14021306	140L306	Encrypted Exp	21	Z06	S21:Z06
S21:Z07	14021307	140L307	Encrypted Exp	21	Z07	S21:Z07
S21:Z08	14021308	140L308	Encrypted Exp	21	Z08	S21:Z08
S21:Z09	14021309	140L309	Encrypted Exp	21	Z09	S21:Z09
S21:Z10	14021310	140L310	Encrypted Exp	21	Z10	S21:Z10
S21:Z11	14021311	140L311	Encrypted Exp	21	Z11	S21:Z11
S21:Z12	14021312	140L312	Encrypted Exp	21	Z12	S21:Z12
S21:Z13	14021313	140L313	Encrypted Exp	21	Z13	S21:Z13
S21:Z14	14021314	140L314	Encrypted Exp	21	Z14	S21:Z14
S21:Z15	14021315	140L315	Encrypted Exp	21	Z15	S21:Z15
S21:Z16	14021316	140L316	Encrypted Exp	21	Z16	S21:Z16

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S21:S01	14521301	145L301	Encrypted Exp	21	Cabinet Tamper	S21 Cabinet Tamper
S21:S02	32021302	320L302	Encrypted Exp	21	Int SiREN Tamper	S21 Int SiREN Tamper
S21:S03	32021303	320L303	Encrypted Exp	21	Ext SiREN Tamper	S21 Ext SiREN Tamper
S21:S04	30121304	301L304	Encrypted Exp	21	AC fail	S21 AC fail
S21:S05	30221305	302L305	Encrypted Exp	21	Low Battery	S21 Low Battery
S21:S06	30021306	300L306	Encrypted Exp	21	LAN Fuse	S21 LAN Fuse
S21:S07	30021307	300L307	Encrypted Exp	21	Detector Fuse	S21 Detector Fuse
S21:S08	30921308	309L308	Encrypted Exp	21	Battery Test	S21 Battery Test
S21:S09	14521309	145L309	Encrypted Exp	21	Seismic Tamper	S21 Seismic Tamper
S21:S10	33821310	338L310	Encrypted Exp	21	ELM Low Volts	S21 ELM Low Volts
S21:S11	38021311	380L311	Encrypted Exp	21	ELM Serial Number	S21 ELM Serial Number
S21:S12	38221312	382L312	Encrypted Exp	21	ELM Poll Fail	S21 ELM Poll Fail
S21:S13	38321313	383L313	Encrypted Exp	21	ELM Default Key	S21 ELM Default Key
S21:S14	00021314	000L314	Encrypted Exp	21	ELM Extra	S21 ELM Extra
S21:S15	00021315	000L315	Encrypted Exp	21	ELM Security	S21 ELM Security
S21:S16	14321316	143L316	Encrypted Exp	21	LAN Comms	S21 LAN Comms
S22:Z01	14022301	140M301	Encrypted Exp	22	Z01	S22:Z01
S22:Z02	14022302	140M302	Encrypted Exp	22	Z02	S22:Z02
S22:Z03	14022303	140M303	Encrypted Exp	22	Z03	S22:Z03
S22:Z04	14022304	140M304	Encrypted Exp	22	Z04	S22:Z04
S22:Z05	14022305	140M305	Encrypted Exp	22	Z05	S22:Z05
S22:Z06	14022306	140M306	Encrypted Exp	22	Z06	S22:Z06
S22:Z07	14022307	140M307	Encrypted Exp	22	Z07	S22:Z07
S22:Z08	14022308	140M308	Encrypted Exp	22	Z08	S22:Z08
S22:Z09	14022309	140M309	Encrypted Exp	22	Z09	S22:Z09
S22:Z10	14022310	140M310	Encrypted Exp	22	Z10	S22:Z10
S22:Z11	14022311	140M311	Encrypted Exp	22	Z11	S22:Z11
S22:Z12	14022312	140M312	Encrypted Exp	22	Z12	S22:Z12
S22:Z13	14022313	140M313	Encrypted Exp	22	Z13	S22:Z13
S22:Z14	14022314	140M314	Encrypted Exp	22	Z14	S22:Z14
S22:Z15	14022315	140M315	Encrypted Exp	22	Z15	S22:Z15
S22:Z16	14022316	140M316	Encrypted Exp	22	Z16	S22:Z16
S22:S01	14522301	145M301	Encrypted Exp	22	Cabinet Tamper	S22 Cabinet Tamper
S22:S02	32022302	320M302	Encrypted Exp	22	Int SiREN Tamper	S22 Int SiREN Tamper
S22:S03	32022303	320M303	Encrypted Exp	22	Ext SiREN Tamper	S22 Ext SiREN Tamper
S22:S04	30122304	301M304	Encrypted Exp	22	AC fail	S22 AC fail
S22:S05	30222305	302M305	Encrypted Exp	22	Low Battery	S22 Low Battery
S22:S06	30022306	300M306	Encrypted Exp	22	LAN Fuse	S22 LAN Fuse
S22:S07	30022307	300M307	Encrypted Exp	22	Detector Fuse	S22 Detector Fuse
S22:S08	30922308	309M308	Encrypted Exp	22	Battery Test	S22 Battery Test
S22:S09	14522309	145M309	Encrypted Exp	22	Seismic Tamper	S22 Seismic Tamper
S22:S10	33822310	338M310	Encrypted Exp	22	ELM Low Volts	S22 ELM Low Volts
S22:S11	38022311	380M311	Encrypted Exp	22	ELM Serial Number	S22 ELM Serial Number
S22:S12	38222312	382M312	Encrypted Exp	22	ELM Poll Fail	S22 ELM Poll Fail
S22:S13	38322313	383M313	Encrypted Exp	22	ELM Default Key	S22 ELM Default Key
S22:S14	00022314	000M314	Encrypted Exp	22	ELM Extra	S22 ELM Extra
S22:S15	00022315	000M315	Encrypted Exp	22	ELM Security	S22 ELM Security
S22:S16	14322316	143M316	Encrypted Exp	22	LAN Comms	S22 LAN Comms
S23:Z01	14023301	140N301	Encrypted Exp	23	Z01	S23:Z01
S23:Z02	14023302	140N302	Encrypted Exp	23	Z02	S23:Z02
S23:Z03	14023303	140N303	Encrypted Exp	23	Z03	S23:Z03
S23:Z04	14023304	140N304	Encrypted Exp	23	Z04	S23:Z04
S23:Z05	14023305	140N305	Encrypted Exp	23	Z05	S23:Z05
S23:Z06	14023306	140N306	Encrypted Exp	23	Z06	S23:Z06
S23:Z07	14023307	140N307	Encrypted Exp	23	Z07	S23:Z07

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S23:Z08	14023308	140N308	Encrypted Exp	23	Z08	S23:Z08
S23:Z09	14023309	140N309	Encrypted Exp	23	Z09	S23:Z09
S23:Z10	14023310	140N310	Encrypted Exp	23	Z10	S23:Z10
S23:Z11	14023311	140N311	Encrypted Exp	23	Z11	S23:Z11
S23:Z12	14023312	140N312	Encrypted Exp	23	Z12	S23:Z12
S23:Z13	14023313	140N313	Encrypted Exp	23	Z13	S23:Z13
S23:Z14	14023314	140N314	Encrypted Exp	23	Z14	S23:Z14
S23:Z15	14023315	140N315	Encrypted Exp	23	Z15	S23:Z15
S23:Z16	14023316	140N316	Encrypted Exp	23	Z16	S23:Z16
S23:S01	14523301	145N301	Encrypted Exp	23	Cabinet Tamper	S23 Cabinet Tamper
S23:S02	32023302	320N302	Encrypted Exp	23	Int SiREN Tamper	S23 Int SiREN Tamper
S23:S03	32023303	320N303	Encrypted Exp	23	Ext SiREN Tamper	S23 Ext SiREN Tamper
S23:S04	30123304	301N304	Encrypted Exp	23	AC fail	S23 AC fail
S23:S05	30223305	302N305	Encrypted Exp	23	Low Battery	S23 Low Battery
S23:S06	30023306	300N306	Encrypted Exp	23	LAN Fuse	S23 LAN Fuse
S23:S07	30023307	300N307	Encrypted Exp	23	Detector Fuse	S23 Detector Fuse
S23:S08	30923308	309N308	Encrypted Exp	23	Battery Test	S23 Battery Test
S23:S09	14523309	145N309	Encrypted Exp	23	Seismic Tamper	S23 Seismic Tamper
S23:S10	33823310	338N310	Encrypted Exp	23	ELM Low Volts	S23 ELM Low Volts
S23:S11	38023311	380N311	Encrypted Exp	23	ELM Serial Number	S23 ELM Serial Number
S23:S12	38223312	382N312	Encrypted Exp	23	ELM Poll Fail	S23 ELM Poll Fail
S23:S13	38323313	383N313	Encrypted Exp	23	ELM Default Key	S23 ELM Default Key
S23:S14	00023314	000N314	Encrypted Exp	23	ELM Extra	S23 ELM Extra
S23:S15	00023315	000N315	Encrypted Exp	23	ELM Security	S23 ELM Security
S23:S16	14323316	143N316	Encrypted Exp	23	LAN Comms	S23 LAN Comms
S24:Z01	14024301	140O301	Encrypted Exp	24	Z01	S24:Z01
S24:Z02	14024302	140O302	Encrypted Exp	24	Z02	S24:Z02
S24:Z03	14024303	140O303	Encrypted Exp	24	Z03	S24:Z03
S24:Z04	14024304	140O304	Encrypted Exp	24	Z04	S24:Z04
S24:Z05	14024305	140O305	Encrypted Exp	24	Z05	S24:Z05
S24:Z06	14024306	140O306	Encrypted Exp	24	Z06	S24:Z06
S24:Z07	14024307	140O307	Encrypted Exp	24	Z07	S24:Z07
S24:Z08	14024308	140O308	Encrypted Exp	24	Z08	S24:Z08
S24:Z09	14024309	140O309	Encrypted Exp	24	Z09	S24:Z09
S24:Z10	14024310	140O310	Encrypted Exp	24	Z10	S24:Z10
S24:Z11	14024311	140O311	Encrypted Exp	24	Z11	S24:Z11
S24:Z12	14024312	140O312	Encrypted Exp	24	Z12	S24:Z12
S24:Z13	14024313	140O313	Encrypted Exp	24	Z13	S24:Z13
S24:Z14	14024314	140O314	Encrypted Exp	24	Z14	S24:Z14
S24:Z15	14024315	140O315	Encrypted Exp	24	Z15	S24:Z15
S24:Z16	14024316	140O316	Encrypted Exp	24	Z16	S24:Z16
S24:S01	14524301	145O301	Encrypted Exp	24	Cabinet Tamper	S24 Cabinet Tamper
S24:S02	32024302	320O302	Encrypted Exp	24	Int SiREN Tamper	S24 Int SiREN Tamper
S24:S03	32024303	320O303	Encrypted Exp	24	Ext SiREN Tamper	S24 Ext SiREN Tamper
S24:S04	30124304	301O304	Encrypted Exp	24	AC fail	S24 AC fail
S24:S05	30224305	302O305	Encrypted Exp	24	Low Battery	S24 Low Battery
S24:S06	30024306	300O306	Encrypted Exp	24	LAN Fuse	S24 LAN Fuse
S24:S07	30024307	300O307	Encrypted Exp	24	Detector Fuse	S24 Detector Fuse
S24:S08	30924308	309O308	Encrypted Exp	24	Battery Test	S24 Battery Test
S24:S09	14524309	145O309	Encrypted Exp	24	Seismic Tamper	S24 Seismic Tamper
S24:S10	33824310	338O310	Encrypted Exp	24	ELM Low Volts	S24 ELM Low Volts
S24:S11	38024311	380O311	Encrypted Exp	24	ELM Serial Number	S24 ELM Serial Number
S24:S12	38224312	382O312	Encrypted Exp	24	ELM Poll Fail	S24 ELM Poll Fail
S24:S13	38324313	383O313	Encrypted Exp	24	ELM Default Key	S24 ELM Default Key
S24:S14	00024314	000O314	Encrypted Exp	24	ELM Extra	S24 ELM Extra

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S24:S15	00024315	000O315	Encrypted Exp	24	ELM Security	S24 ELM Security
S24:S16	14324316	143O316	Encrypted Exp	24	LAN Comms	S24 LAN Comms
S25:Z01	14025301	140P301	Encrypted Exp	25	Z01	S25:Z01
S25:Z02	14025302	140P302	Encrypted Exp	25	Z02	S25:Z02
S25:Z03	14025303	140P303	Encrypted Exp	25	Z03	S25:Z03
S25:Z04	14025304	140P304	Encrypted Exp	25	Z04	S25:Z04
S25:Z05	14025305	140P305	Encrypted Exp	25	Z05	S25:Z05
S25:Z06	14025306	140P306	Encrypted Exp	25	Z06	S25:Z06
S25:Z07	14025307	140P307	Encrypted Exp	25	Z07	S25:Z07
S25:Z08	14025308	140P308	Encrypted Exp	25	Z08	S25:Z08
S25:Z09	14025309	140P309	Encrypted Exp	25	Z09	S25:Z09
S25:Z10	14025310	140P310	Encrypted Exp	25	Z10	S25:Z10
S25:Z11	14025311	140P311	Encrypted Exp	25	Z11	S25:Z11
S25:Z12	14025312	140P312	Encrypted Exp	25	Z12	S25:Z12
S25:Z13	14025313	140P313	Encrypted Exp	25	Z13	S25:Z13
S25:Z14	14025314	140P314	Encrypted Exp	25	Z14	S25:Z14
S25:Z15	14025315	140P315	Encrypted Exp	25	Z15	S25:Z15
S25:Z16	14025316	140P316	Encrypted Exp	25	Z16	S25:Z16
S25:S01	14525301	145P301	Encrypted Exp	25	Cabinet Tamper	S25 Cabinet Tamper
S25:S02	32025302	320P302	Encrypted Exp	25	Int SiREN Tamper	S25 Int SiREN Tamper
S25:S03	32025303	320P303	Encrypted Exp	25	Ext SiREN Tamper	S25 Ext SiREN Tamper
S25:S04	30125304	301P304	Encrypted Exp	25	AC fail	S25 AC fail
S25:S05	30225305	302P305	Encrypted Exp	25	Low Battery	S25 Low Battery
S25:S06	30025306	300P306	Encrypted Exp	25	LAN Fuse	S25 LAN Fuse
S25:S07	30025307	300P307	Encrypted Exp	25	Detector Fuse	S25 Detector Fuse
S25:S08	30925308	309P308	Encrypted Exp	25	Battery Test	S25 Battery Test
S25:S09	14525309	145P309	Encrypted Exp	25	Seismic Tamper	S25 Seismic Tamper
S25:S10	33825310	338P310	Encrypted Exp	25	ELM Low Volts	S25 ELM Low Volts
S25:S11	38025311	380P311	Encrypted Exp	25	ELM Serial Number	S25 ELM Serial Number
S25:S12	38225312	382P312	Encrypted Exp	25	ELM Poll Fail	S25 ELM Poll Fail
S25:S13	38325313	383P313	Encrypted Exp	25	ELM Default Key	S25 ELM Default Key
S25:S14	00025314	000P314	Encrypted Exp	25	ELM Extra	S25 ELM Extra
S25:S15	00025315	000P315	Encrypted Exp	25	ELM Security	S25 ELM Security
S25:S16	14325316	143P316	Encrypted Exp	25	LAN Comms	S25 LAN Comms
S26:Z01	14026301	140Q301	Encrypted Exp	26	Z01	S26:Z01
S26:Z02	14026302	140Q302	Encrypted Exp	26	Z02	S26:Z02
S26:Z03	14026303	140Q303	Encrypted Exp	26	Z03	S26:Z03
S26:Z04	14026304	140Q304	Encrypted Exp	26	Z04	S26:Z04
S26:Z05	14026305	140Q305	Encrypted Exp	26	Z05	S26:Z05
S26:Z06	14026306	140Q306	Encrypted Exp	26	Z06	S26:Z06
S26:Z07	14026307	140Q307	Encrypted Exp	26	Z07	S26:Z07
S26:Z08	14026308	140Q308	Encrypted Exp	26	Z08	S26:Z08
S26:Z09	14026309	140Q309	Encrypted Exp	26	Z09	S26:Z09
S26:Z10	14026310	140Q310	Encrypted Exp	26	Z10	S26:Z10
S26:Z11	14026311	140Q311	Encrypted Exp	26	Z11	S26:Z11
S26:Z12	14026312	140Q312	Encrypted Exp	26	Z12	S26:Z12
S26:Z13	14026313	140Q313	Encrypted Exp	26	Z13	S26:Z13
S26:Z14	14026314	140Q314	Encrypted Exp	26	Z14	S26:Z14
S26:Z15	14026315	140Q315	Encrypted Exp	26	Z15	S26:Z15
S26:Z16	14026316	140Q316	Encrypted Exp	26	Z16	S26:Z16
S26:S01	14526301	145Q301	Encrypted Exp	26	Cabinet Tamper	S26 Cabinet Tamper
S26:S02	32026302	320Q302	Encrypted Exp	26	Int SiREN Tamper	S26 Int SiREN Tamper
S26:S03	32026303	320Q303	Encrypted Exp	26	Ext SiREN Tamper	S26 Ext SiREN Tamper
S26:S04	30126304	301Q304	Encrypted Exp	26	AC fail	S26 AC fail
S26:S05	30226305	302Q305	Encrypted Exp	26	Low Battery	S26 Low Battery

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S26:S06	30026306	300Q306	Encrypted Exp	26	LAN Fuse	S26 LAN Fuse
S26:S07	30026307	300Q307	Encrypted Exp	26	Detector Fuse	S26 Detector Fuse
S26:S08	30926308	309Q308	Encrypted Exp	26	Battery Test	S26 Battery Test
S26:S09	14526309	145Q309	Encrypted Exp	26	Seismic Tamper	S26 Seismic Tamper
S26:S10	33826310	338Q310	Encrypted Exp	26	ELM Low Volts	S26 ELM Low Volts
S26:S11	38026311	380Q311	Encrypted Exp	26	ELM Serial Number	S26 ELM Serial Number
S26:S12	38226312	382Q312	Encrypted Exp	26	ELM Poll Fail	S26 ELM Poll Fail
S26:S13	38326313	383Q313	Encrypted Exp	26	ELM Default Key	S26 ELM Default Key
S26:S14	00026314	000Q314	Encrypted Exp	26	ELM Extra	S26 ELM Extra
S26:S15	00026315	000Q315	Encrypted Exp	26	ELM Security	S26 ELM Security
S26:S16	14326316	143Q316	Encrypted Exp	26	LAN Comms	S26 LAN Comms
S27:Z01	14027301	140R301	Encrypted Exp	27	Z01	S27:Z01
S27:Z02	14027302	140R302	Encrypted Exp	27	Z02	S27:Z02
S27:Z03	14027303	140R303	Encrypted Exp	27	Z03	S27:Z03
S27:Z04	14027304	140R304	Encrypted Exp	27	Z04	S27:Z04
S27:Z05	14027305	140R305	Encrypted Exp	27	Z05	S27:Z05
S27:Z06	14027306	140R306	Encrypted Exp	27	Z06	S27:Z06
S27:Z07	14027307	140R307	Encrypted Exp	27	Z07	S27:Z07
S27:Z08	14027308	140R308	Encrypted Exp	27	Z08	S27:Z08
S27:Z09	14027309	140R309	Encrypted Exp	27	Z09	S27:Z09
S27:Z10	14027310	140R310	Encrypted Exp	27	Z10	S27:Z10
S27:Z11	14027311	140R311	Encrypted Exp	27	Z11	S27:Z11
S27:Z12	14027312	140R312	Encrypted Exp	27	Z12	S27:Z12
S27:Z13	14027313	140R313	Encrypted Exp	27	Z13	S27:Z13
S27:Z14	14027314	140R314	Encrypted Exp	27	Z14	S27:Z14
S27:Z15	14027315	140R315	Encrypted Exp	27	Z15	S27:Z15
S27:Z16	14027316	140R316	Encrypted Exp	27	Z16	S27:Z16
S27:S01	14527301	145R301	Encrypted Exp	27	Cabinet Tamper	S27 Cabinet Tamper
S27:S02	32027302	320R302	Encrypted Exp	27	Int SiREN Tamper	S27 Int SiREN Tamper
S27:S03	32027303	320R303	Encrypted Exp	27	Ext SiREN Tamper	S27 Ext SiREN Tamper
S27:S04	30127304	301R304	Encrypted Exp	27	AC fail	S27 AC fail
S27:S05	30227305	302R305	Encrypted Exp	27	Low Battery	S27 Low Battery
S27:S06	30027306	300R306	Encrypted Exp	27	LAN Fuse	S27 LAN Fuse
S27:S07	30027307	300R307	Encrypted Exp	27	Detector Fuse	S27 Detector Fuse
S27:S08	30927308	309R308	Encrypted Exp	27	Battery Test	S27 Battery Test
S27:S09	14527309	145R309	Encrypted Exp	27	Seismic Tamper	S27 Seismic Tamper
S27:S10	33827310	338R310	Encrypted Exp	27	ELM Low Volts	S27 ELM Low Volts
S27:S11	38027311	380R311	Encrypted Exp	27	ELM Serial Number	S27 ELM Serial Number
S27:S12	38227312	382R312	Encrypted Exp	27	ELM Poll Fail	S27 ELM Poll Fail
S27:S13	38327313	383R313	Encrypted Exp	27	ELM Default Key	S27 ELM Default Key
S27:S14	00027314	000R314	Encrypted Exp	27	ELM Extra	S27 ELM Extra
S27:S15	00027315	000R315	Encrypted Exp	27	ELM Security	S27 ELM Security
S27:S16	14327316	143R316	Encrypted Exp	27	LAN Comms	S27 LAN Comms
S28:Z01	14028301	140S301	Encrypted Exp	28	Z01	S28:Z01
S28:Z02	14028302	140S302	Encrypted Exp	28	Z02	S28:Z02
S28:Z03	14028303	140S303	Encrypted Exp	28	Z03	S28:Z03
S28:Z04	14028304	140S304	Encrypted Exp	28	Z04	S28:Z04
S28:Z05	14028305	140S305	Encrypted Exp	28	Z05	S28:Z05
S28:Z06	14028306	140S306	Encrypted Exp	28	Z06	S28:Z06
S28:Z07	14028307	140S307	Encrypted Exp	28	Z07	S28:Z07
S28:Z08	14028308	140S308	Encrypted Exp	28	Z08	S28:Z08
S28:Z09	14028309	140S309	Encrypted Exp	28	Z09	S28:Z09
S28:Z10	14028310	140S310	Encrypted Exp	28	Z10	S28:Z10
S28:Z11	14028311	140S311	Encrypted Exp	28	Z11	S28:Z11
S28:Z12	14028312	140S312	Encrypted Exp	28	Z12	S28:Z12

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S28:Z13	14028313	140S313	Encrypted Exp	28	Z13	S28:Z13
S28:Z14	14028314	140S314	Encrypted Exp	28	Z14	S28:Z14
S28:Z15	14028315	140S315	Encrypted Exp	28	Z15	S28:Z15
S28:Z16	14028316	140S316	Encrypted Exp	28	Z16	S28:Z16
S28:S01	14528301	145S301	Encrypted Exp	28	Cabinet Tamper	S28 Cabinet Tamper
S28:S02	32028302	320S302	Encrypted Exp	28	Int SiREN Tamper	S28 Int SiREN Tamper
S28:S03	32028303	320S303	Encrypted Exp	28	Ext SiREN Tamper	S28 Ext SiREN Tamper
S28:S04	30128304	301S304	Encrypted Exp	28	AC fail	S28 AC fail
S28:S05	30228305	302S305	Encrypted Exp	28	Low Battery	S28 Low Battery
S28:S06	30028306	300S306	Encrypted Exp	28	LAN Fuse	S28 LAN Fuse
S28:S07	30028307	300S307	Encrypted Exp	28	Detector Fuse	S28 Detector Fuse
S28:S08	30928308	309S308	Encrypted Exp	28	Battery Test	S28 Battery Test
S28:S09	14528309	145S309	Encrypted Exp	28	Seismic Tamper	S28 Seismic Tamper
S28:S10	33828310	338S310	Encrypted Exp	28	ELM Low Volts	S28 ELM Low Volts
S28:S11	38028311	380S311	Encrypted Exp	28	ELM Serial Number	S28 ELM Serial Number
S28:S12	38228312	382S312	Encrypted Exp	28	ELM Poll Fail	S28 ELM Poll Fail
S28:S13	38328313	383S313	Encrypted Exp	28	ELM Default Key	S28 ELM Default Key
S28:S14	00028314	000S314	Encrypted Exp	28	ELM Extra	S28 ELM Extra
S28:S15	00028315	000S315	Encrypted Exp	28	ELM Security	S28 ELM Security
S28:S16	14328316	143S316	Encrypted Exp	28	LAN Comms	S28 LAN Comms
S29:Z01	14029301	140T301	Encrypted Exp	29	Z01	S29:Z01
S29:Z02	14029302	140T302	Encrypted Exp	29	Z02	S29:Z02
S29:Z03	14029303	140T303	Encrypted Exp	29	Z03	S29:Z03
S29:Z04	14029304	140T304	Encrypted Exp	29	Z04	S29:Z04
S29:Z05	14029305	140T305	Encrypted Exp	29	Z05	S29:Z05
S29:Z06	14029306	140T306	Encrypted Exp	29	Z06	S29:Z06
S29:Z07	14029307	140T307	Encrypted Exp	29	Z07	S29:Z07
S29:Z08	14029308	140T308	Encrypted Exp	29	Z08	S29:Z08
S29:Z09	14029309	140T309	Encrypted Exp	29	Z09	S29:Z09
S29:Z10	14029310	140T310	Encrypted Exp	29	Z10	S29:Z10
S29:Z11	14029311	140T311	Encrypted Exp	29	Z11	S29:Z11
S29:Z12	14029312	140T312	Encrypted Exp	29	Z12	S29:Z12
S29:Z13	14029313	140T313	Encrypted Exp	29	Z13	S29:Z13
S29:Z14	14029314	140T314	Encrypted Exp	29	Z14	S29:Z14
S29:Z15	14029315	140T315	Encrypted Exp	29	Z15	S29:Z15
S29:Z16	14029316	140T316	Encrypted Exp	29	Z16	S29:Z16
S29:S01	14529301	145T301	Encrypted Exp	29	Cabinet Tamper	S29 Cabinet Tamper
S29:S02	32029302	320T302	Encrypted Exp	29	Int SiREN Tamper	S29 Int SiREN Tamper
S29:S03	32029303	320T303	Encrypted Exp	29	Ext SiREN Tamper	S29 Ext SiREN Tamper
S29:S04	30129304	301T304	Encrypted Exp	29	AC fail	S29 AC fail
S29:S05	30229305	302T305	Encrypted Exp	29	Low Battery	S29 Low Battery
S29:S06	30029306	300T306	Encrypted Exp	29	LAN Fuse	S29 LAN Fuse
S29:S07	30029307	300T307	Encrypted Exp	29	Detector Fuse	S29 Detector Fuse
S29:S08	30929308	309T308	Encrypted Exp	29	Battery Test	S29 Battery Test
S29:S09	14529309	145T309	Encrypted Exp	29	Seismic Tamper	S29 Seismic Tamper
S29:S10	33829310	338T310	Encrypted Exp	29	ELM Low Volts	S29 ELM Low Volts
S29:S11	38029311	380T311	Encrypted Exp	29	ELM Serial Number	S29 ELM Serial Number
S29:S12	38229312	382T312	Encrypted Exp	29	ELM Poll Fail	S29 ELM Poll Fail
S29:S13	38329313	383T313	Encrypted Exp	29	ELM Default Key	S29 ELM Default Key
S29:S14	00029314	000T314	Encrypted Exp	29	ELM Extra	S29 ELM Extra
S29:S15	00029315	000T315	Encrypted Exp	29	ELM Security	S29 ELM Security
S29:S16	14329316	143T316	Encrypted Exp	29	LAN Comms	S29 LAN Comms
S30:Z01	14030301	140U301	Encrypted Exp	30	Z01	S30:Z01
S30:Z02	14030302	140U302	Encrypted Exp	30	Z02	S30:Z02
S30:Z03	14030303	140U303	Encrypted Exp	30	Z03	S30:Z03

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S30:Z04	14030304	140U304	Encrypted Exp	30	Z04	S30:Z04
S30:Z05	14030305	140U305	Encrypted Exp	30	Z05	S30:Z05
S30:Z06	14030306	140U306	Encrypted Exp	30	Z06	S30:Z06
S30:Z07	14030307	140U307	Encrypted Exp	30	Z07	S30:Z07
S30:Z08	14030308	140U308	Encrypted Exp	30	Z08	S30:Z08
S30:Z09	14030309	140U309	Encrypted Exp	30	Z09	S30:Z09
S30:Z10	14030310	140U310	Encrypted Exp	30	Z10	S30:Z10
S30:Z11	14030311	140U311	Encrypted Exp	30	Z11	S30:Z11
S30:Z12	14030312	140U312	Encrypted Exp	30	Z12	S30:Z12
S30:Z13	03135", 031X'	031X'	Encrypted Exp	30	Z13	S30:Z13
S30:Z14	14030314	140U314	Encrypted Exp	30	Z14	S30:Z14
S30:Z15	14030315	140U315	Encrypted Exp	30	Z15	S30:Z15
S30:Z16	14030316	140U316	Encrypted Exp	30	Z16	S30:Z16
S30:S01	14530301	145U301	Encrypted Exp	30	Cabinet Tamper	S30 Cabinet Tamper
S30:S02	32030302	320U20'	Encrypted Exp	30	Int SiREN Tamper	S30 Int SiREN Tamper
S30:S03	32030303	320U303	Encrypted Exp	30	Ext SiREN Tamper	S30 Ext SiREN Tamper
S30:S04	30130304	301U304	Encrypted Exp	30	AC fail	S30 AC fail
S30:S05	30230305	302U305	Encrypted Exp	30	Low Battery	S30 Low Battery
S30:S06	30030306	300U306	Encrypted Exp	30	LAN Fuse	S30 LAN Fuse
S30:S07	30030307	300U307	Encrypted Exp	30	Detector Fuse	S30 Detector Fuse
S30:S08	3093308E	0930308	Encrypted Exp	30	Battery Test	S30 Battery Test
S30:S09	14530309	145U309	Encrypted Exp	30	Seismic Tamper	S30 Seismic Tamper
S30:S10	33830310	338U310	Encrypted Exp	30	ELM Low Volts	S30 ELM Low Volts
S30:S11	38030311	380U311	Encrypted Exp	30	ELM Serial Number	S30 ELM Serial Number
S30:S12	38230312	382U312	Encrypted Exp	30	ELM Poll Fail	S30 ELM Poll Fail
S30:S13	38330313	383U313	Encrypted Exp	30	ELM Default Key	S30 ELM Default Key
S30:S14	00030314	000U314	Encrypted Exp	30	ELM Extra	S30 ELM Extra
S30:S15	00030315	000U315	Encrypted Exp	30	ELM Security	S30 ELM Security
S30:S16	14330316	143U316	Encrypted Exp	30	LAN Comms	S30 LAN Comms
S31:Z01	14031301	140V301	Encrypted Exp	31	Z01	S31:Z01
S31:Z02	14031302	140V302	Encrypted Exp	31	Z02	S31:Z02
S31:Z03	14031303	140V303	Encrypted Exp	31	Z03	S31:Z03
S31:Z04	14031304	140V304	Encrypted Exp	31	Z04	S31:Z04
S31:Z05	14031305	140V305	Encrypted Exp	31	Z05	S31:Z05
S31:Z06	14031306	140V306	Encrypted Exp	31	Z06	S31:Z06
S31:Z07	14031307	140V307	Encrypted Exp	31	Z07	S31:Z07
S31:Z08	14031308	140V308	Encrypted Exp	31	Z08	S31:Z08
S31:Z09	14031309	140V309	Encrypted Exp	31	Z09	S31:Z09
S31:Z10	14031310	140V310	Encrypted Exp	31	Z10	S31:Z10
S31:Z11	14031311	140V311	Encrypted Exp	31	Z11	S31:Z11
S31:Z12	14031312	140V312	Encrypted Exp	31	Z12	S31:Z12
S31:Z13	14031313	140V313	Encrypted Exp	31	Z13	S31:Z13
S31:Z14	14031314	140V314	Encrypted Exp	31	Z14	S31:Z14
S31:Z15	14031315	140V315	Encrypted Exp	31	Z15	S31:Z15
S31:Z16	14031316	140V316	Encrypted Exp	31	Z16	S31:Z16
S31:S01	14531301	145V301	Encrypted Exp	31	Cabinet Tamper	S31 Cabinet Tamper
S31:S02	32031302	320V302	Encrypted Exp	31	Int SiREN Tamper	S31 Int SiREN Tamper
S31:S03	32031303	320V303	Encrypted Exp	31	Ext SiREN Tamper	S31 Ext SiREN Tamper
S31:S04	30131304	301V304	Encrypted Exp	31	AC fail	S31 AC fail
S31:S05	30231305	302V305	Encrypted Exp	31	Low Battery	S31 Low Battery
S31:S06	30031306	300V306	Encrypted Exp	31	LAN Fuse	S31 LAN Fuse
S31:S07	30031307	300V307	Encrypted Exp	31	Detector Fuse	S31 Detector Fuse
S31:S08	30931308	309V308	Encrypted Exp	31	Battery Test	S31 Battery Test
S31:S09	14531309	145V309	Encrypted Exp	31	Seismic Tamper	S31 Seismic Tamper
S31:S10	33831310	338V310	Encrypted Exp	31	ELM Low Volts	S31 ELM Low Volts

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S31:S11	38031311	380V311	Encrypted Exp	31	ELM Serial Number	S31 ELM Serial Number
S31:S12	38231312	382V312	Encrypted Exp	31	ELM Poll Fail	S31 ELM Poll Fail
S31:S13	38331313	383V313	Encrypted Exp	31	ELM Default Key	S31 ELM Default Key
S31:S14	00031314	000V314	Encrypted Exp	31	ELM Extra	S31 ELM Extra
S31:S15	00031315	000V315	Encrypted Exp	31	ELM Security	S31 ELM Security
S31:S16	14331316	143V316	Encrypted Exp	31	LAN Comms	S31 LAN Comms
S32:Z01	14032301	140W301	Encrypted Exp	32	Z01	S32:Z01
S32:Z02	14032302	140W302	Encrypted Exp	32	Z02	S32:Z02
S32:Z03	14032303	140W303	Encrypted Exp	32	Z03	S32:Z03
S32:Z04	14032304	140W304	Encrypted Exp	32	Z04	S32:Z04
S32:Z05	14032305	140W305	Encrypted Exp	32	Z05	S32:Z05
S32:Z06	14032306	140W306	Encrypted Exp	32	Z06	S32:Z06
S32:Z07	14032307	140W307	Encrypted Exp	32	Z07	S32:Z07
S32:Z08	14032308	140W308	Encrypted Exp	32	Z08	S32:Z08
S32:Z09	14032309	140W309	Encrypted Exp	32	Z09	S32:Z09
S32:Z10	14032310	140W310	Encrypted Exp	32	Z10	S32:Z10
S32:Z11	14032311	140W311	Encrypted Exp	32	Z11	S32:Z11
S32:Z12	14032312	140W312	Encrypted Exp	32	Z12	S32:Z12
S32:Z13	14032313	140W313	Encrypted Exp	32	Z13	S32:Z13
S32:Z14	14032314	140W314	Encrypted Exp	32	Z14	S32:Z14
S32:Z15	14032315	140W315	Encrypted Exp	32	Z15	S32:Z15
S32:Z16	14032316	140W316	Encrypted Exp	32	Z16	S32:Z16
S32:S01	14532301	145W301	Encrypted Exp	32	Cabinet Tamper	S32 Cabinet Tamper
S32:S02	32032302	320W302	Encrypted Exp	32	Int SiREN Tamper	S32 Int SiREN Tamper
S32:S03	32032303	320W303	Encrypted Exp	32	Ext SiREN Tamper	S32 Ext SiREN Tamper
S32:S04	30132304	301W304	Encrypted Exp	32	AC fail	S32 AC fail
S32:S05	30232305	302W305	Encrypted Exp	32	Low Battery	S32 Low Battery
S32:S06	30032306	300W306	Encrypted Exp	32	LAN Fuse	S32 LAN Fuse
S32:S07	30032307	300W307	Encrypted Exp	32	Detector Fuse	S32 Detector Fuse
S32:S08	30932308	309W308	Encrypted Exp	32	Battery Test	S32 Battery Test
S32:S09	14532309	145W309	Encrypted Exp	32	Seismic Tamper	S32 Seismic Tamper
S32:S10	33832310	338W310	Encrypted Exp	32	ELM Low Volts	S32 ELM Low Volts
S32:S11	38032311	380W311	Encrypted Exp	32	ELM Serial Number	S32 ELM Serial Number
S32:S12	38232312	382W312	Encrypted Exp	32	ELM Poll Fail	S32 ELM Poll Fail
S32:S13	38332313	383W313	Encrypted Exp	32	ELM Default Key	S32 ELM Default Key
S32:S14	00032314	000W314	Encrypted Exp	32	ELM Extra	S32 ELM Extra
S32:S15	00032315	000W315	Encrypted Exp	32	ELM Security	S32 ELM Security
S32:S16	14332316	143W316	Encrypted Exp	32	LAN Comms	S32 LAN Comms
S33:Z01	14033301	140X301	Encrypted Exp	33	Z01	S33:Z01
S33:Z02	14033302	140X302	Encrypted Exp	33	Z02	S33:Z02
S33:Z03	14033303	140X303	Encrypted Exp	33	Z03	S33:Z03
S33:Z04	14033304	140X304	Encrypted Exp	33	Z04	S33:Z04
S33:Z05	14033305	140X305	Encrypted Exp	33	Z05	S33:Z05
S33:Z06	14033306	140X306	Encrypted Exp	33	Z06	S33:Z06
S33:Z07	14033307	140X307	Encrypted Exp	33	Z07	S33:Z07
S33:Z08	14033308	140X308	Encrypted Exp	33	Z08	S33:Z08
S33:Z09	14033309	140X309	Encrypted Exp	33	Z09	S33:Z09
S33:Z10	14033310	140X310	Encrypted Exp	33	Z10	S33:Z10
S33:Z11	14033311	140X311	Encrypted Exp	33	Z11	S33:Z11
S33:Z12	14033312	140X312	Encrypted Exp	33	Z12	S33:Z12
S33:Z13	14033313	140X313	Encrypted Exp	33	Z13	S33:Z13
S33:Z14	14033314	140X314	Encrypted Exp	33	Z14	S33:Z14
S33:Z15	14033315	140X315	Encrypted Exp	33	Z15	S33:Z15
S33:Z16	14033316	140X316	Encrypted Exp	33	Z16	S33:Z16
S33:S01	14533301	145X301	Encrypted Exp	33	Cabinet Tamper	S33 Cabinet Tamper

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S33:S02	32033302	320X302	Encrypted Exp	33	Int SiREN Tamper	S33 Int SiREN Tamper
S33:S03	32033303	320X303	Encrypted Exp	33	Ext SiREN Tamper	S33 Ext SiREN Tamper
S33:S04	30133304	301X304	Encrypted Exp	33	AC fail	S33 AC fail
S33:S05	30233305	302X305	Encrypted Exp	33	Low Battery	S33 Low Battery
S33:S06	30033306	300X306	Encrypted Exp	33	LAN Fuse	S33 LAN Fuse
S33:S07	30033307	300X307	Encrypted Exp	33	Detector Fuse	S33 Detector Fuse
S33:S08	30933308	309X308	Encrypted Exp	33	Battery Test	S33 Battery Test
S33:S09	14533309	145X309	Encrypted Exp	33	Seismic Tamper	S33 Seismic Tamper
S33:S10	33833310	338X310	Encrypted Exp	33	ELM Low Volts	S33 ELM Low Volts
S33:S11	38033311	380X311	Encrypted Exp	33	ELM Serial Number	S33 ELM Serial Number
S33:S12	38233312	382X312	Encrypted Exp	33	ELM Poll Fail	S33 ELM Poll Fail
S33:S13	38333313	383X313	Encrypted Exp	33	ELM Default Key	S33 ELM Default Key
S33:S14	00033314	000X314	Encrypted Exp	33	ELM Extra	S33 ELM Extra
S33:S15	00033315	000X315	Encrypted Exp	33	ELM Security	S33 ELM Security
S33:S16	14333316	143X316	Encrypted Exp	33	LAN Comms	S33 LAN Comms
S34:Z01	14034301	140Y301	Encrypted Exp	34	Z01	S34:Z01
S34:Z02	14034302	140Y302	Encrypted Exp	34	Z02	S34:Z02
S34:Z03	14034303	140Y303	Encrypted Exp	34	Z03	S34:Z03
S34:Z04	14034304	140Y304	Encrypted Exp	34	Z04	S34:Z04
S34:Z05	14034305	140Y305	Encrypted Exp	34	Z05	S34:Z05
S34:Z06	14034306	140Y306	Encrypted Exp	34	Z06	S34:Z06
S34:Z07	14034307	140Y307	Encrypted Exp	34	Z07	S34:Z07
S34:Z08	14034308	140Y308	Encrypted Exp	34	Z08	S34:Z08
S34:Z09	14034309	140Y309	Encrypted Exp	34	Z09	S34:Z09
S34:Z10	14034310	140Y310	Encrypted Exp	34	Z10	S34:Z10
S34:Z11	14034311	140Y311	Encrypted Exp	34	Z11	S34:Z11
S34:Z12	14034312	140Y312	Encrypted Exp	34	Z12	S34:Z12
S34:Z13	14034313	140Y313	Encrypted Exp	34	Z13	S34:Z13
S34:Z14	14034314	140Y314	Encrypted Exp	34	Z14	S34:Z14
S34:Z15	14034315	140Y315	Encrypted Exp	34	Z15	S34:Z15
S34:Z16	14034316	140Y316	Encrypted Exp	34	Z16	S34:Z16
S34:S01	14534301	145Y301	Encrypted Exp	34	Cabinet Tamper	S34 Cabinet Tamper
S34:S02	32034302	320Y302	Encrypted Exp	34	Int SiREN Tamper	S34 Int SiREN Tamper
S34:S03	32034303	320Y303	Encrypted Exp	34	Ext SiREN Tamper	S34 Ext SiREN Tamper
S34:S04	30134304	301Y304	Encrypted Exp	34	AC fail	S34 AC fail
S34:S05	30234305	302Y305	Encrypted Exp	34	Low Battery	S34 Low Battery
S34:S06	30034306	300Y306	Encrypted Exp	34	LAN Fuse	S34 LAN Fuse
S34:S07	30034307	300Y307	Encrypted Exp	34	Detector Fuse	S34 Detector Fuse
S34:S08	30934308	309Y308	Encrypted Exp	34	Battery Test	S34 Battery Test
S34:S09	14534309	145Y309	Encrypted Exp	34	Seismic Tamper	S34 Seismic Tamper
S34:S10	33834310	338Y310	Encrypted Exp	34	ELM Low Volts	S34 ELM Low Volts
S34:S11	38034311	380Y311	Encrypted Exp	34	ELM Serial Number	S34 ELM Serial Number
S34:S12	38234312	382Y312	Encrypted Exp	34	ELM Poll Fail	S34 ELM Poll Fail
S34:S13	38334313	383Y313	Encrypted Exp	34	ELM Default Key	S34 ELM Default Key
S34:S14	00034314	000Y314	Encrypted Exp	34	ELM Extra	S34 ELM Extra
S34:S15	00034315	000Y315	Encrypted Exp	34	ELM Security	S34 ELM Security
S34:S16	14334316	143Y316	Encrypted Exp	34	LAN Comms	S34 LAN Comms
S35-S99:Z01	14035301	140Z301	Encrypted Exp	35	Z01	S35-S99:Z01
S35-S99:Z02	14035302	140Z302	Encrypted Exp	35	Z02	S35-S99:Z02
S35-S99:Z03	14035303	140Z303	Encrypted Exp	35	Z03	S35-S99:Z03
S35-S99:Z04	14035304	140Z304	Encrypted Exp	35	Z04	S35-S99:Z04
S35-S99:Z05	14035305	140Z305	Encrypted Exp	35	Z05	S35-S99:Z05
S35-S99:Z06	14035306	140Z306	Encrypted Exp	35	Z06	S35-S99:Z06
S35-S99:Z07	14035307	140Z307	Encrypted Exp	35	Z07	S35-S99:Z07
S35-S99:Z08	14035308	140Z308	Encrypted Exp	35	Z08	S35-S99:Z08

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
S35-S99:Z09	14035309	140Z309	Encrypted Exp	35	Z09	S35-S99:Z09
S35-S99:Z10	14035310	140Z310	Encrypted Exp	35	Z10	S35-S99:Z10
S35-S99:Z11	14035311	140Z311	Encrypted Exp	35	Z11	S35-S99:Z11
S35-S99:Z12	14035312	140Z312	Encrypted Exp	35	Z12	S35-S99:Z12
S35-S99:Z13	14035313	140Z313	Encrypted Exp	35	Z13	S35-S99:Z13
S35-S99:Z14	14035314	140Z314	Encrypted Exp	35	Z14	S35-S99:Z14
S35-S99:Z15	14035315	140Z315	Encrypted Exp	35	Z15	S35-S99:Z15
S35-S99:Z16	14035316	140Z316	Encrypted Exp	35	Z16	S35-S99:Z16
S35-S99:S01	14535301	145Z301	Encrypted Exp	35	Cabinet Tamper	S35-S99 Cabinet Tamper
S35-S99:S02	32035302	320Z302	Encrypted Exp	35	Int SiREN Tamper	S35-S99 Int SiREN Tamper
S35-S99:S03	32035303	320Z303	Encrypted Exp	35	Ext SiREN Tamper	S35-S99 Ext SiREN Tamper
S35-S99:S04	30135304	301Z304	Encrypted Exp	35	AC fail	S35-S99 AC fail
S35-S99:S05	30235305	302Z305	Encrypted Exp	35	Low Battery	S35-S99 Low Battery
S35-S99:S06	30035306	300Z306	Encrypted Exp	35	LAN Fuse	S35-S99 LAN Fuse
S35-S99:S07	30035307	300Z307	Encrypted Exp	35	Detector Fuse	S35-S99 Detector Fuse
S35-S99:S08	30935308	309Z308	Encrypted Exp	35	Battery Test	S35-S99 Battery Test
S35-S99:S09	14535309	145Z309	Encrypted Exp	35	Seismic Tamper	S35-S99 Seismic Tamper
S35-S99:S10	33835310	338Z310	Encrypted Exp	35	ELM Low Volts	S35-S99 ELM Low Volts
S35-S99:S11	38035311	380Z311	Encrypted Exp	35	ELM Serial Number	S35-S99 ELM Serial Number
S35-S99:S12	38235312	382Z312	Encrypted Exp	35	ELM Poll Fail	S35-S99 ELM Poll Fail
S35-S99:S13	38335313	383Z313	Encrypted Exp	35	ELM Default Key	S35-S99 ELM Default Key
S35-S99:S14	00035314	000Z314	Encrypted Exp	35	ELM Extra	S35-S99 ELM Extra
S35-S99:S15	00035315	000Z315	Encrypted Exp	35	ELM Security	S35-S99 ELM Security
S35-S99:S16	14335316	143Z316	Encrypted Exp	35	LAN Comms	S35-S99 LAN Comms
R01:Z01	14001401	1401401	2-Door Reader	1	Door1 Reed	R01 Door1 Reed
R01:Z02	14001402	1401402	2-Door Reader	1	Door2 Reed	R01 Door2 Reed
R01:Z03	14001403	1401403	2-Door Reader	1	Door1 Tongue	R01 Door1 Tongue
R01:Z04	14001404	1401404	2-Door Reader	1	Door2 Tongue	R01 Door2 Tongue
R01:Z05	14001405	1401405	2-Door Reader	1	Door1 REX	R01 Door1 REX
R01:Z06	14001406	1401406	2-Door Reader	1	Door2 REX	R01 Door2 REX
R01:Z07	14001407	1401407	2-Door Reader	1	Door1 REN	R01 Door1 REN
R01:Z08	14001408	1401408	2-Door Reader	1	Door2 REN	R01 Door2 REN
R01:S01	43201401	4321401	2-Door Reader	1	Door1 Fault	R01 Door1 Fault
R01:S02	43201402	4321402	2-Door Reader	1	Door2 Fault	R01 Door2 Fault
R01:S03	42301403	4231403	2-Door Reader	1	Door1 Forced	R01 Door1 Forced
R01:S04	42301404	4231404	2-Door Reader	1	Door2 Forced	R01 Door2 Forced
R01:S05	42601405	4261405	2-Door Reader	1	Door1 DOTL	R01 Door1 DOTL
R01:S06	42601406	4261406	2-Door Reader	1	Door2 DOTL	R01 Door2 DOTL
R01:S07	14501407	1451407	2-Door Reader	1	Cabinet Tamper	R01 Cabinet Tamper
R01:S08	30101408	3011408	2-Door Reader	1	AC fail	R01 AC fail
R01:S09	30201409	3021409	2-Door Reader	1	Low Battery	R01 Low Battery
R01:S10	30001410	3001410	2-Door Reader	1	LAN Fuse	R01 LAN Fuse
R01:S11	30001411	3001411	2-Door Reader	1	Detector Fuse	R01 Detector Fuse
R01:S12	30001412	3001412	2-Door Reader	1	Low Volts	R01 Low Volts
R01:S13	30001413	3001413	2-Door Reader	1	PS Fail	R01 PS Fail
R01:S14	30901414	3091414	2-Door Reader	1	Battery Test	R01 Battery Test
R01:S15	15001415	1501415	2-Door Reader	1	Rdr1 Invalid	R01 Rdr1 Invalid
R01:S16	15001416	1501416	2-Door Reader	1	Rdr2 Invalid	R01 Rdr2 Invalid
R01:S17	12201417	1221417	2-Door Reader	1	Rdr1 Duress	R01 Rdr1 Duress
R01:S18	12201418	1221418	2-Door Reader	1	Rdr2 Duress	R01 Rdr2 Duress
R01:S19	33001419	3301419	2-Door Reader	1	Rdr1 Fault	R01 Rdr1 Fault
R01:S20	33001420	3301420	2-Door Reader	1	Rdr2 Fault	R01 Rdr2 Fault
R01:S21	14301421	1431421	2-Door Reader	1	LAN Comms	R01 LAN Comms
R01:S22	15001422	1501422	2-Door Reader	1	Spare1	R01 Spare1
R01:S23	15001423	1501423	2-Door Reader	1	Spare2	R01 Spare2
R02:Z01	14002401	1402401	2-Door Reader	2	Door1 Reed	R02 Door1 Reed
R02:Z02	14002402	1402402	2-Door Reader	2	Door2 Reed	R02 Door2 Reed

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R02:Z03	14002403	1402403	2-Door Reader	2	Door1 Tongue	R02 Door1 Tongue
R02:Z04	14002404	1402404	2-Door Reader	2	Door2 Tongue	R02 Door2 Tongue
R02:Z05	14002405	1402405	2-Door Reader	2	Door1 REX	R02 Door1 REX
R02:Z06	14002406	1402406	2-Door Reader	2	Door2 REX	R02 Door2 REX
R02:Z07	14002407	1402407	2-Door Reader	2	Door1 REN	R02 Door1 REN
R02:Z08	14002408	1402408	2-Door Reader	2	Door2 REN	R02 Door2 REN
R02:S01	43202401	4322401	2-Door Reader	2	Door1 Fault	R02 Door1 Fault
R02:S02	43202402	4322402	2-Door Reader	2	Door2 Fault	R02 Door2 Fault
R02:S03	42302403	4232403	2-Door Reader	2	Door1 Forced	R02 Door1 Forced
R02:S04	42302404	4232404	2-Door Reader	2	Door2 Forced	R02 Door2 Forced
R02:S05	42602405	4262405	2-Door Reader	2	Door1 DOTL	R02 Door1 DOTL
R02:S06	42602406	4262406	2-Door Reader	2	Door2 DOTL	R02 Door2 DOTL
R02:S07	14502407	1452407	2-Door Reader	2	Cabinet Tamper	R02 Cabinet Tamper
R02:S08	30102408	3012408	2-Door Reader	2	AC fail	R02 AC fail
R02:S09	30202409	3022409	2-Door Reader	2	Low Battery	R02 Low Battery
R02:S10	30002410	3002410	2-Door Reader	2	LAN Fuse	R02 LAN Fuse
R02:S11	30002411	3002411	2-Door Reader	2	Detector Fuse	R02 Detector Fuse
R02:S12	30002412	3002412	2-Door Reader	2	Low Volts	R02 Low Volts
R02:S13	30002413	3002413	2-Door Reader	2	PS Fail	R02 PS Fail
R02:S14	30902414	3092414	2-Door Reader	2	Battery Test	R02 Battery Test
R02:S15	15002415	1502415	2-Door Reader	2	Rdr1 Invalid	R02 Rdr1 Invalid
R02:S16	15002416	1502416	2-Door Reader	2	Rdr2 Invalid	R02 Rdr2 Invalid
R02:S17	12202417	1222417	2-Door Reader	2	Rdr1 Duress	R02 Rdr1 Duress
R02:S18	12202418	1222418	2-Door Reader	2	Rdr2 Duress	R02 Rdr2 Duress
R02:S19	33002419	3302419	2-Door Reader	2	Rdr1 Fault	R02 Rdr1 Fault
R02:S20	33002420	3302420	2-Door Reader	2	Rdr2 Fault	R02 Rdr2 Fault
R02:S21	14302421	1432421	2-Door Reader	2	LAN Comms	R02 LAN Comms
R02:S22	15002422	1502422	2-Door Reader	2	Spare1	R02 Spare1
R02:S23	15002423	1502423	2-Door Reader	2	Spare2	R02 Spare2
R03:Z01	14003401	1403401	2-Door Reader	3	Door1 Reed	R03 Door1 Reed
R03:Z02	14003402	1403402	2-Door Reader	3	Door2 Reed	R03 Door2 Reed
R03:Z03	14003403	1403403	2-Door Reader	3	Door1 Tongue	R03 Door1 Tongue
R03:Z04	14003404	1403404	2-Door Reader	3	Door2 Tongue	R03 Door2 Tongue
R03:Z05	14003405	1403405	2-Door Reader	3	Door1 REX	R03 Door1 REX
R03:Z06	14003406	1403406	2-Door Reader	3	Door2 REX	R03 Door2 REX
R03:Z07	14003407	1403407	2-Door Reader	3	Door1 REN	R03 Door1 REN
R03:Z08	14003408	1403408	2-Door Reader	3	Door2 REN	R03 Door2 REN
R03:S01	43203401	4323401	2-Door Reader	3	Door1 Fault	R03 Door1 Fault
R03:S02	43203402	4323402	2-Door Reader	3	Door2 Fault	R03 Door2 Fault
R03:S03	42303403	4233403	2-Door Reader	3	Door1 Forced	R03 Door1 Forced
R03:S04	42303404	4233404	2-Door Reader	3	Door2 Forced	R03 Door2 Forced
R03:S05	42603405	4263405	2-Door Reader	3	Door1 DOTL	R03 Door1 DOTL
R03:S06	42603406	4263406	2-Door Reader	3	Door2 DOTL	R03 Door2 DOTL
R03:S07	14503407	1453407	2-Door Reader	3	Cabinet Tamper	R03 Cabinet Tamper
R03:S08	30103408	3013408	2-Door Reader	3	AC fail	R03 AC fail
R03:S09	30203409	3023409	2-Door Reader	3	Low Battery	R03 Low Battery
R03:S10	30003410	3003410	2-Door Reader	3	LAN Fuse	R03 LAN Fuse
R03:S11	30003411	3003411	2-Door Reader	3	Detector Fuse	R03 Detector Fuse
R03:S12	30003412	3003412	2-Door Reader	3	Low Volts	R03 Low Volts
R03:S13	30003413	3003413	2-Door Reader	3	PS Fail	R03 PS Fail
R03:S14	30903414	3093414	2-Door Reader	3	Battery Test	R03 Battery Test
R03:S15	15003415	1503415	2-Door Reader	3	Rdr1 Invalid	R03 Rdr1 Invalid
R03:S16	15003416	1503416	2-Door Reader	3	Rdr2 Invalid	R03 Rdr2 Invalid
R03:S17	12203417	1223417	2-Door Reader	3	Rdr1 Duress	R03 Rdr1 Duress
R03:S18	12203418	1223418	2-Door Reader	3	Rdr2 Duress	R03 Rdr2 Duress
R03:S19	33003419	3303419	2-Door Reader	3	Rdr1 Fault	R03 Rdr1 Fault
R03:S20	33003420	3303420	2-Door Reader	3	Rdr2 Fault	R03 Rdr2 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R03:S21	14303421	1433421	2-Door Reader	3	LAN Comms	R03 LAN Comms
R03:S22	15003422	1503422	2-Door Reader	3	Spare1	R03 Spare1
R03:S23	15003423	1503423	2-Door Reader	3	Spare2	R03 Spare2
R04:Z01	14004401	1404401	2-Door Reader	4	Door1 Reed	R04 Door1 Reed
R04:Z02	14004402	1404402	2-Door Reader	4	Door2 Reed	R04 Door2 Reed
R04:Z03	14004403	1404403	2-Door Reader	4	Door1 Tongue	R04 Door1 Tongue
R04:Z04	14004404	1404404	2-Door Reader	4	Door2 Tongue	R04 Door2 Tongue
R04:Z05	14004405	1404405	2-Door Reader	4	Door1 REX	R04 Door1 REX
R04:Z06	14004406	1404406	2-Door Reader	4	Door2 REX	R04 Door2 REX
R04:Z07	14004407	1404407	2-Door Reader	4	Door1 REN	R04 Door1 REN
R04:Z08	14004408	1404408	2-Door Reader	4	Door2 REN	R04 Door2 REN
R04:S01	43204401	4324401	2-Door Reader	4	Door1 Fault	R04 Door1 Fault
R04:S02	43204402	4324402	2-Door Reader	4	Door2 Fault	R04 Door2 Fault
R04:S03	42304403	4234403	2-Door Reader	4	Door1 Forced	R04 Door1 Forced
R04:S04	42304404	4234404	2-Door Reader	4	Door2 Forced	R04 Door2 Forced
R04:S05	42604405	4264405	2-Door Reader	4	Door1 DOTL	R04 Door1 DOTL
R04:S06	42604406	4264406	2-Door Reader	4	Door2 DOTL	R04 Door2 DOTL
R04:S07	14504407	1454407	2-Door Reader	4	Cabinet Tamper	R04 Cabinet Tamper
R04:S08	30104408	3014408	2-Door Reader	4	AC fail	R04 AC fail
R04:S09	30204409	3024409	2-Door Reader	4	Low Battery	R04 Low Battery
R04:S10	30004410	3004410	2-Door Reader	4	LAN Fuse	R04 LAN Fuse
R04:S11	30004411	3004411	2-Door Reader	4	Detector Fuse	R04 Detector Fuse
R04:S12	30004412	3004412	2-Door Reader	4	Low Volts	R04 Low Volts
R04:S13	30004413	3004413	2-Door Reader	4	PS Fail	R04 PS Fail
R04:S14	30904414	3094414	2-Door Reader	4	Battery Test	R04 Battery Test
R04:S15	15004415	1504415	2-Door Reader	4	Rdr1 Invalid	R04 Rdr1 Invalid
R04:S16	15004416	1504416	2-Door Reader	4	Rdr2 Invalid	R04 Rdr2 Invalid
R04:S17	12204417	1224417	2-Door Reader	4	Rdr1 Duress	R04 Rdr1 Duress
R04:S18	12204418	1224418	2-Door Reader	4	Rdr2 Duress	R04 Rdr2 Duress
R04:S19	33004419	3304419	2-Door Reader	4	Rdr1 Fault	R04 Rdr1 Fault
R04:S20	33004420	3304420	2-Door Reader	4	Rdr2 Fault	R04 Rdr2 Fault
R04:S21	14304421	1434421	2-Door Reader	4	LAN Comms	R04 LAN Comms
R04:S22	15004422	1504422	2-Door Reader	4	Spare1	R04 Spare1
R04:S23	15004423	1504423	2-Door Reader	4	Spare2	R04 Spare2
R05:Z01	14005401	1405401	2-Door Reader	5	Door1 Reed	R05 Door1 Reed
R05:Z02	14005402	1405402	2-Door Reader	5	Door2 Reed	R05 Door2 Reed
R05:Z03	14005403	1405403	2-Door Reader	5	Door1 Tongue	R05 Door1 Tongue
R05:Z04	14005404	1405404	2-Door Reader	5	Door2 Tongue	R05 Door2 Tongue
R05:Z05	14005405	1405405	2-Door Reader	5	Door1 REX	R05 Door1 REX
R05:Z06	14005406	1405406	2-Door Reader	5	Door2 REX	R05 Door2 REX
R05:Z07	14005407	1405407	2-Door Reader	5	Door1 REN	R05 Door1 REN
R05:Z08	14005408	1405408	2-Door Reader	5	Door2 REN	R05 Door2 REN
R05:S01	43205401	4325401	2-Door Reader	5	Door1 Fault	R05 Door1 Fault
R05:S02	43205402	4325402	2-Door Reader	5	Door2 Fault	R05 Door2 Fault
R05:S03	42305403	4235403	2-Door Reader	5	Door1 Forced	R05 Door1 Forced
R05:S04	42305404	4235404	2-Door Reader	5	Door2 Forced	R05 Door2 Forced
R05:S05	42605405	4265405	2-Door Reader	5	Door1 DOTL	R05 Door1 DOTL
R05:S06	42605406	4265406	2-Door Reader	5	Door2 DOTL	R05 Door2 DOTL
R05:S07	14505407	1455407	2-Door Reader	5	Cabinet Tamper	R05 Cabinet Tamper
R05:S08	30105408	3015408	2-Door Reader	5	AC fail	R05 AC fail
R05:S09	30205409	3025409	2-Door Reader	5	Low Battery	R05 Low Battery
R05:S10	30005410	3005410	2-Door Reader	5	LAN Fuse	R05 LAN Fuse
R05:S11	30005411	3005411	2-Door Reader	5	Detector Fuse	R05 Detector Fuse
R05:S12	30005412	3005412	2-Door Reader	5	Low Volts	R05 Low Volts
R05:S13	30005413	3005413	2-Door Reader	5	PS Fail	R05 PS Fail
R05:S14	30905414	3095414	2-Door Reader	5	Battery Test	R05 Battery Test
R05:S15	15005415	1505415	2-Door Reader	5	Rdr1 Invalid	R05 Rdr1 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R05:S16	15005416	1505416	2-Door Reader	5	Rdr2 Invalid	R05 Rdr2 Invalid
R05:S17	12205417	1225417	2-Door Reader	5	Rdr1 Duress	R05 Rdr1 Duress
R05:S18	12205418	1225418	2-Door Reader	5	Rdr2 Duress	R05 Rdr2 Duress
R05:S19	33005419	3305419	2-Door Reader	5	Rdr1 Fault	R05 Rdr1 Fault
R05:S20	33005420	3305420	2-Door Reader	5	Rdr2 Fault	R05 Rdr2 Fault
R05:S21	14305421	1435421	2-Door Reader	5	LAN Comms	R05 LAN Comms
R05:S22	15005422	1505422	2-Door Reader	5	Spare1	R05 Spare1
R05:S23	15005423	1505423	2-Door Reader	5	Spare2	R05 Spare2
R06:Z01	14006401	1406401	2-Door Reader	6	Door1 Reed	R06 Door1 Reed
R06:Z02	14006402	1406402	2-Door Reader	6	Door2 Reed	R06 Door2 Reed
R06:Z03	14006403	1406403	2-Door Reader	6	Door1 Tongue	R06 Door1 Tongue
R06:Z04	14006404	1406404	2-Door Reader	6	Door2 Tongue	R06 Door2 Tongue
R06:Z05	14006405	1406405	2-Door Reader	6	Door1 REX	R06 Door1 REX
R06:Z06	14006406	1406406	2-Door Reader	6	Door2 REX	R06 Door2 REX
R06:Z07	14006407	1406407	2-Door Reader	6	Door1 REN	R06 Door1 REN
R06:Z08	14006408	1406408	2-Door Reader	6	Door2 REN	R06 Door2 REN
R06:S01	43206401	4326401	2-Door Reader	6	Door1 Fault	R06 Door1 Fault
R06:S02	43206402	4326402	2-Door Reader	6	Door2 Fault	R06 Door2 Fault
R06:S03	42306403	4236403	2-Door Reader	6	Door1 Forced	R06 Door1 Forced
R06:S04	42306404	4236404	2-Door Reader	6	Door2 Forced	R06 Door2 Forced
R06:S05	42606405	4266405	2-Door Reader	6	Door1 DOTL	R06 Door1 DOTL
R06:S06	42606406	4266406	2-Door Reader	6	Door2 DOTL	R06 Door2 DOTL
R06:S07	14506407	1456407	2-Door Reader	6	Cabinet Tamper	R06 Cabinet Tamper
R06:S08	30106408	3016408	2-Door Reader	6	AC fail	R06 AC fail
R06:S09	30206409	3026409	2-Door Reader	6	Low Battery	R06 Low Battery
R06:S10	30006410	3006410	2-Door Reader	6	LAN Fuse	R06 LAN Fuse
R06:S11	30006411	3006411	2-Door Reader	6	Detector Fuse	R06 Detector Fuse
R06:S12	30006412	3006412	2-Door Reader	6	Low Volts	R06 Low Volts
R06:S13	30006413	3006413	2-Door Reader	6	PS Fail	R06 PS Fail
R06:S14	30906414	3096414	2-Door Reader	6	Battery Test	R06 Battery Test
R06:S15	15006415	1506415	2-Door Reader	6	Rdr1 Invalid	R06 Rdr1 Invalid
R06:S16	15006416	1506416	2-Door Reader	6	Rdr2 Invalid	R06 Rdr2 Invalid
R06:S17	12206417	1226417	2-Door Reader	6	Rdr1 Duress	R06 Rdr1 Duress
R06:S18	12206418	1226418	2-Door Reader	6	Rdr2 Duress	R06 Rdr2 Duress
R06:S19	33006419	3306419	2-Door Reader	6	Rdr1 Fault	R06 Rdr1 Fault
R06:S20	33006420	3306420	2-Door Reader	6	Rdr2 Fault	R06 Rdr2 Fault
R06:S21	14306421	1436421	2-Door Reader	6	LAN Comms	R06 LAN Comms
R06:S22	15006422	1506422	2-Door Reader	6	Spare1	R06 Spare1
R06:S23	15006423	1506423	2-Door Reader	6	Spare2	R06 Spare2
R07:Z01	14007401	1407401	2-Door Reader	7	Door1 Reed	R07 Door1 Reed
R07:Z02	14007402	1407402	2-Door Reader	7	Door2 Reed	R07 Door2 Reed
R07:Z03	14007403	1407403	2-Door Reader	7	Door1 Tongue	R07 Door1 Tongue
R07:Z04	14007404	1407404	2-Door Reader	7	Door2 Tongue	R07 Door2 Tongue
R07:Z05	14007405	1407405	2-Door Reader	7	Door1 REX	R07 Door1 REX
R07:Z06	14007406	1407406	2-Door Reader	7	Door2 REX	R07 Door2 REX
R07:Z07	14007407	1407407	2-Door Reader	7	Door1 REN	R07 Door1 REN
R07:Z08	14007408	1407408	2-Door Reader	7	Door2 REN	R07 Door2 REN
R07:S01	43207401	4327401	2-Door Reader	7	Door1 Fault	R07 Door1 Fault
R07:S02	43207402	4327402	2-Door Reader	7	Door2 Fault	R07 Door2 Fault
R07:S03	42307403	4237403	2-Door Reader	7	Door1 Forced	R07 Door1 Forced
R07:S04	42307404	4237404	2-Door Reader	7	Door2 Forced	R07 Door2 Forced
R07:S05	42607405	4267405	2-Door Reader	7	Door1 DOTL	R07 Door1 DOTL
R07:S06	42607406	4267406	2-Door Reader	7	Door2 DOTL	R07 Door2 DOTL
R07:S07	14507407	1457407	2-Door Reader	7	Cabinet Tamper	R07 Cabinet Tamper
R07:S08	30107408	3017408	2-Door Reader	7	AC fail	R07 AC fail
R07:S09	30207409	3027409	2-Door Reader	7	Low Battery	R07 Low Battery
R07:S10	30007410	3007410	2-Door Reader	7	LAN Fuse	R07 LAN Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R07:S11	30007411	3007411	2-Door Reader	7	Detector Fuse	R07 Detector Fuse
R07:S12	30007412	3007412	2-Door Reader	7	Low Volts	R07 Low Volts
R07:S13	30007413	3007413	2-Door Reader	7	PS Fail	R07 PS Fail
R07:S14	30907414	3097414	2-Door Reader	7	Battery Test	R07 Battery Test
R07:S15	15007415	1507415	2-Door Reader	7	Rdr1 Invalid	R07 Rdr1 Invalid
R07:S16	15007416	1507416	2-Door Reader	7	Rdr2 Invalid	R07 Rdr2 Invalid
R07:S17	12207417	1227417	2-Door Reader	7	Rdr1 Duress	R07 Rdr1 Duress
R07:S18	12207418	1227418	2-Door Reader	7	Rdr2 Duress	R07 Rdr2 Duress
R07:S19	33007419	3307419	2-Door Reader	7	Rdr1 Fault	R07 Rdr1 Fault
R07:S20	33007420	3307420	2-Door Reader	7	Rdr2 Fault	R07 Rdr2 Fault
R07:S21	14307421	1437421	2-Door Reader	7	LAN Comms	R07 LAN Comms
R07:S22	15007422	1507422	2-Door Reader	7	Spare1	R07 Spare1
R07:S23	15007423	1507423	2-Door Reader	7	Spare2	R07 Spare2
R08:Z01	14008401	1408401	2-Door Reader	8	Door1 Reed	R08 Door1 Reed
R08:Z02	14008402	1408402	2-Door Reader	8	Door2 Reed	R08 Door2 Reed
R08:Z03	14008403	1408403	2-Door Reader	8	Door1 Tongue	R08 Door1 Tongue
R08:Z04	14008404	1408404	2-Door Reader	8	Door2 Tongue	R08 Door2 Tongue
R08:Z05	14008405	1408405	2-Door Reader	8	Door1 REX	R08 Door1 REX
R08:Z06	14008406	1408406	2-Door Reader	8	Door2 REX	R08 Door2 REX
R08:Z07	14008407	1408407	2-Door Reader	8	Door1 REN	R08 Door1 REN
R08:Z08	14008408	1408408	2-Door Reader	8	Door2 REN	R08 Door2 REN
R08:S01	43208401	4328401	2-Door Reader	8	Door1 Fault	R08 Door1 Fault
R08:S02	43208402	4328402	2-Door Reader	8	Door2 Fault	R08 Door2 Fault
R08:S03	42308403	4238403	2-Door Reader	8	Door1 Forced	R08 Door1 Forced
R08:S04	42308404	4238404	2-Door Reader	8	Door2 Forced	R08 Door2 Forced
R08:S05	42608405	4268405	2-Door Reader	8	Door1 DOTL	R08 Door1 DOTL
R08:S06	42608406	4268406	2-Door Reader	8	Door2 DOTL	R08 Door2 DOTL
R08:S07	14508407	1458407	2-Door Reader	8	Cabinet Tamper	R08 Cabinet Tamper
R08:S08	30108408	3018408	2-Door Reader	8	AC fail	R08 AC fail
R08:S09	30208409	3028409	2-Door Reader	8	Low Battery	R08 Low Battery
R08:S10	30008410	3008410	2-Door Reader	8	LAN Fuse	R08 LAN Fuse
R08:S11	30008411	3008411	2-Door Reader	8	Detector Fuse	R08 Detector Fuse
R08:S12	30008412	3008412	2-Door Reader	8	Low Volts	R08 Low Volts
R08:S13	30008413	3008413	2-Door Reader	8	PS Fail	R08 PS Fail
R08:S14	30908414	3098414	2-Door Reader	8	Battery Test	R08 Battery Test
R08:S15	15008415	1508415	2-Door Reader	8	Rdr1 Invalid	R08 Rdr1 Invalid
R08:S16	15008416	1508416	2-Door Reader	8	Rdr2 Invalid	R08 Rdr2 Invalid
R08:S17	12208417	1228417	2-Door Reader	8	Rdr1 Duress	R08 Rdr1 Duress
R08:S18	12208418	1228418	2-Door Reader	8	Rdr2 Duress	R08 Rdr2 Duress
R08:S19	33008419	3308419	2-Door Reader	8	Rdr1 Fault	R08 Rdr1 Fault
R08:S20	33008420	3308420	2-Door Reader	8	Rdr2 Fault	R08 Rdr2 Fault
R08:S21	14308421	1438421	2-Door Reader	8	LAN Comms	R08 LAN Comms
R08:S22	15008422	1508422	2-Door Reader	8	Spare1	R08 Spare1
R08:S23	15008423	1508423	2-Door Reader	8	Spare2	R08 Spare2
R09:Z01	14009401	1409401	2-Door Reader	9	Door1 Reed	R09 Door1 Reed
R09:Z02	14009402	1409402	2-Door Reader	9	Door2 Reed	R09 Door2 Reed
R09:Z03	14009403	1409403	2-Door Reader	9	Door1 Tongue	R09 Door1 Tongue
R09:Z04	14009404	1409404	2-Door Reader	9	Door2 Tongue	R09 Door2 Tongue
R09:Z05	14009405	1409405	2-Door Reader	9	Door1 REX	R09 Door1 REX
R09:Z06	14009406	1409406	2-Door Reader	9	Door2 REX	R09 Door2 REX
R09:Z07	14009407	1409407	2-Door Reader	9	Door1 REN	R09 Door1 REN
R09:Z08	14009408	1409408	2-Door Reader	9	Door2 REN	R09 Door2 REN
R09:S01	43209401	4329401	2-Door Reader	9	Door1 Fault	R09 Door1 Fault
R09:S02	43209402	4329402	2-Door Reader	9	Door2 Fault	R09 Door2 Fault
R09:S03	42309403	4239403	2-Door Reader	9	Door1 Forced	R09 Door1 Forced
R09:S04	42309404	4239404	2-Door Reader	9	Door2 Forced	R09 Door2 Forced
R09:S05	42609405	4269405	2-Door Reader	9	Door1 DOTL	R09 Door1 DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R09:S06	42609406	4269406	2-Door Reader	9	Door2 DOTL	R09 Door2 DOTL
R09:S07	14509407	1459407	2-Door Reader	9	Cabinet Tamper	R09 Cabinet Tamper
R09:S08	30109408	3019408	2-Door Reader	9	AC fail	R09 AC fail
R09:S09	30209409	3029409	2-Door Reader	9	Low Battery	R09 Low Battery
R09:S10	30009410	3009410	2-Door Reader	9	LAN Fuse	R09 LAN Fuse
R09:S11	30009411	3009411	2-Door Reader	9	Detector Fuse	R09 Detector Fuse
R09:S12	30009412	3009412	2-Door Reader	9	Low Volts	R09 Low Volts
R09:S13	30009413	3009413	2-Door Reader	9	PS Fail	R09 PS Fail
R09:S14	30909414	3099414	2-Door Reader	9	Battery Test	R09 Battery Test
R09:S15	15009415	1509415	2-Door Reader	9	Rdr1 Invalid	R09 Rdr1 Invalid
R09:S16	15009416	1509416	2-Door Reader	9	Rdr2 Invalid	R09 Rdr2 Invalid
R09:S17	12209417	1229417	2-Door Reader	9	Rdr1 Duress	R09 Rdr1 Duress
R09:S18	12209418	1229418	2-Door Reader	9	Rdr2 Duress	R09 Rdr2 Duress
R09:S19	33009419	3309419	2-Door Reader	9	Rdr1 Fault	R09 Rdr1 Fault
R09:S20	33009420	3309420	2-Door Reader	9	Rdr2 Fault	R09 Rdr2 Fault
R09:S21	14309421	1439421	2-Door Reader	9	LAN Comms	R09 LAN Comms
R09:S22	15009422	1509422	2-Door Reader	9	Spare1	R09 Spare1
R09:S23	15009423	1509423	2-Door Reader	9	Spare2	R09 Spare2
R10:Z01	14010401	140A401	2-Door Reader	10	Door1 Reed	R10 Door1 Reed
R10:Z02	14010402	140A402	2-Door Reader	10	Door2 Reed	R10 Door2 Reed
R10:Z03	14010403	140A403	2-Door Reader	10	Door1 Tongue	R10 Door1 Tongue
R10:Z04	14010404	140A404	2-Door Reader	10	Door2 Tongue	R10 Door2 Tongue
R10:Z05	14010405	140A405	2-Door Reader	10	Door1 REX	R10 Door1 REX
R10:Z06	14010406	140A406	2-Door Reader	10	Door2 REX	R10 Door2 REX
R10:Z07	14010407	140A407	2-Door Reader	10	Door1 REN	R10 Door1 REN
R10:Z08	14010408	140A408	2-Door Reader	10	Door2 REN	R10 Door2 REN
R10:S01	43210401	432A401	2-Door Reader	10	Door1 Fault	R10 Door1 Fault
R10:S02	43210402	432A402	2-Door Reader	10	Door2 Fault	R10 Door2 Fault
R10:S03	42310403	423A403	2-Door Reader	10	Door1 Forced	R10 Door1 Forced
R10:S04	42310404	423A404	2-Door Reader	10	Door2 Forced	R10 Door2 Forced
R10:S05	42610405	426A405	2-Door Reader	10	Door1 DOTL	R10 Door1 DOTL
R10:S06	42610406	426A406	2-Door Reader	10	Door2 DOTL	R10 Door2 DOTL
R10:S07	14510407	145A407	2-Door Reader	10	Cabinet Tamper	R10 Cabinet Tamper
R10:S08	30110408	301A408	2-Door Reader	10	AC fail	R10 AC fail
R10:S09	30210409	302A409	2-Door Reader	10	Low Battery	R10 Low Battery
R10:S10	30010410	300A410	2-Door Reader	10	LAN Fuse	R10 LAN Fuse
R10:S11	30010411	300A411	2-Door Reader	10	Detector Fuse	R10 Detector Fuse
R10:S12	30010412	300A412	2-Door Reader	10	Low Volts	R10 Low Volts
R10:S13	30010413	300A413	2-Door Reader	10	PS Fail	R10 PS Fail
R10:S14	30910414	309A414	2-Door Reader	10	Battery Test	R10 Battery Test
R10:S15	15010415	150A415	2-Door Reader	10	Rdr1 Invalid	R10 Rdr1 Invalid
R10:S16	15010416	150A416	2-Door Reader	10	Rdr2 Invalid	R10 Rdr2 Invalid
R10:S17	12210417	122A417	2-Door Reader	10	Rdr1 Duress	R10 Rdr1 Duress
R10:S18	12210418	122A418	2-Door Reader	10	Rdr2 Duress	R10 Rdr2 Duress
R10:S19	33010419	330A419	2-Door Reader	10	Rdr1 Fault	R10 Rdr1 Fault
R10:S20	33010420	330A420	2-Door Reader	10	Rdr2 Fault	R10 Rdr2 Fault
R10:S21	14310421	143A421	2-Door Reader	10	LAN Comms	R10 LAN Comms
R10:S22	15010422	150A422	2-Door Reader	10	Spare1	R10 Spare1
R10:S23	15010423	150A423	2-Door Reader	10	Spare2	R10 Spare2
R11:Z01	14011401	140B401	2-Door Reader	11	Door1 Reed	R11 Door1 Reed
R11:Z02	14011402	140B402	2-Door Reader	11	Door2 Reed	R11 Door2 Reed
R11:Z03	14011403	140B403	2-Door Reader	11	Door1 Tongue	R11 Door1 Tongue
R11:Z04	14011404	140B404	2-Door Reader	11	Door2 Tongue	R11 Door2 Tongue
R11:Z05	14011405	140B405	2-Door Reader	11	Door1 REX	R11 Door1 REX
R11:Z06	14011406	140B406	2-Door Reader	11	Door2 REX	R11 Door2 REX
R11:Z07	14011407	140B407	2-Door Reader	11	Door1 REN	R11 Door1 REN
R11:Z08	14011408	140B408	2-Door Reader	11	Door2 REN	R11 Door2 REN

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R11:S01	43211401	432B401	2-Door Reader	11	Door1 Fault	R11 Door1 Fault
R11:S02	43211402	432B402	2-Door Reader	11	Door2 Fault	R11 Door2 Fault
R11:S03	42311403	423B403	2-Door Reader	11	Door1 Forced	R11 Door1 Forced
R11:S04	42311404	423B404	2-Door Reader	11	Door2 Forced	R11 Door2 Forced
R11:S05	42611405	426B405	2-Door Reader	11	Door1 DOTL	R11 Door1 DOTL
R11:S06	42611406	426B406	2-Door Reader	11	Door2 DOTL	R11 Door2 DOTL
R11:S07	14511407	145B407	2-Door Reader	11	Cabinet Tamper	R11 Cabinet Tamper
R11:S08	30111408	301B408	2-Door Reader	11	AC fail	R11 AC fail
R11:S09	30211409	302B409	2-Door Reader	11	Low Battery	R11 Low Battery
R11:S10	30011410	300B410	2-Door Reader	11	LAN Fuse	R11 LAN Fuse
R11:S11	30011411	300B411	2-Door Reader	11	Detector Fuse	R11 Detector Fuse
R11:S12	30011412	300B412	2-Door Reader	11	Low Volts	R11 Low Volts
R11:S13	30011413	300B413	2-Door Reader	11	PS Fail	R11 PS Fail
R11:S14	30911414	309B414	2-Door Reader	11	Battery Test	R11 Battery Test
R11:S15	15011415	150B415	2-Door Reader	11	Rdr1 Invalid	R11 Rdr1 Invalid
R11:S16	15011416	150B416	2-Door Reader	11	Rdr2 Invalid	R11 Rdr2 Invalid
R11:S17	12211417	122B417	2-Door Reader	11	Rdr1 Duress	R11 Rdr1 Duress
R11:S18	12211418	122B418	2-Door Reader	11	Rdr2 Duress	R11 Rdr2 Duress
R11:S19	33011419	330B419	2-Door Reader	11	Rdr1 Fault	R11 Rdr1 Fault
R11:S20	33011420	330B420	2-Door Reader	11	Rdr2 Fault	R11 Rdr2 Fault
R11:S21	14311421	143B421	2-Door Reader	11	LAN Comms	R11 LAN Comms
R11:S22	15011422	150B422	2-Door Reader	11	Spare1	R11 Spare1
R11:S23	15011423	150B423	2-Door Reader	11	Spare2	R11 Spare2
R12:Z01	14012401	140C401	2-Door Reader	12	Door1 Reed	R12 Door1 Reed
R12:Z02	14012402	140C402	2-Door Reader	12	Door2 Reed	R12 Door2 Reed
R12:Z03	14012403	140C403	2-Door Reader	12	Door1 Tongue	R12 Door1 Tongue
R12:Z04	14012404	140C404	2-Door Reader	12	Door2 Tongue	R12 Door2 Tongue
R12:Z05	14012405	140C405	2-Door Reader	12	Door1 REX	R12 Door1 REX
R12:Z06	14012406	140C406	2-Door Reader	12	Door2 REX	R12 Door2 REX
R12:Z07	14012407	140C407	2-Door Reader	12	Door1 REN	R12 Door1 REN
R12:Z08	14012408	140C408	2-Door Reader	12	Door2 REN	R12 Door2 REN
R12:S01	43212401	432C401	2-Door Reader	12	Door1 Fault	R12 Door1 Fault
R12:S02	43212402	432C402	2-Door Reader	12	Door2 Fault	R12 Door2 Fault
R12:S03	42312403	423C403	2-Door Reader	12	Door1 Forced	R12 Door1 Forced
R12:S04	42312404	423C404	2-Door Reader	12	Door2 Forced	R12 Door2 Forced
R12:S05	42612405	426C405	2-Door Reader	12	Door1 DOTL	R12 Door1 DOTL
R12:S06	42612406	426C406	2-Door Reader	12	Door2 DOTL	R12 Door2 DOTL
R12:S07	14512407	145C407	2-Door Reader	12	Cabinet Tamper	R12 Cabinet Tamper
R12:S08	30112408	301C408	2-Door Reader	12	AC fail	R12 AC fail
R12:S09	30212409	302C409	2-Door Reader	12	Low Battery	R12 Low Battery
R12:S10	30012410	300C410	2-Door Reader	12	LAN Fuse	R12 LAN Fuse
R12:S11	30012411	300C411	2-Door Reader	12	Detector Fuse	R12 Detector Fuse
R12:S12	30012412	300C412	2-Door Reader	12	Low Volts	R12 Low Volts
R12:S13	30012413	300C413	2-Door Reader	12	PS Fail	R12 PS Fail
R12:S14	30912414	309C414	2-Door Reader	12	Battery Test	R12 Battery Test
R12:S15	15012415	150C415	2-Door Reader	12	Rdr1 Invalid	R12 Rdr1 Invalid
R12:S16	15012416	150C416	2-Door Reader	12	Rdr2 Invalid	R12 Rdr2 Invalid
R12:S17	12212417	122C417	2-Door Reader	12	Rdr1 Duress	R12 Rdr1 Duress
R12:S18	12212418	122C418	2-Door Reader	12	Rdr2 Duress	R12 Rdr2 Duress
R12:S19	33012419	330C419	2-Door Reader	12	Rdr1 Fault	R12 Rdr1 Fault
R12:S20	33012420	330C420	2-Door Reader	12	Rdr2 Fault	R12 Rdr2 Fault
R12:S21	14312421	143C421	2-Door Reader	12	LAN Comms	R12 LAN Comms
R12:S22	15012422	150C422	2-Door Reader	12	Spare1	R12 Spare1
R12:S23	15012423	150C423	2-Door Reader	12	Spare2	R12 Spare2
R13:Z01	14013401	140D401	2-Door Reader	13	Door1 Reed	R13 Door1 Reed
R13:Z02	14013402	140D402	2-Door Reader	13	Door2 Reed	R13 Door2 Reed
R13:Z03	14013403	140D403	2-Door Reader	13	Door1 Tongue	R13 Door1 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R13:Z04	14013404	140D404	2-Door Reader	13	Door2 Tongue	R13 Door2 Tongue
R13:Z05	14013405	140D405	2-Door Reader	13	Door1 REX	R13 Door1 REX
R13:Z06	14013406	140D406	2-Door Reader	13	Door2 REX	R13 Door2 REX
R13:Z07	14013407	140D407	2-Door Reader	13	Door1 REN	R13 Door1 REN
R13:Z08	14013408	140D408	2-Door Reader	13	Door2 REN	R13 Door2 REN
R13:S01	43213401	432D401	2-Door Reader	13	Door1 Fault	R13 Door1 Fault
R13:S02	43213402	432D402	2-Door Reader	13	Door2 Fault	R13 Door2 Fault
R13:S03	42313403	423D403	2-Door Reader	13	Door1 Forced	R13 Door1 Forced
R13:S04	42313404	423D404	2-Door Reader	13	Door2 Forced	R13 Door2 Forced
R13:S05	42613405	426D405	2-Door Reader	13	Door1 DOTL	R13 Door1 DOTL
R13:S06	42613406	426D406	2-Door Reader	13	Door2 DOTL	R13 Door2 DOTL
R13:S07	14513407	145D407	2-Door Reader	13	Cabinet Tamper	R13 Cabinet Tamper
R13:S08	30113408	301D408	2-Door Reader	13	AC fail	R13 AC fail
R13:S09	30213409	302D409	2-Door Reader	13	Low Battery	R13 Low Battery
R13:S10	30013410	300D410	2-Door Reader	13	LAN Fuse	R13 LAN Fuse
R13:S11	30013411	300D411	2-Door Reader	13	Detector Fuse	R13 Detector Fuse
R13:S12	30013412	300D412	2-Door Reader	13	Low Volts	R13 Low Volts
R13:S13	30013413	300D413	2-Door Reader	13	PS Fail	R13 PS Fail
R13:S14	30913414	309D414	2-Door Reader	13	Battery Test	R13 Battery Test
R13:S15	15013415	150D415	2-Door Reader	13	Rdr1 Invalid	R13 Rdr1 Invalid
R13:S16	15013416	150D416	2-Door Reader	13	Rdr2 Invalid	R13 Rdr2 Invalid
R13:S17	12213417	122D417	2-Door Reader	13	Rdr1 Duress	R13 Rdr1 Duress
R13:S18	12213418	122D418	2-Door Reader	13	Rdr2 Duress	R13 Rdr2 Duress
R13:S19	33013419	330D419	2-Door Reader	13	Rdr1 Fault	R13 Rdr1 Fault
R13:S20	33013420	330D420	2-Door Reader	13	Rdr2 Fault	R13 Rdr2 Fault
R13:S21	14313421	143D421	2-Door Reader	13	LAN Comms	R13 LAN Comms
R13:S22	15013422	150D422	2-Door Reader	13	Spare1	R13 Spare1
R13:S23	15013423	150D423	2-Door Reader	13	Spare2	R13 Spare2
R14:Z01	14014401	140E401	2-Door Reader	14	Door1 Reed	R14 Door1 Reed
R14:Z02	14014402	140E402	2-Door Reader	14	Door2 Reed	R14 Door2 Reed
R14:Z03	14014403	140E403	2-Door Reader	14	Door1 Tongue	R14 Door1 Tongue
R14:Z04	14014404	140E404	2-Door Reader	14	Door2 Tongue	R14 Door2 Tongue
R14:Z05	14014405	140E405	2-Door Reader	14	Door1 REX	R14 Door1 REX
R14:Z06	14014406	140E406	2-Door Reader	14	Door2 REX	R14 Door2 REX
R14:Z07	14014407	140E407	2-Door Reader	14	Door1 REN	R14 Door1 REN
R14:Z08	14014408	140E408	2-Door Reader	14	Door2 REN	R14 Door2 REN
R14:S01	43214401	432E401	2-Door Reader	14	Door1 Fault	R14 Door1 Fault
R14:S02	43214402	432E402	2-Door Reader	14	Door2 Fault	R14 Door2 Fault
R14:S03	42314403	423E403	2-Door Reader	14	Door1 Forced	R14 Door1 Forced
R14:S04	42314404	423E404	2-Door Reader	14	Door2 Forced	R14 Door2 Forced
R14:S05	42614405	426E405	2-Door Reader	14	Door1 DOTL	R14 Door1 DOTL
R14:S06	42614406	426E406	2-Door Reader	14	Door2 DOTL	R14 Door2 DOTL
R14:S07	14514407	145E407	2-Door Reader	14	Cabinet Tamper	R14 Cabinet Tamper
R14:S08	30114408	301E408	2-Door Reader	14	AC fail	R14 AC fail
R14:S09	30214409	302E409	2-Door Reader	14	Low Battery	R14 Low Battery
R14:S10	30014410	300E410	2-Door Reader	14	LAN Fuse	R14 LAN Fuse
R14:S11	30014411	300E411	2-Door Reader	14	Detector Fuse	R14 Detector Fuse
R14:S12	30014412	300E412	2-Door Reader	14	Low Volts	R14 Low Volts
R14:S13	30014413	300E413	2-Door Reader	14	PS Fail	R14 PS Fail
R14:S14	30914414	309E414	2-Door Reader	14	Battery Test	R14 Battery Test
R14:S15	15014415	150E415	2-Door Reader	14	Rdr1 Invalid	R14 Rdr1 Invalid
R14:S16	15014416	150E416	2-Door Reader	14	Rdr2 Invalid	R14 Rdr2 Invalid
R14:S17	12214417	122E417	2-Door Reader	14	Rdr1 Duress	R14 Rdr1 Duress
R14:S18	12214418	122E418	2-Door Reader	14	Rdr2 Duress	R14 Rdr2 Duress
R14:S19	33014419	330E419	2-Door Reader	14	Rdr1 Fault	R14 Rdr1 Fault
R14:S20	33014420	330E420	2-Door Reader	14	Rdr2 Fault	R14 Rdr2 Fault
R14:S21	14314421	143E421	2-Door Reader	14	LAN Comms	R14 LAN Comms

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R14:S22	15014422	150E422	2-Door Reader	14	Spare1	R14 Spare1
R14:S23	15014423	150E423	2-Door Reader	14	Spare2	R14 Spare2
R15:Z01	14015401	140F401	2-Door Reader	15	Door1 Reed	R15 Door1 Reed
R15:Z02	14015402	140F402	2-Door Reader	15	Door2 Reed	R15 Door2 Reed
R15:Z03	14015403	140F403	2-Door Reader	15	Door1 Tongue	R15 Door1 Tongue
R15:Z04	14015404	140F404	2-Door Reader	15	Door2 Tongue	R15 Door2 Tongue
R15:Z05	14015405	140F405	2-Door Reader	15	Door1 REX	R15 Door1 REX
R15:Z06	14015406	140F406	2-Door Reader	15	Door2 REX	R15 Door2 REX
R15:Z07	14015407	140F407	2-Door Reader	15	Door1 REN	R15 Door1 REN
R15:Z08	14015408	140F408	2-Door Reader	15	Door2 REN	R15 Door2 REN
R15:S01	43215401	432F401	2-Door Reader	15	Door1 Fault	R15 Door1 Fault
R15:S02	43215402	432F402	2-Door Reader	15	Door2 Fault	R15 Door2 Fault
R15:S03	42315403	423F403	2-Door Reader	15	Door1 Forced	R15 Door1 Forced
R15:S04	42315404	423F404	2-Door Reader	15	Door2 Forced	R15 Door2 Forced
R15:S05	42615405	426F405	2-Door Reader	15	Door1 DOTL	R15 Door1 DOTL
R15:S06	42615406	426F406	2-Door Reader	15	Door2 DOTL	R15 Door2 DOTL
R15:S07	14515407	145F407	2-Door Reader	15	Cabinet Tamper	R15 Cabinet Tamper
R15:S08	30115408	301F408	2-Door Reader	15	AC fail	R15 AC fail
R15:S09	30215409	302F409	2-Door Reader	15	Low Battery	R15 Low Battery
R15:S10	30015410	300F410	2-Door Reader	15	LAN Fuse	R15 LAN Fuse
R15:S11	30015411	300F411	2-Door Reader	15	Detector Fuse	R15 Detector Fuse
R15:S12	30015412	300F412	2-Door Reader	15	Low Volts	R15 Low Volts
R15:S13	30015413	300F413	2-Door Reader	15	PS Fail	R15 PS Fail
R15:S14	30915414	309F414	2-Door Reader	15	Battery Test	R15 Battery Test
R15:S15	15015415	150F415	2-Door Reader	15	Rdr1 Invalid	R15 Rdr1 Invalid
R15:S16	15015416	150F416	2-Door Reader	15	Rdr2 Invalid	R15 Rdr2 Invalid
R15:S17	12215417	122F417	2-Door Reader	15	Rdr1 Duress	R15 Rdr1 Duress
R15:S18	12215418	122F418	2-Door Reader	15	Rdr2 Duress	R15 Rdr2 Duress
R15:S19	33015419	330F419	2-Door Reader	15	Rdr1 Fault	R15 Rdr1 Fault
R15:S20	33015420	330F420	2-Door Reader	15	Rdr2 Fault	R15 Rdr2 Fault
R15:S21	14315421	143F421	2-Door Reader	15	LAN Comms	R15 LAN Comms
R15:S22	15015422	150F422	2-Door Reader	15	Spare1	R15 Spare1
R15:S23	15015423	150F423	2-Door Reader	15	Spare2	R15 Spare2
R16:Z01	14016401	140G401	2-Door Reader	16	Door1 Reed	R16 Door1 Reed
R16:Z02	14016402	140G402	2-Door Reader	16	Door2 Reed	R16 Door2 Reed
R16:Z03	14016403	140G403	2-Door Reader	16	Door1 Tongue	R16 Door1 Tongue
R16:Z04	14016404	140G404	2-Door Reader	16	Door2 Tongue	R16 Door2 Tongue
R16:Z05	14016405	140G405	2-Door Reader	16	Door1 REX	R16 Door1 REX
R16:Z06	14016406	140G406	2-Door Reader	16	Door2 REX	R16 Door2 REX
R16:Z07	14016407	140G407	2-Door Reader	16	Door1 REN	R16 Door1 REN
R16:Z08	14016408	140G408	2-Door Reader	16	Door2 REN	R16 Door2 REN
R16:S01	43216401	432G401	2-Door Reader	16	Door1 Fault	R16 Door1 Fault
R16:S02	43216402	432G402	2-Door Reader	16	Door2 Fault	R16 Door2 Fault
R16:S03	42316403	423G403	2-Door Reader	16	Door1 Forced	R16 Door1 Forced
R16:S04	42316404	423G404	2-Door Reader	16	Door2 Forced	R16 Door2 Forced
R16:S05	42616405	426G405	2-Door Reader	16	Door1 DOTL	R16 Door1 DOTL
R16:S06	42616406	426G406	2-Door Reader	16	Door2 DOTL	R16 Door2 DOTL
R16:S07	14516407	145G407	2-Door Reader	16	Cabinet Tamper	R16 Cabinet Tamper
R16:S08	30116408	301G408	2-Door Reader	16	AC fail	R16 AC fail
R16:S09	30216409	302G409	2-Door Reader	16	Low Battery	R16 Low Battery
R16:S10	30016410	300G410	2-Door Reader	16	LAN Fuse	R16 LAN Fuse
R16:S11	30016411	300G411	2-Door Reader	16	Detector Fuse	R16 Detector Fuse
R16:S12	30016412	300G412	2-Door Reader	16	Low Volts	R16 Low Volts
R16:S13	30016413	300G413	2-Door Reader	16	PS Fail	R16 PS Fail
R16:S14	30916414	309G414	2-Door Reader	16	Battery Test	R16 Battery Test
R16:S15	15016415	150G415	2-Door Reader	16	Rdr1 Invalid	R16 Rdr1 Invalid
R16:S16	15016416	150G416	2-Door Reader	16	Rdr2 Invalid	R16 Rdr2 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R16:S17	12216417	122G417	2-Door Reader	16	Rdr1 Duress	R16 Rdr1 Duress
R16:S18	12216418	122G418	2-Door Reader	16	Rdr2 Duress	R16 Rdr2 Duress
R16:S19	33016419	330G419	2-Door Reader	16	Rdr1 Fault	R16 Rdr1 Fault
R16:S20	33016420	330G420	2-Door Reader	16	Rdr2 Fault	R16 Rdr2 Fault
R16:S21	14316421	143G421	2-Door Reader	16	LAN Comms	R16 LAN Comms
R16:S22	15016422	150G422	2-Door Reader	16	Spare1	R16 Spare1
R16:S23	15016423	150G423	2-Door Reader	16	Spare2	R16 Spare2
R17:Z01	14017401	140H401	2-Door Reader	17	Door1 Reed	R17 Door1 Reed
R17:Z02	14017402	140H402	2-Door Reader	17	Door2 Reed	R17 Door2 Reed
R17:Z03	14017403	140H403	2-Door Reader	17	Door1 Tongue	R17 Door1 Tongue
R17:Z04	14017404	140H404	2-Door Reader	17	Door2 Tongue	R17 Door2 Tongue
R17:Z05	14017405	140H405	2-Door Reader	17	Door1 REX	R17 Door1 REX
R17:Z06	14017406	140H406	2-Door Reader	17	Door2 REX	R17 Door2 REX
R17:Z07	14017407	140H407	2-Door Reader	17	Door1 REN	R17 Door1 REN
R17:Z08	14017408	140H408	2-Door Reader	17	Door2 REN	R17 Door2 REN
R17:S01	43217401	432H401	2-Door Reader	17	Door1 Fault	R17 Door1 Fault
R17:S02	43217402	432H402	2-Door Reader	17	Door2 Fault	R17 Door2 Fault
R17:S03	42317403	423H403	2-Door Reader	17	Door1 Forced	R17 Door1 Forced
R17:S04	42317404	423H404	2-Door Reader	17	Door2 Forced	R17 Door2 Forced
R17:S05	42617405	426H405	2-Door Reader	17	Door1 DOTL	R17 Door1 DOTL
R17:S06	42617406	426H406	2-Door Reader	17	Door2 DOTL	R17 Door2 DOTL
R17:S07	14517407	145H407	2-Door Reader	17	Cabinet Tamper	R17 Cabinet Tamper
R17:S08	30117408	301H408	2-Door Reader	17	AC fail	R17 AC fail
R17:S09	30217409	302H409	2-Door Reader	17	Low Battery	R17 Low Battery
R17:S10	30017410	300H410	2-Door Reader	17	LAN Fuse	R17 LAN Fuse
R17:S11	30017411	300H411	2-Door Reader	17	Detector Fuse	R17 Detector Fuse
R17:S12	30017412	300H412	2-Door Reader	17	Low Volts	R17 Low Volts
R17:S13	30017413	300H413	2-Door Reader	17	PS Fail	R17 PS Fail
R17:S14	30917414	309H414	2-Door Reader	17	Battery Test	R17 Battery Test
R17:S15	15017415	150H415	2-Door Reader	17	Rdr1 Invalid	R17 Rdr1 Invalid
R17:S16	15017416	150H416	2-Door Reader	17	Rdr2 Invalid	R17 Rdr2 Invalid
R17:S17	12217417	122H417	2-Door Reader	17	Rdr1 Duress	R17 Rdr1 Duress
R17:S18	12217418	122H418	2-Door Reader	17	Rdr2 Duress	R17 Rdr2 Duress
R17:S19	33017419	330H419	2-Door Reader	17	Rdr1 Fault	R17 Rdr1 Fault
R17:S20	33017420	330H420	2-Door Reader	17	Rdr2 Fault	R17 Rdr2 Fault
R17:S21	14317421	143H421	2-Door Reader	17	LAN Comms	R17 LAN Comms
R17:S22	15017422	150H422	2-Door Reader	17	Spare1	R17 Spare1
R17:S23	15017423	150H423	2-Door Reader	17	Spare2	R17 Spare2
R18:Z01	14018401	140I401	2-Door Reader	18	Door1 Reed	R18 Door1 Reed
R18:Z02	14018402	140I402	2-Door Reader	18	Door2 Reed	R18 Door2 Reed
R18:Z03	14018403	140I403	2-Door Reader	18	Door1 Tongue	R18 Door1 Tongue
R18:Z04	14018404	140I404	2-Door Reader	18	Door2 Tongue	R18 Door2 Tongue
R18:Z05	14018405	140I405	2-Door Reader	18	Door1 REX	R18 Door1 REX
R18:Z06	14018406	140I406	2-Door Reader	18	Door2 REX	R18 Door2 REX
R18:Z07	14018407	140I407	2-Door Reader	18	Door1 REN	R18 Door1 REN
R18:Z08	14018408	140I408	2-Door Reader	18	Door2 REN	R18 Door2 REN
R18:S01	43218401	432I401	2-Door Reader	18	Door1 Fault	R18 Door1 Fault
R18:S02	43218402	432I402	2-Door Reader	18	Door2 Fault	R18 Door2 Fault
R18:S03	42318403	423I403	2-Door Reader	18	Door1 Forced	R18 Door1 Forced
R18:S04	42318404	423I404	2-Door Reader	18	Door2 Forced	R18 Door2 Forced
R18:S05	42618405	426I405	2-Door Reader	18	Door1 DOTL	R18 Door1 DOTL
R18:S06	42618406	426I406	2-Door Reader	18	Door2 DOTL	R18 Door2 DOTL
R18:S07	14518407	145I407	2-Door Reader	18	Cabinet Tamper	R18 Cabinet Tamper
R18:S08	30118408	301I408	2-Door Reader	18	AC fail	R18 AC fail
R18:S09	30218409	302I409	2-Door Reader	18	Low Battery	R18 Low Battery
R18:S10	30018410	300I410	2-Door Reader	18	LAN Fuse	R18 LAN Fuse
R18:S11	30018411	300I411	2-Door Reader	18	Detector Fuse	R18 Detector Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R18:S12	30018412	300I412	2-Door Reader	18	Low Volts	R18 Low Volts
R18:S13	30018413	300I413	2-Door Reader	18	PS Fail	R18 PS Fail
R18:S14	30918414	309I414	2-Door Reader	18	Battery Test	R18 Battery Test
R18:S15	15018415	150I415	2-Door Reader	18	Rdr1 Invalid	R18 Rdr1 Invalid
R18:S16	15018416	150I416	2-Door Reader	18	Rdr2 Invalid	R18 Rdr2 Invalid
R18:S17	12218417	122I417	2-Door Reader	18	Rdr1 Duress	R18 Rdr1 Duress
R18:S18	12218418	122I418	2-Door Reader	18	Rdr2 Duress	R18 Rdr2 Duress
R18:S19	33018419	330I419	2-Door Reader	18	Rdr1 Fault	R18 Rdr1 Fault
R18:S20	33018420	330I420	2-Door Reader	18	Rdr2 Fault	R18 Rdr2 Fault
R18:S21	14318421	143I421	2-Door Reader	18	LAN Comms	R18 LAN Comms
R18:S22	15018422	150I422	2-Door Reader	18	Spare1	R18 Spare1
R18:S23	15018423	150I423	2-Door Reader	18	Spare2	R18 Spare2
R19:Z01	14019401	140J401	2-Door Reader	19	Door1 Reed	R19 Door1 Reed
R19:Z02	14019402	140J402	2-Door Reader	19	Door2 Reed	R19 Door2 Reed
R19:Z03	14019403	140J403	2-Door Reader	19	Door1 Tongue	R19 Door1 Tongue
R19:Z04	14019404	140J404	2-Door Reader	19	Door2 Tongue	R19 Door2 Tongue
R19:Z05	14019405	140J405	2-Door Reader	19	Door1 REX	R19 Door1 REX
R19:Z06	14019406	140J406	2-Door Reader	19	Door2 REX	R19 Door2 REX
R19:Z07	14019407	140J407	2-Door Reader	19	Door1 REN	R19 Door1 REN
R19:Z08	14019408	140J408	2-Door Reader	19	Door2 REN	R19 Door2 REN
R19:S01	43219401	432J401	2-Door Reader	19	Door1 Fault	R19 Door1 Fault
R19:S02	43219402	432J402	2-Door Reader	19	Door2 Fault	R19 Door2 Fault
R19:S03	42319403	423J403	2-Door Reader	19	Door1 Forced	R19 Door1 Forced
R19:S04	42319404	423J404	2-Door Reader	19	Door2 Forced	R19 Door2 Forced
R19:S05	42619405	426J405	2-Door Reader	19	Door1 DOTL	R19 Door1 DOTL
R19:S06	42619406	426J406	2-Door Reader	19	Door2 DOTL	R19 Door2 DOTL
R19:S07	14519407	145J407	2-Door Reader	19	Cabinet Tamper	R19 Cabinet Tamper
R19:S08	30119408	301J408	2-Door Reader	19	AC fail	R19 AC fail
R19:S09	30219409	302J409	2-Door Reader	19	Low Battery	R19 Low Battery
R19:S10	30019410	300J410	2-Door Reader	19	LAN Fuse	R19 LAN Fuse
R19:S11	30019411	300J411	2-Door Reader	19	Detector Fuse	R19 Detector Fuse
R19:S12	30019412	300J412	2-Door Reader	19	Low Volts	R19 Low Volts
R19:S13	30019413	300J413	2-Door Reader	19	PS Fail	R19 PS Fail
R19:S14	30919414	309J414	2-Door Reader	19	Battery Test	R19 Battery Test
R19:S15	15019415	150J415	2-Door Reader	19	Rdr1 Invalid	R19 Rdr1 Invalid
R19:S16	15019416	150J416	2-Door Reader	19	Rdr2 Invalid	R19 Rdr2 Invalid
R19:S17	12219417	122J417	2-Door Reader	19	Rdr1 Duress	R19 Rdr1 Duress
R19:S18	12219418	122J418	2-Door Reader	19	Rdr2 Duress	R19 Rdr2 Duress
R19:S19	33019419	330J419	2-Door Reader	19	Rdr1 Fault	R19 Rdr1 Fault
R19:S20	33019420	330J420	2-Door Reader	19	Rdr2 Fault	R19 Rdr2 Fault
R19:S21	14319421	143J421	2-Door Reader	19	LAN Comms	R19 LAN Comms
R19:S22	15019422	150J422	2-Door Reader	19	Spare1	R19 Spare1
R19:S23	15019423	150J423	2-Door Reader	19	Spare2	R19 Spare2
R20:Z01	14020401	140K401	2-Door Reader	20	Door1 Reed	R20 Door1 Reed
R20:Z02	14020402	140K402	2-Door Reader	20	Door2 Reed	R20 Door2 Reed
R20:Z03	14020403	140K403	2-Door Reader	20	Door1 Tongue	R20 Door1 Tongue
R20:Z04	14020404	140K404	2-Door Reader	20	Door2 Tongue	R20 Door2 Tongue
R20:Z05	14020405	140K405	2-Door Reader	20	Door1 REX	R20 Door1 REX
R20:Z06	14020406	140K406	2-Door Reader	20	Door2 REX	R20 Door2 REX
R20:Z07	14020407	140K407	2-Door Reader	20	Door1 REN	R20 Door1 REN
R20:Z08	14020408	140K408	2-Door Reader	20	Door2 REN	R20 Door2 REN
R20:S01	43220401	432K401	2-Door Reader	20	Door1 Fault	R20 Door1 Fault
R20:S02	43220402	432K402	2-Door Reader	20	Door2 Fault	R20 Door2 Fault
R20:S03	42320403	423K403	2-Door Reader	20	Door1 Forced	R20 Door1 Forced
R20:S04	42320404	423K404	2-Door Reader	20	Door2 Forced	R20 Door2 Forced
R20:S05	42620405	426K405	2-Door Reader	20	Door1 DOTL	R20 Door1 DOTL
R20:S06	42620406	426K406	2-Door Reader	20	Door2 DOTL	R20 Door2 DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R20:S07	14520407	145K407	2-Door Reader	20	Cabinet Tamper	R20 Cabinet Tamper
R20:S08	30120408	301K408	2-Door Reader	20	AC fail	R20 AC fail
R20:S09	30220409	302K409	2-Door Reader	20	Low Battery	R20 Low Battery
R20:S10	30020410	300K410	2-Door Reader	20	LAN Fuse	R20 LAN Fuse
R20:S11	30020411	300K411	2-Door Reader	20	Detector Fuse	R20 Detector Fuse
R20:S12	30020412	300K412	2-Door Reader	20	Low Volts	R20 Low Volts
R20:S13	30020413	300K413	2-Door Reader	20	PS Fail	R20 PS Fail
R20:S14	30920414	309K414	2-Door Reader	20	Battery Test	R20 Battery Test
R20:S15	15020415	150K415	2-Door Reader	20	Rdr1 Invalid	R20 Rdr1 Invalid
R20:S16	15020416	150K416	2-Door Reader	20	Rdr2 Invalid	R20 Rdr2 Invalid
R20:S17	12220417	122K417	2-Door Reader	20	Rdr1 Duress	R20 Rdr1 Duress
R20:S18	12220418	122K418	2-Door Reader	20	Rdr2 Duress	R20 Rdr2 Duress
R20:S19	33020419	330K419	2-Door Reader	20	Rdr1 Fault	R20 Rdr1 Fault
R20:S20	33020420	330K420	2-Door Reader	20	Rdr2 Fault	R20 Rdr2 Fault
R20:S21	14320421	143K421	2-Door Reader	20	LAN Comms	R20 LAN Comms
R20:S22	15020422	150K422	2-Door Reader	20	Spare1	R20 Spare1
R20:S23	15020423	150K423	2-Door Reader	20	Spare2	R20 Spare2
R21:Z01	14021401	140L401	2-Door Reader	21	Door1 Reed	R21 Door1 Reed
R21:Z02	14021402	140L402	2-Door Reader	21	Door2 Reed	R21 Door2 Reed
R21:Z03	14021403	140L403	2-Door Reader	21	Door1 Tongue	R21 Door1 Tongue
R21:Z04	14021404	140L404	2-Door Reader	21	Door2 Tongue	R21 Door2 Tongue
R21:Z05	14021405	140L405	2-Door Reader	21	Door1 REX	R21 Door1 REX
R21:Z06	14021406	140L406	2-Door Reader	21	Door2 REX	R21 Door2 REX
R21:Z07	14021407	140L407	2-Door Reader	21	Door1 REN	R21 Door1 REN
R21:Z08	14021408	140L408	2-Door Reader	21	Door2 REN	R21 Door2 REN
R21:S01	43221401	432L401	2-Door Reader	21	Door1 Fault	R21 Door1 Fault
R21:S02	43221402	432L402	2-Door Reader	21	Door2 Fault	R21 Door2 Fault
R21:S03	42321403	423L403	2-Door Reader	21	Door1 Forced	R21 Door1 Forced
R21:S04	42321404	423L404	2-Door Reader	21	Door2 Forced	R21 Door2 Forced
R21:S05	42621405	426L405	2-Door Reader	21	Door1 DOTL	R21 Door1 DOTL
R21:S06	42621406	426L406	2-Door Reader	21	Door2 DOTL	R21 Door2 DOTL
R21:S07	14521407	145L407	2-Door Reader	21	Cabinet Tamper	R21 Cabinet Tamper
R21:S08	30121408	301L408	2-Door Reader	21	AC fail	R21 AC fail
R21:S09	30221409	302L409	2-Door Reader	21	Low Battery	R21 Low Battery
R21:S10	30021410	300L410	2-Door Reader	21	LAN Fuse	R21 LAN Fuse
R21:S11	30021411	300L411	2-Door Reader	21	Detector Fuse	R21 Detector Fuse
R21:S12	30021412	300L412	2-Door Reader	21	Low Volts	R21 Low Volts
R21:S13	30021413	300L413	2-Door Reader	21	PS Fail	R21 PS Fail
R21:S14	30921414	309L414	2-Door Reader	21	Battery Test	R21 Battery Test
R21:S15	15021415	150L415	2-Door Reader	21	Rdr1 Invalid	R21 Rdr1 Invalid
R21:S16	15021416	150L416	2-Door Reader	21	Rdr2 Invalid	R21 Rdr2 Invalid
R21:S17	12221417	122L417	2-Door Reader	21	Rdr1 Duress	R21 Rdr1 Duress
R21:S18	12221418	122L418	2-Door Reader	21	Rdr2 Duress	R21 Rdr2 Duress
R21:S19	33021419	330L419	2-Door Reader	21	Rdr1 Fault	R21 Rdr1 Fault
R21:S20	33021420	330L420	2-Door Reader	21	Rdr2 Fault	R21 Rdr2 Fault
R21:S21	14321421	143L421	2-Door Reader	21	LAN Comms	R21 LAN Comms
R21:S22	15021422	150L422	2-Door Reader	21	Spare1	R21 Spare1
R21:S23	15021423	150L423	2-Door Reader	21	Spare2	R21 Spare2
R22:Z01	14022401	140M401	2-Door Reader	22	Door1 Reed	R22 Door1 Reed
R22:Z02	14022402	140M402	2-Door Reader	22	Door2 Reed	R22 Door2 Reed
R22:Z03	14022403	140M403	2-Door Reader	22	Door1 Tongue	R22 Door1 Tongue
R22:Z04	14022404	140M404	2-Door Reader	22	Door2 Tongue	R22 Door2 Tongue
R22:Z05	14022405	140M405	2-Door Reader	22	Door1 REX	R22 Door1 REX
R22:Z06	14022406	140M406	2-Door Reader	22	Door2 REX	R22 Door2 REX
R22:Z07	14022407	140M407	2-Door Reader	22	Door1 REN	R22 Door1 REN
R22:Z08	14022408	140M408	2-Door Reader	22	Door2 REN	R22 Door2 REN
R22:S01	43222401	432M401	2-Door Reader	22	Door1 Fault	R22 Door1 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R22:S02	43222402	432M402	2-Door Reader	22	Door2 Fault	R22 Door2 Fault
R22:S03	42322403	423M403	2-Door Reader	22	Door1 Forced	R22 Door1 Forced
R22:S04	42322404	423M404	2-Door Reader	22	Door2 Forced	R22 Door2 Forced
R22:S05	42622405	426M405	2-Door Reader	22	Door1 DOTL	R22 Door1 DOTL
R22:S06	42622406	426M406	2-Door Reader	22	Door2 DOTL	R22 Door2 DOTL
R22:S07	14522407	145M407	2-Door Reader	22	Cabinet Tamper	R22 Cabinet Tamper
R22:S08	30122408	301M408	2-Door Reader	22	AC fail	R22 AC fail
R22:S09	30222409	302M409	2-Door Reader	22	Low Battery	R22 Low Battery
R22:S10	30022410	300M410	2-Door Reader	22	LAN Fuse	R22 LAN Fuse
R22:S11	30022411	300M411	2-Door Reader	22	Detector Fuse	R22 Detector Fuse
R22:S12	30022412	300M412	2-Door Reader	22	Low Volts	R22 Low Volts
R22:S13	30022413	300M413	2-Door Reader	22	PS Fail	R22 PS Fail
R22:S14	30922414	309M414	2-Door Reader	22	Battery Test	R22 Battery Test
R22:S15	15022415	150M415	2-Door Reader	22	Rdr1 Invalid	R22 Rdr1 Invalid
R22:S16	15022416	150M416	2-Door Reader	22	Rdr2 Invalid	R22 Rdr2 Invalid
R22:S17	12222417	122M417	2-Door Reader	22	Rdr1 Duress	R22 Rdr1 Duress
R22:S18	12222418	122M418	2-Door Reader	22	Rdr2 Duress	R22 Rdr2 Duress
R22:S19	33022419	330M419	2-Door Reader	22	Rdr1 Fault	R22 Rdr1 Fault
R22:S20	33022420	330M420	2-Door Reader	22	Rdr2 Fault	R22 Rdr2 Fault
R22:S21	14322421	143M421	2-Door Reader	22	LAN Comms	R22 LAN Comms
R22:S22	15022422	150M422	2-Door Reader	22	Spare1	R22 Spare1
R22:S23	15022423	150M423	2-Door Reader	22	Spare2	R22 Spare2
R23:Z01	14023401	140N401	2-Door Reader	23	Door1 Reed	R23 Door1 Reed
R23:Z02	14023402	140N402	2-Door Reader	23	Door2 Reed	R23 Door2 Reed
R23:Z03	14023403	140N403	2-Door Reader	23	Door1 Tongue	R23 Door1 Tongue
R23:Z04	14023404	140N404	2-Door Reader	23	Door2 Tongue	R23 Door2 Tongue
R23:Z05	14023405	140N405	2-Door Reader	23	Door1 REX	R23 Door1 REX
R23:Z06	14023406	140N406	2-Door Reader	23	Door2 REX	R23 Door2 REX
R23:Z07	14023407	140N407	2-Door Reader	23	Door1 REN	R23 Door1 REN
R23:Z08	14023408	140N408	2-Door Reader	23	Door2 REN	R23 Door2 REN
R23:S01	43223401	432N401	2-Door Reader	23	Door1 Fault	R23 Door1 Fault
R23:S02	43223402	432N402	2-Door Reader	23	Door2 Fault	R23 Door2 Fault
R23:S03	42323403	423N403	2-Door Reader	23	Door1 Forced	R23 Door1 Forced
R23:S04	42323404	423N404	2-Door Reader	23	Door2 Forced	R23 Door2 Forced
R23:S05	42623405	426N405	2-Door Reader	23	Door1 DOTL	R23 Door1 DOTL
R23:S06	42623406	426N406	2-Door Reader	23	Door2 DOTL	R23 Door2 DOTL
R23:S07	14523407	145N407	2-Door Reader	23	Cabinet Tamper	R23 Cabinet Tamper
R23:S08	30123408	301N408	2-Door Reader	23	AC fail	R23 AC fail
R23:S09	30223409	302N409	2-Door Reader	23	Low Battery	R23 Low Battery
R23:S10	30023410	300N410	2-Door Reader	23	LAN Fuse	R23 LAN Fuse
R23:S11	30023411	300N411	2-Door Reader	23	Detector Fuse	R23 Detector Fuse
R23:S12	30023412	300N412	2-Door Reader	23	Low Volts	R23 Low Volts
R23:S13	30023413	300N413	2-Door Reader	23	PS Fail	R23 PS Fail
R23:S14	30923414	309N414	2-Door Reader	23	Battery Test	R23 Battery Test
R23:S15	15023415	150N415	2-Door Reader	23	Rdr1 Invalid	R23 Rdr1 Invalid
R23:S16	15023416	150N416	2-Door Reader	23	Rdr2 Invalid	R23 Rdr2 Invalid
R23:S17	12223417	122N417	2-Door Reader	23	Rdr1 Duress	R23 Rdr1 Duress
R23:S18	12223418	122N418	2-Door Reader	23	Rdr2 Duress	R23 Rdr2 Duress
R23:S19	33023419	330N419	2-Door Reader	23	Rdr1 Fault	R23 Rdr1 Fault
R23:S20	33023420	330N420	2-Door Reader	23	Rdr2 Fault	R23 Rdr2 Fault
R23:S21	14323421	143N421	2-Door Reader	23	LAN Comms	R23 LAN Comms
R23:S22	15023422	150N422	2-Door Reader	23	Spare1	R23 Spare1
R23:S23	15023423	150N423	2-Door Reader	23	Spare2	R23 Spare2
R24:Z01	14024401	140O401	2-Door Reader	24	Door1 Reed	R24 Door1 Reed
R24:Z02	14024402	140O402	2-Door Reader	24	Door2 Reed	R24 Door2 Reed
R24:Z03	14024403	140O403	2-Door Reader	24	Door1 Tongue	R24 Door1 Tongue
R24:Z04	14024404	140O404	2-Door Reader	24	Door2 Tongue	R24 Door2 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R24:Z05	14024405	140O405	2-Door Reader	24	Door1 REX	R24 Door1 REX
R24:Z06	14024406	140O406	2-Door Reader	24	Door2 REX	R24 Door2 REX
R24:Z07	14024407	140O407	2-Door Reader	24	Door1 REN	R24 Door1 REN
R24:Z08	14024408	140O408	2-Door Reader	24	Door2 REN	R24 Door2 REN
R24:S01	43224401	432O401	2-Door Reader	24	Door1 Fault	R24 Door1 Fault
R24:S02	43224402	432O402	2-Door Reader	24	Door2 Fault	R24 Door2 Fault
R24:S03	42324403	423O403	2-Door Reader	24	Door1 Forced	R24 Door1 Forced
R24:S04	42324404	423O404	2-Door Reader	24	Door2 Forced	R24 Door2 Forced
R24:S05	42624405	426O405	2-Door Reader	24	Door1 DOTL	R24 Door1 DOTL
R24:S06	42624406	426O406	2-Door Reader	24	Door2 DOTL	R24 Door2 DOTL
R24:S07	14524407	145O407	2-Door Reader	24	Cabinet Tamper	R24 Cabinet Tamper
R24:S08	30124408	301O408	2-Door Reader	24	AC fail	R24 AC fail
R24:S09	30224409	302O409	2-Door Reader	24	Low Battery	R24 Low Battery
R24:S10	30024410	300O410	2-Door Reader	24	LAN Fuse	R24 LAN Fuse
R24:S11	30024411	300O411	2-Door Reader	24	Detector Fuse	R24 Detector Fuse
R24:S12	30024412	300O412	2-Door Reader	24	Low Volts	R24 Low Volts
R24:S13	30024413	300O413	2-Door Reader	24	PS Fail	R24 PS Fail
R24:S14	30924414	309O414	2-Door Reader	24	Battery Test	R24 Battery Test
R24:S15	15024415	150O415	2-Door Reader	24	Rdr1 Invalid	R24 Rdr1 Invalid
R24:S16	15024416	150O416	2-Door Reader	24	Rdr2 Invalid	R24 Rdr2 Invalid
R24:S17	12224417	122O417	2-Door Reader	24	Rdr1 Duress	R24 Rdr1 Duress
R24:S18	12224418	122O418	2-Door Reader	24	Rdr2 Duress	R24 Rdr2 Duress
R24:S19	33024419	330O419	2-Door Reader	24	Rdr1 Fault	R24 Rdr1 Fault
R24:S20	33024420	330O420	2-Door Reader	24	Rdr2 Fault	R24 Rdr2 Fault
R24:S21	14324421	143O421	2-Door Reader	24	LAN Comms	R24 LAN Comms
R24:S22	15024422	150O422	2-Door Reader	24	Spare1	R24 Spare1
R24:S23	15024423	150O423	2-Door Reader	24	Spare2	R24 Spare2
R25:Z01	14025401	140P401	2-Door Reader	25	Door1 Reed	R25 Door1 Reed
R25:Z02	14025402	140P402	2-Door Reader	25	Door2 Reed	R25 Door2 Reed
R25:Z03	14025403	140P403	2-Door Reader	25	Door1 Tongue	R25 Door1 Tongue
R25:Z04	14025404	140P404	2-Door Reader	25	Door2 Tongue	R25 Door2 Tongue
R25:Z05	14025405	140P405	2-Door Reader	25	Door1 REX	R25 Door1 REX
R25:Z06	14025406	140P406	2-Door Reader	25	Door2 REX	R25 Door2 REX
R25:Z07	14025407	140P407	2-Door Reader	25	Door1 REN	R25 Door1 REN
R25:Z08	14025408	140P408	2-Door Reader	25	Door2 REN	R25 Door2 REN
R25:S01	43225401	432P401	2-Door Reader	25	Door1 Fault	R25 Door1 Fault
R25:S02	43225402	432P402	2-Door Reader	25	Door2 Fault	R25 Door2 Fault
R25:S03	42325403	423P403	2-Door Reader	25	Door1 Forced	R25 Door1 Forced
R25:S04	42325404	423P404	2-Door Reader	25	Door2 Forced	R25 Door2 Forced
R25:S05	42625405	426P405	2-Door Reader	25	Door1 DOTL	R25 Door1 DOTL
R25:S06	42625406	426P406	2-Door Reader	25	Door2 DOTL	R25 Door2 DOTL
R25:S07	14525407	145P407	2-Door Reader	25	Cabinet Tamper	R25 Cabinet Tamper
R25:S08	30125408	301P408	2-Door Reader	25	AC fail	R25 AC fail
R25:S09	30225409	302P409	2-Door Reader	25	Low Battery	R25 Low Battery
R25:S10	30025410	300P410	2-Door Reader	25	LAN Fuse	R25 LAN Fuse
R25:S11	30025411	300P411	2-Door Reader	25	Detector Fuse	R25 Detector Fuse
R25:S12	30025412	300P412	2-Door Reader	25	Low Volts	R25 Low Volts
R25:S13	30025413	300P413	2-Door Reader	25	PS Fail	R25 PS Fail
R25:S14	30925414	309P414	2-Door Reader	25	Battery Test	R25 Battery Test
R25:S15	15025415	150P415	2-Door Reader	25	Rdr1 Invalid	R25 Rdr1 Invalid
R25:S16	15025416	150P416	2-Door Reader	25	Rdr2 Invalid	R25 Rdr2 Invalid
R25:S17	12225417	122P417	2-Door Reader	25	Rdr1 Duress	R25 Rdr1 Duress
R25:S18	12225418	122P418	2-Door Reader	25	Rdr2 Duress	R25 Rdr2 Duress
R25:S19	33025419	330P419	2-Door Reader	25	Rdr1 Fault	R25 Rdr1 Fault
R25:S20	33025420	330P420	2-Door Reader	25	Rdr2 Fault	R25 Rdr2 Fault
R25:S21	14325421	143P421	2-Door Reader	25	LAN Comms	R25 LAN Comms
R25:S22	15025422	150P422	2-Door Reader	25	Spare1	R25 Spare1

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R25:S23	15025423	150P423	2-Door Reader	25	Spare2	R25 Spare2
R26:Z01	14026401	140Q401	2-Door Reader	26	Door1 Reed	R26 Door1 Reed
R26:Z02	14026402	140Q402	2-Door Reader	26	Door2 Reed	R26 Door2 Reed
R26:Z03	14026403	140Q403	2-Door Reader	26	Door1 Tongue	R26 Door1 Tongue
R26:Z04	14026404	140Q404	2-Door Reader	26	Door2 Tongue	R26 Door2 Tongue
R26:Z05	14026405	140Q405	2-Door Reader	26	Door1 REX	R26 Door1 REX
R26:Z06	14026406	140Q406	2-Door Reader	26	Door2 REX	R26 Door2 REX
R26:Z07	14026407	140Q407	2-Door Reader	26	Door1 REN	R26 Door1 REN
R26:Z08	14026408	140Q408	2-Door Reader	26	Door2 REN	R26 Door2 REN
R26:S01	43226401	432Q401	2-Door Reader	26	Door1 Fault	R26 Door1 Fault
R26:S02	43226402	432Q402	2-Door Reader	26	Door2 Fault	R26 Door2 Fault
R26:S03	42326403	423Q403	2-Door Reader	26	Door1 Forced	R26 Door1 Forced
R26:S04	42326404	423Q404	2-Door Reader	26	Door2 Forced	R26 Door2 Forced
R26:S05	42626405	426Q405	2-Door Reader	26	Door1 DOTL	R26 Door1 DOTL
R26:S06	42626406	426Q406	2-Door Reader	26	Door2 DOTL	R26 Door2 DOTL
R26:S07	14526407	145Q407	2-Door Reader	26	Cabinet Tamper	R26 Cabinet Tamper
R26:S08	30126408	301Q408	2-Door Reader	26	AC fail	R26 AC fail
R26:S09	30226409	302Q409	2-Door Reader	26	Low Battery	R26 Low Battery
R26:S10	30026410	300Q410	2-Door Reader	26	LAN Fuse	R26 LAN Fuse
R26:S11	30026411	300Q411	2-Door Reader	26	Detector Fuse	R26 Detector Fuse
R26:S12	30026412	300Q412	2-Door Reader	26	Low Volts	R26 Low Volts
R26:S13	30026413	300Q413	2-Door Reader	26	PS Fail	R26 PS Fail
R26:S14	30926414	309Q414	2-Door Reader	26	Battery Test	R26 Battery Test
R26:S15	15026415	150Q415	2-Door Reader	26	Rdr1 Invalid	R26 Rdr1 Invalid
R26:S16	15026416	150Q416	2-Door Reader	26	Rdr2 Invalid	R26 Rdr2 Invalid
R26:S17	12226417	122Q417	2-Door Reader	26	Rdr1 Duress	R26 Rdr1 Duress
R26:S18	12226418	122Q418	2-Door Reader	26	Rdr2 Duress	R26 Rdr2 Duress
R26:S19	33026419	330Q419	2-Door Reader	26	Rdr1 Fault	R26 Rdr1 Fault
R26:S20	33026420	330Q420	2-Door Reader	26	Rdr2 Fault	R26 Rdr2 Fault
R26:S21	14326421	143Q421	2-Door Reader	26	LAN Comms	R26 LAN Comms
R26:S22	15026422	150Q422	2-Door Reader	26	Spare1	R26 Spare1
R26:S23	15026423	150Q423	2-Door Reader	26	Spare2	R26 Spare2
R27:Z01	14027401	140R401	2-Door Reader	27	Door1 Reed	R27 Door1 Reed
R27:Z02	14027402	140R402	2-Door Reader	27	Door2 Reed	R27 Door2 Reed
R27:Z03	14027403	140R403	2-Door Reader	27	Door1 Tongue	R27 Door1 Tongue
R27:Z04	14027404	140R404	2-Door Reader	27	Door2 Tongue	R27 Door2 Tongue
R27:Z05	14027405	140R405	2-Door Reader	27	Door1 REX	R27 Door1 REX
R27:Z06	14027406	140R406	2-Door Reader	27	Door2 REX	R27 Door2 REX
R27:Z07	14027407	140R407	2-Door Reader	27	Door1 REN	R27 Door1 REN
R27:Z08	14027408	140R408	2-Door Reader	27	Door2 REN	R27 Door2 REN
R27:S01	43227401	432R401	2-Door Reader	27	Door1 Fault	R27 Door1 Fault
R27:S02	43227402	432R402	2-Door Reader	27	Door2 Fault	R27 Door2 Fault
R27:S03	42327403	423R403	2-Door Reader	27	Door1 Forced	R27 Door1 Forced
R27:S04	42327404	423R404	2-Door Reader	27	Door2 Forced	R27 Door2 Forced
R27:S05	42627405	426R405	2-Door Reader	27	Door1 DOTL	R27 Door1 DOTL
R27:S06	42627406	426R406	2-Door Reader	27	Door2 DOTL	R27 Door2 DOTL
R27:S07	14527407	145R407	2-Door Reader	27	Cabinet Tamper	R27 Cabinet Tamper
R27:S08	30127408	301R408	2-Door Reader	27	AC fail	R27 AC fail
R27:S09	30227409	302R409	2-Door Reader	27	Low Battery	R27 Low Battery
R27:S10	30027410	300R410	2-Door Reader	27	LAN Fuse	R27 LAN Fuse
R27:S11	30027411	300R411	2-Door Reader	27	Detector Fuse	R27 Detector Fuse
R27:S12	30027412	300R412	2-Door Reader	27	Low Volts	R27 Low Volts
R27:S13	30027413	300R413	2-Door Reader	27	PS Fail	R27 PS Fail
R27:S14	30927414	309R414	2-Door Reader	27	Battery Test	R27 Battery Test
R27:S15	15027415	150R415	2-Door Reader	27	Rdr1 Invalid	R27 Rdr1 Invalid
R27:S16	15027416	150R416	2-Door Reader	27	Rdr2 Invalid	R27 Rdr2 Invalid
R27:S17	12227417	122R417	2-Door Reader	27	Rdr1 Duress	R27 Rdr1 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R27:S18	12227418	122R418	2-Door Reader	27	Rdr2 Duress	R27 Rdr2 Duress
R27:S19	33027419	330R419	2-Door Reader	27	Rdr1 Fault	R27 Rdr1 Fault
R27:S20	33027420	330R420	2-Door Reader	27	Rdr2 Fault	R27 Rdr2 Fault
R27:S21	14327421	143R421	2-Door Reader	27	LAN Comms	R27 LAN Comms
R27:S22	15027422	150R422	2-Door Reader	27	Spare1	R27 Spare1
R27:S23	15027423	150R423	2-Door Reader	27	Spare2	R27 Spare2
R28:Z01	14028401	140S401	2-Door Reader	28	Door1 Reed	R28 Door1 Reed
R28:Z02	14028402	140S402	2-Door Reader	28	Door2 Reed	R28 Door2 Reed
R28:Z03	14028403	140S403	2-Door Reader	28	Door1 Tongue	R28 Door1 Tongue
R28:Z04	14028404	140S404	2-Door Reader	28	Door2 Tongue	R28 Door2 Tongue
R28:Z05	14028405	140S405	2-Door Reader	28	Door1 REX	R28 Door1 REX
R28:Z06	14028406	140S406	2-Door Reader	28	Door2 REX	R28 Door2 REX
R28:Z07	14028407	140S407	2-Door Reader	28	Door1 REN	R28 Door1 REN
R28:Z08	14028408	140S408	2-Door Reader	28	Door2 REN	R28 Door2 REN
R28:S01	43228401	432S401	2-Door Reader	28	Door1 Fault	R28 Door1 Fault
R28:S02	43228402	432S402	2-Door Reader	28	Door2 Fault	R28 Door2 Fault
R28:S03	42328403	423S403	2-Door Reader	28	Door1 Forced	R28 Door1 Forced
R28:S04	42328404	423S404	2-Door Reader	28	Door2 Forced	R28 Door2 Forced
R28:S05	42628405	426S405	2-Door Reader	28	Door1 DOTL	R28 Door1 DOTL
R28:S06	42628406	426S406	2-Door Reader	28	Door2 DOTL	R28 Door2 DOTL
R28:S07	14528407	145S407	2-Door Reader	28	Cabinet Tamper	R28 Cabinet Tamper
R28:S08	30128408	301S408	2-Door Reader	28	AC fail	R28 AC fail
R28:S09	30228409	302S409	2-Door Reader	28	Low Battery	R28 Low Battery
R28:S10	30028410	300S410	2-Door Reader	28	LAN Fuse	R28 LAN Fuse
R28:S11	30028411	300S411	2-Door Reader	28	Detector Fuse	R28 Detector Fuse
R28:S12	30028412	300S412	2-Door Reader	28	Low Volts	R28 Low Volts
R28:S13	30028413	300S413	2-Door Reader	28	PS Fail	R28 PS Fail
R28:S14	30928414	309S414	2-Door Reader	28	Battery Test	R28 Battery Test
R28:S15	15028415	150S415	2-Door Reader	28	Rdr1 Invalid	R28 Rdr1 Invalid
R28:S16	15028416	150S416	2-Door Reader	28	Rdr2 Invalid	R28 Rdr2 Invalid
R28:S17	12228417	122S417	2-Door Reader	28	Rdr1 Duress	R28 Rdr1 Duress
R28:S18	12228418	122S418	2-Door Reader	28	Rdr2 Duress	R28 Rdr2 Duress
R28:S19	33028419	330S419	2-Door Reader	28	Rdr1 Fault	R28 Rdr1 Fault
R28:S20	33028420	330S420	2-Door Reader	28	Rdr2 Fault	R28 Rdr2 Fault
R28:S21	14328421	143S421	2-Door Reader	28	LAN Comms	R28 LAN Comms
R28:S22	15028422	150S422	2-Door Reader	28	Spare1	R28 Spare1
R28:S23	15028423	150S423	2-Door Reader	28	Spare2	R28 Spare2
R29:Z01	14029401	140T401	2-Door Reader	29	Door1 Reed	R29 Door1 Reed
R29:Z02	14029402	140T402	2-Door Reader	29	Door2 Reed	R29 Door2 Reed
R29:Z03	14029403	140T403	2-Door Reader	29	Door1 Tongue	R29 Door1 Tongue
R29:Z04	14029404	140T404	2-Door Reader	29	Door2 Tongue	R29 Door2 Tongue
R29:Z05	14029405	140T405	2-Door Reader	29	Door1 REX	R29 Door1 REX
R29:Z06	14029406	140T406	2-Door Reader	29	Door2 REX	R29 Door2 REX
R29:Z07	14029407	140T407	2-Door Reader	29	Door1 REN	R29 Door1 REN
R29:Z08	14029408	140T408	2-Door Reader	29	Door2 REN	R29 Door2 REN
R29:S01	43229401	432T401	2-Door Reader	29	Door1 Fault	R29 Door1 Fault
R29:S02	43229402	432T402	2-Door Reader	29	Door2 Fault	R29 Door2 Fault
R29:S03	42329403	423T403	2-Door Reader	29	Door1 Forced	R29 Door1 Forced
R29:S04	42329404	423T404	2-Door Reader	29	Door2 Forced	R29 Door2 Forced
R29:S05	42629405	426T405	2-Door Reader	29	Door1 DOTL	R29 Door1 DOTL
R29:S06	42629406	426T406	2-Door Reader	29	Door2 DOTL	R29 Door2 DOTL
R29:S07	14529407	145T407	2-Door Reader	29	Cabinet Tamper	R29 Cabinet Tamper
R29:S08	30129408	301T408	2-Door Reader	29	AC fail	R29 AC fail
R29:S09	30229409	302T409	2-Door Reader	29	Low Battery	R29 Low Battery
R29:S10	30029410	300T410	2-Door Reader	29	LAN Fuse	R29 LAN Fuse
R29:S11	30029411	300T411	2-Door Reader	29	Detector Fuse	R29 Detector Fuse
R29:S12	30029412	300T412	2-Door Reader	29	Low Volts	R29 Low Volts

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R29:S13	30029413	300T413	2-Door Reader	29	PS Fail	R29 PS Fail
R29:S14	30929414	309T414	2-Door Reader	29	Battery Test	R29 Battery Test
R29:S15	15029415	150T415	2-Door Reader	29	Rdr1 Invalid	R29 Rdr1 Invalid
R29:S16	15029416	150T416	2-Door Reader	29	Rdr2 Invalid	R29 Rdr2 Invalid
R29:S17	12229417	122T417	2-Door Reader	29	Rdr1 Duress	R29 Rdr1 Duress
R29:S18	12229418	122T418	2-Door Reader	29	Rdr2 Duress	R29 Rdr2 Duress
R29:S19	33029419	330T419	2-Door Reader	29	Rdr1 Fault	R29 Rdr1 Fault
R29:S20	33029420	330T420	2-Door Reader	29	Rdr2 Fault	R29 Rdr2 Fault
R29:S21	14329421	143T421	2-Door Reader	29	LAN Comms	R29 LAN Comms
R29:S22	15029422	150T422	2-Door Reader	29	Spare1	R29 Spare1
R29:S23	15029423	150T423	2-Door Reader	29	Spare2	R29 Spare2
R30:Z01	14030401	140U401	2-Door Reader	30	Door1 Reed	R30 Door1 Reed
R30:Z02	14030402	140U402	2-Door Reader	30	Door2 Reed	R30 Door2 Reed
R30:Z03	14030403	140U403	2-Door Reader	30	Door1 Tongue	R30 Door1 Tongue
R30:Z04	14030404	140U404	2-Door Reader	30	Door2 Tongue	R30 Door2 Tongue
R30:Z05	14030405	140U405	2-Door Reader	30	Door1 REX	R30 Door1 REX
R30:Z06	14030406	140U406	2-Door Reader	30	Door2 REX	R30 Door2 REX
R30:Z07	14030407	140U407	2-Door Reader	30	Door1 REN	R30 Door1 REN
R30:Z08	14030408	140U408	2-Door Reader	30	Door2 REN	R30 Door2 REN
R30:S01	43230401	432U401	2-Door Reader	30	Door1 Fault	R30 Door1 Fault
R30:S02	43230402	432U402	2-Door Reader	30	Door2 Fault	R30 Door2 Fault
R30:S03	42330403	423U403	2-Door Reader	30	Door1 Forced	R30 Door1 Forced
R30:S04	42330404	423U404	2-Door Reader	30	Door2 Forced	R30 Door2 Forced
R30:S05	42630405	426U405	2-Door Reader	30	Door1 DOTL	R30 Door1 DOTL
R30:S06	42630406	426U406	2-Door Reader	30	Door2 DOTL	R30 Door2 DOTL
R30:S07	14530407	145U407	2-Door Reader	30	Cabinet Tamper	R30 Cabinet Tamper
R30:S08	30130408	301U408	2-Door Reader	30	AC fail	R30 AC fail
R30:S09	30230409	302U409	2-Door Reader	30	Low Battery	R30 Low Battery
R30:S10	30030410	300U410	2-Door Reader	30	LAN Fuse	R30 LAN Fuse
R30:S11	30030411	300U411	2-Door Reader	30	Detector Fuse	R30 Detector Fuse
R30:S12	30030412	300U412	2-Door Reader	30	Low Volts	R30 Low Volts
R30:S13	30030413	300U413	2-Door Reader	30	PS Fail	R30 PS Fail
R30:S14	30930414	309U414	2-Door Reader	30	Battery Test	R30 Battery Test
R30:S15	15030415	150U415	2-Door Reader	30	Rdr1 Invalid	R30 Rdr1 Invalid
R30:S16	15030416	150U416	2-Door Reader	30	Rdr2 Invalid	R30 Rdr2 Invalid
R30:S17	12230417	122U417	2-Door Reader	30	Rdr1 Duress	R30 Rdr1 Duress
R30:S18	12230418	122U418	2-Door Reader	30	Rdr2 Duress	R30 Rdr2 Duress
R30:S19	33030419	330U419	2-Door Reader	30	Rdr1 Fault	R30 Rdr1 Fault
R30:S20	33030420	330U420	2-Door Reader	30	Rdr2 Fault	R30 Rdr2 Fault
R30:S21	14330421	143U421	2-Door Reader	30	LAN Comms	R30 LAN Comms
R30:S22	15030422	150U422	2-Door Reader	30	Spare1	R30 Spare1
R30:S23	15030423	150U423	2-Door Reader	30	Spare2	R30 Spare2
R31:Z01	14031401	140V401	2-Door Reader	31	Door1 Reed	R31 Door1 Reed
R31:Z02	14031402	140V402	2-Door Reader	31	Door2 Reed	R31 Door2 Reed
R31:Z03	14031403	140V403	2-Door Reader	31	Door1 Tongue	R31 Door1 Tongue
R31:Z04	14031404	140V404	2-Door Reader	31	Door2 Tongue	R31 Door2 Tongue
R31:Z05	14031405	140V405	2-Door Reader	31	Door1 REX	R31 Door1 REX
R31:Z06	14031406	140V406	2-Door Reader	31	Door2 REX	R31 Door2 REX
R31:Z07	14031407	140V407	2-Door Reader	31	Door1 REN	R31 Door1 REN
R31:Z08	14031408	140V408	2-Door Reader	31	Door2 REN	R31 Door2 REN
R31:S01	43231401	432V401	2-Door Reader	31	Door1 Fault	R31 Door1 Fault
R31:S02	43231402	432V402	2-Door Reader	31	Door2 Fault	R31 Door2 Fault
R31:S03	42331403	423V403	2-Door Reader	31	Door1 Forced	R31 Door1 Forced
R31:S04	42331404	423V404	2-Door Reader	31	Door2 Forced	R31 Door2 Forced
R31:S05	42631405	426V405	2-Door Reader	31	Door1 DOTL	R31 Door1 DOTL
R31:S06	42631406	426V406	2-Door Reader	31	Door2 DOTL	R31 Door2 DOTL
R31:S07	14531407	145V407	2-Door Reader	31	Cabinet Tamper	R31 Cabinet Tamper

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R31:S08	30131408	301V408	2-Door Reader	31	AC fail	R31 AC fail
R31:S09	30231409	302V409	2-Door Reader	31	Low Battery	R31 Low Battery
R31:S10	30031410	300V410	2-Door Reader	31	LAN Fuse	R31 LAN Fuse
R31:S11	30031411	300V411	2-Door Reader	31	Detector Fuse	R31 Detector Fuse
R31:S12	30031412	300V412	2-Door Reader	31	Low Volts	R31 Low Volts
R31:S13	30031413	300V413	2-Door Reader	31	PS Fail	R31 PS Fail
R31:S14	30931414	309V414	2-Door Reader	31	Battery Test	R31 Battery Test
R31:S15	15031415	150V415	2-Door Reader	31	Rdr1 Invalid	R31 Rdr1 Invalid
R31:S16	15031416	150V416	2-Door Reader	31	Rdr2 Invalid	R31 Rdr2 Invalid
R31:S17	12231417	122V417	2-Door Reader	31	Rdr1 Duress	R31 Rdr1 Duress
R31:S18	12231418	122V418	2-Door Reader	31	Rdr2 Duress	R31 Rdr2 Duress
R31:S19	33031419	330V419	2-Door Reader	31	Rdr1 Fault	R31 Rdr1 Fault
R31:S20	33031420	330V420	2-Door Reader	31	Rdr2 Fault	R31 Rdr2 Fault
R31:S21	14331421	143V421	2-Door Reader	31	LAN Comms	R31 LAN Comms
R31:S22	15031422	150V422	2-Door Reader	31	Spare1	R31 Spare1
R31:S23	15031423	150V423	2-Door Reader	31	Spare2	R31 Spare2
R32:Z01	14032401	140W401	2-Door Reader	32	Door1 Reed	R32 Door1 Reed
R32:Z02	14032402	140W402	2-Door Reader	32	Door2 Reed	R32 Door2 Reed
R32:Z03	14032403	140W403	2-Door Reader	32	Door1 Tongue	R32 Door1 Tongue
R32:Z04	14032404	140W404	2-Door Reader	32	Door2 Tongue	R32 Door2 Tongue
R32:Z05	14032405	140W405	2-Door Reader	32	Door1 REX	R32 Door1 REX
R32:Z06	14032406	140W406	2-Door Reader	32	Door2 REX	R32 Door2 REX
R32:Z07	14032407	140W407	2-Door Reader	32	Door1 REN	R32 Door1 REN
R32:Z08	14032408	140W408	2-Door Reader	32	Door2 REN	R32 Door2 REN
R32:S01	43232401	432W401	2-Door Reader	32	Door1 Fault	R32 Door1 Fault
R32:S02	43232402	432W402	2-Door Reader	32	Door2 Fault	R32 Door2 Fault
R32:S03	42332403	423W403	2-Door Reader	32	Door1 Forced	R32 Door1 Forced
R32:S04	42332404	423W404	2-Door Reader	32	Door2 Forced	R32 Door2 Forced
R32:S05	42632405	426W405	2-Door Reader	32	Door1 DOTL	R32 Door1 DOTL
R32:S06	42632406	426W406	2-Door Reader	32	Door2 DOTL	R32 Door2 DOTL
R32:S07	14532407	145W407	2-Door Reader	32	Cabinet Tamper	R32 Cabinet Tamper
R32:S08	30132408	301W408	2-Door Reader	32	AC fail	R32 AC fail
R32:S09	30232409	302W409	2-Door Reader	32	Low Battery	R32 Low Battery
R32:S10	30032410	300W410	2-Door Reader	32	LAN Fuse	R32 LAN Fuse
R32:S11	30032411	300W411	2-Door Reader	32	Detector Fuse	R32 Detector Fuse
R32:S12	30032412	300W412	2-Door Reader	32	Low Volts	R32 Low Volts
R32:S13	30032413	300W413	2-Door Reader	32	PS Fail	R32 PS Fail
R32:S14	30932414	309W414	2-Door Reader	32	Battery Test	R32 Battery Test
R32:S15	15032415	150W415	2-Door Reader	32	Rdr1 Invalid	R32 Rdr1 Invalid
R32:S16	15032416	150W416	2-Door Reader	32	Rdr2 Invalid	R32 Rdr2 Invalid
R32:S17	12232417	122W417	2-Door Reader	32	Rdr1 Duress	R32 Rdr1 Duress
R32:S18	12232418	122W418	2-Door Reader	32	Rdr2 Duress	R32 Rdr2 Duress
R32:S19	33032419	330W419	2-Door Reader	32	Rdr1 Fault	R32 Rdr1 Fault
R32:S20	33032420	330W420	2-Door Reader	32	Rdr2 Fault	R32 Rdr2 Fault
R32:S21	14332421	143W421	2-Door Reader	32	LAN Comms	R32 LAN Comms
R32:S22	15032422	150W422	2-Door Reader	32	Spare1	R32 Spare1
R32:S23	15032423	150W423	2-Door Reader	32	Spare2	R32 Spare2
R33:Z01	14033401	140X401	2-Door Reader	33	Door1 Reed	R33 Door1 Reed
R33:Z02	14033402	140X402	2-Door Reader	33	Door2 Reed	R33 Door2 Reed
R33:Z03	14033403	140X403	2-Door Reader	33	Door1 Tongue	R33 Door1 Tongue
R33:Z04	14033404	140X404	2-Door Reader	33	Door2 Tongue	R33 Door2 Tongue
R33:Z05	14033405	140X405	2-Door Reader	33	Door1 REX	R33 Door1 REX
R33:Z06	14033406	140X406	2-Door Reader	33	Door2 REX	R33 Door2 REX
R33:Z07	14033407	140X407	2-Door Reader	33	Door1 REN	R33 Door1 REN
R33:Z08	14033408	140X408	2-Door Reader	33	Door2 REN	R33 Door2 REN
R33:S01	43233401	432X401	2-Door Reader	33	Door1 Fault	R33 Door1 Fault
R33:S02	43233402	432X402	2-Door Reader	33	Door2 Fault	R33 Door2 Fault

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R33:S03	42333403	423X403	2-Door Reader	33	Door1 Forced	R33 Door1 Forced
R33:S04	42333404	423X404	2-Door Reader	33	Door2 Forced	R33 Door2 Forced
R33:S05	42633405	426X405	2-Door Reader	33	Door1 DOTL	R33 Door1 DOTL
R33:S06	42633406	426X406	2-Door Reader	33	Door2 DOTL	R33 Door2 DOTL
R33:S07	14533407	145X407	2-Door Reader	33	Cabinet Tamper	R33 Cabinet Tamper
R33:S08	30133408	301X408	2-Door Reader	33	AC fail	R33 AC fail
R33:S09	30233409	302X409	2-Door Reader	33	Low Battery	R33 Low Battery
R33:S10	30033410	300X410	2-Door Reader	33	LAN Fuse	R33 LAN Fuse
R33:S11	30033411	300X411	2-Door Reader	33	Detector Fuse	R33 Detector Fuse
R33:S12	30033412	300X412	2-Door Reader	33	Low Volts	R33 Low Volts
R33:S13	30033413	300X413	2-Door Reader	33	PS Fail	R33 PS Fail
R33:S14	30933414	309X414	2-Door Reader	33	Battery Test	R33 Battery Test
R33:S15	15033415	150X415	2-Door Reader	33	Rdr1 Invalid	R33 Rdr1 Invalid
R33:S16	15033416	150X416	2-Door Reader	33	Rdr2 Invalid	R33 Rdr2 Invalid
R33:S17	12233417	122X417	2-Door Reader	33	Rdr1 Duress	R33 Rdr1 Duress
R33:S18	12233418	122X418	2-Door Reader	33	Rdr2 Duress	R33 Rdr2 Duress
R33:S19	33033419	330X419	2-Door Reader	33	Rdr1 Fault	R33 Rdr1 Fault
R33:S20	33033420	330X420	2-Door Reader	33	Rdr2 Fault	R33 Rdr2 Fault
R33:S21	14333421	143X421	2-Door Reader	33	LAN Comms	R33 LAN Comms
R33:S22	15033422	150X422	2-Door Reader	33	Spare1	R33 Spare1
R33:S23	15033423	150X423	2-Door Reader	33	Spare2	R33 Spare2
R34:Z01	14034401	140Y401	2-Door Reader	34	Door1 Reed	R34 Door1 Reed
R34:Z02	14034402	140Y402	2-Door Reader	34	Door2 Reed	R34 Door2 Reed
R34:Z03	14034403	140Y403	2-Door Reader	34	Door1 Tongue	R34 Door1 Tongue
R34:Z04	14034404	140Y404	2-Door Reader	34	Door2 Tongue	R34 Door2 Tongue
R34:Z05	14034405	140Y405	2-Door Reader	34	Door1 REX	R34 Door1 REX
R34:Z06	14034406	140Y406	2-Door Reader	34	Door2 REX	R34 Door2 REX
R34:Z07	14034407	140Y407	2-Door Reader	34	Door1 REN	R34 Door1 REN
R34:Z08	14034408	140Y408	2-Door Reader	34	Door2 REN	R34 Door2 REN
R34:S01	43234401	432Y401	2-Door Reader	34	Door1 Fault	R34 Door1 Fault
R34:S02	43234402	432Y402	2-Door Reader	34	Door2 Fault	R34 Door2 Fault
R34:S03	42334403	423Y403	2-Door Reader	34	Door1 Forced	R34 Door1 Forced
R34:S04	42334404	423Y404	2-Door Reader	34	Door2 Forced	R34 Door2 Forced
R34:S05	42634405	426Y405	2-Door Reader	34	Door1 DOTL	R34 Door1 DOTL
R34:S06	42634406	426Y406	2-Door Reader	34	Door2 DOTL	R34 Door2 DOTL
R34:S07	14534407	145Y407	2-Door Reader	34	Cabinet Tamper	R34 Cabinet Tamper
R34:S08	30134408	301Y408	2-Door Reader	34	AC fail	R34 AC fail
R34:S09	30234409	302Y409	2-Door Reader	34	Low Battery	R34 Low Battery
R34:S10	30034410	300Y410	2-Door Reader	34	LAN Fuse	R34 LAN Fuse
R34:S11	30034411	300Y411	2-Door Reader	34	Detector Fuse	R34 Detector Fuse
R34:S12	30034412	300Y412	2-Door Reader	34	Low Volts	R34 Low Volts
R34:S13	30034413	300Y413	2-Door Reader	34	PS Fail	R34 PS Fail
R34:S14	30934414	309Y414	2-Door Reader	34	Battery Test	R34 Battery Test
R34:S15	15034415	150Y415	2-Door Reader	34	Rdr1 Invalid	R34 Rdr1 Invalid
R34:S16	15034416	150Y416	2-Door Reader	34	Rdr2 Invalid	R34 Rdr2 Invalid
R34:S17	12234417	122Y417	2-Door Reader	34	Rdr1 Duress	R34 Rdr1 Duress
R34:S18	12234418	122Y418	2-Door Reader	34	Rdr2 Duress	R34 Rdr2 Duress
R34:S19	33034419	330Y419	2-Door Reader	34	Rdr1 Fault	R34 Rdr1 Fault
R34:S20	33034420	330Y420	2-Door Reader	34	Rdr2 Fault	R34 Rdr2 Fault
R34:S21	14334421	143Y421	2-Door Reader	34	LAN Comms	R34 LAN Comms
R34:S22	15034422	150Y422	2-Door Reader	34	Spare1	R34 Spare1
R34:S23	15034423	150Y423	2-Door Reader	34	Spare2	R34 Spare2
R35-R99:Z01	14035401	140Z401	2-Door Reader	35	Door1 Reed	R35-R99 Door1 Reed
R35-R99:Z02	14035402	140Z402	2-Door Reader	35	Door2 Reed	R35-R99 Door2 Reed
R35-R99:Z03	14035403	140Z403	2-Door Reader	35	Door1 Tongue	R35-R99 Door1 Tongue
R35-R99:Z04	14035404	140Z404	2-Door Reader	35	Door2 Tongue	R35-R99 Door2 Tongue
R35-R99:Z05	14035405	140Z405	2-Door Reader	35	Door1 REX	R35-R99 Door1 REX

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
R35-R99:Z06	14035406	140Z406	2-Door Reader	35	Door2 REX	R35-R99 Door2 REX
R35-R99:Z07	14035407	140Z407	2-Door Reader	35	Door1 REN	R35-R99 Door1 REN
R35-R99:Z08	14035408	140Z408	2-Door Reader	35	Door2 REN	R35-R99 Door2 REN
R35-R99:S01	43235401	432Z401	2-Door Reader	35	Door1 Fault	R35-R99 Door1 Fault
R35-R99:S02	43235402	432Z402	2-Door Reader	35	Door2 Fault	R35-R99 Door2 Fault
R35-R99:S03	42335403	423Z403	2-Door Reader	35	Door1 Forced	R35-R99 Door1 Forced
R35-R99:S04	42335404	423Z404	2-Door Reader	35	Door2 Forced	R35-R99 Door2 Forced
R35-R99:S05	42635405	426Z405	2-Door Reader	35	Door1 DOTL	R35-R99 Door1 DOTL
R35-R99:S06	42635406	426Z406	2-Door Reader	35	Door2 DOTL	R35-R99 Door2 DOTL
R35-R99:S07	14535407	145Z407	2-Door Reader	35	Cabinet Tamper	R35-R99 Cabinet Tamper
R35-R99:S08	30135408	301Z408	2-Door Reader	35	AC fail	R35-R99 AC fail
R35-R99:S09	30235409	302Z409	2-Door Reader	35	Low Battery	R35-R99 Low Battery
R35-R99:S10	30035410	300Z410	2-Door Reader	35	LAN Fuse	R35-R99 LAN Fuse
R35-R99:S11	30035411	300Z411	2-Door Reader	35	Detector Fuse	R35-R99 Detector Fuse
R35-R99:S12	30035412	300Z412	2-Door Reader	35	Low Volts	R35-R99 Low Volts
R35-R99:S13	30035413	300Z413	2-Door Reader	35	PS Fail	R35-R99 PS Fail
R35-R99:S14	30935414	309Z414	2-Door Reader	35	Battery Test	R35-R99 Battery Test
R35-R99:S15	15035415	150Z415	2-Door Reader	35	Rdr1 Invalid	R35-R99 Rdr1 Invalid
R35-R99:S16	15035416	150Z416	2-Door Reader	35	Rdr2 Invalid	R35-R99 Rdr2 Invalid
R35-R99:S17	12235417	122Z417	2-Door Reader	35	Rdr1 Duress	R35-R99 Rdr1 Duress
R35-R99:S18	12235418	122Z418	2-Door Reader	35	Rdr2 Duress	R35-R99 Rdr2 Duress
R35-R99:S19	33035419	330Z419	2-Door Reader	35	Rdr1 Fault	R35-R99 Rdr1 Fault
R35-R99:S20	33035420	330Z420	2-Door Reader	35	Rdr2 Fault	R35-R99 Rdr2 Fault
R35-R99:S21	14335421	143Z421	2-Door Reader	35	LAN Comms	R35-R99 LAN Comms
R35-R99:S22	15035422	150Z422	2-Door Reader	35	Spare1	R35-R99 Spare1
R35-R99:S23	15035423	150Z423	2-Door Reader	35	Spare2	R35-R99 Spare2
I01:Z01	14001501	1401501	Intelligent Reader	1	Door1 Reed	I01 Door1 Reed
I01:Z02	14001502	1401502	Intelligent Reader	1	Door2 Reed	I01 Door2 Reed
I01:Z03	14001503	1401503	Intelligent Reader	1	Door1 Tongue	I01 Door1 Tongue
I01:Z04	14001504	1401504	Intelligent Reader	1	Door2 Tongue	I01 Door2 Tongue
I01:Z05	14001505	1401505	Intelligent Reader	1	Door1 REX	I01 Door1 REX
I01:Z06	14001506	1401506	Intelligent Reader	1	Door2 REX	I01 Door2 REX
I01:Z07	14001507	1401507	Intelligent Reader	1	Door1 REN	I01 Door1 REN
I01:Z08	14001508	1401508	Intelligent Reader	1	Door2 REN	I01 Door2 REN
I01:Z09	14001509	1401509	Intelligent Reader	1	Door3 Reed	I01 Door3 Reed
I01:Z10	14001510	1401510	Intelligent Reader	1	Door4 Reed	I01 Door4 Reed
I01:Z11	14001511	1401511	Intelligent Reader	1	Door3 Tongue	I01 Door3 Tongue
I01:Z12	14001512	1401512	Intelligent Reader	1	Door4 Tongue	I01 Door4 Tongue
I01:Z13	14001513	1401513	Intelligent Reader	1	Door3 REX	I01 Door3 REX
I01:Z14	14001514	1401514	Intelligent Reader	1	Door4 REX	I01 Door4 REX
I01:Z15	14001515	1401515	Intelligent Reader	1	Door3 REN	I01 Door3 REN
I01:Z16	14001516	1401516	Intelligent Reader	1	Door4 REN	I01 Door4 REN
I01:Z17	14001517	1401517	Intelligent Reader	1	Door5 Reed	I01 Door5 Reed
I01:Z18	14001518	1401518	Intelligent Reader	1	Door6 Reed	I01 Door6 Reed
I01:Z19	14001519	1401519	Intelligent Reader	1	Door5 Tongue	I01 Door5 Tongue
I01:Z20	14001520	1401520	Intelligent Reader	1	Door6 Tongue	I01 Door6 Tongue
I01:Z21	14001521	1401521	Intelligent Reader	1	Door5 REX	I01 Door5 REX
I01:Z22	14001522	1401522	Intelligent Reader	1	Door6 REX	I01 Door6 REX
I01:Z23	14001523	1401523	Intelligent Reader	1	Door5 REN	I01 Door5 REN
I01:Z24	14001524	1401524	Intelligent Reader	1	Door6 REN	I01 Door6 REN
I01:Z25	14001525	1401525	Intelligent Reader	1	Door7 Reed	I01 Door7 Reed
I01:Z26	14001526	1401526	Intelligent Reader	1	Door8 Reed	I01 Door8 Reed
I01:Z27	14001527	1401527	Intelligent Reader	1	Door7 Tongue	I01 Door7 Tongue
I01:Z28	14001528	1401528	Intelligent Reader	1	Door8 Tongue	I01 Door8 Tongue
I01:Z29	14001529	1401529	Intelligent Reader	1	Door7 REX	I01 Door7 REX
I01:Z30	14001530	1401530	Intelligent Reader	1	Door8 REX	I01 Door8 REX
I01:Z31	14001531	1401531	Intelligent Reader	1	Door7 REN	I01 Door7 REN

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
I01:Z32	14001532	1401532	Intelligent Reader	1	Door8 REN	I01 Door8 REN
I01:S01	14501501	1451501	Intelligent Reader	1	Cabinet Tamper	I01 Cabinet Tamper
I01:S02	30101502	3011502	Intelligent Reader	1	AC fail	I01 AC fail
I01:S03	30201503	3021503	Intelligent Reader	1	Low Battery	I01 Low Battery
I01:S04	30001504	3001504	Intelligent Reader	1	LAN Fuse	I01 LAN Fuse
I01:S05	30001505	3001505	Intelligent Reader	1	Detector Fuse	I01 Detector Fuse
I01:S06	30001506	3001506	Intelligent Reader	1	Low Volts	I01 Low Volts
I01:S07	30001507	3001507	Intelligent Reader	1	PS Fail	I01 PS Fail
I01:S08	30901508	3091508	Intelligent Reader	1	Battery Test	I01 Battery Test
I01:S09	33301509	3331509	Intelligent Reader	1	Unibus Fault	I01 Unibus Fault
I01:S10	30301510	3031510	Intelligent Reader	1	Download Fail	I01 Download Fail
I01:S11	15001511	1501511	Intelligent Reader	1	Spare1	I01 Spare1
I01:S12	14301512	1431512	Intelligent Reader	1	LAN Comms	I01 LAN Comms
I01:S13	43201513	4321513	Intelligent Reader	1	Door1 Fault	I01 Door1 Fault
I01:S14	43201514	4321514	Intelligent Reader	1	Door2 Fault	I01 Door2 Fault
I01:S15	43201515	4321515	Intelligent Reader	1	Door3 Fault	I01 Door3 Fault
I01:S16	43201516	4321516	Intelligent Reader	1	Door4 Fault	I01 Door4 Fault
I01:S17	43201517	4321517	Intelligent Reader	1	Door5 Fault	I01 Door5 Fault
I01:S18	43201518	4321518	Intelligent Reader	1	Door6 Fault	I01 Door6 Fault
I01:S19	43201519	4321519	Intelligent Reader	1	Door7 Fault	I01 Door7 Fault
I01:S20	43201520	4321520	Intelligent Reader	1	Door8 Fault	I01 Door8 Fault
I01:S21	42301521	4231521	Intelligent Reader	1	Door1 Forced	I01 Door1 Forced
I01:S22	42301522	4231522	Intelligent Reader	1	Door2 Forced	I01 Door2 Forced
I01:S23	42301523	4231523	Intelligent Reader	1	Door3 Forced	I01 Door3 Forced
I01:S24	42301524	4231524	Intelligent Reader	1	Door4 Forced	I01 Door4 Forced
I01:S25	42301525	4231525	Intelligent Reader	1	Door5 Forced	I01 Door5 Forced
I01:S26	42301526	4231526	Intelligent Reader	1	Door6 Forced	I01 Door6 Forced
I01:S27	42301527	4231527	Intelligent Reader	1	Door7 Forced	I01 Door7 Forced
I01:S28	42301528	4231528	Intelligent Reader	1	Door8 Forced	I01 Door8 Forced
I01:S29	42601529	4261529	Intelligent Reader	1	Door1 DOTL	I01 Door1 DOTL
I01:S30	42601530	4261530	Intelligent Reader	1	Door2 DOTL	I01 Door2 DOTL
I01:S31	42601531	4261531	Intelligent Reader	1	Door3 DOTL	I01 Door3 DOTL
I01:S32	42601532	4261532	Intelligent Reader	1	Door4 DOTL	I01 Door4 DOTL
I01:S33	42601533	4261533	Intelligent Reader	1	Door5 DOTL	I01 Door5 DOTL
I01:S34	42601534	4261534	Intelligent Reader	1	Door6 DOTL	I01 Door6 DOTL
I01:S35	42601535	4261535	Intelligent Reader	1	Door7 DOTL	I01 Door7 DOTL
I01:S36	42601536	4261536	Intelligent Reader	1	Door8 DOTL	I01 Door8 DOTL
I01:S37	15001537	1501537	Intelligent Reader	1	Rdr1 Invalid	I01 Rdr1 Invalid
I01:S38	15001538	1501538	Intelligent Reader	1	Rdr2 Invalid	I01 Rdr2 Invalid
I01:S39	15001539	1501539	Intelligent Reader	1	Rdr3 Invalid	I01 Rdr3 Invalid
I01:S40	15001540	1501540	Intelligent Reader	1	Rdr4 Invalid	I01 Rdr4 Invalid
I01:S41	15001541	1501541	Intelligent Reader	1	Rdr5 Invalid	I01 Rdr5 Invalid
I01:S42	15001542	1501542	Intelligent Reader	1	Rdr6 Invalid	I01 Rdr6 Invalid
I01:S43	15001543	1501543	Intelligent Reader	1	Rdr7 Invalid	I01 Rdr7 Invalid
I01:S44	15001544	1501544	Intelligent Reader	1	Rdr8 Invalid	I01 Rdr8 Invalid
I01:S45	15001545	1501545	Intelligent Reader	1	Rdr9 Invalid	I01 Rdr9 Invalid
I01:S46	15001546	1501546	Intelligent Reader	1	Rdr10 Invalid	I01 Rdr10 Invalid
I01:S47	15001547	1501547	Intelligent Reader	1	Rdr11 Invalid	I01 Rdr11 Invalid
I01:S48	15001548	1501548	Intelligent Reader	1	Rdr12 Invalid	I01 Rdr12 Invalid
I01:S49	15001549	1501549	Intelligent Reader	1	Rdr13 Invalid	I01 Rdr13 Invalid
I01:S50	15001550	1501550	Intelligent Reader	1	Rdr14 Invalid	I01 Rdr14 Invalid
I01:S51	15001551	1501551	Intelligent Reader	1	Rdr15 Invalid	I01 Rdr15 Invalid
I01:S52	15001552	1501552	Intelligent Reader	1	Rdr16 Invalid	I01 Rdr16 Invalid
I01:S53	12201553	1221553	Intelligent Reader	1	Rdr1 Duress	I01 Rdr1 Duress
I01:S54	12201554	1221554	Intelligent Reader	1	Rdr2 Duress	I01 Rdr2 Duress
I01:S55	12201555	1221555	Intelligent Reader	1	Rdr3 Duress	I01 Rdr3 Duress
I01:S56	12201556	1221556	Intelligent Reader	1	Rdr4 Duress	I01 Rdr4 Duress

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I01:S57	12201557	1221557	Intelligent Reader	1	Rdr5 Duress	I01 Rdr5 Duress
I01:S58	12201558	1221558	Intelligent Reader	1	Rdr6 Duress	I01 Rdr6 Duress
I01:S59	12201559	1221559	Intelligent Reader	1	Rdr7 Duress	I01 Rdr7 Duress
I01:S60	12201560	1221560	Intelligent Reader	1	Rdr8 Duress	I01 Rdr8 Duress
I01:S61	12201561	1221561	Intelligent Reader	1	Rdr9 Duress	I01 Rdr9 Duress
I01:S62	12201562	1221562	Intelligent Reader	1	Rdr10 Duress	I01 Rdr10 Duress
I01:S63	12201563	1221563	Intelligent Reader	1	Rdr11 Duress	I01 Rdr11 Duress
I01:S64	12201564	1221564	Intelligent Reader	1	Rdr12 Duress	I01 Rdr12 Duress
I01:S65	12201565	1221565	Intelligent Reader	1	Rdr13 Duress	I01 Rdr13 Duress
I01:S66	12201566	1221566	Intelligent Reader	1	Rdr14 Duress	I01 Rdr14 Duress
I01:S67	12201567	1221567	Intelligent Reader	1	Rdr15 Duress	I01 Rdr15 Duress
I01:S68	12201568	1221568	Intelligent Reader	1	Rdr16 Duress	I01 Rdr16 Duress
I01:S69	33001569	3301569	Intelligent Reader	1	Rdr1 Fault	I01 Rdr1 Fault
I01:S70	33001570	3301570	Intelligent Reader	1	Rdr2 Fault	I01 Rdr2 Fault
I01:S71	33001571	3301571	Intelligent Reader	1	Rdr3 Fault	I01 Rdr3 Fault
I01:S72	33001572	3301572	Intelligent Reader	1	Rdr4 Fault	I01 Rdr4 Fault
I01:S73	33001573	3301573	Intelligent Reader	1	Rdr5 Fault	I01 Rdr5 Fault
I01:S74	33001574	3301574	Intelligent Reader	1	Rdr6 Fault	I01 Rdr6 Fault
I01:S75	33001575	3301575	Intelligent Reader	1	Rdr7 Fault	I01 Rdr7 Fault
I01:S76	33001576	3301576	Intelligent Reader	1	Rdr8 Fault	I01 Rdr8 Fault
I01:S77	33001577	3301577	Intelligent Reader	1	Rdr9 Fault	I01 Rdr9 Fault
I01:S78	33001578	3301578	Intelligent Reader	1	Rdr10 Fault	I01 Rdr10 Fault
I01:S79	33001579	3301579	Intelligent Reader	1	Rdr11 Fault	I01 Rdr11 Fault
I01:S80	33001580	3301580	Intelligent Reader	1	Rdr12 Fault	I01 Rdr12 Fault
I01:S81	33001581	3301581	Intelligent Reader	1	Rdr13 Fault	I01 Rdr13 Fault
I01:S82	33001582	3301582	Intelligent Reader	1	Rdr14 Fault	I01 Rdr14 Fault
I01:S83	33001583	3301583	Intelligent Reader	1	Rdr15 Fault	I01 Rdr15 Fault
I01:S84	33001584	3301584	Intelligent Reader	1	Rdr16 Fault	I01 Rdr16 Fault
I01:S85	30101585	3011585	Intelligent Reader	1	Ext AC fail	I01 Ext AC fail
I01:S86	30201586	3021586	Intelligent Reader	1	Ext Low Battery	I01 Ext Low Battery
I01:S87	30001587	3001587	Intelligent Reader	1	Ext LAN Fuse	I01 Ext LAN Fuse
I01:S88	30001588	3001588	Intelligent Reader	1	Ext Detector Fuse	I01 Ext Detector Fuse
I01:S89	30001589	3001589	Intelligent Reader	1	Ext Low Volts	I01 Ext Low Volts
I01:S90	30001590	3001590	Intelligent Reader	1	Ext PS Fail	I01 Ext PS Fail
I01:S91	30901591	3091591	Intelligent Reader	1	Ext Battery Test	I01 Ext Battery Test
I01:S92	15001592	1501592	Intelligent Reader	1	Spare2	I01 Spare2
I01:S93	15001593	1501593	Intelligent Reader	1	Spare3	I01 Spare3
I02:Z01	14002501	1402501	Intelligent Reader	2	Door1 Reed	I02 Door1 Reed
I02:Z02	14002502	1402502	Intelligent Reader	2	Door2 Reed	I02 Door2 Reed
I02:Z03	14002503	1402503	Intelligent Reader	2	Door1 Tongue	I02 Door1 Tongue
I02:Z04	14002504	1402504	Intelligent Reader	2	Door2 Tongue	I02 Door2 Tongue
I02:Z05	14002505	1402505	Intelligent Reader	2	Door1 REX	I02 Door1 REX
I02:Z06	14002506	1402506	Intelligent Reader	2	Door2 REX	I02 Door2 REX
I02:Z07	14002507	1402507	Intelligent Reader	2	Door1 REN	I02 Door1 REN
I02:Z08	14002508	1402508	Intelligent Reader	2	Door2 REN	I02 Door2 REN
I02:Z09	14002509	1402509	Intelligent Reader	2	Door3 Reed	I02 Door3 Reed
I02:Z10	14002510	1402510	Intelligent Reader	2	Door4 Reed	I02 Door4 Reed
I02:Z11	14002511	1402511	Intelligent Reader	2	Door3 Tongue	I02 Door3 Tongue
I02:Z12	14002512	1402512	Intelligent Reader	2	Door4 Tongue	I02 Door4 Tongue
I02:Z13	14002513	1402513	Intelligent Reader	2	Door3 REX	I02 Door3 REX
I02:Z14	14002514	1402514	Intelligent Reader	2	Door4 REX	I02 Door4 REX
I02:Z15	14002515	1402515	Intelligent Reader	2	Door3 REN	I02 Door3 REN
I02:Z16	14002516	1402516	Intelligent Reader	2	Door4 REN	I02 Door4 REN
I02:Z17	14002517	1402517	Intelligent Reader	2	Door5 Reed	I02 Door5 Reed
I02:Z18	14002518	1402518	Intelligent Reader	2	Door6 Reed	I02 Door6 Reed
I02:Z19	14002519	1402519	Intelligent Reader	2	Door5 Tongue	I02 Door5 Tongue
I02:Z20	14002520	1402520	Intelligent Reader	2	Door6 Tongue	I02 Door6 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I02:Z21	14002521	1402521	Intelligent Reader	2	Door5 REX	I02 Door5 REX
I02:Z22	14002522	1402522	Intelligent Reader	2	Door6 REX	I02 Door6 REX
I02:Z23	14002523	1402523	Intelligent Reader	2	Door5 REN	I02 Door5 REN
I02:Z24	14002524	1402524	Intelligent Reader	2	Door6 REN	I02 Door6 REN
I02:Z25	14002525	1402525	Intelligent Reader	2	Door7 Reed	I02 Door7 Reed
I02:Z26	14002526	1402526	Intelligent Reader	2	Door8 Reed	I02 Door8 Reed
I02:Z27	14002527	1402527	Intelligent Reader	2	Door7 Tongue	I02 Door7 Tongue
I02:Z28	14002528	1402528	Intelligent Reader	2	Door8 Tongue	I02 Door8 Tongue
I02:Z29	14002529	1402529	Intelligent Reader	2	Door7 REX	I02 Door7 REX
I02:Z30	14002530	1402530	Intelligent Reader	2	Door8 REX	I02 Door8 REX
I02:Z31	14002531	1402531	Intelligent Reader	2	Door7 REN	I02 Door7 REN
I02:Z32	14002532	1402532	Intelligent Reader	2	Door8 REN	I02 Door8 REN
I02:S01	14502501	1452501	Intelligent Reader	2	Cabinet Tamper	I02 Cabinet Tamper
I02:S02	30102502	3012502	Intelligent Reader	2	AC fail	I02 AC fail
I02:S03	30202503	3022503	Intelligent Reader	2	Low Battery	I02 Low Battery
I02:S04	30002504	3002504	Intelligent Reader	2	LAN Fuse	I02 LAN Fuse
I02:S05	30002505	3002505	Intelligent Reader	2	Detector Fuse	I02 Detector Fuse
I02:S06	30002506	3002506	Intelligent Reader	2	Low Volts	I02 Low Volts
I02:S07	30002507	3002507	Intelligent Reader	2	PS Fail	I02 PS Fail
I02:S08	30902508	3092508	Intelligent Reader	2	Battery Test	I02 Battery Test
I02:S09	33302509	3332509	Intelligent Reader	2	Unibus Fault	I02 Unibus Fault
I02:S10	30302510	3032510	Intelligent Reader	2	Download Fail	I02 Download Fail
I02:S11	15002511	1502511	Intelligent Reader	2	Spare1	I02 Spare1
I02:S12	14302512	1432512	Intelligent Reader	2	LAN Comms	I02 LAN Comms
I02:S13	43202513	4322513	Intelligent Reader	2	Door1 Fault	I02 Door1 Fault
I02:S14	43202514	4322514	Intelligent Reader	2	Door2 Fault	I02 Door2 Fault
I02:S15	43202515	4322515	Intelligent Reader	2	Door3 Fault	I02 Door3 Fault
I02:S16	43202516	4322516	Intelligent Reader	2	Door4 Fault	I02 Door4 Fault
I02:S17	43202517	4322517	Intelligent Reader	2	Door5 Fault	I02 Door5 Fault
I02:S18	43202518	4322518	Intelligent Reader	2	Door6 Fault	I02 Door6 Fault
I02:S19	43202519	4322519	Intelligent Reader	2	Door7 Fault	I02 Door7 Fault
I02:S20	43202520	4322520	Intelligent Reader	2	Door8 Fault	I02 Door8 Fault
I02:S21	42302521	4232521	Intelligent Reader	2	Door1 Forced	I02 Door1 Forced
I02:S22	42302522	4232522	Intelligent Reader	2	Door2 Forced	I02 Door2 Forced
I02:S23	42302523	4232523	Intelligent Reader	2	Door3 Forced	I02 Door3 Forced
I02:S24	42302524	4232524	Intelligent Reader	2	Door4 Forced	I02 Door4 Forced
I02:S25	42302525	4232525	Intelligent Reader	2	Door5 Forced	I02 Door5 Forced
I02:S26	42302526	4232526	Intelligent Reader	2	Door6 Forced	I02 Door6 Forced
I02:S27	42302527	4232527	Intelligent Reader	2	Door7 Forced	I02 Door7 Forced
I02:S28	42302528	4232528	Intelligent Reader	2	Door8 Forced	I02 Door8 Forced
I02:S29	42602529	4262529	Intelligent Reader	2	Door1 DOTL	I02 Door1 DOTL
I02:S30	42602530	4262530	Intelligent Reader	2	Door2 DOTL	I02 Door2 DOTL
I02:S31	42602531	4262531	Intelligent Reader	2	Door3 DOTL	I02 Door3 DOTL
I02:S32	42602532	4262532	Intelligent Reader	2	Door4 DOTL	I02 Door4 DOTL
I02:S33	42602533	4262533	Intelligent Reader	2	Door5 DOTL	I02 Door5 DOTL
I02:S34	42602534	4262534	Intelligent Reader	2	Door6 DOTL	I02 Door6 DOTL
I02:S35	42602535	4262535	Intelligent Reader	2	Door7 DOTL	I02 Door7 DOTL
I02:S36	42602536	4262536	Intelligent Reader	2	Door8 DOTL	I02 Door8 DOTL
I02:S37	15002537	1502537	Intelligent Reader	2	Rdr1 Invalid	I02 Rdr1 Invalid
I02:S38	15002538	1502538	Intelligent Reader	2	Rdr2 Invalid	I02 Rdr2 Invalid
I02:S39	15002539	1502539	Intelligent Reader	2	Rdr3 Invalid	I02 Rdr3 Invalid
I02:S40	15002540	1502540	Intelligent Reader	2	Rdr4 Invalid	I02 Rdr4 Invalid
I02:S41	15002541	1502541	Intelligent Reader	2	Rdr5 Invalid	I02 Rdr5 Invalid
I02:S42	15002542	1502542	Intelligent Reader	2	Rdr6 Invalid	I02 Rdr6 Invalid
I02:S43	15002543	1502543	Intelligent Reader	2	Rdr7 Invalid	I02 Rdr7 Invalid
I02:S44	15002544	1502544	Intelligent Reader	2	Rdr8 Invalid	I02 Rdr8 Invalid
I02:S45	15002545	1502545	Intelligent Reader	2	Rdr9 Invalid	I02 Rdr9 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I02:S46	15002546	1502546	Intelligent Reader	2	Rdr10 Invalid	I02 Rdr10 Invalid
I02:S47	15002547	1502547	Intelligent Reader	2	Rdr11 Invalid	I02 Rdr11 Invalid
I02:S48	15002548	1502548	Intelligent Reader	2	Rdr12 Invalid	I02 Rdr12 Invalid
I02:S49	15002549	1502549	Intelligent Reader	2	Rdr13 Invalid	I02 Rdr13 Invalid
I02:S50	15002550	1502550	Intelligent Reader	2	Rdr14 Invalid	I02 Rdr14 Invalid
I02:S51	15002551	1502551	Intelligent Reader	2	Rdr15 Invalid	I02 Rdr15 Invalid
I02:S52	15002552	1502552	Intelligent Reader	2	Rdr16 Invalid	I02 Rdr16 Invalid
I02:S53	12202553	1222553	Intelligent Reader	2	Rdr1 Duress	I02 Rdr1 Duress
I02:S54	12202554	1222554	Intelligent Reader	2	Rdr2 Duress	I02 Rdr2 Duress
I02:S55	12202555	1222555	Intelligent Reader	2	Rdr3 Duress	I02 Rdr3 Duress
I02:S56	12202556	1222556	Intelligent Reader	2	Rdr4 Duress	I02 Rdr4 Duress
I02:S57	12202557	1222557	Intelligent Reader	2	Rdr5 Duress	I02 Rdr5 Duress
I02:S58	12202558	1222558	Intelligent Reader	2	Rdr6 Duress	I02 Rdr6 Duress
I02:S59	12202559	1222559	Intelligent Reader	2	Rdr7 Duress	I02 Rdr7 Duress
I02:S60	12202560	1222560	Intelligent Reader	2	Rdr8 Duress	I02 Rdr8 Duress
I02:S61	12202561	1222561	Intelligent Reader	2	Rdr9 Duress	I02 Rdr9 Duress
I02:S62	12202562	1222562	Intelligent Reader	2	Rdr10 Duress	I02 Rdr10 Duress
I02:S63	12202563	1222563	Intelligent Reader	2	Rdr11 Duress	I02 Rdr11 Duress
I02:S64	12202564	1222564	Intelligent Reader	2	Rdr12 Duress	I02 Rdr12 Duress
I02:S65	12202565	1222565	Intelligent Reader	2	Rdr13 Duress	I02 Rdr13 Duress
I02:S66	12202566	1222566	Intelligent Reader	2	Rdr14 Duress	I02 Rdr14 Duress
I02:S67	12202567	1222567	Intelligent Reader	2	Rdr15 Duress	I02 Rdr15 Duress
I02:S68	12202568	1222568	Intelligent Reader	2	Rdr16 Duress	I02 Rdr16 Duress
I02:S69	33002569	3302569	Intelligent Reader	2	Rdr1 Fault	I02 Rdr1 Fault
I02:S70	33002570	3302570	Intelligent Reader	2	Rdr2 Fault	I02 Rdr2 Fault
I02:S71	33002571	3302571	Intelligent Reader	2	Rdr3 Fault	I02 Rdr3 Fault
I02:S72	33002572	3302572	Intelligent Reader	2	Rdr4 Fault	I02 Rdr4 Fault
I02:S73	33002573	3302573	Intelligent Reader	2	Rdr5 Fault	I02 Rdr5 Fault
I02:S74	33002574	3302574	Intelligent Reader	2	Rdr6 Fault	I02 Rdr6 Fault
I02:S75	33002575	3302575	Intelligent Reader	2	Rdr7 Fault	I02 Rdr7 Fault
I02:S76	33002576	3302576	Intelligent Reader	2	Rdr8 Fault	I02 Rdr8 Fault
I02:S77	33002577	3302577	Intelligent Reader	2	Rdr9 Fault	I02 Rdr9 Fault
I02:S78	33002578	3302578	Intelligent Reader	2	Rdr10 Fault	I02 Rdr10 Fault
I02:S79	33002579	3302579	Intelligent Reader	2	Rdr11 Fault	I02 Rdr11 Fault
I02:S80	33002580	3302580	Intelligent Reader	2	Rdr12 Fault	I02 Rdr12 Fault
I02:S81	33002581	3302581	Intelligent Reader	2	Rdr13 Fault	I02 Rdr13 Fault
I02:S82	33002582	3302582	Intelligent Reader	2	Rdr14 Fault	I02 Rdr14 Fault
I02:S83	33002583	3302583	Intelligent Reader	2	Rdr15 Fault	I02 Rdr15 Fault
I02:S84	33002584	3302584	Intelligent Reader	2	Rdr16 Fault	I02 Rdr16 Fault
I02:S85	30102585	3012585	Intelligent Reader	2	Ext AC fail	I02 Ext AC fail
I02:S86	30202586	3022586	Intelligent Reader	2	Ext Low Battery	I02 Ext Low Battery
I02:S87	30002587	3002587	Intelligent Reader	2	Ext LAN Fuse	I02 Ext LAN Fuse
I02:S88	30002588	3002588	Intelligent Reader	2	Ext Detector Fuse	I02 Ext Detector Fuse
I02:S89	30002589	3002589	Intelligent Reader	2	Ext Low Volts	I02 Ext Low Volts
I02:S90	30002590	3002590	Intelligent Reader	2	Ext PS Fail	I02 Ext PS Fail
I02:S91	30902591	3092591	Intelligent Reader	2	Ext Battery Test	I02 Ext Battery Test
I02:S92	15002592	1502592	Intelligent Reader	2	Spare2	I02 Spare2
I02:S93	15002593	1502593	Intelligent Reader	2	Spare3	I02 Spare3
I03:Z01	14003501	1403501	Intelligent Reader	3	Door1 Reed	I03 Door1 Reed
I03:Z02	14003502	1403502	Intelligent Reader	3	Door2 Reed	I03 Door2 Reed
I03:Z03	14003503	1403503	Intelligent Reader	3	Door1 Tongue	I03 Door1 Tongue
I03:Z04	14003504	1403504	Intelligent Reader	3	Door2 Tongue	I03 Door2 Tongue
I03:Z05	14003505	1403505	Intelligent Reader	3	Door1 REX	I03 Door1 REX
I03:Z06	14003506	1403506	Intelligent Reader	3	Door2 REX	I03 Door2 REX
I03:Z07	14003507	1403507	Intelligent Reader	3	Door1 REN	I03 Door1 REN
I03:Z08	14003508	1403508	Intelligent Reader	3	Door2 REN	I03 Door2 REN
I03:Z09	14003509	1403509	Intelligent Reader	3	Door3 Reed	I03 Door3 Reed

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I03:Z10	14003510	1403510	Intelligent Reader	3	Door4 Reed	I03 Door4 Reed
I03:Z11	14003511	1403511	Intelligent Reader	3	Door3 Tongue	I03 Door3 Tongue
I03:Z12	14003512	1403512	Intelligent Reader	3	Door4 Tongue	I03 Door4 Tongue
I03:Z13	14003513	1403513	Intelligent Reader	3	Door3 REX	I03 Door3 REX
I03:Z14	14003514	1403514	Intelligent Reader	3	Door4 REX	I03 Door4 REX
I03:Z15	14003515	1403515	Intelligent Reader	3	Door3 REN	I03 Door3 REN
I03:Z16	14003516	1403516	Intelligent Reader	3	Door4 REN	I03 Door4 REN
I03:Z17	14003517	1403517	Intelligent Reader	3	Door5 Reed	I03 Door5 Reed
I03:Z18	14003518	1403518	Intelligent Reader	3	Door6 Reed	I03 Door6 Reed
I03:Z19	14003519	1403519	Intelligent Reader	3	Door5 Tongue	I03 Door5 Tongue
I03:Z20	14003520	1403520	Intelligent Reader	3	Door6 Tongue	I03 Door6 Tongue
I03:Z21	14003521	1403521	Intelligent Reader	3	Door5 REX	I03 Door5 REX
I03:Z22	14003522	1403522	Intelligent Reader	3	Door6 REX	I03 Door6 REX
I03:Z23	14003523	1403523	Intelligent Reader	3	Door5 REN	I03 Door5 REN
I03:Z24	14003524	1403524	Intelligent Reader	3	Door6 REN	I03 Door6 REN
I03:Z25	14003525	1403525	Intelligent Reader	3	Door7 Reed	I03 Door7 Reed
I03:Z26	14003526	1403526	Intelligent Reader	3	Door8 Reed	I03 Door8 Reed
I03:Z27	14003527	1403527	Intelligent Reader	3	Door7 Tongue	I03 Door7 Tongue
I03:Z28	14003528	1403528	Intelligent Reader	3	Door8 Tongue	I03 Door8 Tongue
I03:Z29	14003529	1403529	Intelligent Reader	3	Door7 REX	I03 Door7 REX
I03:Z30	14003530	1403530	Intelligent Reader	3	Door8 REX	I03 Door8 REX
I03:Z31	14003531	1403531	Intelligent Reader	3	Door7 REN	I03 Door7 REN
I03:Z32	14003532	1403532	Intelligent Reader	3	Door8 REN	I03 Door8 REN
I03:S01	14503501	1453501	Intelligent Reader	3	Cabinet Tamper	I03 Cabinet Tamper
I03:S02	30103502	3013502	Intelligent Reader	3	AC fail	I03 AC fail
I03:S03	30203503	3023503	Intelligent Reader	3	Low Battery	I03 Low Battery
I03:S04	30003504	3003504	Intelligent Reader	3	LAN Fuse	I03 LAN Fuse
I03:S05	30003505	3003505	Intelligent Reader	3	Detector Fuse	I03 Detector Fuse
I03:S06	30003506	3003506	Intelligent Reader	3	Low Volts	I03 Low Volts
I03:S07	30003507	3003507	Intelligent Reader	3	PS Fail	I03 PS Fail
I03:S08	30903508	3093508	Intelligent Reader	3	Battery Test	I03 Battery Test
I03:S09	33303509	3333509	Intelligent Reader	3	Unibus Fault	I03 Unibus Fault
I03:S10	30303510	3033510	Intelligent Reader	3	Download Fail	I03 Download Fail
I03:S11	15003511	1503511	Intelligent Reader	3	Spare1	I03 Spare1
I03:S12	14303512	1433512	Intelligent Reader	3	LAN Comms	I03 LAN Comms
I03:S13	43203513	4323513	Intelligent Reader	3	Door1 Fault	I03 Door1 Fault
I03:S14	43203514	4323514	Intelligent Reader	3	Door2 Fault	I03 Door2 Fault
I03:S15	43203515	4323515	Intelligent Reader	3	Door3 Fault	I03 Door3 Fault
I03:S16	43203516	4323516	Intelligent Reader	3	Door4 Fault	I03 Door4 Fault
I03:S17	43203517	4323517	Intelligent Reader	3	Door5 Fault	I03 Door5 Fault
I03:S18	43203518	4323518	Intelligent Reader	3	Door6 Fault	I03 Door6 Fault
I03:S19	43203519	4323519	Intelligent Reader	3	Door7 Fault	I03 Door7 Fault
I03:S20	43203520	4323520	Intelligent Reader	3	Door8 Fault	I03 Door8 Fault
I03:S21	42303521	4233521	Intelligent Reader	3	Door1 Forced	I03 Door1 Forced
I03:S22	42303522	4233522	Intelligent Reader	3	Door2 Forced	I03 Door2 Forced
I03:S23	42303523	4233523	Intelligent Reader	3	Door3 Forced	I03 Door3 Forced
I03:S24	42303524	4233524	Intelligent Reader	3	Door4 Forced	I03 Door4 Forced
I03:S25	42303525	4233525	Intelligent Reader	3	Door5 Forced	I03 Door5 Forced
I03:S26	42303526	4233526	Intelligent Reader	3	Door6 Forced	I03 Door6 Forced
I03:S27	42303527	4233527	Intelligent Reader	3	Door7 Forced	I03 Door7 Forced
I03:S28	42303528	4233528	Intelligent Reader	3	Door8 Forced	I03 Door8 Forced
I03:S29	42603529	4263529	Intelligent Reader	3	Door1 DOTL	I03 Door1 DOTL
I03:S30	42603530	4263530	Intelligent Reader	3	Door2 DOTL	I03 Door2 DOTL
I03:S31	42603531	4263531	Intelligent Reader	3	Door3 DOTL	I03 Door3 DOTL
I03:S32	42603532	4263532	Intelligent Reader	3	Door4 DOTL	I03 Door4 DOTL
I03:S33	42603533	4263533	Intelligent Reader	3	Door5 DOTL	I03 Door5 DOTL
I03:S34	42603534	4263534	Intelligent Reader	3	Door6 DOTL	I03 Door6 DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I03:S35	42603535	4263535	Intelligent Reader	3	Door7 DOTL	I03 Door7 DOTL
I03:S36	42603536	4263536	Intelligent Reader	3	Door8 DOTL	I03 Door8 DOTL
I03:S37	15003537	1503537	Intelligent Reader	3	Rdr1 Invalid	I03 Rdr1 Invalid
I03:S38	15003538	1503538	Intelligent Reader	3	Rdr2 Invalid	I03 Rdr2 Invalid
I03:S39	15003539	1503539	Intelligent Reader	3	Rdr3 Invalid	I03 Rdr3 Invalid
I03:S40	15003540	1503540	Intelligent Reader	3	Rdr4 Invalid	I03 Rdr4 Invalid
I03:S41	15003541	1503541	Intelligent Reader	3	Rdr5 Invalid	I03 Rdr5 Invalid
I03:S42	15003542	1503542	Intelligent Reader	3	Rdr6 Invalid	I03 Rdr6 Invalid
I03:S43	15003543	1503543	Intelligent Reader	3	Rdr7 Invalid	I03 Rdr7 Invalid
I03:S44	15003544	1503544	Intelligent Reader	3	Rdr8 Invalid	I03 Rdr8 Invalid
I03:S45	15003545	1503545	Intelligent Reader	3	Rdr9 Invalid	I03 Rdr9 Invalid
I03:S46	15003546	1503546	Intelligent Reader	3	Rdr10 Invalid	I03 Rdr10 Invalid
I03:S47	15003547	1503547	Intelligent Reader	3	Rdr11 Invalid	I03 Rdr11 Invalid
I03:S48	15003548	1503548	Intelligent Reader	3	Rdr12 Invalid	I03 Rdr12 Invalid
I03:S49	15003549	1503549	Intelligent Reader	3	Rdr13 Invalid	I03 Rdr13 Invalid
I03:S50	15003550	1503550	Intelligent Reader	3	Rdr14 Invalid	I03 Rdr14 Invalid
I03:S51	15003551	1503551	Intelligent Reader	3	Rdr15 Invalid	I03 Rdr15 Invalid
I03:S52	15003552	1503552	Intelligent Reader	3	Rdr16 Invalid	I03 Rdr16 Invalid
I03:S53	12203553	1223553	Intelligent Reader	3	Rdr1 Duress	I03 Rdr1 Duress
I03:S54	12203554	1223554	Intelligent Reader	3	Rdr2 Duress	I03 Rdr2 Duress
I03:S55	12203555	1223555	Intelligent Reader	3	Rdr3 Duress	I03 Rdr3 Duress
I03:S56	12203556	1223556	Intelligent Reader	3	Rdr4 Duress	I03 Rdr4 Duress
I03:S57	12203557	1223557	Intelligent Reader	3	Rdr5 Duress	I03 Rdr5 Duress
I03:S58	12203558	1223558	Intelligent Reader	3	Rdr6 Duress	I03 Rdr6 Duress
I03:S59	12203559	1223559	Intelligent Reader	3	Rdr7 Duress	I03 Rdr7 Duress
I03:S60	12203560	1223560	Intelligent Reader	3	Rdr8 Duress	I03 Rdr8 Duress
I03:S61	12203561	1223561	Intelligent Reader	3	Rdr9 Duress	I03 Rdr9 Duress
I03:S62	12203562	1223562	Intelligent Reader	3	Rdr10 Duress	I03 Rdr10 Duress
I03:S63	12203563	1223563	Intelligent Reader	3	Rdr11 Duress	I03 Rdr11 Duress
I03:S64	12203564	1223564	Intelligent Reader	3	Rdr12 Duress	I03 Rdr12 Duress
I03:S65	12203565	1223565	Intelligent Reader	3	Rdr13 Duress	I03 Rdr13 Duress
I03:S66	12203566	1223566	Intelligent Reader	3	Rdr14 Duress	I03 Rdr14 Duress
I03:S67	12203567	1223567	Intelligent Reader	3	Rdr15 Duress	I03 Rdr15 Duress
I03:S68	12203568	1223568	Intelligent Reader	3	Rdr16 Duress	I03 Rdr16 Duress
I03:S69	33003569	3303569	Intelligent Reader	3	Rdr1 Fault	I03 Rdr1 Fault
I03:S70	33003570	3303570	Intelligent Reader	3	Rdr2 Fault	I03 Rdr2 Fault
I03:S71	33003571	3303571	Intelligent Reader	3	Rdr3 Fault	I03 Rdr3 Fault
I03:S72	33003572	3303572	Intelligent Reader	3	Rdr4 Fault	I03 Rdr4 Fault
I03:S73	33003573	3303573	Intelligent Reader	3	Rdr5 Fault	I03 Rdr5 Fault
I03:S74	33003574	3303574	Intelligent Reader	3	Rdr6 Fault	I03 Rdr6 Fault
I03:S75	33003575	3303575	Intelligent Reader	3	Rdr7 Fault	I03 Rdr7 Fault
I03:S76	33003576	3303576	Intelligent Reader	3	Rdr8 Fault	I03 Rdr8 Fault
I03:S77	33003577	3303577	Intelligent Reader	3	Rdr9 Fault	I03 Rdr9 Fault
I03:S78	33003578	3303578	Intelligent Reader	3	Rdr10 Fault	I03 Rdr10 Fault
I03:S79	33003579	3303579	Intelligent Reader	3	Rdr11 Fault	I03 Rdr11 Fault
I03:S80	33003580	3303580	Intelligent Reader	3	Rdr12 Fault	I03 Rdr12 Fault
I03:S81	33003581	3303581	Intelligent Reader	3	Rdr13 Fault	I03 Rdr13 Fault
I03:S82	33003582	3303582	Intelligent Reader	3	Rdr14 Fault	I03 Rdr14 Fault
I03:S83	33003583	3303583	Intelligent Reader	3	Rdr15 Fault	I03 Rdr15 Fault
I03:S84	33003584	3303584	Intelligent Reader	3	Rdr16 Fault	I03 Rdr16 Fault
I03:S85	30103585	3013585	Intelligent Reader	3	Ext AC fail	I03 Ext AC fail
I03:S86	30203586	3023586	Intelligent Reader	3	Ext Low Battery	I03 Ext Low Battery
I03:S87	30003587	3003587	Intelligent Reader	3	Ext LAN Fuse	I03 Ext LAN Fuse
I03:S88	30003588	3003588	Intelligent Reader	3	Ext Detector Fuse	I03 Ext Detector Fuse
I03:S89	30003589	3003589	Intelligent Reader	3	Ext Low Volts	I03 Ext Low Volts
I03:S90	30003590	3003590	Intelligent Reader	3	Ext PS Fail	I03 Ext PS Fail
I03:S91	30903591	3093591	Intelligent Reader	3	Ext Battery Test	I03 Ext Battery Test

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I03:S92	15003592	1503592	Intelligent Reader	3	Spare2	I03 Spare2
I03:S93	15003593	1503593	Intelligent Reader	3	Spare3	I03 Spare3
I04:Z01	14004501	1404501	Intelligent Reader	4	Door1 Reed	I04 Door1 Reed
I04:Z02	14004502	1404502	Intelligent Reader	4	Door2 Reed	I04 Door2 Reed
I04:Z03	14004503	1404503	Intelligent Reader	4	Door1 Tongue	I04 Door1 Tongue
I04:Z04	14004504	1404504	Intelligent Reader	4	Door2 Tongue	I04 Door2 Tongue
I04:Z05	14004505	1404505	Intelligent Reader	4	Door1 REX	I04 Door1 REX
I04:Z06	14004506	1404506	Intelligent Reader	4	Door2 REX	I04 Door2 REX
I04:Z07	14004507	1404507	Intelligent Reader	4	Door1 REN	I04 Door1 REN
I04:Z08	14004508	1404508	Intelligent Reader	4	Door2 REN	I04 Door2 REN
I04:Z09	14004509	1404509	Intelligent Reader	4	Door3 Reed	I04 Door3 Reed
I04:Z10	14004510	1404510	Intelligent Reader	4	Door4 Reed	I04 Door4 Reed
I04:Z11	14004511	1404511	Intelligent Reader	4	Door3 Tongue	I04 Door3 Tongue
I04:Z12	14004512	1404512	Intelligent Reader	4	Door4 Tongue	I04 Door4 Tongue
I04:Z13	14004513	1404513	Intelligent Reader	4	Door3 REX	I04 Door3 REX
I04:Z14	14004514	1404514	Intelligent Reader	4	Door4 REX	I04 Door4 REX
I04:Z15	14004515	1404515	Intelligent Reader	4	Door3 REN	I04 Door3 REN
I04:Z16	14004516	1404516	Intelligent Reader	4	Door4 REN	I04 Door4 REN
I04:Z17	14004517	1404517	Intelligent Reader	4	Door5 Reed	I04 Door5 Reed
I04:Z18	14004518	1404518	Intelligent Reader	4	Door6 Reed	I04 Door6 Reed
I04:Z19	14004519	1404519	Intelligent Reader	4	Door5 Tongue	I04 Door5 Tongue
I04:Z20	14004520	1404520	Intelligent Reader	4	Door6 Tongue	I04 Door6 Tongue
I04:Z21	14004521	1404521	Intelligent Reader	4	Door5 REX	I04 Door5 REX
I04:Z22	14004522	1404522	Intelligent Reader	4	Door6 REX	I04 Door6 REX
I04:Z23	14004523	1404523	Intelligent Reader	4	Door5 REN	I04 Door5 REN
I04:Z24	14004524	1404524	Intelligent Reader	4	Door6 REN	I04 Door6 REN
I04:Z25	14004525	1404525	Intelligent Reader	4	Door7 Reed	I04 Door7 Reed
I04:Z26	14004526	1404526	Intelligent Reader	4	Door8 Reed	I04 Door8 Reed
I04:Z27	14004527	1404527	Intelligent Reader	4	Door7 Tongue	I04 Door7 Tongue
I04:Z28	14004528	1404528	Intelligent Reader	4	Door8 Tongue	I04 Door8 Tongue
I04:Z29	14004529	1404529	Intelligent Reader	4	Door7 REX	I04 Door7 REX
I04:Z30	14004530	1404530	Intelligent Reader	4	Door8 REX	I04 Door8 REX
I04:Z31	14004531	1404531	Intelligent Reader	4	Door7 REN	I04 Door7 REN
I04:Z32	14004532	1404532	Intelligent Reader	4	Door8 REN	I04 Door8 REN
I04:S01	14504501	1454501	Intelligent Reader	4	Cabinet Tamper	I04 Cabinet Tamper
I04:S02	30104502	3014502	Intelligent Reader	4	AC fail	I04 AC fail
I04:S03	30204503	3024503	Intelligent Reader	4	Low Battery	I04 Low Battery
I04:S04	30004504	3004504	Intelligent Reader	4	LAN Fuse	I04 LAN Fuse
I04:S05	30004505	3004505	Intelligent Reader	4	Detector Fuse	I04 Detector Fuse
I04:S06	30004506	3004506	Intelligent Reader	4	Low Volts	I04 Low Volts
I04:S07	30004507	3004507	Intelligent Reader	4	PS Fail	I04 PS Fail
I04:S08	30904508	3094508	Intelligent Reader	4	Battery Test	I04 Battery Test
I04:S09	33304509	3334509	Intelligent Reader	4	Unibus Fault	I04 Unibus Fault
I04:S10	30304510	3034510	Intelligent Reader	4	Download Fail	I04 Download Fail
I04:S11	15004511	1504511	Intelligent Reader	4	Spare1	I04 Spare1
I04:S12	14304512	1434512	Intelligent Reader	4	LAN Comms	I04 LAN Comms
I04:S13	43204513	4324513	Intelligent Reader	4	Door1 Fault	I04 Door1 Fault
I04:S14	43204514	4324514	Intelligent Reader	4	Door2 Fault	I04 Door2 Fault
I04:S15	43204515	4324515	Intelligent Reader	4	Door3 Fault	I04 Door3 Fault
I04:S16	43204516	4324516	Intelligent Reader	4	Door4 Fault	I04 Door4 Fault
I04:S17	43204517	4324517	Intelligent Reader	4	Door5 Fault	I04 Door5 Fault
I04:S18	43204518	4324518	Intelligent Reader	4	Door6 Fault	I04 Door6 Fault
I04:S19	43204519	4324519	Intelligent Reader	4	Door7 Fault	I04 Door7 Fault
I04:S20	43204520	4324520	Intelligent Reader	4	Door8 Fault	I04 Door8 Fault
I04:S21	42304521	4234521	Intelligent Reader	4	Door1 Forced	I04 Door1 Forced
I04:S22	42304522	4234522	Intelligent Reader	4	Door2 Forced	I04 Door2 Forced
I04:S23	42304523	4234523	Intelligent Reader	4	Door3 Forced	I04 Door3 Forced

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I04:S24	42304524	4234524	Intelligent Reader	4	Door4 Forced	I04 Door4 Forced
I04:S25	42304525	4234525	Intelligent Reader	4	Door5 Forced	I04 Door5 Forced
I04:S26	42304526	4234526	Intelligent Reader	4	Door6 Forced	I04 Door6 Forced
I04:S27	42304527	4234527	Intelligent Reader	4	Door7 Forced	I04 Door7 Forced
I04:S28	42304528	4234528	Intelligent Reader	4	Door8 Forced	I04 Door8 Forced
I04:S29	42604529	4264529	Intelligent Reader	4	Door1 DOTL	I04 Door1 DOTL
I04:S30	42604530	4264530	Intelligent Reader	4	Door2 DOTL	I04 Door2 DOTL
I04:S31	42604531	4264531	Intelligent Reader	4	Door3 DOTL	I04 Door3 DOTL
I04:S32	42604532	4264532	Intelligent Reader	4	Door4 DOTL	I04 Door4 DOTL
I04:S33	42604533	4264533	Intelligent Reader	4	Door5 DOTL	I04 Door5 DOTL
I04:S34	42604534	4264534	Intelligent Reader	4	Door6 DOTL	I04 Door6 DOTL
I04:S35	42604535	4264535	Intelligent Reader	4	Door7 DOTL	I04 Door7 DOTL
I04:S36	42604536	4264536	Intelligent Reader	4	Door8 DOTL	I04 Door8 DOTL
I04:S37	15004537	1504537	Intelligent Reader	4	Rdr1 Invalid	I04 Rdr1 Invalid
I04:S38	15004538	1504538	Intelligent Reader	4	Rdr2 Invalid	I04 Rdr2 Invalid
I04:S39	15004539	1504539	Intelligent Reader	4	Rdr3 Invalid	I04 Rdr3 Invalid
I04:S40	15004540	1504540	Intelligent Reader	4	Rdr4 Invalid	I04 Rdr4 Invalid
I04:S41	15004541	1504541	Intelligent Reader	4	Rdr5 Invalid	I04 Rdr5 Invalid
I04:S42	15004542	1504542	Intelligent Reader	4	Rdr6 Invalid	I04 Rdr6 Invalid
I04:S43	15004543	1504543	Intelligent Reader	4	Rdr7 Invalid	I04 Rdr7 Invalid
I04:S44	15004544	1504544	Intelligent Reader	4	Rdr8 Invalid	I04 Rdr8 Invalid
I04:S45	15004545	1504545	Intelligent Reader	4	Rdr9 Invalid	I04 Rdr9 Invalid
I04:S46	15004546	1504546	Intelligent Reader	4	Rdr10 Invalid	I04 Rdr10 Invalid
I04:S47	15004547	1504547	Intelligent Reader	4	Rdr11 Invalid	I04 Rdr11 Invalid
I04:S48	15004548	1504548	Intelligent Reader	4	Rdr12 Invalid	I04 Rdr12 Invalid
I04:S49	15004549	1504549	Intelligent Reader	4	Rdr13 Invalid	I04 Rdr13 Invalid
I04:S50	15004550	1504550	Intelligent Reader	4	Rdr14 Invalid	I04 Rdr14 Invalid
I04:S51	15004551	1504551	Intelligent Reader	4	Rdr15 Invalid	I04 Rdr15 Invalid
I04:S52	15004552	1504552	Intelligent Reader	4	Rdr16 Invalid	I04 Rdr16 Invalid
I04:S53	12204553	1224553	Intelligent Reader	4	Rdr1 Duress	I04 Rdr1 Duress
I04:S54	12204554	1224554	Intelligent Reader	4	Rdr2 Duress	I04 Rdr2 Duress
I04:S55	12204555	1224555	Intelligent Reader	4	Rdr3 Duress	I04 Rdr3 Duress
I04:S56	12204556	1224556	Intelligent Reader	4	Rdr4 Duress	I04 Rdr4 Duress
I04:S57	12204557	1224557	Intelligent Reader	4	Rdr5 Duress	I04 Rdr5 Duress
I04:S58	12204558	1224558	Intelligent Reader	4	Rdr6 Duress	I04 Rdr6 Duress
I04:S59	12204559	1224559	Intelligent Reader	4	Rdr7 Duress	I04 Rdr7 Duress
I04:S60	12204560	1224560	Intelligent Reader	4	Rdr8 Duress	I04 Rdr8 Duress
I04:S61	12204561	1224561	Intelligent Reader	4	Rdr9 Duress	I04 Rdr9 Duress
I04:S62	12204562	1224562	Intelligent Reader	4	Rdr10 Duress	I04 Rdr10 Duress
I04:S63	12204563	1224563	Intelligent Reader	4	Rdr11 Duress	I04 Rdr11 Duress
I04:S64	12204564	1224564	Intelligent Reader	4	Rdr12 Duress	I04 Rdr12 Duress
I04:S65	12204565	1224565	Intelligent Reader	4	Rdr13 Duress	I04 Rdr13 Duress
I04:S66	12204566	1224566	Intelligent Reader	4	Rdr14 Duress	I04 Rdr14 Duress
I04:S67	12204567	1224567	Intelligent Reader	4	Rdr15 Duress	I04 Rdr15 Duress
I04:S68	12204568	1224568	Intelligent Reader	4	Rdr16 Duress	I04 Rdr16 Duress
I04:S69	33004569	3304569	Intelligent Reader	4	Rdr1 Fault	I04 Rdr1 Fault
I04:S70	33004570	3304570	Intelligent Reader	4	Rdr2 Fault	I04 Rdr2 Fault
I04:S71	33004571	3304571	Intelligent Reader	4	Rdr3 Fault	I04 Rdr3 Fault
I04:S72	33004572	3304572	Intelligent Reader	4	Rdr4 Fault	I04 Rdr4 Fault
I04:S73	33004573	3304573	Intelligent Reader	4	Rdr5 Fault	I04 Rdr5 Fault
I04:S74	33004574	3304574	Intelligent Reader	4	Rdr6 Fault	I04 Rdr6 Fault
I04:S75	33004575	3304575	Intelligent Reader	4	Rdr7 Fault	I04 Rdr7 Fault
I04:S76	33004576	3304576	Intelligent Reader	4	Rdr8 Fault	I04 Rdr8 Fault
I04:S77	33004577	3304577	Intelligent Reader	4	Rdr9 Fault	I04 Rdr9 Fault
I04:S78	33004578	3304578	Intelligent Reader	4	Rdr10 Fault	I04 Rdr10 Fault
I04:S79	33004579	3304579	Intelligent Reader	4	Rdr11 Fault	I04 Rdr11 Fault
I04:S80	33004580	3304580	Intelligent Reader	4	Rdr12 Fault	I04 Rdr12 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I04:S81	33004581	3304581	Intelligent Reader	4	Rdr13 Fault	I04 Rdr13 Fault
I04:S82	33004582	3304582	Intelligent Reader	4	Rdr14 Fault	I04 Rdr14 Fault
I04:S83	33004583	3304583	Intelligent Reader	4	Rdr15 Fault	I04 Rdr15 Fault
I04:S84	33004584	3304584	Intelligent Reader	4	Rdr16 Fault	I04 Rdr16 Fault
I04:S85	30104585	3014585	Intelligent Reader	4	Ext AC fail	I04 Ext AC fail
I04:S86	30204586	3024586	Intelligent Reader	4	Ext Low Battery	I04 Ext Low Battery
I04:S87	30004587	3004587	Intelligent Reader	4	Ext LAN Fuse	I04 Ext LAN Fuse
I04:S88	30004588	3004588	Intelligent Reader	4	Ext Detector Fuse	I04 Ext Detector Fuse
I04:S89	30004589	3004589	Intelligent Reader	4	Ext Low Volts	I04 Ext Low Volts
I04:S90	30004590	3004590	Intelligent Reader	4	Ext PS Fail	I04 Ext PS Fail
I04:S91	30904591	3094591	Intelligent Reader	4	Ext Battery Test	I04 Ext Battery Test
I04:S92	15004592	1504592	Intelligent Reader	4	Spare2	I04 Spare2
I04:S93	15004593	1504593	Intelligent Reader	4	Spare3	I04 Spare3
I05:Z01	14005501	1405501	Intelligent Reader	5	Door1 Reed	I05 Door1 Reed
I05:Z02	14005502	1405502	Intelligent Reader	5	Door2 Reed	I05 Door2 Reed
I05:Z03	14005503	1405503	Intelligent Reader	5	Door1 Tongue	I05 Door1 Tongue
I05:Z04	14005504	1405504	Intelligent Reader	5	Door2 Tongue	I05 Door2 Tongue
I05:Z05	14005505	1405505	Intelligent Reader	5	Door1 REX	I05 Door1 REX
I05:Z06	14005506	1405506	Intelligent Reader	5	Door2 REX	I05 Door2 REX
I05:Z07	14005507	1405507	Intelligent Reader	5	Door1 REN	I05 Door1 REN
I05:Z08	14005508	1405508	Intelligent Reader	5	Door2 REN	I05 Door2 REN
I05:Z09	14005509	1405509	Intelligent Reader	5	Door3 Reed	I05 Door3 Reed
I05:Z10	14005510	1405510	Intelligent Reader	5	Door4 Reed	I05 Door4 Reed
I05:Z11	14005511	1405511	Intelligent Reader	5	Door3 Tongue	I05 Door3 Tongue
I05:Z12	14005512	1405512	Intelligent Reader	5	Door4 Tongue	I05 Door4 Tongue
I05:Z13	14005513	1405513	Intelligent Reader	5	Door3 REX	I05 Door3 REX
I05:Z14	14005514	1405514	Intelligent Reader	5	Door4 REX	I05 Door4 REX
I05:Z15	14005515	1405515	Intelligent Reader	5	Door3 REN	I05 Door3 REN
I05:Z16	14005516	1405516	Intelligent Reader	5	Door4 REN	I05 Door4 REN
I05:Z17	14005517	1405517	Intelligent Reader	5	Door5 Reed	I05 Door5 Reed
I05:Z18	14005518	1405518	Intelligent Reader	5	Door6 Reed	I05 Door6 Reed
I05:Z19	14005519	1405519	Intelligent Reader	5	Door5 Tongue	I05 Door5 Tongue
I05:Z20	14005520	1405520	Intelligent Reader	5	Door6 Tongue	I05 Door6 Tongue
I05:Z21	14005521	1405521	Intelligent Reader	5	Door5 REX	I05 Door5 REX
I05:Z22	14005522	1405522	Intelligent Reader	5	Door6 REX	I05 Door6 REX
I05:Z23	14005523	1405523	Intelligent Reader	5	Door5 REN	I05 Door5 REN
I05:Z24	14005524	1405524	Intelligent Reader	5	Door6 REN	I05 Door6 REN
I05:Z25	14005525	1405525	Intelligent Reader	5	Door7 Reed	I05 Door7 Reed
I05:Z26	14005526	1405526	Intelligent Reader	5	Door8 Reed	I05 Door8 Reed
I05:Z27	14005527	1405527	Intelligent Reader	5	Door7 Tongue	I05 Door7 Tongue
I05:Z28	14005528	1405528	Intelligent Reader	5	Door8 Tongue	I05 Door8 Tongue
I05:Z29	14005529	1405529	Intelligent Reader	5	Door7 REX	I05 Door7 REX
I05:Z30	14005530	1405530	Intelligent Reader	5	Door8 REX	I05 Door8 REX
I05:Z31	14005531	1405531	Intelligent Reader	5	Door7 REN	I05 Door7 REN
I05:Z32	14005532	1405532	Intelligent Reader	5	Door8 REN	I05 Door8 REN
I05:S01	14505501	1455501	Intelligent Reader	5	Cabinet Tamper	I05 Cabinet Tamper
I05:S02	30105502	3015502	Intelligent Reader	5	AC fail	I05 AC fail
I05:S03	30205503	3025503	Intelligent Reader	5	Low Battery	I05 Low Battery
I05:S04	30005504	3005504	Intelligent Reader	5	LAN Fuse	I05 LAN Fuse
I05:S05	30005505	3005505	Intelligent Reader	5	Detector Fuse	I05 Detector Fuse
I05:S06	30005506	3005506	Intelligent Reader	5	Low Volts	I05 Low Volts
I05:S07	30005507	3005507	Intelligent Reader	5	PS Fail	I05 PS Fail
I05:S08	30905508	3095508	Intelligent Reader	5	Battery Test	I05 Battery Test
I05:S09	33305509	3335509	Intelligent Reader	5	Unibus Fault	I05 Unibus Fault
I05:S10	30305510	3035510	Intelligent Reader	5	Download Fail	I05 Download Fail
I05:S11	15005511	1505511	Intelligent Reader	5	Spare1	I05 Spare1
I05:S12	14305512	1435512	Intelligent Reader	5	LAN Comms	I05 LAN Comms

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I05:S13	43205513	4325513	Intelligent Reader	5	Door1 Fault	I05 Door1 Fault
I05:S14	43205514	4325514	Intelligent Reader	5	Door2 Fault	I05 Door2 Fault
I05:S15	43205515	4325515	Intelligent Reader	5	Door3 Fault	I05 Door3 Fault
I05:S16	43205516	4325516	Intelligent Reader	5	Door4 Fault	I05 Door4 Fault
I05:S17	43205517	4325517	Intelligent Reader	5	Door5 Fault	I05 Door5 Fault
I05:S18	43205518	4325518	Intelligent Reader	5	Door6 Fault	I05 Door6 Fault
I05:S19	43205519	4325519	Intelligent Reader	5	Door7 Fault	I05 Door7 Fault
I05:S20	43205520	4325520	Intelligent Reader	5	Door8 Fault	I05 Door8 Fault
I05:S21	42305521	4235521	Intelligent Reader	5	Door1 Forced	I05 Door1 Forced
I05:S22	42305522	4235522	Intelligent Reader	5	Door2 Forced	I05 Door2 Forced
I05:S23	42305523	4235523	Intelligent Reader	5	Door3 Forced	I05 Door3 Forced
I05:S24	42305524	4235524	Intelligent Reader	5	Door4 Forced	I05 Door4 Forced
I05:S25	42305525	4235525	Intelligent Reader	5	Door5 Forced	I05 Door5 Forced
I05:S26	42305526	4235526	Intelligent Reader	5	Door6 Forced	I05 Door6 Forced
I05:S27	42305527	4235527	Intelligent Reader	5	Door7 Forced	I05 Door7 Forced
I05:S28	42305528	4235528	Intelligent Reader	5	Door8 Forced	I05 Door8 Forced
I05:S29	42605529	4265529	Intelligent Reader	5	Door1 DOTL	I05 Door1 DOTL
I05:S30	42605530	4265530	Intelligent Reader	5	Door2 DOTL	I05 Door2 DOTL
I05:S31	42605531	4265531	Intelligent Reader	5	Door3 DOTL	I05 Door3 DOTL
I05:S32	42605532	4265532	Intelligent Reader	5	Door4 DOTL	I05 Door4 DOTL
I05:S33	42605533	4265533	Intelligent Reader	5	Door5 DOTL	I05 Door5 DOTL
I05:S34	42605534	4265534	Intelligent Reader	5	Door6 DOTL	I05 Door6 DOTL
I05:S35	42605535	4265535	Intelligent Reader	5	Door7 DOTL	I05 Door7 DOTL
I05:S36	42605536	4265536	Intelligent Reader	5	Door8 DOTL	I05 Door8 DOTL
I05:S37	15005537	1505537	Intelligent Reader	5	Rdr1 Invalid	I05 Rdr1 Invalid
I05:S38	15005538	1505538	Intelligent Reader	5	Rdr2 Invalid	I05 Rdr2 Invalid
I05:S39	15005539	1505539	Intelligent Reader	5	Rdr3 Invalid	I05 Rdr3 Invalid
I05:S40	15005540	1505540	Intelligent Reader	5	Rdr4 Invalid	I05 Rdr4 Invalid
I05:S41	15005541	1505541	Intelligent Reader	5	Rdr5 Invalid	I05 Rdr5 Invalid
I05:S42	15005542	1505542	Intelligent Reader	5	Rdr6 Invalid	I05 Rdr6 Invalid
I05:S43	15005543	1505543	Intelligent Reader	5	Rdr7 Invalid	I05 Rdr7 Invalid
I05:S44	15005544	1505544	Intelligent Reader	5	Rdr8 Invalid	I05 Rdr8 Invalid
I05:S45	15005545	1505545	Intelligent Reader	5	Rdr9 Invalid	I05 Rdr9 Invalid
I05:S46	15005546	1505546	Intelligent Reader	5	Rdr10 Invalid	I05 Rdr10 Invalid
I05:S47	15005547	1505547	Intelligent Reader	5	Rdr11 Invalid	I05 Rdr11 Invalid
I05:S48	15005548	1505548	Intelligent Reader	5	Rdr12 Invalid	I05 Rdr12 Invalid
I05:S49	15005549	1505549	Intelligent Reader	5	Rdr13 Invalid	I05 Rdr13 Invalid
I05:S50	15005550	1505550	Intelligent Reader	5	Rdr14 Invalid	I05 Rdr14 Invalid
I05:S51	15005551	1505551	Intelligent Reader	5	Rdr15 Invalid	I05 Rdr15 Invalid
I05:S52	15005552	1505552	Intelligent Reader	5	Rdr16 Invalid	I05 Rdr16 Invalid
I05:S53	12205553	1225553	Intelligent Reader	5	Rdr1 Duress	I05 Rdr1 Duress
I05:S54	12205554	1225554	Intelligent Reader	5	Rdr2 Duress	I05 Rdr2 Duress
I05:S55	12205555	1225555	Intelligent Reader	5	Rdr3 Duress	I05 Rdr3 Duress
I05:S56	12205556	1225556	Intelligent Reader	5	Rdr4 Duress	I05 Rdr4 Duress
I05:S57	12205557	1225557	Intelligent Reader	5	Rdr5 Duress	I05 Rdr5 Duress
I05:S58	12205558	1225558	Intelligent Reader	5	Rdr6 Duress	I05 Rdr6 Duress
I05:S59	12205559	1225559	Intelligent Reader	5	Rdr7 Duress	I05 Rdr7 Duress
I05:S60	12205560	1225560	Intelligent Reader	5	Rdr8 Duress	I05 Rdr8 Duress
I05:S61	12205561	1225561	Intelligent Reader	5	Rdr9 Duress	I05 Rdr9 Duress
I05:S62	12205562	1225562	Intelligent Reader	5	Rdr10 Duress	I05 Rdr10 Duress
I05:S63	12205563	1225563	Intelligent Reader	5	Rdr11 Duress	I05 Rdr11 Duress
I05:S64	12205564	1225564	Intelligent Reader	5	Rdr12 Duress	I05 Rdr12 Duress
I05:S65	12205565	1225565	Intelligent Reader	5	Rdr13 Duress	I05 Rdr13 Duress
I05:S66	12205566	1225566	Intelligent Reader	5	Rdr14 Duress	I05 Rdr14 Duress
I05:S67	12205567	1225567	Intelligent Reader	5	Rdr15 Duress	I05 Rdr15 Duress
I05:S68	12205568	1225568	Intelligent Reader	5	Rdr16 Duress	I05 Rdr16 Duress
I05:S69	33005569	3305569	Intelligent Reader	5	Rdr1 Fault	I05 Rdr1 Fault

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I05:S70	33005570	3305570	Intelligent Reader	5	Rdr2 Fault	I05 Rdr2 Fault
I05:S71	33005571	3305571	Intelligent Reader	5	Rdr3 Fault	I05 Rdr3 Fault
I05:S72	33005572	3305572	Intelligent Reader	5	Rdr4 Fault	I05 Rdr4 Fault
I05:S73	33005573	3305573	Intelligent Reader	5	Rdr5 Fault	I05 Rdr5 Fault
I05:S74	33005574	3305574	Intelligent Reader	5	Rdr6 Fault	I05 Rdr6 Fault
I05:S75	33005575	3305575	Intelligent Reader	5	Rdr7 Fault	I05 Rdr7 Fault
I05:S76	33005576	3305576	Intelligent Reader	5	Rdr8 Fault	I05 Rdr8 Fault
I05:S77	33005577	3305577	Intelligent Reader	5	Rdr9 Fault	I05 Rdr9 Fault
I05:S78	33005578	3305578	Intelligent Reader	5	Rdr10 Fault	I05 Rdr10 Fault
I05:S79	33005579	3305579	Intelligent Reader	5	Rdr11 Fault	I05 Rdr11 Fault
I05:S80	33005580	3305580	Intelligent Reader	5	Rdr12 Fault	I05 Rdr12 Fault
I05:S81	33005581	3305581	Intelligent Reader	5	Rdr13 Fault	I05 Rdr13 Fault
I05:S82	33005582	3305582	Intelligent Reader	5	Rdr14 Fault	I05 Rdr14 Fault
I05:S83	33005583	3305583	Intelligent Reader	5	Rdr15 Fault	I05 Rdr15 Fault
I05:S84	33005584	3305584	Intelligent Reader	5	Rdr16 Fault	I05 Rdr16 Fault
I05:S85	30105585	3015585	Intelligent Reader	5	Ext AC fail	I05 Ext AC fail
I05:S86	30205586	3025586	Intelligent Reader	5	Ext Low Battery	I05 Ext Low Battery
I05:S87	30005587	3005587	Intelligent Reader	5	Ext LAN Fuse	I05 Ext LAN Fuse
I05:S88	30005588	3005588	Intelligent Reader	5	Ext Detector Fuse	I05 Ext Detector Fuse
I05:S89	30005589	3005589	Intelligent Reader	5	Ext Low Volts	I05 Ext Low Volts
I05:S90	30005590	3005590	Intelligent Reader	5	Ext PS Fail	I05 Ext PS Fail
I05:S91	30905591	3095591	Intelligent Reader	5	Ext Battery Test	I05 Ext Battery Test
I05:S92	15005592	1505592	Intelligent Reader	5	Spare2	I05 Spare2
I05:S93	15005593	1505593	Intelligent Reader	5	Spare3	I05 Spare3
I06:Z01	14006501	1406501	Intelligent Reader	6	Door1 Reed	I06 Door1 Reed
I06:Z02	14006502	1406502	Intelligent Reader	6	Door2 Reed	I06 Door2 Reed
I06:Z03	14006503	1406503	Intelligent Reader	6	Door1 Tongue	I06 Door1 Tongue
I06:Z04	14006504	1406504	Intelligent Reader	6	Door2 Tongue	I06 Door2 Tongue
I06:Z05	14006505	1406505	Intelligent Reader	6	Door1 REX	I06 Door1 REX
I06:Z06	14006506	1406506	Intelligent Reader	6	Door2 REX	I06 Door2 REX
I06:Z07	14006507	1406507	Intelligent Reader	6	Door1 REN	I06 Door1 REN
I06:Z08	14006508	1406508	Intelligent Reader	6	Door2 REN	I06 Door2 REN
I06:Z09	14006509	1406509	Intelligent Reader	6	Door3 Reed	I06 Door3 Reed
I06:Z10	14006510	1406510	Intelligent Reader	6	Door4 Reed	I06 Door4 Reed
I06:Z11	14006511	1406511	Intelligent Reader	6	Door3 Tongue	I06 Door3 Tongue
I06:Z12	14006512	1406512	Intelligent Reader	6	Door4 Tongue	I06 Door4 Tongue
I06:Z13	14006513	1406513	Intelligent Reader	6	Door3 REX	I06 Door3 REX
I06:Z14	14006514	1406514	Intelligent Reader	6	Door4 REX	I06 Door4 REX
I06:Z15	14006515	1406515	Intelligent Reader	6	Door3 REN	I06 Door3 REN
I06:Z16	14006516	1406516	Intelligent Reader	6	Door4 REN	I06 Door4 REN
I06:Z17	14006517	1406517	Intelligent Reader	6	Door5 Reed	I06 Door5 Reed
I06:Z18	14006518	1406518	Intelligent Reader	6	Door6 Reed	I06 Door6 Reed
I06:Z19	14006519	1406519	Intelligent Reader	6	Door5 Tongue	I06 Door5 Tongue
I06:Z20	14006520	1406520	Intelligent Reader	6	Door6 Tongue	I06 Door6 Tongue
I06:Z21	14006521	1406521	Intelligent Reader	6	Door5 REX	I06 Door5 REX
I06:Z22	14006522	1406522	Intelligent Reader	6	Door6 REX	I06 Door6 REX
I06:Z23	14006523	1406523	Intelligent Reader	6	Door5 REN	I06 Door5 REN
I06:Z24	14006524	1406524	Intelligent Reader	6	Door6 REN	I06 Door6 REN
I06:Z25	14006525	1406525	Intelligent Reader	6	Door7 Reed	I06 Door7 Reed
I06:Z26	14006526	1406526	Intelligent Reader	6	Door8 Reed	I06 Door8 Reed
I06:Z27	14006527	1406527	Intelligent Reader	6	Door7 Tongue	I06 Door7 Tongue
I06:Z28	14006528	1406528	Intelligent Reader	6	Door8 Tongue	I06 Door8 Tongue
I06:Z29	14006529	1406529	Intelligent Reader	6	Door7 REX	I06 Door7 REX
I06:Z30	14006530	1406530	Intelligent Reader	6	Door8 REX	I06 Door8 REX
I06:Z31	14006531	1406531	Intelligent Reader	6	Door7 REN	I06 Door7 REN
I06:Z32	14006532	1406532	Intelligent Reader	6	Door8 REN	I06 Door8 REN
I06:S01	14506501	1456501	Intelligent Reader	6	Cabinet Tamper	I06 Cabinet Tamper

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I06:S02	30106502	3016502	Intelligent Reader	6	AC fail	I06 AC fail
I06:S03	30206503	3026503	Intelligent Reader	6	Low Battery	I06 Low Battery
I06:S04	30006504	3006504	Intelligent Reader	6	LAN Fuse	I06 LAN Fuse
I06:S05	30006505	3006505	Intelligent Reader	6	Detector Fuse	I06 Detector Fuse
I06:S06	30006506	3006506	Intelligent Reader	6	Low Volts	I06 Low Volts
I06:S07	30006507	3006507	Intelligent Reader	6	PS Fail	I06 PS Fail
I06:S08	30906508	3096508	Intelligent Reader	6	Battery Test	I06 Battery Test
I06:S09	33306509	3336509	Intelligent Reader	6	Unibus Fault	I06 Unibus Fault
I06:S10	30306510	3036510	Intelligent Reader	6	Download Fail	I06 Download Fail
I06:S11	15006511	1506511	Intelligent Reader	6	Spare1	I06 Spare1
I06:S12	14306512	1436512	Intelligent Reader	6	LAN Comms	I06 LAN Comms
I06:S13	43206513	4326513	Intelligent Reader	6	Door1 Fault	I06 Door1 Fault
I06:S14	43206514	4326514	Intelligent Reader	6	Door2 Fault	I06 Door2 Fault
I06:S15	43206515	4326515	Intelligent Reader	6	Door3 Fault	I06 Door3 Fault
I06:S16	43206516	4326516	Intelligent Reader	6	Door4 Fault	I06 Door4 Fault
I06:S17	43206517	4326517	Intelligent Reader	6	Door5 Fault	I06 Door5 Fault
I06:S18	43206518	4326518	Intelligent Reader	6	Door6 Fault	I06 Door6 Fault
I06:S19	43206519	4326519	Intelligent Reader	6	Door7 Fault	I06 Door7 Fault
I06:S20	43206520	4326520	Intelligent Reader	6	Door8 Fault	I06 Door8 Fault
I06:S21	42306521	4236521	Intelligent Reader	6	Door1 Forced	I06 Door1 Forced
I06:S22	42306522	4236522	Intelligent Reader	6	Door2 Forced	I06 Door2 Forced
I06:S23	42306523	4236523	Intelligent Reader	6	Door3 Forced	I06 Door3 Forced
I06:S24	42306524	4236524	Intelligent Reader	6	Door4 Forced	I06 Door4 Forced
I06:S25	42306525	4236525	Intelligent Reader	6	Door5 Forced	I06 Door5 Forced
I06:S26	42306526	4236526	Intelligent Reader	6	Door6 Forced	I06 Door6 Forced
I06:S27	42306527	4236527	Intelligent Reader	6	Door7 Forced	I06 Door7 Forced
I06:S28	42306528	4236528	Intelligent Reader	6	Door8 Forced	I06 Door8 Forced
I06:S29	42606529	4266529	Intelligent Reader	6	Door1 DOTL	I06 Door1 DOTL
I06:S30	42606530	4266530	Intelligent Reader	6	Door2 DOTL	I06 Door2 DOTL
I06:S31	42606531	4266531	Intelligent Reader	6	Door3 DOTL	I06 Door3 DOTL
I06:S32	42606532	4266532	Intelligent Reader	6	Door4 DOTL	I06 Door4 DOTL
I06:S33	42606533	4266533	Intelligent Reader	6	Door5 DOTL	I06 Door5 DOTL
I06:S34	42606534	4266534	Intelligent Reader	6	Door6 DOTL	I06 Door6 DOTL
I06:S35	42606535	4266535	Intelligent Reader	6	Door7 DOTL	I06 Door7 DOTL
I06:S36	42606536	4266536	Intelligent Reader	6	Door8 DOTL	I06 Door8 DOTL
I06:S37	15006537	1506537	Intelligent Reader	6	Rdr1 Invalid	I06 Rdr1 Invalid
I06:S38	15006538	1506538	Intelligent Reader	6	Rdr2 Invalid	I06 Rdr2 Invalid
I06:S39	15006539	1506539	Intelligent Reader	6	Rdr3 Invalid	I06 Rdr3 Invalid
I06:S40	15006540	1506540	Intelligent Reader	6	Rdr4 Invalid	I06 Rdr4 Invalid
I06:S41	15006541	1506541	Intelligent Reader	6	Rdr5 Invalid	I06 Rdr5 Invalid
I06:S42	15006542	1506542	Intelligent Reader	6	Rdr6 Invalid	I06 Rdr6 Invalid
I06:S43	15006543	1506543	Intelligent Reader	6	Rdr7 Invalid	I06 Rdr7 Invalid
I06:S44	15006544	1506544	Intelligent Reader	6	Rdr8 Invalid	I06 Rdr8 Invalid
I06:S45	15006545	1506545	Intelligent Reader	6	Rdr9 Invalid	I06 Rdr9 Invalid
I06:S46	15006546	1506546	Intelligent Reader	6	Rdr10 Invalid	I06 Rdr10 Invalid
I06:S47	15006547	1506547	Intelligent Reader	6	Rdr11 Invalid	I06 Rdr11 Invalid
I06:S48	15006548	1506548	Intelligent Reader	6	Rdr12 Invalid	I06 Rdr12 Invalid
I06:S49	15006549	1506549	Intelligent Reader	6	Rdr13 Invalid	I06 Rdr13 Invalid
I06:S50	15006550	1506550	Intelligent Reader	6	Rdr14 Invalid	I06 Rdr14 Invalid
I06:S51	15006551	1506551	Intelligent Reader	6	Rdr15 Invalid	I06 Rdr15 Invalid
I06:S52	15006552	1506552	Intelligent Reader	6	Rdr16 Invalid	I06 Rdr16 Invalid
I06:S53	12206553	1226553	Intelligent Reader	6	Rdr1 Duress	I06 Rdr1 Duress
I06:S54	12206554	1226554	Intelligent Reader	6	Rdr2 Duress	I06 Rdr2 Duress
I06:S55	12206555	1226555	Intelligent Reader	6	Rdr3 Duress	I06 Rdr3 Duress
I06:S56	12206556	1226556	Intelligent Reader	6	Rdr4 Duress	I06 Rdr4 Duress
I06:S57	12206557	1226557	Intelligent Reader	6	Rdr5 Duress	I06 Rdr5 Duress
I06:S58	12206558	1226558	Intelligent Reader	6	Rdr6 Duress	I06 Rdr6 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I06:S59	12206559	1226559	Intelligent Reader	6	Rdr7 Duress	I06 Rdr7 Duress
I06:S60	12206560	1226560	Intelligent Reader	6	Rdr8 Duress	I06 Rdr8 Duress
I06:S61	12206561	1226561	Intelligent Reader	6	Rdr9 Duress	I06 Rdr9 Duress
I06:S62	12206562	1226562	Intelligent Reader	6	Rdr10 Duress	I06 Rdr10 Duress
I06:S63	12206563	1226563	Intelligent Reader	6	Rdr11 Duress	I06 Rdr11 Duress
I06:S64	12206564	1226564	Intelligent Reader	6	Rdr12 Duress	I06 Rdr12 Duress
I06:S65	12206565	1226565	Intelligent Reader	6	Rdr13 Duress	I06 Rdr13 Duress
I06:S66	12206566	1226566	Intelligent Reader	6	Rdr14 Duress	I06 Rdr14 Duress
I06:S67	12206567	1226567	Intelligent Reader	6	Rdr15 Duress	I06 Rdr15 Duress
I06:S68	12206568	1226568	Intelligent Reader	6	Rdr16 Duress	I06 Rdr16 Duress
I06:S69	33006569	3306569	Intelligent Reader	6	Rdr1 Fault	I06 Rdr1 Fault
I06:S70	33006570	3306570	Intelligent Reader	6	Rdr2 Fault	I06 Rdr2 Fault
I06:S71	33006571	3306571	Intelligent Reader	6	Rdr3 Fault	I06 Rdr3 Fault
I06:S72	33006572	3306572	Intelligent Reader	6	Rdr4 Fault	I06 Rdr4 Fault
I06:S73	33006573	3306573	Intelligent Reader	6	Rdr5 Fault	I06 Rdr5 Fault
I06:S74	33006574	3306574	Intelligent Reader	6	Rdr6 Fault	I06 Rdr6 Fault
I06:S75	33006575	3306575	Intelligent Reader	6	Rdr7 Fault	I06 Rdr7 Fault
I06:S76	33006576	3306576	Intelligent Reader	6	Rdr8 Fault	I06 Rdr8 Fault
I06:S77	33006577	3306577	Intelligent Reader	6	Rdr9 Fault	I06 Rdr9 Fault
I06:S78	33006578	3306578	Intelligent Reader	6	Rdr10 Fault	I06 Rdr10 Fault
I06:S79	33006579	3306579	Intelligent Reader	6	Rdr11 Fault	I06 Rdr11 Fault
I06:S80	33006580	3306580	Intelligent Reader	6	Rdr12 Fault	I06 Rdr12 Fault
I06:S81	33006581	3306581	Intelligent Reader	6	Rdr13 Fault	I06 Rdr13 Fault
I06:S82	33006582	3306582	Intelligent Reader	6	Rdr14 Fault	I06 Rdr14 Fault
I06:S83	33006583	3306583	Intelligent Reader	6	Rdr15 Fault	I06 Rdr15 Fault
I06:S84	33006584	3306584	Intelligent Reader	6	Rdr16 Fault	I06 Rdr16 Fault
I06:S85	30106585	3016585	Intelligent Reader	6	Ext AC fail	I06 Ext AC fail
I06:S86	30206586	3026586	Intelligent Reader	6	Ext Low Battery	I06 Ext Low Battery
I06:S87	30006587	3006587	Intelligent Reader	6	Ext LAN Fuse	I06 Ext LAN Fuse
I06:S88	30006588	3006588	Intelligent Reader	6	Ext Detector Fuse	I06 Ext Detector Fuse
I06:S89	30006589	3006589	Intelligent Reader	6	Ext Low Volts	I06 Ext Low Volts
I06:S90	30006590	3006590	Intelligent Reader	6	Ext PS Fail	I06 Ext PS Fail
I06:S91	30906591	3096591	Intelligent Reader	6	Ext Battery Test	I06 Ext Battery Test
I06:S92	15006592	1506592	Intelligent Reader	6	Spare2	I06 Spare2
I06:S93	15006593	1506593	Intelligent Reader	6	Spare3	I06 Spare3
I07:Z01	14007501	1407501	Intelligent Reader	7	Door1 Reed	I07 Door1 Reed
I07:Z02	14007502	1407502	Intelligent Reader	7	Door2 Reed	I07 Door2 Reed
I07:Z03	14007503	1407503	Intelligent Reader	7	Door1 Tongue	I07 Door1 Tongue
I07:Z04	14007504	1407504	Intelligent Reader	7	Door2 Tongue	I07 Door2 Tongue
I07:Z05	14007505	1407505	Intelligent Reader	7	Door1 REX	I07 Door1 REX
I07:Z06	14007506	1407506	Intelligent Reader	7	Door2 REX	I07 Door2 REX
I07:Z07	14007507	1407507	Intelligent Reader	7	Door1 REN	I07 Door1 REN
I07:Z08	14007508	1407508	Intelligent Reader	7	Door2 REN	I07 Door2 REN
I07:Z09	14007509	1407509	Intelligent Reader	7	Door3 Reed	I07 Door3 Reed
I07:Z10	14007510	1407510	Intelligent Reader	7	Door4 Reed	I07 Door4 Reed
I07:Z11	14007511	1407511	Intelligent Reader	7	Door3 Tongue	I07 Door3 Tongue
I07:Z12	14007512	1407512	Intelligent Reader	7	Door4 Tongue	I07 Door4 Tongue
I07:Z13	14007513	1407513	Intelligent Reader	7	Door3 REX	I07 Door3 REX
I07:Z14	14007514	1407514	Intelligent Reader	7	Door4 REX	I07 Door4 REX
I07:Z15	14007515	1407515	Intelligent Reader	7	Door3 REN	I07 Door3 REN
I07:Z16	14007516	1407516	Intelligent Reader	7	Door4 REN	I07 Door4 REN
I07:Z17	14007517	1407517	Intelligent Reader	7	Door5 Reed	I07 Door5 Reed
I07:Z18	14007518	1407518	Intelligent Reader	7	Door6 Reed	I07 Door6 Reed
I07:Z19	14007519	1407519	Intelligent Reader	7	Door5 Tongue	I07 Door5 Tongue
I07:Z20	14007520	1407520	Intelligent Reader	7	Door6 Tongue	I07 Door6 Tongue
I07:Z21	14007521	1407521	Intelligent Reader	7	Door5 REX	I07 Door5 REX
I07:Z22	14007522	1407522	Intelligent Reader	7	Door6 REX	I07 Door6 REX

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I07:Z23	14007523	1407523	Intelligent Reader	7	Door5 REN	I07 Door5 REN
I07:Z24	14007524	1407524	Intelligent Reader	7	Door6 REN	I07 Door6 REN
I07:Z25	14007525	1407525	Intelligent Reader	7	Door7 Reed	I07 Door7 Reed
I07:Z26	14007526	1407526	Intelligent Reader	7	Door8 Reed	I07 Door8 Reed
I07:Z27	14007527	1407527	Intelligent Reader	7	Door7 Tongue	I07 Door7 Tongue
I07:Z28	14007528	1407528	Intelligent Reader	7	Door8 Tongue	I07 Door8 Tongue
I07:Z29	14007529	1407529	Intelligent Reader	7	Door7 REX	I07 Door7 REX
I07:Z30	14007530	1407530	Intelligent Reader	7	Door8 REX	I07 Door8 REX
I07:Z31	14007531	1407531	Intelligent Reader	7	Door7 REN	I07 Door7 REN
I07:Z32	14007532	1407532	Intelligent Reader	7	Door8 REN	I07 Door8 REN
I07:S01	14507501	1457501	Intelligent Reader	7	Cabinet Tamper	I07 Cabinet Tamper
I07:S02	30107502	3017502	Intelligent Reader	7	AC fail	I07 AC fail
I07:S03	30207503	3027503	Intelligent Reader	7	Low Battery	I07 Low Battery
I07:S04	30007504	3007504	Intelligent Reader	7	LAN Fuse	I07 LAN Fuse
I07:S05	30007505	3007505	Intelligent Reader	7	Detector Fuse	I07 Detector Fuse
I07:S06	30007506	3007506	Intelligent Reader	7	Low Volts	I07 Low Volts
I07:S07	30007507	3007507	Intelligent Reader	7	PS Fail	I07 PS Fail
I07:S08	30907508	3097508	Intelligent Reader	7	Battery Test	I07 Battery Test
I07:S09	33307509	3337509	Intelligent Reader	7	Unibus Fault	I07 Unibus Fault
I07:S10	30307510	3037510	Intelligent Reader	7	Download Fail	I07 Download Fail
I07:S11	15007511	1507511	Intelligent Reader	7	Spare1	I07 Spare1
I07:S12	14307512	1437512	Intelligent Reader	7	LAN Comms	I07 LAN Comms
I07:S13	43207513	4327513	Intelligent Reader	7	Door1 Fault	I07 Door1 Fault
I07:S14	43207514	4327514	Intelligent Reader	7	Door2 Fault	I07 Door2 Fault
I07:S15	43207515	4327515	Intelligent Reader	7	Door3 Fault	I07 Door3 Fault
I07:S16	43207516	4327516	Intelligent Reader	7	Door4 Fault	I07 Door4 Fault
I07:S17	43207517	4327517	Intelligent Reader	7	Door5 Fault	I07 Door5 Fault
I07:S18	43207518	4327518	Intelligent Reader	7	Door6 Fault	I07 Door6 Fault
I07:S19	43207519	4327519	Intelligent Reader	7	Door7 Fault	I07 Door7 Fault
I07:S20	43207520	4327520	Intelligent Reader	7	Door8 Fault	I07 Door8 Fault
I07:S21	42307521	4237521	Intelligent Reader	7	Door1 Forced	I07 Door1 Forced
I07:S22	42307522	4237522	Intelligent Reader	7	Door2 Forced	I07 Door2 Forced
I07:S23	42307523	4237523	Intelligent Reader	7	Door3 Forced	I07 Door3 Forced
I07:S24	42307524	4237524	Intelligent Reader	7	Door4 Forced	I07 Door4 Forced
I07:S25	42307525	4237525	Intelligent Reader	7	Door5 Forced	I07 Door5 Forced
I07:S26	42307526	4237526	Intelligent Reader	7	Door6 Forced	I07 Door6 Forced
I07:S27	42307527	4237527	Intelligent Reader	7	Door7 Forced	I07 Door7 Forced
I07:S28	42307528	4237528	Intelligent Reader	7	Door8 Forced	I07 Door8 Forced
I07:S29	42607529	4267529	Intelligent Reader	7	Door1 DOTL	I07 Door1 DOTL
I07:S30	42607530	4267530	Intelligent Reader	7	Door2 DOTL	I07 Door2 DOTL
I07:S31	42607531	4267531	Intelligent Reader	7	Door3 DOTL	I07 Door3 DOTL
I07:S32	42607532	4267532	Intelligent Reader	7	Door4 DOTL	I07 Door4 DOTL
I07:S33	42607533	4267533	Intelligent Reader	7	Door5 DOTL	I07 Door5 DOTL
I07:S34	42607534	4267534	Intelligent Reader	7	Door6 DOTL	I07 Door6 DOTL
I07:S35	42607535	4267535	Intelligent Reader	7	Door7 DOTL	I07 Door7 DOTL
I07:S36	42607536	4267536	Intelligent Reader	7	Door8 DOTL	I07 Door8 DOTL
I07:S37	15007537	1507537	Intelligent Reader	7	Rdr1 Invalid	I07 Rdr1 Invalid
I07:S38	15007538	1507538	Intelligent Reader	7	Rdr2 Invalid	I07 Rdr2 Invalid
I07:S39	15007539	1507539	Intelligent Reader	7	Rdr3 Invalid	I07 Rdr3 Invalid
I07:S40	15007540	1507540	Intelligent Reader	7	Rdr4 Invalid	I07 Rdr4 Invalid
I07:S41	15007541	1507541	Intelligent Reader	7	Rdr5 Invalid	I07 Rdr5 Invalid
I07:S42	15007542	1507542	Intelligent Reader	7	Rdr6 Invalid	I07 Rdr6 Invalid
I07:S43	15007543	1507543	Intelligent Reader	7	Rdr7 Invalid	I07 Rdr7 Invalid
I07:S44	15007544	1507544	Intelligent Reader	7	Rdr8 Invalid	I07 Rdr8 Invalid
I07:S45	15007545	1507545	Intelligent Reader	7	Rdr9 Invalid	I07 Rdr9 Invalid
I07:S46	15007546	1507546	Intelligent Reader	7	Rdr10 Invalid	I07 Rdr10 Invalid
I07:S47	15007547	1507547	Intelligent Reader	7	Rdr11 Invalid	I07 Rdr11 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I07:S48	15007548	1507548	Intelligent Reader	7	Rdr12 Invalid	I07 Rdr12 Invalid
I07:S49	15007549	1507549	Intelligent Reader	7	Rdr13 Invalid	I07 Rdr13 Invalid
I07:S50	15007550	1507550	Intelligent Reader	7	Rdr14 Invalid	I07 Rdr14 Invalid
I07:S51	15007551	1507551	Intelligent Reader	7	Rdr15 Invalid	I07 Rdr15 Invalid
I07:S52	15007552	1507552	Intelligent Reader	7	Rdr16 Invalid	I07 Rdr16 Invalid
I07:S53	12207553	1227553	Intelligent Reader	7	Rdr1 Duress	I07 Rdr1 Duress
I07:S54	12207554	1227554	Intelligent Reader	7	Rdr2 Duress	I07 Rdr2 Duress
I07:S55	12207555	1227555	Intelligent Reader	7	Rdr3 Duress	I07 Rdr3 Duress
I07:S56	12207556	1227556	Intelligent Reader	7	Rdr4 Duress	I07 Rdr4 Duress
I07:S57	12207557	1227557	Intelligent Reader	7	Rdr5 Duress	I07 Rdr5 Duress
I07:S58	12207558	1227558	Intelligent Reader	7	Rdr6 Duress	I07 Rdr6 Duress
I07:S59	12207559	1227559	Intelligent Reader	7	Rdr7 Duress	I07 Rdr7 Duress
I07:S60	12207560	1227560	Intelligent Reader	7	Rdr8 Duress	I07 Rdr8 Duress
I07:S61	12207561	1227561	Intelligent Reader	7	Rdr9 Duress	I07 Rdr9 Duress
I07:S62	12207562	1227562	Intelligent Reader	7	Rdr10 Duress	I07 Rdr10 Duress
I07:S63	12207563	1227563	Intelligent Reader	7	Rdr11 Duress	I07 Rdr11 Duress
I07:S64	12207564	1227564	Intelligent Reader	7	Rdr12 Duress	I07 Rdr12 Duress
I07:S65	12207565	1227565	Intelligent Reader	7	Rdr13 Duress	I07 Rdr13 Duress
I07:S66	12207566	1227566	Intelligent Reader	7	Rdr14 Duress	I07 Rdr14 Duress
I07:S67	12207567	1227567	Intelligent Reader	7	Rdr15 Duress	I07 Rdr15 Duress
I07:S68	12207568	1227568	Intelligent Reader	7	Rdr16 Duress	I07 Rdr16 Duress
I07:S69	33007569	3307569	Intelligent Reader	7	Rdr1 Fault	I07 Rdr1 Fault
I07:S70	33007570	3307570	Intelligent Reader	7	Rdr2 Fault	I07 Rdr2 Fault
I07:S71	33007571	3307571	Intelligent Reader	7	Rdr3 Fault	I07 Rdr3 Fault
I07:S72	33007572	3307572	Intelligent Reader	7	Rdr4 Fault	I07 Rdr4 Fault
I07:S73	33007573	3307573	Intelligent Reader	7	Rdr5 Fault	I07 Rdr5 Fault
I07:S74	33007574	3307574	Intelligent Reader	7	Rdr6 Fault	I07 Rdr6 Fault
I07:S75	33007575	3307575	Intelligent Reader	7	Rdr7 Fault	I07 Rdr7 Fault
I07:S76	33007576	3307576	Intelligent Reader	7	Rdr8 Fault	I07 Rdr8 Fault
I07:S77	33007577	3307577	Intelligent Reader	7	Rdr9 Fault	I07 Rdr9 Fault
I07:S78	33007578	3307578	Intelligent Reader	7	Rdr10 Fault	I07 Rdr10 Fault
I07:S79	33007579	3307579	Intelligent Reader	7	Rdr11 Fault	I07 Rdr11 Fault
I07:S80	33007580	3307580	Intelligent Reader	7	Rdr12 Fault	I07 Rdr12 Fault
I07:S81	33007581	3307581	Intelligent Reader	7	Rdr13 Fault	I07 Rdr13 Fault
I07:S82	33007582	3307582	Intelligent Reader	7	Rdr14 Fault	I07 Rdr14 Fault
I07:S83	33007583	3307583	Intelligent Reader	7	Rdr15 Fault	I07 Rdr15 Fault
I07:S84	33007584	3307584	Intelligent Reader	7	Rdr16 Fault	I07 Rdr16 Fault
I07:S85	30107585	3017585	Intelligent Reader	7	Ext AC fail	I07 Ext AC fail
I07:S86	30207586	3027586	Intelligent Reader	7	Ext Low Battery	I07 Ext Low Battery
I07:S87	30007587	3007587	Intelligent Reader	7	Ext LAN Fuse	I07 Ext LAN Fuse
I07:S88	30007588	3007588	Intelligent Reader	7	Ext Detector Fuse	I07 Ext Detector Fuse
I07:S89	30007589	3007589	Intelligent Reader	7	Ext Low Volts	I07 Ext Low Volts
I07:S90	30007590	3007590	Intelligent Reader	7	Ext PS Fail	I07 Ext PS Fail
I07:S91	30907591	3097591	Intelligent Reader	7	Ext Battery Test	I07 Ext Battery Test
I07:S92	15007592	1507592	Intelligent Reader	7	Spare2	I07 Spare2
I07:S93	15007593	1507593	Intelligent Reader	7	Spare3	I07 Spare3
I08:Z01	14008501	1408501	Intelligent Reader	8	Door1 Reed	I08 Door1 Reed
I08:Z02	14008502	1408502	Intelligent Reader	8	Door2 Reed	I08 Door2 Reed
I08:Z03	14008503	1408503	Intelligent Reader	8	Door1 Tongue	I08 Door1 Tongue
I08:Z04	14008504	1408504	Intelligent Reader	8	Door2 Tongue	I08 Door2 Tongue
I08:Z05	14008505	1408505	Intelligent Reader	8	Door1 REX	I08 Door1 REX
I08:Z06	14008506	1408506	Intelligent Reader	8	Door2 REX	I08 Door2 REX
I08:Z07	14008507	1408507	Intelligent Reader	8	Door1 REN	I08 Door1 REN
I08:Z08	14008508	1408508	Intelligent Reader	8	Door2 REN	I08 Door2 REN
I08:Z09	14008509	1408509	Intelligent Reader	8	Door3 Reed	I08 Door3 Reed
I08:Z10	14008510	1408510	Intelligent Reader	8	Door4 Reed	I08 Door4 Reed
I08:Z11	14008511	1408511	Intelligent Reader	8	Door3 Tongue	I08 Door3 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I08:Z12	14008512	1408512	Intelligent Reader	8	Door4 Tongue	I08 Door4 Tongue
I08:Z13	14008513	1408513	Intelligent Reader	8	Door3 REX	I08 Door3 REX
I08:Z14	14008514	1408514	Intelligent Reader	8	Door4 REX	I08 Door4 REX
I08:Z15	14008515	1408515	Intelligent Reader	8	Door3 REN	I08 Door3 REN
I08:Z16	14008516	1408516	Intelligent Reader	8	Door4 REN	I08 Door4 REN
I08:Z17	14008517	1408517	Intelligent Reader	8	Door5 Reed	I08 Door5 Reed
I08:Z18	14008518	1408518	Intelligent Reader	8	Door6 Reed	I08 Door6 Reed
I08:Z19	14008519	1408519	Intelligent Reader	8	Door5 Tongue	I08 Door5 Tongue
I08:Z20	14008520	1408520	Intelligent Reader	8	Door6 Tongue	I08 Door6 Tongue
I08:Z21	14008521	1408521	Intelligent Reader	8	Door5 REX	I08 Door5 REX
I08:Z22	14008522	1408522	Intelligent Reader	8	Door6 REX	I08 Door6 REX
I08:Z23	14008523	1408523	Intelligent Reader	8	Door5 REN	I08 Door5 REN
I08:Z24	14008524	1408524	Intelligent Reader	8	Door6 REN	I08 Door6 REN
I08:Z25	14008525	1408525	Intelligent Reader	8	Door7 Reed	I08 Door7 Reed
I08:Z26	14008526	1408526	Intelligent Reader	8	Door8 Reed	I08 Door8 Reed
I08:Z27	14008527	1408527	Intelligent Reader	8	Door7 Tongue	I08 Door7 Tongue
I08:Z28	14008528	1408528	Intelligent Reader	8	Door8 Tongue	I08 Door8 Tongue
I08:Z29	14008529	1408529	Intelligent Reader	8	Door7 REX	I08 Door7 REX
I08:Z30	14008530	1408530	Intelligent Reader	8	Door8 REX	I08 Door8 REX
I08:Z31	14008531	1408531	Intelligent Reader	8	Door7 REN	I08 Door7 REN
I08:Z32	14008532	1408532	Intelligent Reader	8	Door8 REN	I08 Door8 REN
I08:S01	14508501	1458501	Intelligent Reader	8	Cabinet Tamper	I08 Cabinet Tamper
I08:S02	30108502	3018502	Intelligent Reader	8	AC fail	I08 AC fail
I08:S03	30208503	3028503	Intelligent Reader	8	Low Battery	I08 Low Battery
I08:S04	30008504	3008504	Intelligent Reader	8	LAN Fuse	I08 LAN Fuse
I08:S05	30008505	3008505	Intelligent Reader	8	Detector Fuse	I08 Detector Fuse
I08:S06	30008506	3008506	Intelligent Reader	8	Low Volts	I08 Low Volts
I08:S07	30008507	3008507	Intelligent Reader	8	PS Fail	I08 PS Fail
I08:S08	30908508	3098508	Intelligent Reader	8	Battery Test	I08 Battery Test
I08:S09	33308509	3338509	Intelligent Reader	8	Unibus Fault	I08 Unibus Fault
I08:S10	30308510	3038510	Intelligent Reader	8	Download Fail	I08 Download Fail
I08:S11	15008511	1508511	Intelligent Reader	8	Spare1	I08 Spare1
I08:S12	14308512	1438512	Intelligent Reader	8	LAN Comms	I08 LAN Comms
I08:S13	43208513	4328513	Intelligent Reader	8	Door1 Fault	I08 Door1 Fault
I08:S14	43208514	4328514	Intelligent Reader	8	Door2 Fault	I08 Door2 Fault
I08:S15	43208515	4328515	Intelligent Reader	8	Door3 Fault	I08 Door3 Fault
I08:S16	43208516	4328516	Intelligent Reader	8	Door4 Fault	I08 Door4 Fault
I08:S17	43208517	4328517	Intelligent Reader	8	Door5 Fault	I08 Door5 Fault
I08:S18	43208518	4328518	Intelligent Reader	8	Door6 Fault	I08 Door6 Fault
I08:S19	43208519	4328519	Intelligent Reader	8	Door7 Fault	I08 Door7 Fault
I08:S20	43208520	4328520	Intelligent Reader	8	Door8 Fault	I08 Door8 Fault
I08:S21	42308521	4238521	Intelligent Reader	8	Door1 Forced	I08 Door1 Forced
I08:S22	42308522	4238522	Intelligent Reader	8	Door2 Forced	I08 Door2 Forced
I08:S23	42308523	4238523	Intelligent Reader	8	Door3 Forced	I08 Door3 Forced
I08:S24	42308524	4238524	Intelligent Reader	8	Door4 Forced	I08 Door4 Forced
I08:S25	42308525	4238525	Intelligent Reader	8	Door5 Forced	I08 Door5 Forced
I08:S26	42308526	4238526	Intelligent Reader	8	Door6 Forced	I08 Door6 Forced
I08:S27	42308527	4238527	Intelligent Reader	8	Door7 Forced	I08 Door7 Forced
I08:S28	42308528	4238528	Intelligent Reader	8	Door8 Forced	I08 Door8 Forced
I08:S29	42608529	4268529	Intelligent Reader	8	Door1 DOTL	I08 Door1 DOTL
I08:S30	42608530	4268530	Intelligent Reader	8	Door2 DOTL	I08 Door2 DOTL
I08:S31	42608531	4268531	Intelligent Reader	8	Door3 DOTL	I08 Door3 DOTL
I08:S32	42608532	4268532	Intelligent Reader	8	Door4 DOTL	I08 Door4 DOTL
I08:S33	42608533	4268533	Intelligent Reader	8	Door5 DOTL	I08 Door5 DOTL
I08:S34	42608534	4268534	Intelligent Reader	8	Door6 DOTL	I08 Door6 DOTL
I08:S35	42608535	4268535	Intelligent Reader	8	Door7 DOTL	I08 Door7 DOTL
I08:S36	42608536	4268536	Intelligent Reader	8	Door8 DOTL	I08 Door8 DOTL

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I08:S37	15008537	1508537	Intelligent Reader	8	Rdr1 Invalid	I08 Rdr1 Invalid
I08:S38	15008538	1508538	Intelligent Reader	8	Rdr2 Invalid	I08 Rdr2 Invalid
I08:S39	15008539	1508539	Intelligent Reader	8	Rdr3 Invalid	I08 Rdr3 Invalid
I08:S40	15008540	1508540	Intelligent Reader	8	Rdr4 Invalid	I08 Rdr4 Invalid
I08:S41	15008541	1508541	Intelligent Reader	8	Rdr5 Invalid	I08 Rdr5 Invalid
I08:S42	15008542	1508542	Intelligent Reader	8	Rdr6 Invalid	I08 Rdr6 Invalid
I08:S43	15008543	1508543	Intelligent Reader	8	Rdr7 Invalid	I08 Rdr7 Invalid
I08:S44	15008544	1508544	Intelligent Reader	8	Rdr8 Invalid	I08 Rdr8 Invalid
I08:S45	15008545	1508545	Intelligent Reader	8	Rdr9 Invalid	I08 Rdr9 Invalid
I08:S46	15008546	1508546	Intelligent Reader	8	Rdr10 Invalid	I08 Rdr10 Invalid
I08:S47	15008547	1508547	Intelligent Reader	8	Rdr11 Invalid	I08 Rdr11 Invalid
I08:S48	15008548	1508548	Intelligent Reader	8	Rdr12 Invalid	I08 Rdr12 Invalid
I08:S49	15008549	1508549	Intelligent Reader	8	Rdr13 Invalid	I08 Rdr13 Invalid
I08:S50	15008550	1508550	Intelligent Reader	8	Rdr14 Invalid	I08 Rdr14 Invalid
I08:S51	15008551	1508551	Intelligent Reader	8	Rdr15 Invalid	I08 Rdr15 Invalid
I08:S52	15008552	1508552	Intelligent Reader	8	Rdr16 Invalid	I08 Rdr16 Invalid
I08:S53	12208553	1228553	Intelligent Reader	8	Rdr1 Duress	I08 Rdr1 Duress
I08:S54	12208554	1228554	Intelligent Reader	8	Rdr2 Duress	I08 Rdr2 Duress
I08:S55	12208555	1228555	Intelligent Reader	8	Rdr3 Duress	I08 Rdr3 Duress
I08:S56	12208556	1228556	Intelligent Reader	8	Rdr4 Duress	I08 Rdr4 Duress
I08:S57	12208557	1228557	Intelligent Reader	8	Rdr5 Duress	I08 Rdr5 Duress
I08:S58	12208558	1228558	Intelligent Reader	8	Rdr6 Duress	I08 Rdr6 Duress
I08:S59	12208559	1228559	Intelligent Reader	8	Rdr7 Duress	I08 Rdr7 Duress
I08:S60	12208560	1228560	Intelligent Reader	8	Rdr8 Duress	I08 Rdr8 Duress
I08:S61	12208561	1228561	Intelligent Reader	8	Rdr9 Duress	I08 Rdr9 Duress
I08:S62	12208562	1228562	Intelligent Reader	8	Rdr10 Duress	I08 Rdr10 Duress
I08:S63	12208563	1228563	Intelligent Reader	8	Rdr11 Duress	I08 Rdr11 Duress
I08:S64	12208564	1228564	Intelligent Reader	8	Rdr12 Duress	I08 Rdr12 Duress
I08:S65	12208565	1228565	Intelligent Reader	8	Rdr13 Duress	I08 Rdr13 Duress
I08:S66	12208566	1228566	Intelligent Reader	8	Rdr14 Duress	I08 Rdr14 Duress
I08:S67	12208567	1228567	Intelligent Reader	8	Rdr15 Duress	I08 Rdr15 Duress
I08:S68	12208568	1228568	Intelligent Reader	8	Rdr16 Duress	I08 Rdr16 Duress
I08:S69	33008569	3308569	Intelligent Reader	8	Rdr1 Fault	I08 Rdr1 Fault
I08:S70	33008570	3308570	Intelligent Reader	8	Rdr2 Fault	I08 Rdr2 Fault
I08:S71	33008571	3308571	Intelligent Reader	8	Rdr3 Fault	I08 Rdr3 Fault
I08:S72	33008572	3308572	Intelligent Reader	8	Rdr4 Fault	I08 Rdr4 Fault
I08:S73	33008573	3308573	Intelligent Reader	8	Rdr5 Fault	I08 Rdr5 Fault
I08:S74	33008574	3308574	Intelligent Reader	8	Rdr6 Fault	I08 Rdr6 Fault
I08:S75	33008575	3308575	Intelligent Reader	8	Rdr7 Fault	I08 Rdr7 Fault
I08:S76	33008576	3308576	Intelligent Reader	8	Rdr8 Fault	I08 Rdr8 Fault
I08:S77	33008577	3308577	Intelligent Reader	8	Rdr9 Fault	I08 Rdr9 Fault
I08:S78	33008578	3308578	Intelligent Reader	8	Rdr10 Fault	I08 Rdr10 Fault
I08:S79	33008579	3308579	Intelligent Reader	8	Rdr11 Fault	I08 Rdr11 Fault
I08:S80	33008580	3308580	Intelligent Reader	8	Rdr12 Fault	I08 Rdr12 Fault
I08:S81	33008581	3308581	Intelligent Reader	8	Rdr13 Fault	I08 Rdr13 Fault
I08:S82	33008582	3308582	Intelligent Reader	8	Rdr14 Fault	I08 Rdr14 Fault
I08:S83	33008583	3308583	Intelligent Reader	8	Rdr15 Fault	I08 Rdr15 Fault
I08:S84	33008584	3308584	Intelligent Reader	8	Rdr16 Fault	I08 Rdr16 Fault
I08:S85	30108585	3018585	Intelligent Reader	8	Ext AC fail	I08 Ext AC fail
I08:S86	30208586	3028586	Intelligent Reader	8	Ext Low Battery	I08 Ext Low Battery
I08:S87	30008587	3008587	Intelligent Reader	8	Ext LAN Fuse	I08 Ext LAN Fuse
I08:S88	30008588	3008588	Intelligent Reader	8	Ext Detector Fuse	I08 Ext Detector Fuse
I08:S89	30008589	3008589	Intelligent Reader	8	Ext Low Volts	I08 Ext Low Volts
I08:S90	30008590	3008590	Intelligent Reader	8	Ext PS Fail	I08 Ext PS Fail
I08:S91	30908591	3098591	Intelligent Reader	8	Ext Battery Test	I08 Ext Battery Test
I08:S92	15008592	1508592	Intelligent Reader	8	Spare2	I08 Spare2
I08:S93	15008593	1508593	Intelligent Reader	8	Spare3	I08 Spare3

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I09:Z01	14009501	1409501	Intelligent Reader	9	Door1 Reed	I09 Door1 Reed
I09:Z02	14009502	1409502	Intelligent Reader	9	Door2 Reed	I09 Door2 Reed
I09:Z03	14009503	1409503	Intelligent Reader	9	Door1 Tongue	I09 Door1 Tongue
I09:Z04	14009504	1409504	Intelligent Reader	9	Door2 Tongue	I09 Door2 Tongue
I09:Z05	14009505	1409505	Intelligent Reader	9	Door1 REX	I09 Door1 REX
I09:Z06	14009506	1409506	Intelligent Reader	9	Door2 REX	I09 Door2 REX
I09:Z07	14009507	1409507	Intelligent Reader	9	Door1 REN	I09 Door1 REN
I09:Z08	14009508	1409508	Intelligent Reader	9	Door2 REN	I09 Door2 REN
I09:Z09	14009509	1409509	Intelligent Reader	9	Door3 Reed	I09 Door3 Reed
I09:Z10	14009510	1409510	Intelligent Reader	9	Door4 Reed	I09 Door4 Reed
I09:Z11	14009511	1409511	Intelligent Reader	9	Door3 Tongue	I09 Door3 Tongue
I09:Z12	14009512	1409512	Intelligent Reader	9	Door4 Tongue	I09 Door4 Tongue
I09:Z13	14009513	1409513	Intelligent Reader	9	Door3 REX	I09 Door3 REX
I09:Z14	14009514	1409514	Intelligent Reader	9	Door4 REX	I09 Door4 REX
I09:Z15	14009515	1409515	Intelligent Reader	9	Door3 REN	I09 Door3 REN
I09:Z16	14009516	1409516	Intelligent Reader	9	Door4 REN	I09 Door4 REN
I09:Z17	14009517	1409517	Intelligent Reader	9	Door5 Reed	I09 Door5 Reed
I09:Z18	14009518	1409518	Intelligent Reader	9	Door6 Reed	I09 Door6 Reed
I09:Z19	14009519	1409519	Intelligent Reader	9	Door5 Tongue	I09 Door5 Tongue
I09:Z20	14009520	1409520	Intelligent Reader	9	Door6 Tongue	I09 Door6 Tongue
I09:Z21	14009521	1409521	Intelligent Reader	9	Door5 REX	I09 Door5 REX
I09:Z22	14009522	1409522	Intelligent Reader	9	Door6 REX	I09 Door6 REX
I09:Z23	14009523	1409523	Intelligent Reader	9	Door5 REN	I09 Door5 REN
I09:Z24	14009524	1409524	Intelligent Reader	9	Door6 REN	I09 Door6 REN
I09:Z25	14009525	1409525	Intelligent Reader	9	Door7 Reed	I09 Door7 Reed
I09:Z26	14009526	1409526	Intelligent Reader	9	Door8 Reed	I09 Door8 Reed
I09:Z27	14009527	1409527	Intelligent Reader	9	Door7 Tongue	I09 Door7 Tongue
I09:Z28	14009528	1409528	Intelligent Reader	9	Door8 Tongue	I09 Door8 Tongue
I09:Z29	14009529	1409529	Intelligent Reader	9	Door7 REX	I09 Door7 REX
I09:Z30	14009530	1409530	Intelligent Reader	9	Door8 REX	I09 Door8 REX
I09:Z31	14009531	1409531	Intelligent Reader	9	Door7 REN	I09 Door7 REN
I09:Z32	14009532	1409532	Intelligent Reader	9	Door8 REN	I09 Door8 REN
I09:S01	14509501	1459501	Intelligent Reader	9	Cabinet Tamper	I09 Cabinet Tamper
I09:S02	30109502	3019502	Intelligent Reader	9	AC fail	I09 AC fail
I09:S03	30209503	3029503	Intelligent Reader	9	Low Battery	I09 Low Battery
I09:S04	30009504	3009504	Intelligent Reader	9	LAN Fuse	I09 LAN Fuse
I09:S05	30009505	3009505	Intelligent Reader	9	Detector Fuse	I09 Detector Fuse
I09:S06	30009506	3009506	Intelligent Reader	9	Low Volts	I09 Low Volts
I09:S07	30009507	3009507	Intelligent Reader	9	PS Fail	I09 PS Fail
I09:S08	30909508	3099508	Intelligent Reader	9	Battery Test	I09 Battery Test
I09:S09	33309509	3339509	Intelligent Reader	9	Unibus Fault	I09 Unibus Fault
I09:S10	30309510	3039510	Intelligent Reader	9	Download Fail	I09 Download Fail
I09:S11	15009511	1509511	Intelligent Reader	9	Spare1	I09 Spare1
I09:S12	14309512	1439512	Intelligent Reader	9	LAN Comms	I09 LAN Comms
I09:S13	43209513	4329513	Intelligent Reader	9	Door1 Fault	I09 Door1 Fault
I09:S14	43209514	4329514	Intelligent Reader	9	Door2 Fault	I09 Door2 Fault
I09:S15	43209515	4329515	Intelligent Reader	9	Door3 Fault	I09 Door3 Fault
I09:S16	43209516	4329516	Intelligent Reader	9	Door4 Fault	I09 Door4 Fault
I09:S17	43209517	4329517	Intelligent Reader	9	Door5 Fault	I09 Door5 Fault
I09:S18	43209518	4329518	Intelligent Reader	9	Door6 Fault	I09 Door6 Fault
I09:S19	43209519	4329519	Intelligent Reader	9	Door7 Fault	I09 Door7 Fault
I09:S20	43209520	4329520	Intelligent Reader	9	Door8 Fault	I09 Door8 Fault
I09:S21	42309521	4239521	Intelligent Reader	9	Door1 Forced	I09 Door1 Forced
I09:S22	42309522	4239522	Intelligent Reader	9	Door2 Forced	I09 Door2 Forced
I09:S23	42309523	4239523	Intelligent Reader	9	Door3 Forced	I09 Door3 Forced
I09:S24	42309524	4239524	Intelligent Reader	9	Door4 Forced	I09 Door4 Forced
I09:S25	42309525	4239525	Intelligent Reader	9	Door5 Forced	I09 Door5 Forced

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
I09:S26	42309526	4239526	Intelligent Reader	9	Door6 Forced	I09 Door6 Forced
I09:S27	42309527	4239527	Intelligent Reader	9	Door7 Forced	I09 Door7 Forced
I09:S28	42309528	4239528	Intelligent Reader	9	Door8 Forced	I09 Door8 Forced
I09:S29	42609529	4269529	Intelligent Reader	9	Door1 DOTL	I09 Door1 DOTL
I09:S30	42609530	4269530	Intelligent Reader	9	Door2 DOTL	I09 Door2 DOTL
I09:S31	42609531	4269531	Intelligent Reader	9	Door3 DOTL	I09 Door3 DOTL
I09:S32	42609532	4269532	Intelligent Reader	9	Door4 DOTL	I09 Door4 DOTL
I09:S33	42609533	4269533	Intelligent Reader	9	Door5 DOTL	I09 Door5 DOTL
I09:S34	42609534	4269534	Intelligent Reader	9	Door6 DOTL	I09 Door6 DOTL
I09:S35	42609535	4269535	Intelligent Reader	9	Door7 DOTL	I09 Door7 DOTL
I09:S36	42609536	4269536	Intelligent Reader	9	Door8 DOTL	I09 Door8 DOTL
I09:S37	15009537	1509537	Intelligent Reader	9	Rdr1 Invalid	I09 Rdr1 Invalid
I09:S38	15009538	1509538	Intelligent Reader	9	Rdr2 Invalid	I09 Rdr2 Invalid
I09:S39	15009539	1509539	Intelligent Reader	9	Rdr3 Invalid	I09 Rdr3 Invalid
I09:S40	15009540	1509540	Intelligent Reader	9	Rdr4 Invalid	I09 Rdr4 Invalid
I09:S41	15009541	1509541	Intelligent Reader	9	Rdr5 Invalid	I09 Rdr5 Invalid
I09:S42	15009542	1509542	Intelligent Reader	9	Rdr6 Invalid	I09 Rdr6 Invalid
I09:S43	15009543	1509543	Intelligent Reader	9	Rdr7 Invalid	I09 Rdr7 Invalid
I09:S44	15009544	1509544	Intelligent Reader	9	Rdr8 Invalid	I09 Rdr8 Invalid
I09:S45	15009545	1509545	Intelligent Reader	9	Rdr9 Invalid	I09 Rdr9 Invalid
I09:S46	15009546	1509546	Intelligent Reader	9	Rdr10 Invalid	I09 Rdr10 Invalid
I09:S47	15009547	1509547	Intelligent Reader	9	Rdr11 Invalid	I09 Rdr11 Invalid
I09:S48	15009548	1509548	Intelligent Reader	9	Rdr12 Invalid	I09 Rdr12 Invalid
I09:S49	15009549	1509549	Intelligent Reader	9	Rdr13 Invalid	I09 Rdr13 Invalid
I09:S50	15009550	1509550	Intelligent Reader	9	Rdr14 Invalid	I09 Rdr14 Invalid
I09:S51	15009551	1509551	Intelligent Reader	9	Rdr15 Invalid	I09 Rdr15 Invalid
I09:S52	15009552	1509552	Intelligent Reader	9	Rdr16 Invalid	I09 Rdr16 Invalid
I09:S53	12209553	1229553	Intelligent Reader	9	Rdr1 Duress	I09 Rdr1 Duress
I09:S54	12209554	1229554	Intelligent Reader	9	Rdr2 Duress	I09 Rdr2 Duress
I09:S55	12209555	1229555	Intelligent Reader	9	Rdr3 Duress	I09 Rdr3 Duress
I09:S56	12209556	1229556	Intelligent Reader	9	Rdr4 Duress	I09 Rdr4 Duress
I09:S57	12209557	1229557	Intelligent Reader	9	Rdr5 Duress	I09 Rdr5 Duress
I09:S58	12209558	1229558	Intelligent Reader	9	Rdr6 Duress	I09 Rdr6 Duress
I09:S59	12209559	1229559	Intelligent Reader	9	Rdr7 Duress	I09 Rdr7 Duress
I09:S60	12209560	1229560	Intelligent Reader	9	Rdr8 Duress	I09 Rdr8 Duress
I09:S61	12209561	1229561	Intelligent Reader	9	Rdr9 Duress	I09 Rdr9 Duress
I09:S62	12209562	1229562	Intelligent Reader	9	Rdr10 Duress	I09 Rdr10 Duress
I09:S63	12209563	1229563	Intelligent Reader	9	Rdr11 Duress	I09 Rdr11 Duress
I09:S64	12209564	1229564	Intelligent Reader	9	Rdr12 Duress	I09 Rdr12 Duress
I09:S65	12209565	1229565	Intelligent Reader	9	Rdr13 Duress	I09 Rdr13 Duress
I09:S66	12209566	1229566	Intelligent Reader	9	Rdr14 Duress	I09 Rdr14 Duress
I09:S67	12209567	1229567	Intelligent Reader	9	Rdr15 Duress	I09 Rdr15 Duress
I09:S68	12209568	1229568	Intelligent Reader	9	Rdr16 Duress	I09 Rdr16 Duress
I09:S69	33009569	3309569	Intelligent Reader	9	Rdr1 Fault	I09 Rdr1 Fault
I09:S70	33009570	3309570	Intelligent Reader	9	Rdr2 Fault	I09 Rdr2 Fault
I09:S71	33009571	3309571	Intelligent Reader	9	Rdr3 Fault	I09 Rdr3 Fault
I09:S72	33009572	3309572	Intelligent Reader	9	Rdr4 Fault	I09 Rdr4 Fault
I09:S73	33009573	3309573	Intelligent Reader	9	Rdr5 Fault	I09 Rdr5 Fault
I09:S74	33009574	3309574	Intelligent Reader	9	Rdr6 Fault	I09 Rdr6 Fault
I09:S75	33009575	3309575	Intelligent Reader	9	Rdr7 Fault	I09 Rdr7 Fault
I09:S76	33009576	3309576	Intelligent Reader	9	Rdr8 Fault	I09 Rdr8 Fault
I09:S77	33009577	3309577	Intelligent Reader	9	Rdr9 Fault	I09 Rdr9 Fault
I09:S78	33009578	3309578	Intelligent Reader	9	Rdr10 Fault	I09 Rdr10 Fault
I09:S79	33009579	3309579	Intelligent Reader	9	Rdr11 Fault	I09 Rdr11 Fault
I09:S80	33009580	3309580	Intelligent Reader	9	Rdr12 Fault	I09 Rdr12 Fault
I09:S81	33009581	3309581	Intelligent Reader	9	Rdr13 Fault	I09 Rdr13 Fault
I09:S82	33009582	3309582	Intelligent Reader	9	Rdr14 Fault	I09 Rdr14 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
I09:S83	33009583	3309583	Intelligent Reader	9	Rdr15 Fault	I09 Rdr15 Fault
I09:S84	33009584	3309584	Intelligent Reader	9	Rdr16 Fault	I09 Rdr16 Fault
I09:S85	30109585	3019585	Intelligent Reader	9	Ext AC fail	I09 Ext AC fail
I09:S86	30209586	3029586	Intelligent Reader	9	Ext Low Battery	I09 Ext Low Battery
I09:S87	30009587	3009587	Intelligent Reader	9	Ext LAN Fuse	I09 Ext LAN Fuse
I09:S88	30009588	3009588	Intelligent Reader	9	Ext Detector Fuse	I09 Ext Detector Fuse
I09:S89	30009589	3009589	Intelligent Reader	9	Ext Low Volts	I09 Ext Low Volts
I09:S90	30009590	3009590	Intelligent Reader	9	Ext PS Fail	I09 Ext PS Fail
I09:S91	30909591	3099591	Intelligent Reader	9	Ext Battery Test	I09 Ext Battery Test
I09:S92	15009592	1509592	Intelligent Reader	9	Spare2	I09 Spare2
I09:S93	15009593	1509593	Intelligent Reader	9	Spare3	I09 Spare3
I10:Z01	14010501	140A501	Intelligent Reader	10	Door1 Reed	I10 Door1 Reed
I10:Z02	14010502	140A502	Intelligent Reader	10	Door2 Reed	I10 Door2 Reed
I10:Z03	14010503	140A503	Intelligent Reader	10	Door1 Tongue	I10 Door1 Tongue
I10:Z04	14010504	140A504	Intelligent Reader	10	Door2 Tongue	I10 Door2 Tongue
I10:Z05	14010505	140A505	Intelligent Reader	10	Door1 REX	I10 Door1 REX
I10:Z06	14010506	140A506	Intelligent Reader	10	Door2 REX	I10 Door2 REX
I10:Z07	14010507	140A507	Intelligent Reader	10	Door1 REN	I10 Door1 REN
I10:Z08	14010508	140A508	Intelligent Reader	10	Door2 REN	I10 Door2 REN
I10:Z09	14010509	140A509	Intelligent Reader	10	Door3 Reed	I10 Door3 Reed
I10:Z10	14010510	140A510	Intelligent Reader	10	Door4 Reed	I10 Door4 Reed
I10:Z11	14010511	140A511	Intelligent Reader	10	Door3 Tongue	I10 Door3 Tongue
I10:Z12	14010512	140A512	Intelligent Reader	10	Door4 Tongue	I10 Door4 Tongue
I10:Z13	14010513	140A513	Intelligent Reader	10	Door3 REX	I10 Door3 REX
I10:Z14	14010514	140A514	Intelligent Reader	10	Door4 REX	I10 Door4 REX
I10:Z15	14010515	140A515	Intelligent Reader	10	Door3 REN	I10 Door3 REN
I10:Z16	14010516	140A516	Intelligent Reader	10	Door4 REN	I10 Door4 REN
I10:Z17	14010517	140A517	Intelligent Reader	10	Door5 Reed	I10 Door5 Reed
I10:Z18	14010518	140A518	Intelligent Reader	10	Door6 Reed	I10 Door6 Reed
I10:Z19	14010519	140A519	Intelligent Reader	10	Door5 Tongue	I10 Door5 Tongue
I10:Z20	14010520	140A520	Intelligent Reader	10	Door6 Tongue	I10 Door6 Tongue
I10:Z21	14010521	140A521	Intelligent Reader	10	Door5 REX	I10 Door5 REX
I10:Z22	14010522	140A522	Intelligent Reader	10	Door6 REX	I10 Door6 REX
I10:Z23	14010523	140A523	Intelligent Reader	10	Door5 REN	I10 Door5 REN
I10:Z24	14010524	140A524	Intelligent Reader	10	Door6 REN	I10 Door6 REN
I10:Z25	14010525	140A525	Intelligent Reader	10	Door7 Reed	I10 Door7 Reed
I10:Z26	14010526	140A526	Intelligent Reader	10	Door8 Reed	I10 Door8 Reed
I10:Z27	14010527	140A527	Intelligent Reader	10	Door7 Tongue	I10 Door7 Tongue
I10:Z28	14010528	140A528	Intelligent Reader	10	Door8 Tongue	I10 Door8 Tongue
I10:Z29	14010529	140A529	Intelligent Reader	10	Door7 REX	I10 Door7 REX
I10:Z30	14010530	140A530	Intelligent Reader	10	Door8 REX	I10 Door8 REX
I10:Z31	14010531	140A531	Intelligent Reader	10	Door7 REN	I10 Door7 REN
I10:Z32	14010532	140A532	Intelligent Reader	10	Door8 REN	I10 Door8 REN
I10:S01	14510501	145A501	Intelligent Reader	10	Cabinet Tamper	I10 Cabinet Tamper
I10:S02	30110502	301A502	Intelligent Reader	10	AC fail	I10 AC fail
I10:S03	30210503	302A503	Intelligent Reader	10	Low Battery	I10 Low Battery
I10:S04	30010504	300A504	Intelligent Reader	10	LAN Fuse	I10 LAN Fuse
I10:S05	30010505	300A505	Intelligent Reader	10	Detector Fuse	I10 Detector Fuse
I10:S06	30010506	300A506	Intelligent Reader	10	Low Volts	I10 Low Volts
I10:S07	30010507	300A507	Intelligent Reader	10	PS Fail	I10 PS Fail
I10:S08	30910508	309A508	Intelligent Reader	10	Battery Test	I10 Battery Test
I10:S09	33310509	333A509	Intelligent Reader	10	Unibus Fault	I10 Unibus Fault
I10:S10	30310510	303A510	Intelligent Reader	10	Download Fail	I10 Download Fail
I10:S11	15010511	150A511	Intelligent Reader	10	Spare1	I10 Spare1
I10:S12	14310512	143A512	Intelligent Reader	10	LAN Comms	I10 LAN Comms
I10:S13	43210513	432A513	Intelligent Reader	10	Door1 Fault	I10 Door1 Fault
I10:S14	43210514	432A514	Intelligent Reader	10	Door2 Fault	I10 Door2 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
I10:S15	43210515	432A515	Intelligent Reader	10	Door3 Fault	I10 Door3 Fault
I10:S16	43210516	432A516	Intelligent Reader	10	Door4 Fault	I10 Door4 Fault
I10:S17	43210517	432A517	Intelligent Reader	10	Door5 Fault	I10 Door5 Fault
I10:S18	43210518	432A518	Intelligent Reader	10	Door6 Fault	I10 Door6 Fault
I10:S19	43210519	432A519	Intelligent Reader	10	Door7 Fault	I10 Door7 Fault
I10:S20	43210520	432A520	Intelligent Reader	10	Door8 Fault	I10 Door8 Fault
I10:S21	42310521	423A521	Intelligent Reader	10	Door1 Forced	I10 Door1 Forced
I10:S22	42310522	423A522	Intelligent Reader	10	Door2 Forced	I10 Door2 Forced
I10:S23	42310523	423A523	Intelligent Reader	10	Door3 Forced	I10 Door3 Forced
I10:S24	42310524	423A524	Intelligent Reader	10	Door4 Forced	I10 Door4 Forced
I10:S25	42310525	423A525	Intelligent Reader	10	Door5 Forced	I10 Door5 Forced
I10:S26	42310526	423A526	Intelligent Reader	10	Door6 Forced	I10 Door6 Forced
I10:S27	42310527	423A527	Intelligent Reader	10	Door7 Forced	I10 Door7 Forced
I10:S28	42310528	423A528	Intelligent Reader	10	Door8 Forced	I10 Door8 Forced
I10:S29	42610529	426A529	Intelligent Reader	10	Door1 DOTL	I10 Door1 DOTL
I10:S30	42610530	426A530	Intelligent Reader	10	Door2 DOTL	I10 Door2 DOTL
I10:S31	42610531	426A531	Intelligent Reader	10	Door3 DOTL	I10 Door3 DOTL
I10:S32	42610532	426A532	Intelligent Reader	10	Door4 DOTL	I10 Door4 DOTL
I10:S33	42610533	426A533	Intelligent Reader	10	Door5 DOTL	I10 Door5 DOTL
I10:S34	42610534	426A534	Intelligent Reader	10	Door6 DOTL	I10 Door6 DOTL
I10:S35	42610535	426A535	Intelligent Reader	10	Door7 DOTL	I10 Door7 DOTL
I10:S36	42610536	426A536	Intelligent Reader	10	Door8 DOTL	I10 Door8 DOTL
I10:S37	15010537	150A537	Intelligent Reader	10	Rdr1 Invalid	I10 Rdr1 Invalid
I10:S38	15010538	150A538	Intelligent Reader	10	Rdr2 Invalid	I10 Rdr2 Invalid
I10:S39	15010539	150A539	Intelligent Reader	10	Rdr3 Invalid	I10 Rdr3 Invalid
I10:S40	15010540	150A540	Intelligent Reader	10	Rdr4 Invalid	I10 Rdr4 Invalid
I10:S41	15010541	150A541	Intelligent Reader	10	Rdr5 Invalid	I10 Rdr5 Invalid
I10:S42	15010542	150A542	Intelligent Reader	10	Rdr6 Invalid	I10 Rdr6 Invalid
I10:S43	15010543	150A543	Intelligent Reader	10	Rdr7 Invalid	I10 Rdr7 Invalid
I10:S44	15010544	150A544	Intelligent Reader	10	Rdr8 Invalid	I10 Rdr8 Invalid
I10:S45	15010545	150A545	Intelligent Reader	10	Rdr9 Invalid	I10 Rdr9 Invalid
I10:S46	15010546	150A546	Intelligent Reader	10	Rdr10 Invalid	I10 Rdr10 Invalid
I10:S47	15010547	150A547	Intelligent Reader	10	Rdr11 Invalid	I10 Rdr11 Invalid
I10:S48	15010548	150A548	Intelligent Reader	10	Rdr12 Invalid	I10 Rdr12 Invalid
I10:S49	15010549	150A549	Intelligent Reader	10	Rdr13 Invalid	I10 Rdr13 Invalid
I10:S50	15010550	150A550	Intelligent Reader	10	Rdr14 Invalid	I10 Rdr14 Invalid
I10:S51	15010551	150A551	Intelligent Reader	10	Rdr15 Invalid	I10 Rdr15 Invalid
I10:S52	15010552	150A552	Intelligent Reader	10	Rdr16 Invalid	I10 Rdr16 Invalid
I10:S53	12210553	122A553	Intelligent Reader	10	Rdr1 Duress	I10 Rdr1 Duress
I10:S54	12210554	122A554	Intelligent Reader	10	Rdr2 Duress	I10 Rdr2 Duress
I10:S55	12210555	122A555	Intelligent Reader	10	Rdr3 Duress	I10 Rdr3 Duress
I10:S56	12210556	122A556	Intelligent Reader	10	Rdr4 Duress	I10 Rdr4 Duress
I10:S57	12210557	122A557	Intelligent Reader	10	Rdr5 Duress	I10 Rdr5 Duress
I10:S58	12210558	122A558	Intelligent Reader	10	Rdr6 Duress	I10 Rdr6 Duress
I10:S59	12210559	122A559	Intelligent Reader	10	Rdr7 Duress	I10 Rdr7 Duress
I10:S60	12210560	122A560	Intelligent Reader	10	Rdr8 Duress	I10 Rdr8 Duress
I10:S61	12210561	122A561	Intelligent Reader	10	Rdr9 Duress	I10 Rdr9 Duress
I10:S62	12210562	122A562	Intelligent Reader	10	Rdr10 Duress	I10 Rdr10 Duress
I10:S63	12210563	122A563	Intelligent Reader	10	Rdr11 Duress	I10 Rdr11 Duress
I10:S64	12210564	122A564	Intelligent Reader	10	Rdr12 Duress	I10 Rdr12 Duress
I10:S65	12210565	122A565	Intelligent Reader	10	Rdr13 Duress	I10 Rdr13 Duress
I10:S66	12210566	122A566	Intelligent Reader	10	Rdr14 Duress	I10 Rdr14 Duress
I10:S67	12210567	122A567	Intelligent Reader	10	Rdr15 Duress	I10 Rdr15 Duress
I10:S68	12210568	122A568	Intelligent Reader	10	Rdr16 Duress	I10 Rdr16 Duress
I10:S69	33010569	330A569	Intelligent Reader	10	Rdr1 Fault	I10 Rdr1 Fault
I10:S70	33010570	330A570	Intelligent Reader	10	Rdr2 Fault	I10 Rdr2 Fault
I10:S71	33010571	330A571	Intelligent Reader	10	Rdr3 Fault	I10 Rdr3 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I10:S72	33010572	330A572	Intelligent Reader	10	Rdr4 Fault	I10 Rdr4 Fault
I10:S73	33010573	330A573	Intelligent Reader	10	Rdr5 Fault	I10 Rdr5 Fault
I10:S74	33010574	330A574	Intelligent Reader	10	Rdr6 Fault	I10 Rdr6 Fault
I10:S75	33010575	330A575	Intelligent Reader	10	Rdr7 Fault	I10 Rdr7 Fault
I10:S76	33010576	330A576	Intelligent Reader	10	Rdr8 Fault	I10 Rdr8 Fault
I10:S77	33010577	330A577	Intelligent Reader	10	Rdr9 Fault	I10 Rdr9 Fault
I10:S78	33010578	330A578	Intelligent Reader	10	Rdr10 Fault	I10 Rdr10 Fault
I10:S79	33010579	330A579	Intelligent Reader	10	Rdr11 Fault	I10 Rdr11 Fault
I10:S80	33010580	330A580	Intelligent Reader	10	Rdr12 Fault	I10 Rdr12 Fault
I10:S81	33010581	330A581	Intelligent Reader	10	Rdr13 Fault	I10 Rdr13 Fault
I10:S82	33010582	330A582	Intelligent Reader	10	Rdr14 Fault	I10 Rdr14 Fault
I10:S83	33010583	330A583	Intelligent Reader	10	Rdr15 Fault	I10 Rdr15 Fault
I10:S84	33010584	330A584	Intelligent Reader	10	Rdr16 Fault	I10 Rdr16 Fault
I10:S85	30110585	301A585	Intelligent Reader	10	Ext AC fail	I10 Ext AC fail
I10:S86	30210586	302A586	Intelligent Reader	10	Ext Low Battery	I10 Ext Low Battery
I10:S87	30010587	300A587	Intelligent Reader	10	Ext LAN Fuse	I10 Ext LAN Fuse
I10:S88	30010588	300A588	Intelligent Reader	10	Ext Detector Fuse	I10 Ext Detector Fuse
I10:S89	30010589	300A589	Intelligent Reader	10	Ext Low Volts	I10 Ext Low Volts
I10:S90	30010590	300A590	Intelligent Reader	10	Ext PS Fail	I10 Ext PS Fail
I10:S91	30910591	309A591	Intelligent Reader	10	Ext Battery Test	I10 Ext Battery Test
I10:S92	15010592	150A592	Intelligent Reader	10	Spare2	I10 Spare2
I10:S93	15010593	150A593	Intelligent Reader	10	Spare3	I10 Spare3
I11:Z01	14011501	140B501	Intelligent Reader	11	Door1 Reed	I11 Door1 Reed
I11:Z02	14011502	140B502	Intelligent Reader	11	Door2 Reed	I11 Door2 Reed
I11:Z03	14011503	140B503	Intelligent Reader	11	Door1 Tongue	I11 Door1 Tongue
I11:Z04	14011504	140B504	Intelligent Reader	11	Door2 Tongue	I11 Door2 Tongue
I11:Z05	14011505	140B505	Intelligent Reader	11	Door1 REX	I11 Door1 REX
I11:Z06	14011506	140B506	Intelligent Reader	11	Door2 REX	I11 Door2 REX
I11:Z07	14011507	140B507	Intelligent Reader	11	Door1 REN	I11 Door1 REN
I11:Z08	14011508	140B508	Intelligent Reader	11	Door2 REN	I11 Door2 REN
I11:Z09	14011509	140B509	Intelligent Reader	11	Door3 Reed	I11 Door3 Reed
I11:Z10	14011510	140B510	Intelligent Reader	11	Door4 Reed	I11 Door4 Reed
I11:Z11	14011511	140B511	Intelligent Reader	11	Door3 Tongue	I11 Door3 Tongue
I11:Z12	14011512	140B512	Intelligent Reader	11	Door4 Tongue	I11 Door4 Tongue
I11:Z13	14011513	140B513	Intelligent Reader	11	Door3 REX	I11 Door3 REX
I11:Z14	14011514	140B514	Intelligent Reader	11	Door4 REX	I11 Door4 REX
I11:Z15	14011515	140B515	Intelligent Reader	11	Door3 REN	I11 Door3 REN
I11:Z16	14011516	140B516	Intelligent Reader	11	Door4 REN	I11 Door4 REN
I11:Z17	14011517	140B517	Intelligent Reader	11	Door5 Reed	I11 Door5 Reed
I11:Z18	14011518	140B518	Intelligent Reader	11	Door6 Reed	I11 Door6 Reed
I11:Z19	14011519	140B519	Intelligent Reader	11	Door5 Tongue	I11 Door5 Tongue
I11:Z20	14011520	140B520	Intelligent Reader	11	Door6 Tongue	I11 Door6 Tongue
I11:Z21	14011521	140B521	Intelligent Reader	11	Door5 REX	I11 Door5 REX
I11:Z22	14011522	140B522	Intelligent Reader	11	Door6 REX	I11 Door6 REX
I11:Z23	14011523	140B523	Intelligent Reader	11	Door5 REN	I11 Door5 REN
I11:Z24	14011524	140B524	Intelligent Reader	11	Door6 REN	I11 Door6 REN
I11:Z25	14011525	140B525	Intelligent Reader	11	Door7 Reed	I11 Door7 Reed
I11:Z26	14011526	140B526	Intelligent Reader	11	Door8 Reed	I11 Door8 Reed
I11:Z27	14011527	140B527	Intelligent Reader	11	Door7 Tongue	I11 Door7 Tongue
I11:Z28	14011528	140B528	Intelligent Reader	11	Door8 Tongue	I11 Door8 Tongue
I11:Z29	14011529	140B529	Intelligent Reader	11	Door7 REX	I11 Door7 REX
I11:Z30	14011530	140B530	Intelligent Reader	11	Door8 REX	I11 Door8 REX
I11:Z31	14011531	140B531	Intelligent Reader	11	Door7 REN	I11 Door7 REN
I11:Z32	14011532	140B532	Intelligent Reader	11	Door8 REN	I11 Door8 REN
I11:S01	14511501	145B501	Intelligent Reader	11	Cabinet Tamper	I11 Cabinet Tamper
I11:S02	30111502	301B502	Intelligent Reader	11	AC fail	I11 AC fail
I11:S03	30211503	302B503	Intelligent Reader	11	Low Battery	I11 Low Battery

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I11:S04	30011504	300B504	Intelligent Reader	11	LAN Fuse	I11 LAN Fuse
I11:S05	30011505	300B505	Intelligent Reader	11	Detector Fuse	I11 Detector Fuse
I11:S06	30011506	300B506	Intelligent Reader	11	Low Volts	I11 Low Volts
I11:S07	30011507	300B507	Intelligent Reader	11	PS Fail	I11 PS Fail
I11:S08	30911508	309B508	Intelligent Reader	11	Battery Test	I11 Battery Test
I11:S09	33311509	333B509	Intelligent Reader	11	Unibus Fault	I11 Unibus Fault
I11:S10	30311510	303B510	Intelligent Reader	11	Download Fail	I11 Download Fail
I11:S11	15011511	150B511	Intelligent Reader	11	Spare1	I11 Spare1
I11:S12	14311512	143B512	Intelligent Reader	11	LAN Comms	I11 LAN Comms
I11:S13	43211513	432B513	Intelligent Reader	11	Door1 Fault	I11 Door1 Fault
I11:S14	43211514	432B514	Intelligent Reader	11	Door2 Fault	I11 Door2 Fault
I11:S15	43211515	432B515	Intelligent Reader	11	Door3 Fault	I11 Door3 Fault
I11:S16	43211516	432B516	Intelligent Reader	11	Door4 Fault	I11 Door4 Fault
I11:S17	43211517	432B517	Intelligent Reader	11	Door5 Fault	I11 Door5 Fault
I11:S18	43211518	432B518	Intelligent Reader	11	Door6 Fault	I11 Door6 Fault
I11:S19	43211519	432B519	Intelligent Reader	11	Door7 Fault	I11 Door7 Fault
I11:S20	43211520	432B520	Intelligent Reader	11	Door8 Fault	I11 Door8 Fault
I11:S21	42311521	423B521	Intelligent Reader	11	Door1 Forced	I11 Door1 Forced
I11:S22	42311522	423B522	Intelligent Reader	11	Door2 Forced	I11 Door2 Forced
I11:S23	42311523	423B523	Intelligent Reader	11	Door3 Forced	I11 Door3 Forced
I11:S24	42311524	423B524	Intelligent Reader	11	Door4 Forced	I11 Door4 Forced
I11:S25	42311525	423B525	Intelligent Reader	11	Door5 Forced	I11 Door5 Forced
I11:S26	42311526	423B526	Intelligent Reader	11	Door6 Forced	I11 Door6 Forced
I11:S27	42311527	423B527	Intelligent Reader	11	Door7 Forced	I11 Door7 Forced
I11:S28	42311528	423B528	Intelligent Reader	11	Door8 Forced	I11 Door8 Forced
I11:S29	42611529	426B529	Intelligent Reader	11	Door1 DOTL	I11 Door1 DOTL
I11:S30	42611530	426B530	Intelligent Reader	11	Door2 DOTL	I11 Door2 DOTL
I11:S31	42611531	426B531	Intelligent Reader	11	Door3 DOTL	I11 Door3 DOTL
I11:S32	42611532	426B532	Intelligent Reader	11	Door4 DOTL	I11 Door4 DOTL
I11:S33	42611533	426B533	Intelligent Reader	11	Door5 DOTL	I11 Door5 DOTL
I11:S34	42611534	426B534	Intelligent Reader	11	Door6 DOTL	I11 Door6 DOTL
I11:S35	42611535	426B535	Intelligent Reader	11	Door7 DOTL	I11 Door7 DOTL
I11:S36	42611536	426B536	Intelligent Reader	11	Door8 DOTL	I11 Door8 DOTL
I11:S37	15011537	150B537	Intelligent Reader	11	Rdr1 Invalid	I11 Rdr1 Invalid
I11:S38	15011538	150B538	Intelligent Reader	11	Rdr2 Invalid	I11 Rdr2 Invalid
I11:S39	15011539	150B539	Intelligent Reader	11	Rdr3 Invalid	I11 Rdr3 Invalid
I11:S40	15011540	150B540	Intelligent Reader	11	Rdr4 Invalid	I11 Rdr4 Invalid
I11:S41	15011541	150B541	Intelligent Reader	11	Rdr5 Invalid	I11 Rdr5 Invalid
I11:S42	15011542	150B542	Intelligent Reader	11	Rdr6 Invalid	I11 Rdr6 Invalid
I11:S43	15011543	150B543	Intelligent Reader	11	Rdr7 Invalid	I11 Rdr7 Invalid
I11:S44	15011544	150B544	Intelligent Reader	11	Rdr8 Invalid	I11 Rdr8 Invalid
I11:S45	15011545	150B545	Intelligent Reader	11	Rdr9 Invalid	I11 Rdr9 Invalid
I11:S46	15011546	150B546	Intelligent Reader	11	Rdr10 Invalid	I11 Rdr10 Invalid
I11:S47	15011547	150B547	Intelligent Reader	11	Rdr11 Invalid	I11 Rdr11 Invalid
I11:S48	15011548	150B548	Intelligent Reader	11	Rdr12 Invalid	I11 Rdr12 Invalid
I11:S49	15011549	150B549	Intelligent Reader	11	Rdr13 Invalid	I11 Rdr13 Invalid
I11:S50	15011550	150B550	Intelligent Reader	11	Rdr14 Invalid	I11 Rdr14 Invalid
I11:S51	15011551	150B551	Intelligent Reader	11	Rdr15 Invalid	I11 Rdr15 Invalid
I11:S52	15011552	150B552	Intelligent Reader	11	Rdr16 Invalid	I11 Rdr16 Invalid
I11:S53	12211553	122B553	Intelligent Reader	11	Rdr1 Duress	I11 Rdr1 Duress
I11:S54	12211554	122B554	Intelligent Reader	11	Rdr2 Duress	I11 Rdr2 Duress
I11:S55	12211555	122B555	Intelligent Reader	11	Rdr3 Duress	I11 Rdr3 Duress
I11:S56	12211556	122B556	Intelligent Reader	11	Rdr4 Duress	I11 Rdr4 Duress
I11:S57	12211557	122B557	Intelligent Reader	11	Rdr5 Duress	I11 Rdr5 Duress
I11:S58	12211558	122B558	Intelligent Reader	11	Rdr6 Duress	I11 Rdr6 Duress
I11:S59	12211559	122B559	Intelligent Reader	11	Rdr7 Duress	I11 Rdr7 Duress
I11:S60	12211560	122B560	Intelligent Reader	11	Rdr8 Duress	I11 Rdr8 Duress

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I11:S61	12211561	122B561	Intelligent Reader	11	Rdr9 Duress	I11 Rdr9 Duress
I11:S62	12211562	122B562	Intelligent Reader	11	Rdr10 Duress	I11 Rdr10 Duress
I11:S63	12211563	122B563	Intelligent Reader	11	Rdr11 Duress	I11 Rdr11 Duress
I11:S64	12211564	122B564	Intelligent Reader	11	Rdr12 Duress	I11 Rdr12 Duress
I11:S65	12211565	122B565	Intelligent Reader	11	Rdr13 Duress	I11 Rdr13 Duress
I11:S66	12211566	122B566	Intelligent Reader	11	Rdr14 Duress	I11 Rdr14 Duress
I11:S67	12211567	122B567	Intelligent Reader	11	Rdr15 Duress	I11 Rdr15 Duress
I11:S68	12211568	122B568	Intelligent Reader	11	Rdr16 Duress	I11 Rdr16 Duress
I11:S69	33011569	330B569	Intelligent Reader	11	Rdr1 Fault	I11 Rdr1 Fault
I11:S70	33011570	330B570	Intelligent Reader	11	Rdr2 Fault	I11 Rdr2 Fault
I11:S71	33011571	330B571	Intelligent Reader	11	Rdr3 Fault	I11 Rdr3 Fault
I11:S72	33011572	330B572	Intelligent Reader	11	Rdr4 Fault	I11 Rdr4 Fault
I11:S73	33011573	330B573	Intelligent Reader	11	Rdr5 Fault	I11 Rdr5 Fault
I11:S74	33011574	330B574	Intelligent Reader	11	Rdr6 Fault	I11 Rdr6 Fault
I11:S75	33011575	330B575	Intelligent Reader	11	Rdr7 Fault	I11 Rdr7 Fault
I11:S76	33011576	330B576	Intelligent Reader	11	Rdr8 Fault	I11 Rdr8 Fault
I11:S77	33011577	330B577	Intelligent Reader	11	Rdr9 Fault	I11 Rdr9 Fault
I11:S78	33011578	330B578	Intelligent Reader	11	Rdr10 Fault	I11 Rdr10 Fault
I11:S79	33011579	330B579	Intelligent Reader	11	Rdr11 Fault	I11 Rdr11 Fault
I11:S80	33011580	330B580	Intelligent Reader	11	Rdr12 Fault	I11 Rdr12 Fault
I11:S81	33011581	330B581	Intelligent Reader	11	Rdr13 Fault	I11 Rdr13 Fault
I11:S82	33011582	330B582	Intelligent Reader	11	Rdr14 Fault	I11 Rdr14 Fault
I11:S83	33011583	330B583	Intelligent Reader	11	Rdr15 Fault	I11 Rdr15 Fault
I11:S84	33011584	330B584	Intelligent Reader	11	Rdr16 Fault	I11 Rdr16 Fault
I11:S85	30111585	301B585	Intelligent Reader	11	Ext AC fail	I11 Ext AC fail
I11:S86	30211586	302B586	Intelligent Reader	11	Ext Low Battery	I11 Ext Low Battery
I11:S87	30011587	300B587	Intelligent Reader	11	Ext LAN Fuse	I11 Ext LAN Fuse
I11:S88	30011588	300B588	Intelligent Reader	11	Ext Detector Fuse	I11 Ext Detector Fuse
I11:S89	30011589	300B589	Intelligent Reader	11	Ext Low Volts	I11 Ext Low Volts
I11:S90	30011590	300B590	Intelligent Reader	11	Ext PS Fail	I11 Ext PS Fail
I11:S91	30911591	309B591	Intelligent Reader	11	Ext Battery Test	I11 Ext Battery Test
I11:S92	15011592	150B592	Intelligent Reader	11	Spare2	I11 Spare2
I11:S93	15011593	150B593	Intelligent Reader	11	Spare3	I11 Spare3
I12:Z01	14012501	140C501	Intelligent Reader	12	Door1 Reed	I12 Door1 Reed
I12:Z02	14012502	140C502	Intelligent Reader	12	Door2 Reed	I12 Door2 Reed
I12:Z03	14012503	140C503	Intelligent Reader	12	Door1 Tongue	I12 Door1 Tongue
I12:Z04	14012504	140C504	Intelligent Reader	12	Door2 Tongue	I12 Door2 Tongue
I12:Z05	14012505	140C505	Intelligent Reader	12	Door1 REX	I12 Door1 REX
I12:Z06	14012506	140C506	Intelligent Reader	12	Door2 REX	I12 Door2 REX
I12:Z07	14012507	140C507	Intelligent Reader	12	Door1 REN	I12 Door1 REN
I12:Z08	14012508	140C508	Intelligent Reader	12	Door2 REN	I12 Door2 REN
I12:Z09	14012509	140C509	Intelligent Reader	12	Door3 Reed	I12 Door3 Reed
I12:Z10	14012510	140C510	Intelligent Reader	12	Door4 Reed	I12 Door4 Reed
I12:Z11	14012511	140C511	Intelligent Reader	12	Door3 Tongue	I12 Door3 Tongue
I12:Z12	14012512	140C512	Intelligent Reader	12	Door4 Tongue	I12 Door4 Tongue
I12:Z13	14012513	140C513	Intelligent Reader	12	Door3 REX	I12 Door3 REX
I12:Z14	14012514	140C514	Intelligent Reader	12	Door4 REX	I12 Door4 REX
I12:Z15	14012515	140C515	Intelligent Reader	12	Door3 REN	I12 Door3 REN
I12:Z16	14012516	140C516	Intelligent Reader	12	Door4 REN	I12 Door4 REN
I12:Z17	14012517	140C517	Intelligent Reader	12	Door5 Reed	I12 Door5 Reed
I12:Z18	14012518	140C518	Intelligent Reader	12	Door6 Reed	I12 Door6 Reed
I12:Z19	14012519	140C519	Intelligent Reader	12	Door5 Tongue	I12 Door5 Tongue
I12:Z20	14012520	140C520	Intelligent Reader	12	Door6 Tongue	I12 Door6 Tongue
I12:Z21	14012521	140C521	Intelligent Reader	12	Door5 REX	I12 Door5 REX
I12:Z22	14012522	140C522	Intelligent Reader	12	Door6 REX	I12 Door6 REX
I12:Z23	14012523	140C523	Intelligent Reader	12	Door5 REN	I12 Door5 REN
I12:Z24	14012524	140C524	Intelligent Reader	12	Door6 REN	I12 Door6 REN

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I12:Z25	14012525	140C525	Intelligent Reader	12	Door7 Reed	I12 Door7 Reed
I12:Z26	14012526	140C526	Intelligent Reader	12	Door8 Reed	I12 Door8 Reed
I12:Z27	14012527	140C527	Intelligent Reader	12	Door7 Tongue	I12 Door7 Tongue
I12:Z28	14012528	140C528	Intelligent Reader	12	Door8 Tongue	I12 Door8 Tongue
I12:Z29	14012529	140C529	Intelligent Reader	12	Door7 REX	I12 Door7 REX
I12:Z30	14012530	140C530	Intelligent Reader	12	Door8 REX	I12 Door8 REX
I12:Z31	14012531	140C531	Intelligent Reader	12	Door7 REN	I12 Door7 REN
I12:Z32	14012532	140C532	Intelligent Reader	12	Door8 REN	I12 Door8 REN
I12:S01	14512501	145C501	Intelligent Reader	12	Cabinet Tamper	I12 Cabinet Tamper
I12:S02	30112502	301C502	Intelligent Reader	12	AC fail	I12 AC fail
I12:S03	30212503	302C503	Intelligent Reader	12	Low Battery	I12 Low Battery
I12:S04	30012504	300C504	Intelligent Reader	12	LAN Fuse	I12 LAN Fuse
I12:S05	30012505	300C505	Intelligent Reader	12	Detector Fuse	I12 Detector Fuse
I12:S06	30012506	300C506	Intelligent Reader	12	Low Volts	I12 Low Volts
I12:S07	30012507	300C507	Intelligent Reader	12	PS Fail	I12 PS Fail
I12:S08	30912508	309C508	Intelligent Reader	12	Battery Test	I12 Battery Test
I12:S09	33312509	333C509	Intelligent Reader	12	Unibus Fault	I12 Unibus Fault
I12:S10	30312510	303C510	Intelligent Reader	12	Download Fail	I12 Download Fail
I12:S11	15012511	150C511	Intelligent Reader	12	Spare1	I12 Spare1
I12:S12	14312512	143C512	Intelligent Reader	12	LAN Comms	I12 LAN Comms
I12:S13	43212513	432C513	Intelligent Reader	12	Door1 Fault	I12 Door1 Fault
I12:S14	43212514	432C514	Intelligent Reader	12	Door2 Fault	I12 Door2 Fault
I12:S15	43212515	432C515	Intelligent Reader	12	Door3 Fault	I12 Door3 Fault
I12:S16	43212516	432C516	Intelligent Reader	12	Door4 Fault	I12 Door4 Fault
I12:S17	43212517	432C517	Intelligent Reader	12	Door5 Fault	I12 Door5 Fault
I12:S18	43212518	432C518	Intelligent Reader	12	Door6 Fault	I12 Door6 Fault
I12:S19	43212519	432C519	Intelligent Reader	12	Door7 Fault	I12 Door7 Fault
I12:S20	43212520	432C520	Intelligent Reader	12	Door8 Fault	I12 Door8 Fault
I12:S21	42312521	423C521	Intelligent Reader	12	Door1 Forced	I12 Door1 Forced
I12:S22	42312522	423C522	Intelligent Reader	12	Door2 Forced	I12 Door2 Forced
I12:S23	42312523	423C523	Intelligent Reader	12	Door3 Forced	I12 Door3 Forced
I12:S24	42312524	423C524	Intelligent Reader	12	Door4 Forced	I12 Door4 Forced
I12:S25	42312525	423C525	Intelligent Reader	12	Door5 Forced	I12 Door5 Forced
I12:S26	42312526	423C526	Intelligent Reader	12	Door6 Forced	I12 Door6 Forced
I12:S27	42312527	423C527	Intelligent Reader	12	Door7 Forced	I12 Door7 Forced
I12:S28	42312528	423C528	Intelligent Reader	12	Door8 Forced	I12 Door8 Forced
I12:S29	42612529	426C529	Intelligent Reader	12	Door1 DOTL	I12 Door1 DOTL
I12:S30	42612530	426C530	Intelligent Reader	12	Door2 DOTL	I12 Door2 DOTL
I12:S31	42612531	426C531	Intelligent Reader	12	Door3 DOTL	I12 Door3 DOTL
I12:S32	42612532	426C532	Intelligent Reader	12	Door4 DOTL	I12 Door4 DOTL
I12:S33	42612533	426C533	Intelligent Reader	12	Door5 DOTL	I12 Door5 DOTL
I12:S34	42612534	426C534	Intelligent Reader	12	Door6 DOTL	I12 Door6 DOTL
I12:S35	42612535	426C535	Intelligent Reader	12	Door7 DOTL	I12 Door7 DOTL
I12:S36	42612536	426C536	Intelligent Reader	12	Door8 DOTL	I12 Door8 DOTL
I12:S37	15012537	150C537	Intelligent Reader	12	Rdr1 Invalid	I12 Rdr1 Invalid
I12:S38	15012538	150C538	Intelligent Reader	12	Rdr2 Invalid	I12 Rdr2 Invalid
I12:S39	15012539	150C539	Intelligent Reader	12	Rdr3 Invalid	I12 Rdr3 Invalid
I12:S40	15012540	150C540	Intelligent Reader	12	Rdr4 Invalid	I12 Rdr4 Invalid
I12:S41	15012541	150C541	Intelligent Reader	12	Rdr5 Invalid	I12 Rdr5 Invalid
I12:S42	15012542	150C542	Intelligent Reader	12	Rdr6 Invalid	I12 Rdr6 Invalid
I12:S43	15012543	150C543	Intelligent Reader	12	Rdr7 Invalid	I12 Rdr7 Invalid
I12:S44	15012544	150C544	Intelligent Reader	12	Rdr8 Invalid	I12 Rdr8 Invalid
I12:S45	15012545	150C545	Intelligent Reader	12	Rdr9 Invalid	I12 Rdr9 Invalid
I12:S46	15012546	150C546	Intelligent Reader	12	Rdr10 Invalid	I12 Rdr10 Invalid
I12:S47	15012547	150C547	Intelligent Reader	12	Rdr11 Invalid	I12 Rdr11 Invalid
I12:S48	15012548	150C548	Intelligent Reader	12	Rdr12 Invalid	I12 Rdr12 Invalid
I12:S49	15012549	150C549	Intelligent Reader	12	Rdr13 Invalid	I12 Rdr13 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I12:S50	15012550	150C550	Intelligent Reader	12	Rdr14 Invalid	I12 Rdr14 Invalid
I12:S51	15012551	150C551	Intelligent Reader	12	Rdr15 Invalid	I12 Rdr15 Invalid
I12:S52	15012552	150C552	Intelligent Reader	12	Rdr16 Invalid	I12 Rdr16 Invalid
I12:S53	12212553	122C553	Intelligent Reader	12	Rdr1 Duress	I12 Rdr1 Duress
I12:S54	12212554	122C554	Intelligent Reader	12	Rdr2 Duress	I12 Rdr2 Duress
I12:S55	12212555	122C555	Intelligent Reader	12	Rdr3 Duress	I12 Rdr3 Duress
I12:S56	12212556	122C556	Intelligent Reader	12	Rdr4 Duress	I12 Rdr4 Duress
I12:S57	12212557	122C557	Intelligent Reader	12	Rdr5 Duress	I12 Rdr5 Duress
I12:S58	12212558	122C558	Intelligent Reader	12	Rdr6 Duress	I12 Rdr6 Duress
I12:S59	12212559	122C559	Intelligent Reader	12	Rdr7 Duress	I12 Rdr7 Duress
I12:S60	12212560	122C560	Intelligent Reader	12	Rdr8 Duress	I12 Rdr8 Duress
I12:S61	12212561	122C561	Intelligent Reader	12	Rdr9 Duress	I12 Rdr9 Duress
I12:S62	12212562	122C562	Intelligent Reader	12	Rdr10 Duress	I12 Rdr10 Duress
I12:S63	12212563	122C563	Intelligent Reader	12	Rdr11 Duress	I12 Rdr11 Duress
I12:S64	12212564	122C564	Intelligent Reader	12	Rdr12 Duress	I12 Rdr12 Duress
I12:S65	12212565	122C565	Intelligent Reader	12	Rdr13 Duress	I12 Rdr13 Duress
I12:S66	12212566	122C566	Intelligent Reader	12	Rdr14 Duress	I12 Rdr14 Duress
I12:S67	12212567	122C567	Intelligent Reader	12	Rdr15 Duress	I12 Rdr15 Duress
I12:S68	12212568	122C568	Intelligent Reader	12	Rdr16 Duress	I12 Rdr16 Duress
I12:S69	33012569	330C569	Intelligent Reader	12	Rdr1 Fault	I12 Rdr1 Fault
I12:S70	33012570	330C570	Intelligent Reader	12	Rdr2 Fault	I12 Rdr2 Fault
I12:S71	33012571	330C571	Intelligent Reader	12	Rdr3 Fault	I12 Rdr3 Fault
I12:S72	33012572	330C572	Intelligent Reader	12	Rdr4 Fault	I12 Rdr4 Fault
I12:S73	33012573	330C573	Intelligent Reader	12	Rdr5 Fault	I12 Rdr5 Fault
I12:S74	33012574	330C574	Intelligent Reader	12	Rdr6 Fault	I12 Rdr6 Fault
I12:S75	33012575	330C575	Intelligent Reader	12	Rdr7 Fault	I12 Rdr7 Fault
I12:S76	33012576	330C576	Intelligent Reader	12	Rdr8 Fault	I12 Rdr8 Fault
I12:S77	33012577	330C577	Intelligent Reader	12	Rdr9 Fault	I12 Rdr9 Fault
I12:S78	33012578	330C578	Intelligent Reader	12	Rdr10 Fault	I12 Rdr10 Fault
I12:S79	33012579	330C579	Intelligent Reader	12	Rdr11 Fault	I12 Rdr11 Fault
I12:S80	33012580	330C580	Intelligent Reader	12	Rdr12 Fault	I12 Rdr12 Fault
I12:S81	33012581	330C581	Intelligent Reader	12	Rdr13 Fault	I12 Rdr13 Fault
I12:S82	33012582	330C582	Intelligent Reader	12	Rdr14 Fault	I12 Rdr14 Fault
I12:S83	33012583	330C583	Intelligent Reader	12	Rdr15 Fault	I12 Rdr15 Fault
I12:S84	33012584	330C584	Intelligent Reader	12	Rdr16 Fault	I12 Rdr16 Fault
I12:S85	30112585	301C585	Intelligent Reader	12	Ext AC fail	I12 Ext AC fail
I12:S86	30212586	302C586	Intelligent Reader	12	Ext Low Battery	I12 Ext Low Battery
I12:S87	30012587	300C587	Intelligent Reader	12	Ext LAN Fuse	I12 Ext LAN Fuse
I12:S88	30012588	300C588	Intelligent Reader	12	Ext Detector Fuse	I12 Ext Detector Fuse
I12:S89	30012589	300C589	Intelligent Reader	12	Ext Low Volts	I12 Ext Low Volts
I12:S90	30012590	300C590	Intelligent Reader	12	Ext PS Fail	I12 Ext PS Fail
I12:S91	30912591	309C591	Intelligent Reader	12	Ext Battery Test	I12 Ext Battery Test
I12:S92	15012592	150C592	Intelligent Reader	12	Spare2	I12 Spare2
I12:S93	15012593	150C593	Intelligent Reader	12	Spare3	I12 Spare3
I13:Z01	14013501	140D501	Intelligent Reader	13	Door1 Reed	I13 Door1 Reed
I13:Z02	14013502	140D502	Intelligent Reader	13	Door2 Reed	I13 Door2 Reed
I13:Z03	14013503	140D503	Intelligent Reader	13	Door1 Tongue	I13 Door1 Tongue
I13:Z04	14013504	140D504	Intelligent Reader	13	Door2 Tongue	I13 Door2 Tongue
I13:Z05	14013505	140D505	Intelligent Reader	13	Door1 REX	I13 Door1 REX
I13:Z06	14013506	140D506	Intelligent Reader	13	Door2 REX	I13 Door2 REX
I13:Z07	14013507	140D507	Intelligent Reader	13	Door1 REN	I13 Door1 REN
I13:Z08	14013508	140D508	Intelligent Reader	13	Door2 REN	I13 Door2 REN
I13:Z09	14013509	140D509	Intelligent Reader	13	Door3 Reed	I13 Door3 Reed
I13:Z10	14013510	140D510	Intelligent Reader	13	Door4 Reed	I13 Door4 Reed
I13:Z11	14013511	140D511	Intelligent Reader	13	Door3 Tongue	I13 Door3 Tongue
I13:Z12	14013512	140D512	Intelligent Reader	13	Door4 Tongue	I13 Door4 Tongue
I13:Z13	14013513	140D513	Intelligent Reader	13	Door3 REX	I13 Door3 REX

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I13:Z14	14013514	140D514	Intelligent Reader	13	Door4 REX	I13 Door4 REX
I13:Z15	14013515	140D515	Intelligent Reader	13	Door3 REN	I13 Door3 REN
I13:Z16	14013516	140D516	Intelligent Reader	13	Door4 REN	I13 Door4 REN
I13:Z17	14013517	140D517	Intelligent Reader	13	Door5 Reed	I13 Door5 Reed
I13:Z18	14013518	140D518	Intelligent Reader	13	Door6 Reed	I13 Door6 Reed
I13:Z19	14013519	140D519	Intelligent Reader	13	Door5 Tongue	I13 Door5 Tongue
I13:Z20	14013520	140D520	Intelligent Reader	13	Door6 Tongue	I13 Door6 Tongue
I13:Z21	14013521	140D521	Intelligent Reader	13	Door5 REX	I13 Door5 REX
I13:Z22	14013522	140D522	Intelligent Reader	13	Door6 REX	I13 Door6 REX
I13:Z23	14013523	140D523	Intelligent Reader	13	Door5 REN	I13 Door5 REN
I13:Z24	14013524	140D524	Intelligent Reader	13	Door6 REN	I13 Door6 REN
I13:Z25	14013525	140D525	Intelligent Reader	13	Door7 Reed	I13 Door7 Reed
I13:Z26	14013526	140D526	Intelligent Reader	13	Door8 Reed	I13 Door8 Reed
I13:Z27	14013527	140D527	Intelligent Reader	13	Door7 Tongue	I13 Door7 Tongue
I13:Z28	14013528	140D528	Intelligent Reader	13	Door8 Tongue	I13 Door8 Tongue
I13:Z29	14013529	140D529	Intelligent Reader	13	Door7 REX	I13 Door7 REX
I13:Z30	14013530	140D530	Intelligent Reader	13	Door8 REX	I13 Door8 REX
I13:Z31	14013531	140D531	Intelligent Reader	13	Door7 REN	I13 Door7 REN
I13:Z32	14013532	140D532	Intelligent Reader	13	Door8 REN	I13 Door8 REN
I13:S01	14513501	145D501	Intelligent Reader	13	Cabinet Tamper	I13 Cabinet Tamper
I13:S02	30113502	301D502	Intelligent Reader	13	AC fail	I13 AC fail
I13:S03	30213503	302D503	Intelligent Reader	13	Low Battery	I13 Low Battery
I13:S04	30013504	300D504	Intelligent Reader	13	LAN Fuse	I13 LAN Fuse
I13:S05	30013505	300D505	Intelligent Reader	13	Detector Fuse	I13 Detector Fuse
I13:S06	30013506	300D506	Intelligent Reader	13	Low Volts	I13 Low Volts
I13:S07	30013507	300D507	Intelligent Reader	13	PS Fail	I13 PS Fail
I13:S08	30913508	309D508	Intelligent Reader	13	Battery Test	I13 Battery Test
I13:S09	33313509	333D509	Intelligent Reader	13	Unibus Fault	I13 Unibus Fault
I13:S10	30313510	303D510	Intelligent Reader	13	Download Fail	I13 Download Fail
I13:S11	15013511	150D511	Intelligent Reader	13	Spare1	I13 Spare1
I13:S12	14313512	143D512	Intelligent Reader	13	LAN Comms	I13 LAN Comms
I13:S13	43213513	432D513	Intelligent Reader	13	Door1 Fault	I13 Door1 Fault
I13:S14	43213514	432D514	Intelligent Reader	13	Door2 Fault	I13 Door2 Fault
I13:S15	43213515	432D515	Intelligent Reader	13	Door3 Fault	I13 Door3 Fault
I13:S16	43213516	432D516	Intelligent Reader	13	Door4 Fault	I13 Door4 Fault
I13:S17	43213517	432D517	Intelligent Reader	13	Door5 Fault	I13 Door5 Fault
I13:S18	43213518	432D518	Intelligent Reader	13	Door6 Fault	I13 Door6 Fault
I13:S19	43213519	432D519	Intelligent Reader	13	Door7 Fault	I13 Door7 Fault
I13:S20	43213520	432D520	Intelligent Reader	13	Door8 Fault	I13 Door8 Fault
I13:S21	42313521	423D521	Intelligent Reader	13	Door1 Forced	I13 Door1 Forced
I13:S22	42313522	423D522	Intelligent Reader	13	Door2 Forced	I13 Door2 Forced
I13:S23	42313523	423D523	Intelligent Reader	13	Door3 Forced	I13 Door3 Forced
I13:S24	42313524	423D524	Intelligent Reader	13	Door4 Forced	I13 Door4 Forced
I13:S25	42313525	423D525	Intelligent Reader	13	Door5 Forced	I13 Door5 Forced
I13:S26	42313526	423D526	Intelligent Reader	13	Door6 Forced	I13 Door6 Forced
I13:S27	42313527	423D527	Intelligent Reader	13	Door7 Forced	I13 Door7 Forced
I13:S28	42313528	423D528	Intelligent Reader	13	Door8 Forced	I13 Door8 Forced
I13:S29	42613529	426D529	Intelligent Reader	13	Door1 DOTL	I13 Door1 DOTL
I13:S30	42613530	426D530	Intelligent Reader	13	Door2 DOTL	I13 Door2 DOTL
I13:S31	42613531	426D531	Intelligent Reader	13	Door3 DOTL	I13 Door3 DOTL
I13:S32	42613532	426D532	Intelligent Reader	13	Door4 DOTL	I13 Door4 DOTL
I13:S33	42613533	426D533	Intelligent Reader	13	Door5 DOTL	I13 Door5 DOTL
I13:S34	42613534	426D534	Intelligent Reader	13	Door6 DOTL	I13 Door6 DOTL
I13:S35	42613535	426D535	Intelligent Reader	13	Door7 DOTL	I13 Door7 DOTL
I13:S36	42613536	426D536	Intelligent Reader	13	Door8 DOTL	I13 Door8 DOTL
I13:S37	15013537	150D537	Intelligent Reader	13	Rdr1 Invalid	I13 Rdr1 Invalid
I13:S38	15013538	150D538	Intelligent Reader	13	Rdr2 Invalid	I13 Rdr2 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I13:S39	15013539	150D539	Intelligent Reader	13	Rdr3 Invalid	I13 Rdr3 Invalid
I13:S40	15013540	150D540	Intelligent Reader	13	Rdr4 Invalid	I13 Rdr4 Invalid
I13:S41	15013541	150D541	Intelligent Reader	13	Rdr5 Invalid	I13 Rdr5 Invalid
I13:S42	15013542	150D542	Intelligent Reader	13	Rdr6 Invalid	I13 Rdr6 Invalid
I13:S43	15013543	150D543	Intelligent Reader	13	Rdr7 Invalid	I13 Rdr7 Invalid
I13:S44	15013544	150D544	Intelligent Reader	13	Rdr8 Invalid	I13 Rdr8 Invalid
I13:S45	15013545	150D545	Intelligent Reader	13	Rdr9 Invalid	I13 Rdr9 Invalid
I13:S46	15013546	150D546	Intelligent Reader	13	Rdr10 Invalid	I13 Rdr10 Invalid
I13:S47	15013547	150D547	Intelligent Reader	13	Rdr11 Invalid	I13 Rdr11 Invalid
I13:S48	15013548	150D548	Intelligent Reader	13	Rdr12 Invalid	I13 Rdr12 Invalid
I13:S49	15013549	150D549	Intelligent Reader	13	Rdr13 Invalid	I13 Rdr13 Invalid
I13:S50	15013550	150D550	Intelligent Reader	13	Rdr14 Invalid	I13 Rdr14 Invalid
I13:S51	15013551	150D551	Intelligent Reader	13	Rdr15 Invalid	I13 Rdr15 Invalid
I13:S52	15013552	150D552	Intelligent Reader	13	Rdr16 Invalid	I13 Rdr16 Invalid
I13:S53	12213553	122D553	Intelligent Reader	13	Rdr1 Duress	I13 Rdr1 Duress
I13:S54	12213554	122D554	Intelligent Reader	13	Rdr2 Duress	I13 Rdr2 Duress
I13:S55	12213555	122D555	Intelligent Reader	13	Rdr3 Duress	I13 Rdr3 Duress
I13:S56	12213556	122D556	Intelligent Reader	13	Rdr4 Duress	I13 Rdr4 Duress
I13:S57	12213557	122D557	Intelligent Reader	13	Rdr5 Duress	I13 Rdr5 Duress
I13:S58	12213558	122D558	Intelligent Reader	13	Rdr6 Duress	I13 Rdr6 Duress
I13:S59	12213559	122D559	Intelligent Reader	13	Rdr7 Duress	I13 Rdr7 Duress
I13:S60	12213560	122D560	Intelligent Reader	13	Rdr8 Duress	I13 Rdr8 Duress
I13:S61	12213561	122D561	Intelligent Reader	13	Rdr9 Duress	I13 Rdr9 Duress
I13:S62	12213562	122D562	Intelligent Reader	13	Rdr10 Duress	I13 Rdr10 Duress
I13:S63	12213563	122D563	Intelligent Reader	13	Rdr11 Duress	I13 Rdr11 Duress
I13:S64	12213564	122D564	Intelligent Reader	13	Rdr12 Duress	I13 Rdr12 Duress
I13:S65	12213565	122D565	Intelligent Reader	13	Rdr13 Duress	I13 Rdr13 Duress
I13:S66	12213566	122D566	Intelligent Reader	13	Rdr14 Duress	I13 Rdr14 Duress
I13:S67	12213567	122D567	Intelligent Reader	13	Rdr15 Duress	I13 Rdr15 Duress
I13:S68	12213568	122D568	Intelligent Reader	13	Rdr16 Duress	I13 Rdr16 Duress
I13:S69	33013569	330D569	Intelligent Reader	13	Rdr1 Fault	I13 Rdr1 Fault
I13:S70	33013570	330D570	Intelligent Reader	13	Rdr2 Fault	I13 Rdr2 Fault
I13:S71	33013571	330D571	Intelligent Reader	13	Rdr3 Fault	I13 Rdr3 Fault
I13:S72	33013572	330D572	Intelligent Reader	13	Rdr4 Fault	I13 Rdr4 Fault
I13:S73	33013573	330D573	Intelligent Reader	13	Rdr5 Fault	I13 Rdr5 Fault
I13:S74	33013574	330D574	Intelligent Reader	13	Rdr6 Fault	I13 Rdr6 Fault
I13:S75	33013575	330D575	Intelligent Reader	13	Rdr7 Fault	I13 Rdr7 Fault
I13:S76	33013576	330D576	Intelligent Reader	13	Rdr8 Fault	I13 Rdr8 Fault
I13:S77	33013577	330D577	Intelligent Reader	13	Rdr9 Fault	I13 Rdr9 Fault
I13:S78	33013578	330D578	Intelligent Reader	13	Rdr10 Fault	I13 Rdr10 Fault
I13:S79	33013579	330D579	Intelligent Reader	13	Rdr11 Fault	I13 Rdr11 Fault
I13:S80	33013580	330D580	Intelligent Reader	13	Rdr12 Fault	I13 Rdr12 Fault
I13:S81	33013581	330D581	Intelligent Reader	13	Rdr13 Fault	I13 Rdr13 Fault
I13:S82	33013582	330D582	Intelligent Reader	13	Rdr14 Fault	I13 Rdr14 Fault
I13:S83	33013583	330D583	Intelligent Reader	13	Rdr15 Fault	I13 Rdr15 Fault
I13:S84	33013584	330D584	Intelligent Reader	13	Rdr16 Fault	I13 Rdr16 Fault
I13:S85	30113585	301D585	Intelligent Reader	13	Ext AC fail	I13 Ext AC fail
I13:S86	30213586	302D586	Intelligent Reader	13	Ext Low Battery	I13 Ext Low Battery
I13:S87	30013587	300D587	Intelligent Reader	13	Ext LAN Fuse	I13 Ext LAN Fuse
I13:S88	30013588	300D588	Intelligent Reader	13	Ext Detector Fuse	I13 Ext Detector Fuse
I13:S89	30013589	300D589	Intelligent Reader	13	Ext Low Volts	I13 Ext Low Volts
I13:S90	30013590	300D590	Intelligent Reader	13	Ext PS Fail	I13 Ext PS Fail
I13:S91	30913591	309D591	Intelligent Reader	13	Ext Battery Test	I13 Ext Battery Test
I13:S92	15013592	150D592	Intelligent Reader	13	Spare2	I13 Spare2
I13:S93	15013593	150D593	Intelligent Reader	13	Spare3	I13 Spare3
I14:Z01	14014501	140E501	Intelligent Reader	14	Door1 Reed	I14 Door1 Reed
I14:Z02	14014502	140E502	Intelligent Reader	14	Door2 Reed	I14 Door2 Reed

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I14:Z03	14014503	140E503	Intelligent Reader	14	Door1 Tongue	I14 Door1 Tongue
I14:Z04	14014504	140E504	Intelligent Reader	14	Door2 Tongue	I14 Door2 Tongue
I14:Z05	14014505	140E505	Intelligent Reader	14	Door1 REX	I14 Door1 REX
I14:Z06	14014506	140E506	Intelligent Reader	14	Door2 REX	I14 Door2 REX
I14:Z07	14014507	140E507	Intelligent Reader	14	Door1 REN	I14 Door1 REN
I14:Z08	14014508	140E508	Intelligent Reader	14	Door2 REN	I14 Door2 REN
I14:Z09	14014509	140E509	Intelligent Reader	14	Door3 Reed	I14 Door3 Reed
I14:Z10	14014510	140E510	Intelligent Reader	14	Door4 Reed	I14 Door4 Reed
I14:Z11	14014511	140E511	Intelligent Reader	14	Door3 Tongue	I14 Door3 Tongue
I14:Z12	14014512	140E512	Intelligent Reader	14	Door4 Tongue	I14 Door4 Tongue
I14:Z13	14014513	140E513	Intelligent Reader	14	Door3 REX	I14 Door3 REX
I14:Z14	14014514	140E514	Intelligent Reader	14	Door4 REX	I14 Door4 REX
I14:Z15	14014515	140E515	Intelligent Reader	14	Door3 REN	I14 Door3 REN
I14:Z16	14014516	140E516	Intelligent Reader	14	Door4 REN	I14 Door4 REN
I14:Z17	14014517	140E517	Intelligent Reader	14	Door5 Reed	I14 Door5 Reed
I14:Z18	14014518	140E518	Intelligent Reader	14	Door6 Reed	I14 Door6 Reed
I14:Z19	14014519	140E519	Intelligent Reader	14	Door5 Tongue	I14 Door5 Tongue
I14:Z20	14014520	140E520	Intelligent Reader	14	Door6 Tongue	I14 Door6 Tongue
I14:Z21	14014521	140E521	Intelligent Reader	14	Door5 REX	I14 Door5 REX
I14:Z22	14014522	140E522	Intelligent Reader	14	Door6 REX	I14 Door6 REX
I14:Z23	14014523	140E523	Intelligent Reader	14	Door5 REN	I14 Door5 REN
I14:Z24	14014524	140E524	Intelligent Reader	14	Door6 REN	I14 Door6 REN
I14:Z25	14014525	140E525	Intelligent Reader	14	Door7 Reed	I14 Door7 Reed
I14:Z26	14014526	140E526	Intelligent Reader	14	Door8 Reed	I14 Door8 Reed
I14:Z27	14014527	140E527	Intelligent Reader	14	Door7 Tongue	I14 Door7 Tongue
I14:Z28	14014528	140E528	Intelligent Reader	14	Door8 Tongue	I14 Door8 Tongue
I14:Z29	14014529	140E529	Intelligent Reader	14	Door7 REX	I14 Door7 REX
I14:Z30	14014530	140E530	Intelligent Reader	14	Door8 REX	I14 Door8 REX
I14:Z31	14014531	140E531	Intelligent Reader	14	Door7 REN	I14 Door7 REN
I14:Z32	14014532	140E532	Intelligent Reader	14	Door8 REN	I14 Door8 REN
I14:S01	14514501	145E501	Intelligent Reader	14	Cabinet Tamper	I14 Cabinet Tamper
I14:S02	30114502	301E502	Intelligent Reader	14	AC fail	I14 AC fail
I14:S03	30214503	302E503	Intelligent Reader	14	Low Battery	I14 Low Battery
I14:S04	30014504	300E504	Intelligent Reader	14	LAN Fuse	I14 LAN Fuse
I14:S05	30014505	300E505	Intelligent Reader	14	Detector Fuse	I14 Detector Fuse
I14:S06	30014506	300E506	Intelligent Reader	14	Low Volts	I14 Low Volts
I14:S07	30014507	300E507	Intelligent Reader	14	PS Fail	I14 PS Fail
I14:S08	30914508	309E508	Intelligent Reader	14	Battery Test	I14 Battery Test
I14:S09	33314509	333E509	Intelligent Reader	14	Unibus Fault	I14 Unibus Fault
I14:S10	30314510	303E510	Intelligent Reader	14	Download Fail	I14 Download Fail
I14:S11	15014511	150E511	Intelligent Reader	14	Spare1	I14 Spare1
I14:S12	14314512	143E512	Intelligent Reader	14	LAN Comms	I14 LAN Comms
I14:S13	43214513	432E513	Intelligent Reader	14	Door1 Fault	I14 Door1 Fault
I14:S14	43214514	432E514	Intelligent Reader	14	Door2 Fault	I14 Door2 Fault
I14:S15	43214515	432E515	Intelligent Reader	14	Door3 Fault	I14 Door3 Fault
I14:S16	43214516	432E516	Intelligent Reader	14	Door4 Fault	I14 Door4 Fault
I14:S17	43214517	432E517	Intelligent Reader	14	Door5 Fault	I14 Door5 Fault
I14:S18	43214518	432E518	Intelligent Reader	14	Door6 Fault	I14 Door6 Fault
I14:S19	43214519	432E519	Intelligent Reader	14	Door7 Fault	I14 Door7 Fault
I14:S20	43214520	432E520	Intelligent Reader	14	Door8 Fault	I14 Door8 Fault
I14:S21	42314521	423E521	Intelligent Reader	14	Door1 Forced	I14 Door1 Forced
I14:S22	42314522	423E522	Intelligent Reader	14	Door2 Forced	I14 Door2 Forced
I14:S23	42314523	423E523	Intelligent Reader	14	Door3 Forced	I14 Door3 Forced
I14:S24	42314524	423E524	Intelligent Reader	14	Door4 Forced	I14 Door4 Forced
I14:S25	42314525	423E525	Intelligent Reader	14	Door5 Forced	I14 Door5 Forced
I14:S26	42314526	423E526	Intelligent Reader	14	Door6 Forced	I14 Door6 Forced
I14:S27	42314527	423E527	Intelligent Reader	14	Door7 Forced	I14 Door7 Forced

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
I14:S28	42314528	423E528	Intelligent Reader	14	Door8 Forced	I14 Door8 Forced
I14:S29	42614529	426E529	Intelligent Reader	14	Door1 DOTL	I14 Door1 DOTL
I14:S30	42614530	426E530	Intelligent Reader	14	Door2 DOTL	I14 Door2 DOTL
I14:S31	42614531	426E531	Intelligent Reader	14	Door3 DOTL	I14 Door3 DOTL
I14:S32	42614532	426E532	Intelligent Reader	14	Door4 DOTL	I14 Door4 DOTL
I14:S33	42614533	426E533	Intelligent Reader	14	Door5 DOTL	I14 Door5 DOTL
I14:S34	42614534	426E534	Intelligent Reader	14	Door6 DOTL	I14 Door6 DOTL
I14:S35	42614535	426E535	Intelligent Reader	14	Door7 DOTL	I14 Door7 DOTL
I14:S36	42614536	426E536	Intelligent Reader	14	Door8 DOTL	I14 Door8 DOTL
I14:S37	15014537	150E537	Intelligent Reader	14	Rdr1 Invalid	I14 Rdr1 Invalid
I14:S38	15014538	150E538	Intelligent Reader	14	Rdr2 Invalid	I14 Rdr2 Invalid
I14:S39	15014539	150E539	Intelligent Reader	14	Rdr3 Invalid	I14 Rdr3 Invalid
I14:S40	15014540	150E540	Intelligent Reader	14	Rdr4 Invalid	I14 Rdr4 Invalid
I14:S41	15014541	150E541	Intelligent Reader	14	Rdr5 Invalid	I14 Rdr5 Invalid
I14:S42	15014542	150E542	Intelligent Reader	14	Rdr6 Invalid	I14 Rdr6 Invalid
I14:S43	15014543	150E543	Intelligent Reader	14	Rdr7 Invalid	I14 Rdr7 Invalid
I14:S44	15014544	150E544	Intelligent Reader	14	Rdr8 Invalid	I14 Rdr8 Invalid
I14:S45	15014545	150E545	Intelligent Reader	14	Rdr9 Invalid	I14 Rdr9 Invalid
I14:S46	15014546	150E546	Intelligent Reader	14	Rdr10 Invalid	I14 Rdr10 Invalid
I14:S47	15014547	150E547	Intelligent Reader	14	Rdr11 Invalid	I14 Rdr11 Invalid
I14:S48	15014548	150E548	Intelligent Reader	14	Rdr12 Invalid	I14 Rdr12 Invalid
I14:S49	15014549	150E549	Intelligent Reader	14	Rdr13 Invalid	I14 Rdr13 Invalid
I14:S50	15014550	150E550	Intelligent Reader	14	Rdr14 Invalid	I14 Rdr14 Invalid
I14:S51	15014551	150E551	Intelligent Reader	14	Rdr15 Invalid	I14 Rdr15 Invalid
I14:S52	15014552	150E552	Intelligent Reader	14	Rdr16 Invalid	I14 Rdr16 Invalid
I14:S53	12214553	122E553	Intelligent Reader	14	Rdr1 Duress	I14 Rdr1 Duress
I14:S54	12214554	122E554	Intelligent Reader	14	Rdr2 Duress	I14 Rdr2 Duress
I14:S55	12214555	122E555	Intelligent Reader	14	Rdr3 Duress	I14 Rdr3 Duress
I14:S56	12214556	122E556	Intelligent Reader	14	Rdr4 Duress	I14 Rdr4 Duress
I14:S57	12214557	122E557	Intelligent Reader	14	Rdr5 Duress	I14 Rdr5 Duress
I14:S58	12214558	122E558	Intelligent Reader	14	Rdr6 Duress	I14 Rdr6 Duress
I14:S59	12214559	122E559	Intelligent Reader	14	Rdr7 Duress	I14 Rdr7 Duress
I14:S60	12214560	122E560	Intelligent Reader	14	Rdr8 Duress	I14 Rdr8 Duress
I14:S61	12214561	122E561	Intelligent Reader	14	Rdr9 Duress	I14 Rdr9 Duress
I14:S62	12214562	122E562	Intelligent Reader	14	Rdr10 Duress	I14 Rdr10 Duress
I14:S63	12214563	122E563	Intelligent Reader	14	Rdr11 Duress	I14 Rdr11 Duress
I14:S64	12214564	122E564	Intelligent Reader	14	Rdr12 Duress	I14 Rdr12 Duress
I14:S65	12214565	122E565	Intelligent Reader	14	Rdr13 Duress	I14 Rdr13 Duress
I14:S66	12214566	122E566	Intelligent Reader	14	Rdr14 Duress	I14 Rdr14 Duress
I14:S67	12214567	122E567	Intelligent Reader	14	Rdr15 Duress	I14 Rdr15 Duress
I14:S68	12214568	122E568	Intelligent Reader	14	Rdr16 Duress	I14 Rdr16 Duress
I14:S69	33014569	330E569	Intelligent Reader	14	Rdr1 Fault	I14 Rdr1 Fault
I14:S70	33014570	330E570	Intelligent Reader	14	Rdr2 Fault	I14 Rdr2 Fault
I14:S71	33014571	330E571	Intelligent Reader	14	Rdr3 Fault	I14 Rdr3 Fault
I14:S72	33014572	330E572	Intelligent Reader	14	Rdr4 Fault	I14 Rdr4 Fault
I14:S73	33014573	330E573	Intelligent Reader	14	Rdr5 Fault	I14 Rdr5 Fault
I14:S74	33014574	330E574	Intelligent Reader	14	Rdr6 Fault	I14 Rdr6 Fault
I14:S75	33014575	330E575	Intelligent Reader	14	Rdr7 Fault	I14 Rdr7 Fault
I14:S76	33014576	330E576	Intelligent Reader	14	Rdr8 Fault	I14 Rdr8 Fault
I14:S77	33014577	330E577	Intelligent Reader	14	Rdr9 Fault	I14 Rdr9 Fault
I14:S78	33014578	330E578	Intelligent Reader	14	Rdr10 Fault	I14 Rdr10 Fault
I14:S79	33014579	330E579	Intelligent Reader	14	Rdr11 Fault	I14 Rdr11 Fault
I14:S80	33014580	330E580	Intelligent Reader	14	Rdr12 Fault	I14 Rdr12 Fault
I14:S81	33014581	330E581	Intelligent Reader	14	Rdr13 Fault	I14 Rdr13 Fault
I14:S82	33014582	330E582	Intelligent Reader	14	Rdr14 Fault	I14 Rdr14 Fault
I14:S83	33014583	330E583	Intelligent Reader	14	Rdr15 Fault	I14 Rdr15 Fault
I14:S84	33014584	330E584	Intelligent Reader	14	Rdr16 Fault	I14 Rdr16 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I14:S85	30114585	301E585	Intelligent Reader	14	Ext AC fail	I14 Ext AC fail
I14:S86	30214586	302E586	Intelligent Reader	14	Ext Low Battery	I14 Ext Low Battery
I14:S87	30014587	300E587	Intelligent Reader	14	Ext LAN Fuse	I14 Ext LAN Fuse
I14:S88	30014588	300E588	Intelligent Reader	14	Ext Detector Fuse	I14 Ext Detector Fuse
I14:S89	30014589	300E589	Intelligent Reader	14	Ext Low Volts	I14 Ext Low Volts
I14:S90	30014590	300E590	Intelligent Reader	14	Ext PS Fail	I14 Ext PS Fail
I14:S91	30914591	309E591	Intelligent Reader	14	Ext Battery Test	I14 Ext Battery Test
I14:S92	15014592	150E592	Intelligent Reader	14	Spare2	I14 Spare2
I14:S93	15014593	150E593	Intelligent Reader	14	Spare3	I14 Spare3
I15:Z01	14015501	140F501	Intelligent Reader	15	Door1 Reed	I15 Door1 Reed
I15:Z02	14015502	140F502	Intelligent Reader	15	Door2 Reed	I15 Door2 Reed
I15:Z03	14015503	140F503	Intelligent Reader	15	Door1 Tongue	I15 Door1 Tongue
I15:Z04	14015504	140F504	Intelligent Reader	15	Door2 Tongue	I15 Door2 Tongue
I15:Z05	14015505	140F505	Intelligent Reader	15	Door1 REX	I15 Door1 REX
I15:Z06	14015506	140F506	Intelligent Reader	15	Door2 REX	I15 Door2 REX
I15:Z07	14015507	140F507	Intelligent Reader	15	Door1 REN	I15 Door1 REN
I15:Z08	14015508	140F508	Intelligent Reader	15	Door2 REN	I15 Door2 REN
I15:Z09	14015509	140F509	Intelligent Reader	15	Door3 Reed	I15 Door3 Reed
I15:Z10	14015510	140F510	Intelligent Reader	15	Door4 Reed	I15 Door4 Reed
I15:Z11	14015511	140F511	Intelligent Reader	15	Door3 Tongue	I15 Door3 Tongue
I15:Z12	14015512	140F512	Intelligent Reader	15	Door4 Tongue	I15 Door4 Tongue
I15:Z13	14015513	140F513	Intelligent Reader	15	Door3 REX	I15 Door3 REX
I15:Z14	14015514	140F514	Intelligent Reader	15	Door4 REX	I15 Door4 REX
I15:Z15	14015515	140F515	Intelligent Reader	15	Door3 REN	I15 Door3 REN
I15:Z16	14015516	140F516	Intelligent Reader	15	Door4 REN	I15 Door4 REN
I15:Z17	14015517	140F517	Intelligent Reader	15	Door5 Reed	I15 Door5 Reed
I15:Z18	14015518	140F518	Intelligent Reader	15	Door6 Reed	I15 Door6 Reed
I15:Z19	14015519	140F519	Intelligent Reader	15	Door5 Tongue	I15 Door5 Tongue
I15:Z20	14015520	140F520	Intelligent Reader	15	Door6 Tongue	I15 Door6 Tongue
I15:Z21	14015521	140F521	Intelligent Reader	15	Door5 REX	I15 Door5 REX
I15:Z22	14015522	140F522	Intelligent Reader	15	Door6 REX	I15 Door6 REX
I15:Z23	14015523	140F523	Intelligent Reader	15	Door5 REN	I15 Door5 REN
I15:Z24	14015524	140F524	Intelligent Reader	15	Door6 REN	I15 Door6 REN
I15:Z25	14015525	140F525	Intelligent Reader	15	Door7 Reed	I15 Door7 Reed
I15:Z26	14015526	140F526	Intelligent Reader	15	Door8 Reed	I15 Door8 Reed
I15:Z27	14015527	140F527	Intelligent Reader	15	Door7 Tongue	I15 Door7 Tongue
I15:Z28	14015528	140F528	Intelligent Reader	15	Door8 Tongue	I15 Door8 Tongue
I15:Z29	14015529	140F529	Intelligent Reader	15	Door7 REX	I15 Door7 REX
I15:Z30	14015530	140F530	Intelligent Reader	15	Door8 REX	I15 Door8 REX
I15:Z31	14015531	140F531	Intelligent Reader	15	Door7 REN	I15 Door7 REN
I15:Z32	14015532	140F532	Intelligent Reader	15	Door8 REN	I15 Door8 REN
I15:S01	14515501	145F501	Intelligent Reader	15	Cabinet Tamper	I15 Cabinet Tamper
I15:S02	30115502	301F502	Intelligent Reader	15	AC fail	I15 AC fail
I15:S03	30215503	302F503	Intelligent Reader	15	Low Battery	I15 Low Battery
I15:S04	30015504	300F504	Intelligent Reader	15	LAN Fuse	I15 LAN Fuse
I15:S05	30015505	300F505	Intelligent Reader	15	Detector Fuse	I15 Detector Fuse
I15:S06	30015506	300F506	Intelligent Reader	15	Low Volts	I15 Low Volts
I15:S07	30015507	300F507	Intelligent Reader	15	PS Fail	I15 PS Fail
I15:S08	30915508	309F508	Intelligent Reader	15	Battery Test	I15 Battery Test
I15:S09	33315509	333F509	Intelligent Reader	15	Unibus Fault	I15 Unibus Fault
I15:S10	30315510	303F510	Intelligent Reader	15	Download Fail	I15 Download Fail
I15:S11	15015511	150F511	Intelligent Reader	15	Spare1	I15 Spare1
I15:S12	14315512	143F512	Intelligent Reader	15	LAN Comms	I15 LAN Comms
I15:S13	43215513	432F513	Intelligent Reader	15	Door1 Fault	I15 Door1 Fault
I15:S14	43215514	432F514	Intelligent Reader	15	Door2 Fault	I15 Door2 Fault
I15:S15	43215515	432F515	Intelligent Reader	15	Door3 Fault	I15 Door3 Fault
I15:S16	43215516	432F516	Intelligent Reader	15	Door4 Fault	I15 Door4 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I15:S17	43215517	432F517	Intelligent Reader	15	Door5 Fault	I15 Door5 Fault
I15:S18	43215518	432F518	Intelligent Reader	15	Door6 Fault	I15 Door6 Fault
I15:S19	43215519	432F519	Intelligent Reader	15	Door7 Fault	I15 Door7 Fault
I15:S20	43215520	432F520	Intelligent Reader	15	Door8 Fault	I15 Door8 Fault
I15:S21	42315521	423F521	Intelligent Reader	15	Door1 Forced	I15 Door1 Forced
I15:S22	42315522	423F522	Intelligent Reader	15	Door2 Forced	I15 Door2 Forced
I15:S23	42315523	423F523	Intelligent Reader	15	Door3 Forced	I15 Door3 Forced
I15:S24	42315524	423F524	Intelligent Reader	15	Door4 Forced	I15 Door4 Forced
I15:S25	42315525	423F525	Intelligent Reader	15	Door5 Forced	I15 Door5 Forced
I15:S26	42315526	423F526	Intelligent Reader	15	Door6 Forced	I15 Door6 Forced
I15:S27	42315527	423F527	Intelligent Reader	15	Door7 Forced	I15 Door7 Forced
I15:S28	42315528	423F528	Intelligent Reader	15	Door8 Forced	I15 Door8 Forced
I15:S29	42615529	426F529	Intelligent Reader	15	Door1 DOTL	I15 Door1 DOTL
I15:S30	42615530	426F530	Intelligent Reader	15	Door2 DOTL	I15 Door2 DOTL
I15:S31	42615531	426F531	Intelligent Reader	15	Door3 DOTL	I15 Door3 DOTL
I15:S32	42615532	426F532	Intelligent Reader	15	Door4 DOTL	I15 Door4 DOTL
I15:S33	42615533	426F533	Intelligent Reader	15	Door5 DOTL	I15 Door5 DOTL
I15:S34	42615534	426F534	Intelligent Reader	15	Door6 DOTL	I15 Door6 DOTL
I15:S35	42615535	426F535	Intelligent Reader	15	Door7 DOTL	I15 Door7 DOTL
I15:S36	42615536	426F536	Intelligent Reader	15	Door8 DOTL	I15 Door8 DOTL
I15:S37	15015537	150F537	Intelligent Reader	15	Rdr1 Invalid	I15 Rdr1 Invalid
I15:S38	15015538	150F538	Intelligent Reader	15	Rdr2 Invalid	I15 Rdr2 Invalid
I15:S39	15015539	150F539	Intelligent Reader	15	Rdr3 Invalid	I15 Rdr3 Invalid
I15:S40	15015540	150F540	Intelligent Reader	15	Rdr4 Invalid	I15 Rdr4 Invalid
I15:S41	15015541	150F541	Intelligent Reader	15	Rdr5 Invalid	I15 Rdr5 Invalid
I15:S42	15015542	150F542	Intelligent Reader	15	Rdr6 Invalid	I15 Rdr6 Invalid
I15:S43	15015543	150F543	Intelligent Reader	15	Rdr7 Invalid	I15 Rdr7 Invalid
I15:S44	15015544	150F544	Intelligent Reader	15	Rdr8 Invalid	I15 Rdr8 Invalid
I15:S45	15015545	150F545	Intelligent Reader	15	Rdr9 Invalid	I15 Rdr9 Invalid
I15:S46	15015546	150F546	Intelligent Reader	15	Rdr10 Invalid	I15 Rdr10 Invalid
I15:S47	15015547	150F547	Intelligent Reader	15	Rdr11 Invalid	I15 Rdr11 Invalid
I15:S48	15015548	150F548	Intelligent Reader	15	Rdr12 Invalid	I15 Rdr12 Invalid
I15:S49	15015549	150F549	Intelligent Reader	15	Rdr13 Invalid	I15 Rdr13 Invalid
I15:S50	15015550	150F550	Intelligent Reader	15	Rdr14 Invalid	I15 Rdr14 Invalid
I15:S51	15015551	150F551	Intelligent Reader	15	Rdr15 Invalid	I15 Rdr15 Invalid
I15:S52	15015552	150F552	Intelligent Reader	15	Rdr16 Invalid	I15 Rdr16 Invalid
I15:S53	12215553	122F553	Intelligent Reader	15	Rdr1 Duress	I15 Rdr1 Duress
I15:S54	12215554	122F554	Intelligent Reader	15	Rdr2 Duress	I15 Rdr2 Duress
I15:S55	12215555	122F555	Intelligent Reader	15	Rdr3 Duress	I15 Rdr3 Duress
I15:S56	12215556	122F556	Intelligent Reader	15	Rdr4 Duress	I15 Rdr4 Duress
I15:S57	12215557	122F557	Intelligent Reader	15	Rdr5 Duress	I15 Rdr5 Duress
I15:S58	12215558	122F558	Intelligent Reader	15	Rdr6 Duress	I15 Rdr6 Duress
I15:S59	12215559	122F559	Intelligent Reader	15	Rdr7 Duress	I15 Rdr7 Duress
I15:S60	12215560	122F560	Intelligent Reader	15	Rdr8 Duress	I15 Rdr8 Duress
I15:S61	12215561	122F561	Intelligent Reader	15	Rdr9 Duress	I15 Rdr9 Duress
I15:S62	12215562	122F562	Intelligent Reader	15	Rdr10 Duress	I15 Rdr10 Duress
I15:S63	12215563	122F563	Intelligent Reader	15	Rdr11 Duress	I15 Rdr11 Duress
I15:S64	12215564	122F564	Intelligent Reader	15	Rdr12 Duress	I15 Rdr12 Duress
I15:S65	12215565	122F565	Intelligent Reader	15	Rdr13 Duress	I15 Rdr13 Duress
I15:S66	12215566	122F566	Intelligent Reader	15	Rdr14 Duress	I15 Rdr14 Duress
I15:S67	12215567	122F567	Intelligent Reader	15	Rdr15 Duress	I15 Rdr15 Duress
I15:S68	12215568	122F568	Intelligent Reader	15	Rdr16 Duress	I15 Rdr16 Duress
I15:S69	33015569	330F569	Intelligent Reader	15	Rdr1 Fault	I15 Rdr1 Fault
I15:S70	33015570	330F570	Intelligent Reader	15	Rdr2 Fault	I15 Rdr2 Fault
I15:S71	33015571	330F571	Intelligent Reader	15	Rdr3 Fault	I15 Rdr3 Fault
I15:S72	33015572	330F572	Intelligent Reader	15	Rdr4 Fault	I15 Rdr4 Fault
I15:S73	33015573	330F573	Intelligent Reader	15	Rdr5 Fault	I15 Rdr5 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I15:S74	33015574	330F574	Intelligent Reader	15	Rdr6 Fault	I15 Rdr6 Fault
I15:S75	33015575	330F575	Intelligent Reader	15	Rdr7 Fault	I15 Rdr7 Fault
I15:S76	33015576	330F576	Intelligent Reader	15	Rdr8 Fault	I15 Rdr8 Fault
I15:S77	33015577	330F577	Intelligent Reader	15	Rdr9 Fault	I15 Rdr9 Fault
I15:S78	33015578	330F578	Intelligent Reader	15	Rdr10 Fault	I15 Rdr10 Fault
I15:S79	33015579	330F579	Intelligent Reader	15	Rdr11 Fault	I15 Rdr11 Fault
I15:S80	33015580	330F580	Intelligent Reader	15	Rdr12 Fault	I15 Rdr12 Fault
I15:S81	33015581	330F581	Intelligent Reader	15	Rdr13 Fault	I15 Rdr13 Fault
I15:S82	33015582	330F582	Intelligent Reader	15	Rdr14 Fault	I15 Rdr14 Fault
I15:S83	33015583	330F583	Intelligent Reader	15	Rdr15 Fault	I15 Rdr15 Fault
I15:S84	33015584	330F584	Intelligent Reader	15	Rdr16 Fault	I15 Rdr16 Fault
I15:S85	30115585	301F585	Intelligent Reader	15	Ext AC fail	I15 Ext AC fail
I15:S86	30215586	302F586	Intelligent Reader	15	Ext Low Battery	I15 Ext Low Battery
I15:S87	30015587	300F587	Intelligent Reader	15	Ext LAN Fuse	I15 Ext LAN Fuse
I15:S88	30015588	300F588	Intelligent Reader	15	Ext Detector Fuse	I15 Ext Detector Fuse
I15:S89	30015589	300F589	Intelligent Reader	15	Ext Low Volts	I15 Ext Low Volts
I15:S90	30015590	300F590	Intelligent Reader	15	Ext PS Fail	I15 Ext PS Fail
I15:S91	30915591	309F591	Intelligent Reader	15	Ext Battery Test	I15 Ext Battery Test
I15:S92	15015592	150F592	Intelligent Reader	15	Spare2	I15 Spare2
I15:S93	15015593	150F593	Intelligent Reader	15	Spare3	I15 Spare3
I16:Z01	14016501	140G501	Intelligent Reader	16	Door1 Reed	I16 Door1 Reed
I16:Z02	14016502	140G502	Intelligent Reader	16	Door2 Reed	I16 Door2 Reed
I16:Z03	14016503	140G503	Intelligent Reader	16	Door1 Tongue	I16 Door1 Tongue
I16:Z04	14016504	140G504	Intelligent Reader	16	Door2 Tongue	I16 Door2 Tongue
I16:Z05	14016505	140G505	Intelligent Reader	16	Door1 REX	I16 Door1 REX
I16:Z06	14016506	140G506	Intelligent Reader	16	Door2 REX	I16 Door2 REX
I16:Z07	14016507	140G507	Intelligent Reader	16	Door1 REN	I16 Door1 REN
I16:Z08	14016508	140G508	Intelligent Reader	16	Door2 REN	I16 Door2 REN
I16:Z09	14016509	140G509	Intelligent Reader	16	Door3 Reed	I16 Door3 Reed
I16:Z10	14016510	140G510	Intelligent Reader	16	Door4 Reed	I16 Door4 Reed
I16:Z11	14016511	140G511	Intelligent Reader	16	Door3 Tongue	I16 Door3 Tongue
I16:Z12	14016512	140G512	Intelligent Reader	16	Door4 Tongue	I16 Door4 Tongue
I16:Z13	14016513	140G513	Intelligent Reader	16	Door3 REX	I16 Door3 REX
I16:Z14	14016514	140G514	Intelligent Reader	16	Door4 REX	I16 Door4 REX
I16:Z15	14016515	140G515	Intelligent Reader	16	Door3 REN	I16 Door3 REN
I16:Z16	14016516	140G516	Intelligent Reader	16	Door4 REN	I16 Door4 REN
I16:Z17	14016517	140G517	Intelligent Reader	16	Door5 Reed	I16 Door5 Reed
I16:Z18	14016518	140G518	Intelligent Reader	16	Door6 Reed	I16 Door6 Reed
I16:Z19	14016519	140G519	Intelligent Reader	16	Door5 Tongue	I16 Door5 Tongue
I16:Z20	14016520	140G520	Intelligent Reader	16	Door6 Tongue	I16 Door6 Tongue
I16:Z21	14016521	140G521	Intelligent Reader	16	Door5 REX	I16 Door5 REX
I16:Z22	14016522	140G522	Intelligent Reader	16	Door6 REX	I16 Door6 REX
I16:Z23	14016523	140G523	Intelligent Reader	16	Door5 REN	I16 Door5 REN
I16:Z24	14016524	140G524	Intelligent Reader	16	Door6 REN	I16 Door6 REN
I16:Z25	14016525	140G525	Intelligent Reader	16	Door7 Reed	I16 Door7 Reed
I16:Z26	14016526	140G526	Intelligent Reader	16	Door8 Reed	I16 Door8 Reed
I16:Z27	14016527	140G527	Intelligent Reader	16	Door7 Tongue	I16 Door7 Tongue
I16:Z28	14016528	140G528	Intelligent Reader	16	Door8 Tongue	I16 Door8 Tongue
I16:Z29	14016529	140G529	Intelligent Reader	16	Door7 REX	I16 Door7 REX
I16:Z30	14016530	140G530	Intelligent Reader	16	Door8 REX	I16 Door8 REX
I16:Z31	14016531	140G531	Intelligent Reader	16	Door7 REN	I16 Door7 REN
I16:Z32	14016532	140G532	Intelligent Reader	16	Door8 REN	I16 Door8 REN
I16:S01	14516501	145G501	Intelligent Reader	16	Cabinet Tamper	I16 Cabinet Tamper
I16:S02	30116502	301G502	Intelligent Reader	16	AC fail	I16 AC fail
I16:S03	30216503	302G503	Intelligent Reader	16	Low Battery	I16 Low Battery
I16:S04	30016504	300G504	Intelligent Reader	16	LAN Fuse	I16 LAN Fuse
I16:S05	30016505	300G505	Intelligent Reader	16	Detector Fuse	I16 Detector Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I16:S06	30016506	300G506	Intelligent Reader	16	Low Volts	I16 Low Volts
I16:S07	30016507	300G507	Intelligent Reader	16	PS Fail	I16 PS Fail
I16:S08	30916508	309G508	Intelligent Reader	16	Battery Test	I16 Battery Test
I16:S09	33316509	333G509	Intelligent Reader	16	Unibus Fault	I16 Unibus Fault
I16:S10	30316510	303G510	Intelligent Reader	16	Download Fail	I16 Download Fail
I16:S11	15016511	150G511	Intelligent Reader	16	Spare1	I16 Spare1
I16:S12	14316512	143G512	Intelligent Reader	16	LAN Comms	I16 LAN Comms
I16:S13	43216513	432G513	Intelligent Reader	16	Door1 Fault	I16 Door1 Fault
I16:S14	43216514	432G514	Intelligent Reader	16	Door2 Fault	I16 Door2 Fault
I16:S15	43216515	432G515	Intelligent Reader	16	Door3 Fault	I16 Door3 Fault
I16:S16	43216516	432G516	Intelligent Reader	16	Door4 Fault	I16 Door4 Fault
I16:S17	43216517	432G517	Intelligent Reader	16	Door5 Fault	I16 Door5 Fault
I16:S18	43216518	432G518	Intelligent Reader	16	Door6 Fault	I16 Door6 Fault
I16:S19	43216519	432G519	Intelligent Reader	16	Door7 Fault	I16 Door7 Fault
I16:S20	43216520	432G520	Intelligent Reader	16	Door8 Fault	I16 Door8 Fault
I16:S21	42316521	423G521	Intelligent Reader	16	Door1 Forced	I16 Door1 Forced
I16:S22	42316522	423G522	Intelligent Reader	16	Door2 Forced	I16 Door2 Forced
I16:S23	42316523	423G523	Intelligent Reader	16	Door3 Forced	I16 Door3 Forced
I16:S24	42316524	423G524	Intelligent Reader	16	Door4 Forced	I16 Door4 Forced
I16:S25	42316525	423G525	Intelligent Reader	16	Door5 Forced	I16 Door5 Forced
I16:S26	42316526	423G526	Intelligent Reader	16	Door6 Forced	I16 Door6 Forced
I16:S27	42316527	423G527	Intelligent Reader	16	Door7 Forced	I16 Door7 Forced
I16:S28	42316528	423G528	Intelligent Reader	16	Door8 Forced	I16 Door8 Forced
I16:S29	42616529	426G529	Intelligent Reader	16	Door1 DOTL	I16 Door1 DOTL
I16:S30	42616530	426G530	Intelligent Reader	16	Door2 DOTL	I16 Door2 DOTL
I16:S31	42616531	426G531	Intelligent Reader	16	Door3 DOTL	I16 Door3 DOTL
I16:S32	42616532	426G532	Intelligent Reader	16	Door4 DOTL	I16 Door4 DOTL
I16:S33	42616533	426G533	Intelligent Reader	16	Door5 DOTL	I16 Door5 DOTL
I16:S34	42616534	426G534	Intelligent Reader	16	Door6 DOTL	I16 Door6 DOTL
I16:S35	42616535	426G535	Intelligent Reader	16	Door7 DOTL	I16 Door7 DOTL
I16:S36	42616536	426G536	Intelligent Reader	16	Door8 DOTL	I16 Door8 DOTL
I16:S37	15016537	150G537	Intelligent Reader	16	Rdr1 Invalid	I16 Rdr1 Invalid
I16:S38	15016538	150G538	Intelligent Reader	16	Rdr2 Invalid	I16 Rdr2 Invalid
I16:S39	15016539	150G539	Intelligent Reader	16	Rdr3 Invalid	I16 Rdr3 Invalid
I16:S40	15016540	150G540	Intelligent Reader	16	Rdr4 Invalid	I16 Rdr4 Invalid
I16:S41	15016541	150G541	Intelligent Reader	16	Rdr5 Invalid	I16 Rdr5 Invalid
I16:S42	15016542	150G542	Intelligent Reader	16	Rdr6 Invalid	I16 Rdr6 Invalid
I16:S43	15016543	150G543	Intelligent Reader	16	Rdr7 Invalid	I16 Rdr7 Invalid
I16:S44	15016544	150G544	Intelligent Reader	16	Rdr8 Invalid	I16 Rdr8 Invalid
I16:S45	15016545	150G545	Intelligent Reader	16	Rdr9 Invalid	I16 Rdr9 Invalid
I16:S46	15016546	150G546	Intelligent Reader	16	Rdr10 Invalid	I16 Rdr10 Invalid
I16:S47	15016547	150G547	Intelligent Reader	16	Rdr11 Invalid	I16 Rdr11 Invalid
I16:S48	15016548	150G548	Intelligent Reader	16	Rdr12 Invalid	I16 Rdr12 Invalid
I16:S49	15016549	150G549	Intelligent Reader	16	Rdr13 Invalid	I16 Rdr13 Invalid
I16:S50	15016550	150G550	Intelligent Reader	16	Rdr14 Invalid	I16 Rdr14 Invalid
I16:S51	15016551	150G551	Intelligent Reader	16	Rdr15 Invalid	I16 Rdr15 Invalid
I16:S52	15016552	150G552	Intelligent Reader	16	Rdr16 Invalid	I16 Rdr16 Invalid
I16:S53	12216553	122G553	Intelligent Reader	16	Rdr1 Duress	I16 Rdr1 Duress
I16:S54	12216554	122G554	Intelligent Reader	16	Rdr2 Duress	I16 Rdr2 Duress
I16:S55	12216555	122G555	Intelligent Reader	16	Rdr3 Duress	I16 Rdr3 Duress
I16:S56	12216556	122G556	Intelligent Reader	16	Rdr4 Duress	I16 Rdr4 Duress
I16:S57	12216557	122G557	Intelligent Reader	16	Rdr5 Duress	I16 Rdr5 Duress
I16:S58	12216558	122G558	Intelligent Reader	16	Rdr6 Duress	I16 Rdr6 Duress
I16:S59	12216559	122G559	Intelligent Reader	16	Rdr7 Duress	I16 Rdr7 Duress
I16:S60	12216560	122G560	Intelligent Reader	16	Rdr8 Duress	I16 Rdr8 Duress
I16:S61	12216561	122G561	Intelligent Reader	16	Rdr9 Duress	I16 Rdr9 Duress
I16:S62	12216562	122G562	Intelligent Reader	16	Rdr10 Duress	I16 Rdr10 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I16:S63	12216563	122G563	Intelligent Reader	16	Rdr11 Duress	I16 Rdr11 Duress
I16:S64	12216564	122G564	Intelligent Reader	16	Rdr12 Duress	I16 Rdr12 Duress
I16:S65	12216565	122G565	Intelligent Reader	16	Rdr13 Duress	I16 Rdr13 Duress
I16:S66	12216566	122G566	Intelligent Reader	16	Rdr14 Duress	I16 Rdr14 Duress
I16:S67	12216567	122G567	Intelligent Reader	16	Rdr15 Duress	I16 Rdr15 Duress
I16:S68	12216568	122G568	Intelligent Reader	16	Rdr16 Duress	I16 Rdr16 Duress
I16:S69	33016569	330G569	Intelligent Reader	16	Rdr1 Fault	I16 Rdr1 Fault
I16:S70	33016570	330G570	Intelligent Reader	16	Rdr2 Fault	I16 Rdr2 Fault
I16:S71	33016571	330G571	Intelligent Reader	16	Rdr3 Fault	I16 Rdr3 Fault
I16:S72	33016572	330G572	Intelligent Reader	16	Rdr4 Fault	I16 Rdr4 Fault
I16:S73	33016573	330G573	Intelligent Reader	16	Rdr5 Fault	I16 Rdr5 Fault
I16:S74	33016574	330G574	Intelligent Reader	16	Rdr6 Fault	I16 Rdr6 Fault
I16:S75	33016575	330G575	Intelligent Reader	16	Rdr7 Fault	I16 Rdr7 Fault
I16:S76	33016576	330G576	Intelligent Reader	16	Rdr8 Fault	I16 Rdr8 Fault
I16:S77	33016577	330G577	Intelligent Reader	16	Rdr9 Fault	I16 Rdr9 Fault
I16:S78	33016578	330G578	Intelligent Reader	16	Rdr10 Fault	I16 Rdr10 Fault
I16:S79	33016579	330G579	Intelligent Reader	16	Rdr11 Fault	I16 Rdr11 Fault
I16:S80	33016580	330G580	Intelligent Reader	16	Rdr12 Fault	I16 Rdr12 Fault
I16:S81	33016581	330G581	Intelligent Reader	16	Rdr13 Fault	I16 Rdr13 Fault
I16:S82	33016582	330G582	Intelligent Reader	16	Rdr14 Fault	I16 Rdr14 Fault
I16:S83	33016583	330G583	Intelligent Reader	16	Rdr15 Fault	I16 Rdr15 Fault
I16:S84	33016584	330G584	Intelligent Reader	16	Rdr16 Fault	I16 Rdr16 Fault
I16:S85	30116585	301G585	Intelligent Reader	16	Ext AC fail	I16 Ext AC fail
I16:S86	30216586	302G586	Intelligent Reader	16	Ext Low Battery	I16 Ext Low Battery
I16:S87	30016587	300G587	Intelligent Reader	16	Ext LAN Fuse	I16 Ext LAN Fuse
I16:S88	30016588	300G588	Intelligent Reader	16	Ext Detector Fuse	I16 Ext Detector Fuse
I16:S89	30016589	300G589	Intelligent Reader	16	Ext Low Volts	I16 Ext Low Volts
I16:S90	30016590	300G590	Intelligent Reader	16	Ext PS Fail	I16 Ext PS Fail
I16:S91	30916591	309G591	Intelligent Reader	16	Ext Battery Test	I16 Ext Battery Test
I16:S92	15016592	150G592	Intelligent Reader	16	Spare2	I16 Spare2
I16:S93	15016593	150G593	Intelligent Reader	16	Spare3	I16 Spare3
I17:Z01	14017501	140H501	Intelligent Reader	17	Door1 Reed	I17 Door1 Reed
I17:Z02	14017502	140H502	Intelligent Reader	17	Door2 Reed	I17 Door2 Reed
I17:Z03	14017503	140H503	Intelligent Reader	17	Door1 Tongue	I17 Door1 Tongue
I17:Z04	14017504	140H504	Intelligent Reader	17	Door2 Tongue	I17 Door2 Tongue
I17:Z05	14017505	140H505	Intelligent Reader	17	Door1 REX	I17 Door1 REX
I17:Z06	14017506	140H506	Intelligent Reader	17	Door2 REX	I17 Door2 REX
I17:Z07	14017507	140H507	Intelligent Reader	17	Door1 REN	I17 Door1 REN
I17:Z08	14017508	140H508	Intelligent Reader	17	Door2 REN	I17 Door2 REN
I17:Z09	14017509	140H509	Intelligent Reader	17	Door3 Reed	I17 Door3 Reed
I17:Z10	14017510	140H510	Intelligent Reader	17	Door4 Reed	I17 Door4 Reed
I17:Z11	14017511	140H511	Intelligent Reader	17	Door3 Tongue	I17 Door3 Tongue
I17:Z12	14017512	140H512	Intelligent Reader	17	Door4 Tongue	I17 Door4 Tongue
I17:Z13	14017513	140H513	Intelligent Reader	17	Door3 REX	I17 Door3 REX
I17:Z14	14017514	140H514	Intelligent Reader	17	Door4 REX	I17 Door4 REX
I17:Z15	14017515	140H515	Intelligent Reader	17	Door3 REN	I17 Door3 REN
I17:Z16	14017516	140H516	Intelligent Reader	17	Door4 REN	I17 Door4 REN
I17:Z17	14017517	140H517	Intelligent Reader	17	Door5 Reed	I17 Door5 Reed
I17:Z18	14017518	140H518	Intelligent Reader	17	Door6 Reed	I17 Door6 Reed
I17:Z19	14017519	140H519	Intelligent Reader	17	Door5 Tongue	I17 Door5 Tongue
I17:Z20	14017520	140H520	Intelligent Reader	17	Door6 Tongue	I17 Door6 Tongue
I17:Z21	14017521	140H521	Intelligent Reader	17	Door5 REX	I17 Door5 REX
I17:Z22	14017522	140H522	Intelligent Reader	17	Door6 REX	I17 Door6 REX
I17:Z23	14017523	140H523	Intelligent Reader	17	Door5 REN	I17 Door5 REN
I17:Z24	14017524	140H524	Intelligent Reader	17	Door6 REN	I17 Door6 REN
I17:Z25	14017525	140H525	Intelligent Reader	17	Door7 Reed	I17 Door7 Reed
I17:Z26	14017526	140H526	Intelligent Reader	17	Door8 Reed	I17 Door8 Reed

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I17:Z27	14017527	140H527	Intelligent Reader	17	Door7 Tongue	I17 Door7 Tongue
I17:Z28	14017528	140H528	Intelligent Reader	17	Door8 Tongue	I17 Door8 Tongue
I17:Z29	14017529	140H529	Intelligent Reader	17	Door7 REX	I17 Door7 REX
I17:Z30	14017530	140H530	Intelligent Reader	17	Door8 REX	I17 Door8 REX
I17:Z31	14017531	140H531	Intelligent Reader	17	Door7 REN	I17 Door7 REN
I17:Z32	14017532	140H532	Intelligent Reader	17	Door8 REN	I17 Door8 REN
I17:S01	14517501	145H501	Intelligent Reader	17	Cabinet Tamper	I17 Cabinet Tamper
I17:S02	30117502	301H502	Intelligent Reader	17	AC fail	I17 AC fail
I17:S03	30217503	302H503	Intelligent Reader	17	Low Battery	I17 Low Battery
I17:S04	30017504	300H504	Intelligent Reader	17	LAN Fuse	I17 LAN Fuse
I17:S05	30017505	300H505	Intelligent Reader	17	Detector Fuse	I17 Detector Fuse
I17:S06	30017506	300H506	Intelligent Reader	17	Low Volts	I17 Low Volts
I17:S07	30017507	300H507	Intelligent Reader	17	PS Fail	I17 PS Fail
I17:S08	30917508	309H508	Intelligent Reader	17	Battery Test	I17 Battery Test
I17:S09	33317509	333H509	Intelligent Reader	17	Unibus Fault	I17 Unibus Fault
I17:S10	30317510	303H510	Intelligent Reader	17	Download Fail	I17 Download Fail
I17:S11	15017511	150H511	Intelligent Reader	17	Spare1	I17 Spare1
I17:S12	14317512	143H512	Intelligent Reader	17	LAN Comms	I17 LAN Comms
I17:S13	43217513	432H513	Intelligent Reader	17	Door1 Fault	I17 Door1 Fault
I17:S14	43217514	432H514	Intelligent Reader	17	Door2 Fault	I17 Door2 Fault
I17:S15	43217515	432H515	Intelligent Reader	17	Door3 Fault	I17 Door3 Fault
I17:S16	43217516	432H516	Intelligent Reader	17	Door4 Fault	I17 Door4 Fault
I17:S17	43217517	432H517	Intelligent Reader	17	Door5 Fault	I17 Door5 Fault
I17:S18	43217518	432H518	Intelligent Reader	17	Door6 Fault	I17 Door6 Fault
I17:S19	43217519	432H519	Intelligent Reader	17	Door7 Fault	I17 Door7 Fault
I17:S20	43217520	432H520	Intelligent Reader	17	Door8 Fault	I17 Door8 Fault
I17:S21	42317521	423H521	Intelligent Reader	17	Door1 Forced	I17 Door1 Forced
I17:S22	42317522	423H522	Intelligent Reader	17	Door2 Forced	I17 Door2 Forced
I17:S23	42317523	423H523	Intelligent Reader	17	Door3 Forced	I17 Door3 Forced
I17:S24	42317524	423H524	Intelligent Reader	17	Door4 Forced	I17 Door4 Forced
I17:S25	42317525	423H525	Intelligent Reader	17	Door5 Forced	I17 Door5 Forced
I17:S26	42317526	423H526	Intelligent Reader	17	Door6 Forced	I17 Door6 Forced
I17:S27	42317527	423H527	Intelligent Reader	17	Door7 Forced	I17 Door7 Forced
I17:S28	42317528	423H528	Intelligent Reader	17	Door8 Forced	I17 Door8 Forced
I17:S29	42617529	426H529	Intelligent Reader	17	Door1 DOTL	I17 Door1 DOTL
I17:S30	42617530	426H530	Intelligent Reader	17	Door2 DOTL	I17 Door2 DOTL
I17:S31	42617531	426H531	Intelligent Reader	17	Door3 DOTL	I17 Door3 DOTL
I17:S32	42617532	426H532	Intelligent Reader	17	Door4 DOTL	I17 Door4 DOTL
I17:S33	42617533	426H533	Intelligent Reader	17	Door5 DOTL	I17 Door5 DOTL
I17:S34	42617534	426H534	Intelligent Reader	17	Door6 DOTL	I17 Door6 DOTL
I17:S35	42617535	426H535	Intelligent Reader	17	Door7 DOTL	I17 Door7 DOTL
I17:S36	42617536	426H536	Intelligent Reader	17	Door8 DOTL	I17 Door8 DOTL
I17:S37	15017537	150H537	Intelligent Reader	17	Rdr1 Invalid	I17 Rdr1 Invalid
I17:S38	15017538	150H538	Intelligent Reader	17	Rdr2 Invalid	I17 Rdr2 Invalid
I17:S39	15017539	150H539	Intelligent Reader	17	Rdr3 Invalid	I17 Rdr3 Invalid
I17:S40	15017540	150H540	Intelligent Reader	17	Rdr4 Invalid	I17 Rdr4 Invalid
I17:S41	15017541	150H541	Intelligent Reader	17	Rdr5 Invalid	I17 Rdr5 Invalid
I17:S42	15017542	150H542	Intelligent Reader	17	Rdr6 Invalid	I17 Rdr6 Invalid
I17:S43	15017543	150H543	Intelligent Reader	17	Rdr7 Invalid	I17 Rdr7 Invalid
I17:S44	15017544	150H544	Intelligent Reader	17	Rdr8 Invalid	I17 Rdr8 Invalid
I17:S45	15017545	150H545	Intelligent Reader	17	Rdr9 Invalid	I17 Rdr9 Invalid
I17:S46	15017546	150H546	Intelligent Reader	17	Rdr10 Invalid	I17 Rdr10 Invalid
I17:S47	15017547	150H547	Intelligent Reader	17	Rdr11 Invalid	I17 Rdr11 Invalid
I17:S48	15017548	150H548	Intelligent Reader	17	Rdr12 Invalid	I17 Rdr12 Invalid
I17:S49	15017549	150H549	Intelligent Reader	17	Rdr13 Invalid	I17 Rdr13 Invalid
I17:S50	15017550	150H550	Intelligent Reader	17	Rdr14 Invalid	I17 Rdr14 Invalid
I17:S51	15017551	150H551	Intelligent Reader	17	Rdr15 Invalid	I17 Rdr15 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I17:S52	15017552	150H552	Intelligent Reader	17	Rdr16 Invalid	I17 Rdr16 Invalid
I17:S53	12217553	122H553	Intelligent Reader	17	Rdr1 Duress	I17 Rdr1 Duress
I17:S54	12217554	122H554	Intelligent Reader	17	Rdr2 Duress	I17 Rdr2 Duress
I17:S55	12217555	122H555	Intelligent Reader	17	Rdr3 Duress	I17 Rdr3 Duress
I17:S56	12217556	122H556	Intelligent Reader	17	Rdr4 Duress	I17 Rdr4 Duress
I17:S57	12217557	122H557	Intelligent Reader	17	Rdr5 Duress	I17 Rdr5 Duress
I17:S58	12217558	122H558	Intelligent Reader	17	Rdr6 Duress	I17 Rdr6 Duress
I17:S59	12217559	122H559	Intelligent Reader	17	Rdr7 Duress	I17 Rdr7 Duress
I17:S60	12217560	122H560	Intelligent Reader	17	Rdr8 Duress	I17 Rdr8 Duress
I17:S61	12217561	122H561	Intelligent Reader	17	Rdr9 Duress	I17 Rdr9 Duress
I17:S62	12217562	122H562	Intelligent Reader	17	Rdr10 Duress	I17 Rdr10 Duress
I17:S63	12217563	122H563	Intelligent Reader	17	Rdr11 Duress	I17 Rdr11 Duress
I17:S64	12217564	122H564	Intelligent Reader	17	Rdr12 Duress	I17 Rdr12 Duress
I17:S65	12217565	122H565	Intelligent Reader	17	Rdr13 Duress	I17 Rdr13 Duress
I17:S66	12217566	122H566	Intelligent Reader	17	Rdr14 Duress	I17 Rdr14 Duress
I17:S67	12217567	122H567	Intelligent Reader	17	Rdr15 Duress	I17 Rdr15 Duress
I17:S68	12217568	122H568	Intelligent Reader	17	Rdr16 Duress	I17 Rdr16 Duress
I17:S69	33017569	330H569	Intelligent Reader	17	Rdr1 Fault	I17 Rdr1 Fault
I17:S70	33017570	330H570	Intelligent Reader	17	Rdr2 Fault	I17 Rdr2 Fault
I17:S71	33017571	330H571	Intelligent Reader	17	Rdr3 Fault	I17 Rdr3 Fault
I17:S72	33017572	330H572	Intelligent Reader	17	Rdr4 Fault	I17 Rdr4 Fault
I17:S73	33017573	330H573	Intelligent Reader	17	Rdr5 Fault	I17 Rdr5 Fault
I17:S74	33017574	330H574	Intelligent Reader	17	Rdr6 Fault	I17 Rdr6 Fault
I17:S75	33017575	330H575	Intelligent Reader	17	Rdr7 Fault	I17 Rdr7 Fault
I17:S76	33017576	330H576	Intelligent Reader	17	Rdr8 Fault	I17 Rdr8 Fault
I17:S77	33017577	330H577	Intelligent Reader	17	Rdr9 Fault	I17 Rdr9 Fault
I17:S78	33017578	330H578	Intelligent Reader	17	Rdr10 Fault	I17 Rdr10 Fault
I17:S79	33017579	330H579	Intelligent Reader	17	Rdr11 Fault	I17 Rdr11 Fault
I17:S80	33017580	330H580	Intelligent Reader	17	Rdr12 Fault	I17 Rdr12 Fault
I17:S81	33017581	330H581	Intelligent Reader	17	Rdr13 Fault	I17 Rdr13 Fault
I17:S82	33017582	330H582	Intelligent Reader	17	Rdr14 Fault	I17 Rdr14 Fault
I17:S83	33017583	330H583	Intelligent Reader	17	Rdr15 Fault	I17 Rdr15 Fault
I17:S84	33017584	330H584	Intelligent Reader	17	Rdr16 Fault	I17 Rdr16 Fault
I17:S85	30117585	301H585	Intelligent Reader	17	Ext AC fail	I17 Ext AC fail
I17:S86	30217586	302H586	Intelligent Reader	17	Ext Low Battery	I17 Ext Low Battery
I17:S87	30017587	300H587	Intelligent Reader	17	Ext LAN Fuse	I17 Ext LAN Fuse
I17:S88	30017588	300H588	Intelligent Reader	17	Ext Detector Fuse	I17 Ext Detector Fuse
I17:S89	30017589	300H589	Intelligent Reader	17	Ext Low Volts	I17 Ext Low Volts
I17:S90	30017590	300H590	Intelligent Reader	17	Ext PS Fail	I17 Ext PS Fail
I17:S91	30917591	309H591	Intelligent Reader	17	Ext Battery Test	I17 Ext Battery Test
I17:S92	15017592	150H592	Intelligent Reader	17	Spare2	I17 Spare2
I17:S93	15017593	150H593	Intelligent Reader	17	Spare3	I17 Spare3
I18:Z01	14018501	140I501	Intelligent Reader	18	Door1 Reed	I18 Door1 Reed
I18:Z02	14018502	140I502	Intelligent Reader	18	Door2 Reed	I18 Door2 Reed
I18:Z03	14018503	140I503	Intelligent Reader	18	Door1 Tongue	I18 Door1 Tongue
I18:Z04	14018504	140I504	Intelligent Reader	18	Door2 Tongue	I18 Door2 Tongue
I18:Z05	14018505	140I505	Intelligent Reader	18	Door1 REX	I18 Door1 REX
I18:Z06	14018506	140I506	Intelligent Reader	18	Door2 REX	I18 Door2 REX
I18:Z07	14018507	140I507	Intelligent Reader	18	Door1 REN	I18 Door1 REN
I18:Z08	14018508	140I508	Intelligent Reader	18	Door2 REN	I18 Door2 REN
I18:Z09	14018509	140I509	Intelligent Reader	18	Door3 Reed	I18 Door3 Reed
I18:Z10	14018510	140I510	Intelligent Reader	18	Door4 Reed	I18 Door4 Reed
I18:Z11	14018511	140I511	Intelligent Reader	18	Door3 Tongue	I18 Door3 Tongue
I18:Z12	14018512	140I512	Intelligent Reader	18	Door4 Tongue	I18 Door4 Tongue
I18:Z13	14018513	140I513	Intelligent Reader	18	Door3 REX	I18 Door3 REX
I18:Z14	14018514	140I514	Intelligent Reader	18	Door4 REX	I18 Door4 REX
I18:Z15	14018515	140I515	Intelligent Reader	18	Door3 REN	I18 Door3 REN

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I18:Z16	14018516	140I516	Intelligent Reader	18	Door4 REN	I18 Door4 REN
I18:Z17	14018517	140I517	Intelligent Reader	18	Door5 Reed	I18 Door5 Reed
I18:Z18	14018518	140I518	Intelligent Reader	18	Door6 Reed	I18 Door6 Reed
I18:Z19	14018519	140I519	Intelligent Reader	18	Door5 Tongue	I18 Door5 Tongue
I18:Z20	14018520	140I520	Intelligent Reader	18	Door6 Tongue	I18 Door6 Tongue
I18:Z21	14018521	140I521	Intelligent Reader	18	Door5 REX	I18 Door5 REX
I18:Z22	14018522	140I522	Intelligent Reader	18	Door6 REX	I18 Door6 REX
I18:Z23	14018523	140I523	Intelligent Reader	18	Door5 REN	I18 Door5 REN
I18:Z24	14018524	140I524	Intelligent Reader	18	Door6 REN	I18 Door6 REN
I18:Z25	14018525	140I525	Intelligent Reader	18	Door7 Reed	I18 Door7 Reed
I18:Z26	14018526	140I526	Intelligent Reader	18	Door8 Reed	I18 Door8 Reed
I18:Z27	14018527	140I527	Intelligent Reader	18	Door7 Tongue	I18 Door7 Tongue
I18:Z28	14018528	140I528	Intelligent Reader	18	Door8 Tongue	I18 Door8 Tongue
I18:Z29	14018529	140I529	Intelligent Reader	18	Door7 REX	I18 Door7 REX
I18:Z30	14018530	140I530	Intelligent Reader	18	Door8 REX	I18 Door8 REX
I18:Z31	14018531	140I531	Intelligent Reader	18	Door7 REN	I18 Door7 REN
I18:Z32	14018532	140I532	Intelligent Reader	18	Door8 REN	I18 Door8 REN
I18:S01	14518501	145I501	Intelligent Reader	18	Cabinet Tamper	I18 Cabinet Tamper
I18:S02	30118502	301I502	Intelligent Reader	18	AC fail	I18 AC fail
I18:S03	30218503	302I503	Intelligent Reader	18	Low Battery	I18 Low Battery
I18:S04	30018504	300I504	Intelligent Reader	18	LAN Fuse	I18 LAN Fuse
I18:S05	30018505	300I505	Intelligent Reader	18	Detector Fuse	I18 Detector Fuse
I18:S06	30018506	300I506	Intelligent Reader	18	Low Volts	I18 Low Volts
I18:S07	30018507	300I507	Intelligent Reader	18	PS Fail	I18 PS Fail
I18:S08	30918508	309I508	Intelligent Reader	18	Battery Test	I18 Battery Test
I18:S09	33318509	333I509	Intelligent Reader	18	Unibus Fault	I18 Unibus Fault
I18:S10	30318510	303I510	Intelligent Reader	18	Download Fail	I18 Download Fail
I18:S11	15018511	150I511	Intelligent Reader	18	Spare1	I18 Spare1
I18:S12	14318512	143I512	Intelligent Reader	18	LAN Comms	I18 LAN Comms
I18:S13	43218513	432I513	Intelligent Reader	18	Door1 Fault	I18 Door1 Fault
I18:S14	43218514	432I514	Intelligent Reader	18	Door2 Fault	I18 Door2 Fault
I18:S15	43218515	432I515	Intelligent Reader	18	Door3 Fault	I18 Door3 Fault
I18:S16	43218516	432I516	Intelligent Reader	18	Door4 Fault	I18 Door4 Fault
I18:S17	43218517	432I517	Intelligent Reader	18	Door5 Fault	I18 Door5 Fault
I18:S18	43218518	432I518	Intelligent Reader	18	Door6 Fault	I18 Door6 Fault
I18:S19	43218519	432I519	Intelligent Reader	18	Door7 Fault	I18 Door7 Fault
I18:S20	43218520	432I520	Intelligent Reader	18	Door8 Fault	I18 Door8 Fault
I18:S21	42318521	423I521	Intelligent Reader	18	Door1 Forced	I18 Door1 Forced
I18:S22	42318522	423I522	Intelligent Reader	18	Door2 Forced	I18 Door2 Forced
I18:S23	42318523	423I523	Intelligent Reader	18	Door3 Forced	I18 Door3 Forced
I18:S24	42318524	423I524	Intelligent Reader	18	Door4 Forced	I18 Door4 Forced
I18:S25	42318525	423I525	Intelligent Reader	18	Door5 Forced	I18 Door5 Forced
I18:S26	42318526	423I526	Intelligent Reader	18	Door6 Forced	I18 Door6 Forced
I18:S27	42318527	423I527	Intelligent Reader	18	Door7 Forced	I18 Door7 Forced
I18:S28	42318528	423I528	Intelligent Reader	18	Door8 Forced	I18 Door8 Forced
I18:S29	42618529	426I529	Intelligent Reader	18	Door1 DOTL	I18 Door1 DOTL
I18:S30	42618530	426I530	Intelligent Reader	18	Door2 DOTL	I18 Door2 DOTL
I18:S31	42618531	426I531	Intelligent Reader	18	Door3 DOTL	I18 Door3 DOTL
I18:S32	42618532	426I532	Intelligent Reader	18	Door4 DOTL	I18 Door4 DOTL
I18:S33	42618533	426I533	Intelligent Reader	18	Door5 DOTL	I18 Door5 DOTL
I18:S34	42618534	426I534	Intelligent Reader	18	Door6 DOTL	I18 Door6 DOTL
I18:S35	42618535	426I535	Intelligent Reader	18	Door7 DOTL	I18 Door7 DOTL
I18:S36	42618536	426I536	Intelligent Reader	18	Door8 DOTL	I18 Door8 DOTL
I18:S37	15018537	150I537	Intelligent Reader	18	Rdr1 Invalid	I18 Rdr1 Invalid
I18:S38	15018538	150I538	Intelligent Reader	18	Rdr2 Invalid	I18 Rdr2 Invalid
I18:S39	15018539	150I539	Intelligent Reader	18	Rdr3 Invalid	I18 Rdr3 Invalid
I18:S40	15018540	150I540	Intelligent Reader	18	Rdr4 Invalid	I18 Rdr4 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I18:S41	15018541	150I541	Intelligent Reader	18	Rdr5 Invalid	I18 Rdr5 Invalid
I18:S42	15018542	150I542	Intelligent Reader	18	Rdr6 Invalid	I18 Rdr6 Invalid
I18:S43	15018543	150I543	Intelligent Reader	18	Rdr7 Invalid	I18 Rdr7 Invalid
I18:S44	15018544	150I544	Intelligent Reader	18	Rdr8 Invalid	I18 Rdr8 Invalid
I18:S45	15018545	150I545	Intelligent Reader	18	Rdr9 Invalid	I18 Rdr9 Invalid
I18:S46	15018546	150I546	Intelligent Reader	18	Rdr10 Invalid	I18 Rdr10 Invalid
I18:S47	15018547	150I547	Intelligent Reader	18	Rdr11 Invalid	I18 Rdr11 Invalid
I18:S48	15018548	150I548	Intelligent Reader	18	Rdr12 Invalid	I18 Rdr12 Invalid
I18:S49	15018549	150I549	Intelligent Reader	18	Rdr13 Invalid	I18 Rdr13 Invalid
I18:S50	15018550	150I550	Intelligent Reader	18	Rdr14 Invalid	I18 Rdr14 Invalid
I18:S51	15018551	150I551	Intelligent Reader	18	Rdr15 Invalid	I18 Rdr15 Invalid
I18:S52	15018552	150I552	Intelligent Reader	18	Rdr16 Invalid	I18 Rdr16 Invalid
I18:S53	12218553	122I553	Intelligent Reader	18	Rdr1 Duress	I18 Rdr1 Duress
I18:S54	12218554	122I554	Intelligent Reader	18	Rdr2 Duress	I18 Rdr2 Duress
I18:S55	12218555	122I555	Intelligent Reader	18	Rdr3 Duress	I18 Rdr3 Duress
I18:S56	12218556	122I556	Intelligent Reader	18	Rdr4 Duress	I18 Rdr4 Duress
I18:S57	12218557	122I557	Intelligent Reader	18	Rdr5 Duress	I18 Rdr5 Duress
I18:S58	12218558	122I558	Intelligent Reader	18	Rdr6 Duress	I18 Rdr6 Duress
I18:S59	12218559	122I559	Intelligent Reader	18	Rdr7 Duress	I18 Rdr7 Duress
I18:S60	12218560	122I560	Intelligent Reader	18	Rdr8 Duress	I18 Rdr8 Duress
I18:S61	12218561	122I561	Intelligent Reader	18	Rdr9 Duress	I18 Rdr9 Duress
I18:S62	12218562	122I562	Intelligent Reader	18	Rdr10 Duress	I18 Rdr10 Duress
I18:S63	12218563	122I563	Intelligent Reader	18	Rdr11 Duress	I18 Rdr11 Duress
I18:S64	12218564	122I564	Intelligent Reader	18	Rdr12 Duress	I18 Rdr12 Duress
I18:S65	12218565	122I565	Intelligent Reader	18	Rdr13 Duress	I18 Rdr13 Duress
I18:S66	12218566	122I566	Intelligent Reader	18	Rdr14 Duress	I18 Rdr14 Duress
I18:S67	12218567	122I567	Intelligent Reader	18	Rdr15 Duress	I18 Rdr15 Duress
I18:S68	12218568	122I568	Intelligent Reader	18	Rdr16 Duress	I18 Rdr16 Duress
I18:S69	33018569	330I569	Intelligent Reader	18	Rdr1 Fault	I18 Rdr1 Fault
I18:S70	33018570	330I570	Intelligent Reader	18	Rdr2 Fault	I18 Rdr2 Fault
I18:S71	33018571	330I571	Intelligent Reader	18	Rdr3 Fault	I18 Rdr3 Fault
I18:S72	33018572	330I572	Intelligent Reader	18	Rdr4 Fault	I18 Rdr4 Fault
I18:S73	33018573	330I573	Intelligent Reader	18	Rdr5 Fault	I18 Rdr5 Fault
I18:S74	33018574	330I574	Intelligent Reader	18	Rdr6 Fault	I18 Rdr6 Fault
I18:S75	33018575	330I575	Intelligent Reader	18	Rdr7 Fault	I18 Rdr7 Fault
I18:S76	33018576	330I576	Intelligent Reader	18	Rdr8 Fault	I18 Rdr8 Fault
I18:S77	33018577	330I577	Intelligent Reader	18	Rdr9 Fault	I18 Rdr9 Fault
I18:S78	33018578	330I578	Intelligent Reader	18	Rdr10 Fault	I18 Rdr10 Fault
I18:S79	33018579	330I579	Intelligent Reader	18	Rdr11 Fault	I18 Rdr11 Fault
I18:S80	33018580	330I580	Intelligent Reader	18	Rdr12 Fault	I18 Rdr12 Fault
I18:S81	33018581	330I581	Intelligent Reader	18	Rdr13 Fault	I18 Rdr13 Fault
I18:S82	33018582	330I582	Intelligent Reader	18	Rdr14 Fault	I18 Rdr14 Fault
I18:S83	33018583	330I583	Intelligent Reader	18	Rdr15 Fault	I18 Rdr15 Fault
I18:S84	33018584	330I584	Intelligent Reader	18	Rdr16 Fault	I18 Rdr16 Fault
I18:S85	30118585	301I585	Intelligent Reader	18	Ext AC fail	I18 Ext AC fail
I18:S86	30218586	302I586	Intelligent Reader	18	Ext Low Battery	I18 Ext Low Battery
I18:S87	30018587	300I587	Intelligent Reader	18	Ext LAN Fuse	I18 Ext LAN Fuse
I18:S88	30018588	300I588	Intelligent Reader	18	Ext Detector Fuse	I18 Ext Detector Fuse
I18:S89	30018589	300I589	Intelligent Reader	18	Ext Low Volts	I18 Ext Low Volts
I18:S90	30018590	300I590	Intelligent Reader	18	Ext PS Fail	I18 Ext PS Fail
I18:S91	30918591	309I591	Intelligent Reader	18	Ext Battery Test	I18 Ext Battery Test
I18:S92	15018592	150I592	Intelligent Reader	18	Spare2	I18 Spare2
I18:S93	15018593	150I593	Intelligent Reader	18	Spare3	I18 Spare3
I19:Z01	14019501	140I501	Intelligent Reader	19	Door1 Reed	I19 Door1 Reed
I19:Z02	14019502	140I502	Intelligent Reader	19	Door2 Reed	I19 Door2 Reed
I19:Z03	14019503	140I503	Intelligent Reader	19	Door1 Tongue	I19 Door1 Tongue
I19:Z04	14019504	140I504	Intelligent Reader	19	Door2 Tongue	I19 Door2 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I19:Z05	14019505	140J505	Intelligent Reader	19	Door1 REX	I19 Door1 REX
I19:Z06	14019506	140J506	Intelligent Reader	19	Door2 REX	I19 Door2 REX
I19:Z07	14019507	140J507	Intelligent Reader	19	Door1 REN	I19 Door1 REN
I19:Z08	14019508	140J508	Intelligent Reader	19	Door2 REN	I19 Door2 REN
I19:Z09	14019509	140J509	Intelligent Reader	19	Door3 Reed	I19 Door3 Reed
I19:Z10	14019510	140J510	Intelligent Reader	19	Door4 Reed	I19 Door4 Reed
I19:Z11	14019511	140J511	Intelligent Reader	19	Door3 Tongue	I19 Door3 Tongue
I19:Z12	14019512	140J512	Intelligent Reader	19	Door4 Tongue	I19 Door4 Tongue
I19:Z13	14019513	140J513	Intelligent Reader	19	Door3 REX	I19 Door3 REX
I19:Z14	14019514	140J514	Intelligent Reader	19	Door4 REX	I19 Door4 REX
I19:Z15	14019515	140J515	Intelligent Reader	19	Door3 REN	I19 Door3 REN
I19:Z16	14019516	140J516	Intelligent Reader	19	Door4 REN	I19 Door4 REN
I19:Z17	14019517	140J517	Intelligent Reader	19	Door5 Reed	I19 Door5 Reed
I19:Z18	14019518	140J518	Intelligent Reader	19	Door6 Reed	I19 Door6 Reed
I19:Z19	14019519	140J519	Intelligent Reader	19	Door5 Tongue	I19 Door5 Tongue
I19:Z20	14019520	140J520	Intelligent Reader	19	Door6 Tongue	I19 Door6 Tongue
I19:Z21	14019521	140J521	Intelligent Reader	19	Door5 REX	I19 Door5 REX
I19:Z22	14019522	140J522	Intelligent Reader	19	Door6 REX	I19 Door6 REX
I19:Z23	14019523	140J523	Intelligent Reader	19	Door5 REN	I19 Door5 REN
I19:Z24	14019524	140J524	Intelligent Reader	19	Door6 REN	I19 Door6 REN
I19:Z25	14019525	140J525	Intelligent Reader	19	Door7 Reed	I19 Door7 Reed
I19:Z26	14019526	140J526	Intelligent Reader	19	Door8 Reed	I19 Door8 Reed
I19:Z27	14019527	140J527	Intelligent Reader	19	Door7 Tongue	I19 Door7 Tongue
I19:Z28	14019528	140J528	Intelligent Reader	19	Door8 Tongue	I19 Door8 Tongue
I19:Z29	14019529	140J529	Intelligent Reader	19	Door7 REX	I19 Door7 REX
I19:Z30	14019530	140J530	Intelligent Reader	19	Door8 REX	I19 Door8 REX
I19:Z31	14019531	140J531	Intelligent Reader	19	Door7 REN	I19 Door7 REN
I19:Z32	14019532	140J532	Intelligent Reader	19	Door8 REN	I19 Door8 REN
I19:S01	14519501	145J501	Intelligent Reader	19	Cabinet Tamper	I19 Cabinet Tamper
I19:S02	30119502	301J502	Intelligent Reader	19	AC fail	I19 AC fail
I19:S03	30219503	302J503	Intelligent Reader	19	Low Battery	I19 Low Battery
I19:S04	30019504	300J504	Intelligent Reader	19	LAN Fuse	I19 LAN Fuse
I19:S05	30019505	300J505	Intelligent Reader	19	Detector Fuse	I19 Detector Fuse
I19:S06	30019506	300J506	Intelligent Reader	19	Low Volts	I19 Low Volts
I19:S07	30019507	300J507	Intelligent Reader	19	PS Fail	I19 PS Fail
I19:S08	30919508	309J508	Intelligent Reader	19	Battery Test	I19 Battery Test
I19:S09	33319509	333J509	Intelligent Reader	19	Unibus Fault	I19 Unibus Fault
I19:S10	30319510	303J510	Intelligent Reader	19	Download Fail	I19 Download Fail
I19:S11	15019511	150J511	Intelligent Reader	19	Spare1	I19 Spare1
I19:S12	14319512	143J512	Intelligent Reader	19	LAN Comms	I19 LAN Comms
I19:S13	43219513	432J513	Intelligent Reader	19	Door1 Fault	I19 Door1 Fault
I19:S14	43219514	432J514	Intelligent Reader	19	Door2 Fault	I19 Door2 Fault
I19:S15	43219515	432J515	Intelligent Reader	19	Door3 Fault	I19 Door3 Fault
I19:S16	43219516	432J516	Intelligent Reader	19	Door4 Fault	I19 Door4 Fault
I19:S17	43219517	432J517	Intelligent Reader	19	Door5 Fault	I19 Door5 Fault
I19:S18	43219518	432J518	Intelligent Reader	19	Door6 Fault	I19 Door6 Fault
I19:S19	43219519	432J519	Intelligent Reader	19	Door7 Fault	I19 Door7 Fault
I19:S20	43219520	432J520	Intelligent Reader	19	Door8 Fault	I19 Door8 Fault
I19:S21	42319521	423J521	Intelligent Reader	19	Door1 Forced	I19 Door1 Forced
I19:S22	42319522	423J522	Intelligent Reader	19	Door2 Forced	I19 Door2 Forced
I19:S23	42319523	423J523	Intelligent Reader	19	Door3 Forced	I19 Door3 Forced
I19:S24	42319524	423J524	Intelligent Reader	19	Door4 Forced	I19 Door4 Forced
I19:S25	42319525	423J525	Intelligent Reader	19	Door5 Forced	I19 Door5 Forced
I19:S26	42319526	423J526	Intelligent Reader	19	Door6 Forced	I19 Door6 Forced
I19:S27	42319527	423J527	Intelligent Reader	19	Door7 Forced	I19 Door7 Forced
I19:S28	42319528	423J528	Intelligent Reader	19	Door8 Forced	I19 Door8 Forced
I19:S29	42619529	426J529	Intelligent Reader	19	Door1 DOTL	I19 Door1 DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module	No.	Input Description	Combined Module ID and Input Description
			Type			
I19:S30	42619530	426J530	Intelligent Reader	19	Door2 DOTL	I19 Door2 DOTL
I19:S31	42619531	426J531	Intelligent Reader	19	Door3 DOTL	I19 Door3 DOTL
I19:S32	42619532	426J532	Intelligent Reader	19	Door4 DOTL	I19 Door4 DOTL
I19:S33	42619533	426J533	Intelligent Reader	19	Door5 DOTL	I19 Door5 DOTL
I19:S34	42619534	426J534	Intelligent Reader	19	Door6 DOTL	I19 Door6 DOTL
I19:S35	42619535	426J535	Intelligent Reader	19	Door7 DOTL	I19 Door7 DOTL
I19:S36	42619536	426J536	Intelligent Reader	19	Door8 DOTL	I19 Door8 DOTL
I19:S37	15019537	150J537	Intelligent Reader	19	Rdr1 Invalid	I19 Rdr1 Invalid
I19:S38	15019538	150J538	Intelligent Reader	19	Rdr2 Invalid	I19 Rdr2 Invalid
I19:S39	15019539	150J539	Intelligent Reader	19	Rdr3 Invalid	I19 Rdr3 Invalid
I19:S40	15019540	150J540	Intelligent Reader	19	Rdr4 Invalid	I19 Rdr4 Invalid
I19:S41	15019541	150J541	Intelligent Reader	19	Rdr5 Invalid	I19 Rdr5 Invalid
I19:S42	15019542	150J542	Intelligent Reader	19	Rdr6 Invalid	I19 Rdr6 Invalid
I19:S43	15019543	150J543	Intelligent Reader	19	Rdr7 Invalid	I19 Rdr7 Invalid
I19:S44	15019544	150J544	Intelligent Reader	19	Rdr8 Invalid	I19 Rdr8 Invalid
I19:S45	15019545	150J545	Intelligent Reader	19	Rdr9 Invalid	I19 Rdr9 Invalid
I19:S46	15019546	150J546	Intelligent Reader	19	Rdr10 Invalid	I19 Rdr10 Invalid
I19:S47	15019547	150J547	Intelligent Reader	19	Rdr11 Invalid	I19 Rdr11 Invalid
I19:S48	15019548	150J548	Intelligent Reader	19	Rdr12 Invalid	I19 Rdr12 Invalid
I19:S49	15019549	150J549	Intelligent Reader	19	Rdr13 Invalid	I19 Rdr13 Invalid
I19:S50	15019550	150J550	Intelligent Reader	19	Rdr14 Invalid	I19 Rdr14 Invalid
I19:S51	15019551	150J551	Intelligent Reader	19	Rdr15 Invalid	I19 Rdr15 Invalid
I19:S52	15019552	150J552	Intelligent Reader	19	Rdr16 Invalid	I19 Rdr16 Invalid
I19:S53	12219553	122J553	Intelligent Reader	19	Rdr1 Duress	I19 Rdr1 Duress
I19:S54	12219554	122J554	Intelligent Reader	19	Rdr2 Duress	I19 Rdr2 Duress
I19:S55	12219555	122J555	Intelligent Reader	19	Rdr3 Duress	I19 Rdr3 Duress
I19:S56	12219556	122J556	Intelligent Reader	19	Rdr4 Duress	I19 Rdr4 Duress
I19:S57	12219557	122J557	Intelligent Reader	19	Rdr5 Duress	I19 Rdr5 Duress
I19:S58	12219558	122J558	Intelligent Reader	19	Rdr6 Duress	I19 Rdr6 Duress
I19:S59	12219559	122J559	Intelligent Reader	19	Rdr7 Duress	I19 Rdr7 Duress
I19:S60	12219560	122J560	Intelligent Reader	19	Rdr8 Duress	I19 Rdr8 Duress
I19:S61	12219561	122J561	Intelligent Reader	19	Rdr9 Duress	I19 Rdr9 Duress
I19:S62	12219562	122J562	Intelligent Reader	19	Rdr10 Duress	I19 Rdr10 Duress
I19:S63	12219563	122J563	Intelligent Reader	19	Rdr11 Duress	I19 Rdr11 Duress
I19:S64	12219564	122J564	Intelligent Reader	19	Rdr12 Duress	I19 Rdr12 Duress
I19:S65	12219565	122J565	Intelligent Reader	19	Rdr13 Duress	I19 Rdr13 Duress
I19:S66	12219566	122J566	Intelligent Reader	19	Rdr14 Duress	I19 Rdr14 Duress
I19:S67	12219567	122J567	Intelligent Reader	19	Rdr15 Duress	I19 Rdr15 Duress
I19:S68	12219568	122J568	Intelligent Reader	19	Rdr16 Duress	I19 Rdr16 Duress
I19:S69	33019569	330J569	Intelligent Reader	19	Rdr1 Fault	I19 Rdr1 Fault
I19:S70	33019570	330J570	Intelligent Reader	19	Rdr2 Fault	I19 Rdr2 Fault
I19:S71	33019571	330J571	Intelligent Reader	19	Rdr3 Fault	I19 Rdr3 Fault
I19:S72	33019572	330J572	Intelligent Reader	19	Rdr4 Fault	I19 Rdr4 Fault
I19:S73	33019573	330J573	Intelligent Reader	19	Rdr5 Fault	I19 Rdr5 Fault
I19:S74	33019574	330J574	Intelligent Reader	19	Rdr6 Fault	I19 Rdr6 Fault
I19:S75	33019575	330J575	Intelligent Reader	19	Rdr7 Fault	I19 Rdr7 Fault
I19:S76	33019576	330J576	Intelligent Reader	19	Rdr8 Fault	I19 Rdr8 Fault
I19:S77	33019577	330J577	Intelligent Reader	19	Rdr9 Fault	I19 Rdr9 Fault
I19:S78	33019578	330J578	Intelligent Reader	19	Rdr10 Fault	I19 Rdr10 Fault
I19:S79	33019579	330J579	Intelligent Reader	19	Rdr11 Fault	I19 Rdr11 Fault
I19:S80	33019580	330J580	Intelligent Reader	19	Rdr12 Fault	I19 Rdr12 Fault
I19:S81	33019581	330J581	Intelligent Reader	19	Rdr13 Fault	I19 Rdr13 Fault
I19:S82	33019582	330J582	Intelligent Reader	19	Rdr14 Fault	I19 Rdr14 Fault
I19:S83	33019583	330J583	Intelligent Reader	19	Rdr15 Fault	I19 Rdr15 Fault
I19:S84	33019584	330J584	Intelligent Reader	19	Rdr16 Fault	I19 Rdr16 Fault
I19:S85	30119585	301J585	Intelligent Reader	19	Ext AC fail	I19 Ext AC fail
I19:S86	30219586	302J586	Intelligent Reader	19	Ext Low Battery	I19 Ext Low Battery

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I19:S87	30019587	300J587	Intelligent Reader	19	Ext LAN Fuse	I19 Ext LAN Fuse
I19:S88	30019588	300J588	Intelligent Reader	19	Ext Detector Fuse	I19 Ext Detector Fuse
I19:S89	30019589	300J589	Intelligent Reader	19	Ext Low Volts	I19 Ext Low Volts
I19:S90	30019590	300J590	Intelligent Reader	19	Ext PS Fail	I19 Ext PS Fail
I19:S91	30919591	309J591	Intelligent Reader	19	Ext Battery Test	I19 Ext Battery Test
I19:S92	15019592	150J592	Intelligent Reader	19	Spare2	I19 Spare2
I19:S93	15019593	150J593	Intelligent Reader	19	Spare3	I19 Spare3
I20:Z01	14020501	140K501	Intelligent Reader	20	Door1 Reed	I20 Door1 Reed
I20:Z02	14020502	140K502	Intelligent Reader	20	Door2 Reed	I20 Door2 Reed
I20:Z03	14020503	140K503	Intelligent Reader	20	Door1 Tongue	I20 Door1 Tongue
I20:Z04	14020504	140K504	Intelligent Reader	20	Door2 Tongue	I20 Door2 Tongue
I20:Z05	14020505	140K505	Intelligent Reader	20	Door1 REX	I20 Door1 REX
I20:Z06	14020506	140K506	Intelligent Reader	20	Door2 REX	I20 Door2 REX
I20:Z07	14020507	140K507	Intelligent Reader	20	Door1 REN	I20 Door1 REN
I20:Z08	14020508	140K508	Intelligent Reader	20	Door2 REN	I20 Door2 REN
I20:Z09	14020509	140K509	Intelligent Reader	20	Door3 Reed	I20 Door3 Reed
I20:Z10	14020510	140K510	Intelligent Reader	20	Door4 Reed	I20 Door4 Reed
I20:Z11	14020511	140K511	Intelligent Reader	20	Door3 Tongue	I20 Door3 Tongue
I20:Z12	14020512	140K512	Intelligent Reader	20	Door4 Tongue	I20 Door4 Tongue
I20:Z13	14020513	140K513	Intelligent Reader	20	Door3 REX	I20 Door3 REX
I20:Z14	14020514	140K514	Intelligent Reader	20	Door4 REX	I20 Door4 REX
I20:Z15	14020515	140K515	Intelligent Reader	20	Door3 REN	I20 Door3 REN
I20:Z16	14020516	140K516	Intelligent Reader	20	Door4 REN	I20 Door4 REN
I20:Z17	14020517	140K517	Intelligent Reader	20	Door5 Reed	I20 Door5 Reed
I20:Z18	14020518	140K518	Intelligent Reader	20	Door6 Reed	I20 Door6 Reed
I20:Z19	14020519	140K519	Intelligent Reader	20	Door5 Tongue	I20 Door5 Tongue
I20:Z20	14020520	140K520	Intelligent Reader	20	Door6 Tongue	I20 Door6 Tongue
I20:Z21	14020521	140K521	Intelligent Reader	20	Door5 REX	I20 Door5 REX
I20:Z22	14020522	140K522	Intelligent Reader	20	Door6 REX	I20 Door6 REX
I20:Z23	14020523	140K523	Intelligent Reader	20	Door5 REN	I20 Door5 REN
I20:Z24	14020524	140K524	Intelligent Reader	20	Door6 REN	I20 Door6 REN
I20:Z25	14020525	140K525	Intelligent Reader	20	Door7 Reed	I20 Door7 Reed
I20:Z26	14020526	140K526	Intelligent Reader	20	Door8 Reed	I20 Door8 Reed
I20:Z27	14020527	140K527	Intelligent Reader	20	Door7 Tongue	I20 Door7 Tongue
I20:Z28	14020528	140K528	Intelligent Reader	20	Door8 Tongue	I20 Door8 Tongue
I20:Z29	14020529	140K529	Intelligent Reader	20	Door7 REX	I20 Door7 REX
I20:Z30	14020530	140K530	Intelligent Reader	20	Door8 REX	I20 Door8 REX
I20:Z31	14020531	140K531	Intelligent Reader	20	Door7 REN	I20 Door7 REN
I20:Z32	14020532	140K532	Intelligent Reader	20	Door8 REN	I20 Door8 REN
I20:S01	14520501	145K501	Intelligent Reader	20	Cabinet Tamper	I20 Cabinet Tamper
I20:S02	30120502	301K502	Intelligent Reader	20	AC fail	I20 AC fail
I20:S03	30220503	302K503	Intelligent Reader	20	Low Battery	I20 Low Battery
I20:S04	30020504	300K504	Intelligent Reader	20	LAN Fuse	I20 LAN Fuse
I20:S05	30020505	300K505	Intelligent Reader	20	Detector Fuse	I20 Detector Fuse
I20:S06	30020506	300K506	Intelligent Reader	20	Low Volts	I20 Low Volts
I20:S07	30020507	300K507	Intelligent Reader	20	PS Fail	I20 PS Fail
I20:S08	30920508	309K508	Intelligent Reader	20	Battery Test	I20 Battery Test
I20:S09	33320509	333K509	Intelligent Reader	20	Unibus Fault	I20 Unibus Fault
I20:S10	30320510	303K510	Intelligent Reader	20	Download Fail	I20 Download Fail
I20:S11	15020511	150K511	Intelligent Reader	20	Spare1	I20 Spare1
I20:S12	14320512	143K512	Intelligent Reader	20	LAN Comms	I20 LAN Comms
I20:S13	43220513	432K513	Intelligent Reader	20	Door1 Fault	I20 Door1 Fault
I20:S14	43220514	432K514	Intelligent Reader	20	Door2 Fault	I20 Door2 Fault
I20:S15	43220515	432K515	Intelligent Reader	20	Door3 Fault	I20 Door3 Fault
I20:S16	43220516	432K516	Intelligent Reader	20	Door4 Fault	I20 Door4 Fault
I20:S17	43220517	432K517	Intelligent Reader	20	Door5 Fault	I20 Door5 Fault
I20:S18	43220518	432K518	Intelligent Reader	20	Door6 Fault	I20 Door6 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I20:S19	43220519	432K519	Intelligent Reader	20	Door7 Fault	I20 Door7 Fault
I20:S20	43220520	432K520	Intelligent Reader	20	Door8 Fault	I20 Door8 Fault
I20:S21	42320521	423K521	Intelligent Reader	20	Door1 Forced	I20 Door1 Forced
I20:S22	42320522	423K522	Intelligent Reader	20	Door2 Forced	I20 Door2 Forced
I20:S23	42320523	423K523	Intelligent Reader	20	Door3 Forced	I20 Door3 Forced
I20:S24	42320524	423K524	Intelligent Reader	20	Door4 Forced	I20 Door4 Forced
I20:S25	42320525	423K525	Intelligent Reader	20	Door5 Forced	I20 Door5 Forced
I20:S26	42320526	423K526	Intelligent Reader	20	Door6 Forced	I20 Door6 Forced
I20:S27	42320527	423K527	Intelligent Reader	20	Door7 Forced	I20 Door7 Forced
I20:S28	42320528	423K528	Intelligent Reader	20	Door8 Forced	I20 Door8 Forced
I20:S29	42620529	426K529	Intelligent Reader	20	Door1 DOTL	I20 Door1 DOTL
I20:S30	42620530	426K530	Intelligent Reader	20	Door2 DOTL	I20 Door2 DOTL
I20:S31	42620531	426K531	Intelligent Reader	20	Door3 DOTL	I20 Door3 DOTL
I20:S32	42620532	426K532	Intelligent Reader	20	Door4 DOTL	I20 Door4 DOTL
I20:S33	42620533	426K533	Intelligent Reader	20	Door5 DOTL	I20 Door5 DOTL
I20:S34	42620534	426K534	Intelligent Reader	20	Door6 DOTL	I20 Door6 DOTL
I20:S35	42620535	426K535	Intelligent Reader	20	Door7 DOTL	I20 Door7 DOTL
I20:S36	42620536	426K536	Intelligent Reader	20	Door8 DOTL	I20 Door8 DOTL
I20:S37	15020537	150K537	Intelligent Reader	20	Rdr1 Invalid	I20 Rdr1 Invalid
I20:S38	15020538	150K538	Intelligent Reader	20	Rdr2 Invalid	I20 Rdr2 Invalid
I20:S39	15020539	150K539	Intelligent Reader	20	Rdr3 Invalid	I20 Rdr3 Invalid
I20:S40	15020540	150K540	Intelligent Reader	20	Rdr4 Invalid	I20 Rdr4 Invalid
I20:S41	15020541	150K541	Intelligent Reader	20	Rdr5 Invalid	I20 Rdr5 Invalid
I20:S42	15020542	150K542	Intelligent Reader	20	Rdr6 Invalid	I20 Rdr6 Invalid
I20:S43	15020543	150K543	Intelligent Reader	20	Rdr7 Invalid	I20 Rdr7 Invalid
I20:S44	15020544	150K544	Intelligent Reader	20	Rdr8 Invalid	I20 Rdr8 Invalid
I20:S45	15020545	150K545	Intelligent Reader	20	Rdr9 Invalid	I20 Rdr9 Invalid
I20:S46	15020546	150K546	Intelligent Reader	20	Rdr10 Invalid	I20 Rdr10 Invalid
I20:S47	15020547	150K547	Intelligent Reader	20	Rdr11 Invalid	I20 Rdr11 Invalid
I20:S48	15020548	150K548	Intelligent Reader	20	Rdr12 Invalid	I20 Rdr12 Invalid
I20:S49	15020549	150K549	Intelligent Reader	20	Rdr13 Invalid	I20 Rdr13 Invalid
I20:S50	15020550	150K550	Intelligent Reader	20	Rdr14 Invalid	I20 Rdr14 Invalid
I20:S51	15020551	150K551	Intelligent Reader	20	Rdr15 Invalid	I20 Rdr15 Invalid
I20:S52	15020552	150K552	Intelligent Reader	20	Rdr16 Invalid	I20 Rdr16 Invalid
I20:S53	12220553	122K553	Intelligent Reader	20	Rdr1 Duress	I20 Rdr1 Duress
I20:S54	12220554	122K554	Intelligent Reader	20	Rdr2 Duress	I20 Rdr2 Duress
I20:S55	12220555	122K555	Intelligent Reader	20	Rdr3 Duress	I20 Rdr3 Duress
I20:S56	12220556	122K556	Intelligent Reader	20	Rdr4 Duress	I20 Rdr4 Duress
I20:S57	12220557	122K557	Intelligent Reader	20	Rdr5 Duress	I20 Rdr5 Duress
I20:S58	12220558	122K558	Intelligent Reader	20	Rdr6 Duress	I20 Rdr6 Duress
I20:S59	12220559	122K559	Intelligent Reader	20	Rdr7 Duress	I20 Rdr7 Duress
I20:S60	12220560	122K560	Intelligent Reader	20	Rdr8 Duress	I20 Rdr8 Duress
I20:S61	12220561	122K561	Intelligent Reader	20	Rdr9 Duress	I20 Rdr9 Duress
I20:S62	12220562	122K562	Intelligent Reader	20	Rdr10 Duress	I20 Rdr10 Duress
I20:S63	12220563	122K563	Intelligent Reader	20	Rdr11 Duress	I20 Rdr11 Duress
I20:S64	12220564	122K564	Intelligent Reader	20	Rdr12 Duress	I20 Rdr12 Duress
I20:S65	12220565	122K565	Intelligent Reader	20	Rdr13 Duress	I20 Rdr13 Duress
I20:S66	12220566	122K566	Intelligent Reader	20	Rdr14 Duress	I20 Rdr14 Duress
I20:S67	12220567	122K567	Intelligent Reader	20	Rdr15 Duress	I20 Rdr15 Duress
I20:S68	12220568	122K568	Intelligent Reader	20	Rdr16 Duress	I20 Rdr16 Duress
I20:S69	33020569	330K569	Intelligent Reader	20	Rdr1 Fault	I20 Rdr1 Fault
I20:S70	33020570	330K570	Intelligent Reader	20	Rdr2 Fault	I20 Rdr2 Fault
I20:S71	33020571	330K571	Intelligent Reader	20	Rdr3 Fault	I20 Rdr3 Fault
I20:S72	33020572	330K572	Intelligent Reader	20	Rdr4 Fault	I20 Rdr4 Fault
I20:S73	33020573	330K573	Intelligent Reader	20	Rdr5 Fault	I20 Rdr5 Fault
I20:S74	33020574	330K574	Intelligent Reader	20	Rdr6 Fault	I20 Rdr6 Fault
I20:S75	33020575	330K575	Intelligent Reader	20	Rdr7 Fault	I20 Rdr7 Fault

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I20:S76	33020576	330K576	Intelligent Reader	20	Rdr8 Fault	I20 Rdr8 Fault
I20:S77	33020577	330K577	Intelligent Reader	20	Rdr9 Fault	I20 Rdr9 Fault
I20:S78	33020578	330K578	Intelligent Reader	20	Rdr10 Fault	I20 Rdr10 Fault
I20:S79	33020579	330K579	Intelligent Reader	20	Rdr11 Fault	I20 Rdr11 Fault
I20:S80	33020580	330K580	Intelligent Reader	20	Rdr12 Fault	I20 Rdr12 Fault
I20:S81	33020581	330K581	Intelligent Reader	20	Rdr13 Fault	I20 Rdr13 Fault
I20:S82	33020582	330K582	Intelligent Reader	20	Rdr14 Fault	I20 Rdr14 Fault
I20:S83	33020583	330K583	Intelligent Reader	20	Rdr15 Fault	I20 Rdr15 Fault
I20:S84	33020584	330K584	Intelligent Reader	20	Rdr16 Fault	I20 Rdr16 Fault
I20:S85	30120585	301K585	Intelligent Reader	20	Ext AC fail	I20 Ext AC fail
I20:S86	30220586	302K586	Intelligent Reader	20	Ext Low Battery	I20 Ext Low Battery
I20:S87	30020587	300K587	Intelligent Reader	20	Ext LAN Fuse	I20 Ext LAN Fuse
I20:S88	30020588	300K588	Intelligent Reader	20	Ext Detector Fuse	I20 Ext Detector Fuse
I20:S89	30020589	300K589	Intelligent Reader	20	Ext Low Volts	I20 Ext Low Volts
I20:S90	30020590	300K590	Intelligent Reader	20	Ext PS Fail	I20 Ext PS Fail
I20:S91	30920591	309K591	Intelligent Reader	20	Ext Battery Test	I20 Ext Battery Test
I20:S92	15020592	150K592	Intelligent Reader	20	Spare2	I20 Spare2
I20:S93	15020593	150K593	Intelligent Reader	20	Spare3	I20 Spare3
I21:Z01	14021501	140L501	Intelligent Reader	21	Door1 Reed	I21 Door1 Reed
I21:Z02	14021502	140L502	Intelligent Reader	21	Door2 Reed	I21 Door2 Reed
I21:Z03	14021503	140L503	Intelligent Reader	21	Door1 Tongue	I21 Door1 Tongue
I21:Z04	14021504	140L504	Intelligent Reader	21	Door2 Tongue	I21 Door2 Tongue
I21:Z05	14021505	140L505	Intelligent Reader	21	Door1 REX	I21 Door1 REX
I21:Z06	14021506	140L506	Intelligent Reader	21	Door2 REX	I21 Door2 REX
I21:Z07	14021507	140L507	Intelligent Reader	21	Door1 REN	I21 Door1 REN
I21:Z08	14021508	140L508	Intelligent Reader	21	Door2 REN	I21 Door2 REN
I21:Z09	14021509	140L509	Intelligent Reader	21	Door3 Reed	I21 Door3 Reed
I21:Z10	14021510	140L510	Intelligent Reader	21	Door4 Reed	I21 Door4 Reed
I21:Z11	14021511	140L511	Intelligent Reader	21	Door3 Tongue	I21 Door3 Tongue
I21:Z12	14021512	140L512	Intelligent Reader	21	Door4 Tongue	I21 Door4 Tongue
I21:Z13	14021513	140L513	Intelligent Reader	21	Door3 REX	I21 Door3 REX
I21:Z14	14021514	140L514	Intelligent Reader	21	Door4 REX	I21 Door4 REX
I21:Z15	14021515	140L515	Intelligent Reader	21	Door3 REN	I21 Door3 REN
I21:Z16	14021516	140L516	Intelligent Reader	21	Door4 REN	I21 Door4 REN
I21:Z17	14021517	140L517	Intelligent Reader	21	Door5 Reed	I21 Door5 Reed
I21:Z18	14021518	140L518	Intelligent Reader	21	Door6 Reed	I21 Door6 Reed
I21:Z19	14021519	140L519	Intelligent Reader	21	Door5 Tongue	I21 Door5 Tongue
I21:Z20	14021520	140L520	Intelligent Reader	21	Door6 Tongue	I21 Door6 Tongue
I21:Z21	14021521	140L521	Intelligent Reader	21	Door5 REX	I21 Door5 REX
I21:Z22	14021522	140L522	Intelligent Reader	21	Door6 REX	I21 Door6 REX
I21:Z23	14021523	140L523	Intelligent Reader	21	Door5 REN	I21 Door5 REN
I21:Z24	14021524	140L524	Intelligent Reader	21	Door6 REN	I21 Door6 REN
I21:Z25	14021525	140L525	Intelligent Reader	21	Door7 Reed	I21 Door7 Reed
I21:Z26	14021526	140L526	Intelligent Reader	21	Door8 Reed	I21 Door8 Reed
I21:Z27	14021527	140L527	Intelligent Reader	21	Door7 Tongue	I21 Door7 Tongue
I21:Z28	14021528	140L528	Intelligent Reader	21	Door8 Tongue	I21 Door8 Tongue
I21:Z29	14021529	140L529	Intelligent Reader	21	Door7 REX	I21 Door7 REX
I21:Z30	14021530	140L530	Intelligent Reader	21	Door8 REX	I21 Door8 REX
I21:Z31	14021531	140L531	Intelligent Reader	21	Door7 REN	I21 Door7 REN
I21:Z32	14021532	140L532	Intelligent Reader	21	Door8 REN	I21 Door8 REN
I21:S01	14521501	145L501	Intelligent Reader	21	Cabinet Tamper	I21 Cabinet Tamper
I21:S02	30121502	301L502	Intelligent Reader	21	AC fail	I21 AC fail
I21:S03	30221503	302L503	Intelligent Reader	21	Low Battery	I21 Low Battery
I21:S04	30021504	300L504	Intelligent Reader	21	LAN Fuse	I21 LAN Fuse
I21:S05	30021505	300L505	Intelligent Reader	21	Detector Fuse	I21 Detector Fuse
I21:S06	30021506	300L506	Intelligent Reader	21	Low Volts	I21 Low Volts
I21:S07	30021507	300L507	Intelligent Reader	21	PS Fail	I21 PS Fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I21:S08	30921508	309L508	Intelligent Reader	21	Battery Test	I21 Battery Test
I21:S09	33321509	333L509	Intelligent Reader	21	Unibus Fault	I21 Unibus Fault
I21:S10	30321510	303L510	Intelligent Reader	21	Download Fail	I21 Download Fail
I21:S11	15021511	150L511	Intelligent Reader	21	Spare1	I21 Spare1
I21:S12	14321512	143L512	Intelligent Reader	21	LAN Comms	I21 LAN Comms
I21:S13	43221513	432L513	Intelligent Reader	21	Door1 Fault	I21 Door1 Fault
I21:S14	43221514	432L514	Intelligent Reader	21	Door2 Fault	I21 Door2 Fault
I21:S15	43221515	432L515	Intelligent Reader	21	Door3 Fault	I21 Door3 Fault
I21:S16	43221516	432L516	Intelligent Reader	21	Door4 Fault	I21 Door4 Fault
I21:S17	43221517	432L517	Intelligent Reader	21	Door5 Fault	I21 Door5 Fault
I21:S18	43221518	432L518	Intelligent Reader	21	Door6 Fault	I21 Door6 Fault
I21:S19	43221519	432L519	Intelligent Reader	21	Door7 Fault	I21 Door7 Fault
I21:S20	43221520	432L520	Intelligent Reader	21	Door8 Fault	I21 Door8 Fault
I21:S21	42321521	423L521	Intelligent Reader	21	Door1 Forced	I21 Door1 Forced
I21:S22	42321522	423L522	Intelligent Reader	21	Door2 Forced	I21 Door2 Forced
I21:S23	42321523	423L523	Intelligent Reader	21	Door3 Forced	I21 Door3 Forced
I21:S24	42321524	423L524	Intelligent Reader	21	Door4 Forced	I21 Door4 Forced
I21:S25	42321525	423L525	Intelligent Reader	21	Door5 Forced	I21 Door5 Forced
I21:S26	42321526	423L526	Intelligent Reader	21	Door6 Forced	I21 Door6 Forced
I21:S27	42321527	423L527	Intelligent Reader	21	Door7 Forced	I21 Door7 Forced
I21:S28	42321528	423L528	Intelligent Reader	21	Door8 Forced	I21 Door8 Forced
I21:S29	42621529	426L529	Intelligent Reader	21	Door1 DOTL	I21 Door1 DOTL
I21:S30	42621530	426L530	Intelligent Reader	21	Door2 DOTL	I21 Door2 DOTL
I21:S31	42621531	426L531	Intelligent Reader	21	Door3 DOTL	I21 Door3 DOTL
I21:S32	42621532	426L532	Intelligent Reader	21	Door4 DOTL	I21 Door4 DOTL
I21:S33	42621533	426L533	Intelligent Reader	21	Door5 DOTL	I21 Door5 DOTL
I21:S34	42621534	426L534	Intelligent Reader	21	Door6 DOTL	I21 Door6 DOTL
I21:S35	42621535	426L535	Intelligent Reader	21	Door7 DOTL	I21 Door7 DOTL
I21:S36	42621536	426L536	Intelligent Reader	21	Door8 DOTL	I21 Door8 DOTL
I21:S37	15021537	150L537	Intelligent Reader	21	Rdr1 Invalid	I21 Rdr1 Invalid
I21:S38	15021538	150L538	Intelligent Reader	21	Rdr2 Invalid	I21 Rdr2 Invalid
I21:S39	15021539	150L539	Intelligent Reader	21	Rdr3 Invalid	I21 Rdr3 Invalid
I21:S40	15021540	150L540	Intelligent Reader	21	Rdr4 Invalid	I21 Rdr4 Invalid
I21:S41	15021541	150L541	Intelligent Reader	21	Rdr5 Invalid	I21 Rdr5 Invalid
I21:S42	15021542	150L542	Intelligent Reader	21	Rdr6 Invalid	I21 Rdr6 Invalid
I21:S43	15021543	150L543	Intelligent Reader	21	Rdr7 Invalid	I21 Rdr7 Invalid
I21:S44	15021544	150L544	Intelligent Reader	21	Rdr8 Invalid	I21 Rdr8 Invalid
I21:S45	15021545	150L545	Intelligent Reader	21	Rdr9 Invalid	I21 Rdr9 Invalid
I21:S46	15021546	150L546	Intelligent Reader	21	Rdr10 Invalid	I21 Rdr10 Invalid
I21:S47	15021547	150L547	Intelligent Reader	21	Rdr11 Invalid	I21 Rdr11 Invalid
I21:S48	15021548	150L548	Intelligent Reader	21	Rdr12 Invalid	I21 Rdr12 Invalid
I21:S49	15021549	150L549	Intelligent Reader	21	Rdr13 Invalid	I21 Rdr13 Invalid
I21:S50	15021550	150L550	Intelligent Reader	21	Rdr14 Invalid	I21 Rdr14 Invalid
I21:S51	15021551	150L551	Intelligent Reader	21	Rdr15 Invalid	I21 Rdr15 Invalid
I21:S52	15021552	150L552	Intelligent Reader	21	Rdr16 Invalid	I21 Rdr16 Invalid
I21:S53	12221553	122L553	Intelligent Reader	21	Rdr1 Duress	I21 Rdr1 Duress
I21:S54	12221554	122L554	Intelligent Reader	21	Rdr2 Duress	I21 Rdr2 Duress
I21:S55	12221555	122L555	Intelligent Reader	21	Rdr3 Duress	I21 Rdr3 Duress
I21:S56	12221556	122L556	Intelligent Reader	21	Rdr4 Duress	I21 Rdr4 Duress
I21:S57	12221557	122L557	Intelligent Reader	21	Rdr5 Duress	I21 Rdr5 Duress
I21:S58	12221558	122L558	Intelligent Reader	21	Rdr6 Duress	I21 Rdr6 Duress
I21:S59	12221559	122L559	Intelligent Reader	21	Rdr7 Duress	I21 Rdr7 Duress
I21:S60	12221560	122L560	Intelligent Reader	21	Rdr8 Duress	I21 Rdr8 Duress
I21:S61	12221561	122L561	Intelligent Reader	21	Rdr9 Duress	I21 Rdr9 Duress
I21:S62	12221562	122L562	Intelligent Reader	21	Rdr10 Duress	I21 Rdr10 Duress
I21:S63	12221563	122L563	Intelligent Reader	21	Rdr11 Duress	I21 Rdr11 Duress
I21:S64	12221564	122L564	Intelligent Reader	21	Rdr12 Duress	I21 Rdr12 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I21:S65	12221565	122L565	Intelligent Reader	21	Rdr13 Duress	I21 Rdr13 Duress
I21:S66	12221566	122L566	Intelligent Reader	21	Rdr14 Duress	I21 Rdr14 Duress
I21:S67	12221567	122L567	Intelligent Reader	21	Rdr15 Duress	I21 Rdr15 Duress
I21:S68	12221568	122L568	Intelligent Reader	21	Rdr16 Duress	I21 Rdr16 Duress
I21:S69	33021569	330L569	Intelligent Reader	21	Rdr1 Fault	I21 Rdr1 Fault
I21:S70	33021570	330L570	Intelligent Reader	21	Rdr2 Fault	I21 Rdr2 Fault
I21:S71	33021571	330L571	Intelligent Reader	21	Rdr3 Fault	I21 Rdr3 Fault
I21:S72	33021572	330L572	Intelligent Reader	21	Rdr4 Fault	I21 Rdr4 Fault
I21:S73	33021573	330L573	Intelligent Reader	21	Rdr5 Fault	I21 Rdr5 Fault
I21:S74	33021574	330L574	Intelligent Reader	21	Rdr6 Fault	I21 Rdr6 Fault
I21:S75	33021575	330L575	Intelligent Reader	21	Rdr7 Fault	I21 Rdr7 Fault
I21:S76	33021576	330L576	Intelligent Reader	21	Rdr8 Fault	I21 Rdr8 Fault
I21:S77	33021577	330L577	Intelligent Reader	21	Rdr9 Fault	I21 Rdr9 Fault
I21:S78	33021578	330L578	Intelligent Reader	21	Rdr10 Fault	I21 Rdr10 Fault
I21:S79	33021579	330L579	Intelligent Reader	21	Rdr11 Fault	I21 Rdr11 Fault
I21:S80	33021580	330L580	Intelligent Reader	21	Rdr12 Fault	I21 Rdr12 Fault
I21:S81	33021581	330L581	Intelligent Reader	21	Rdr13 Fault	I21 Rdr13 Fault
I21:S82	33021582	330L582	Intelligent Reader	21	Rdr14 Fault	I21 Rdr14 Fault
I21:S83	33021583	330L583	Intelligent Reader	21	Rdr15 Fault	I21 Rdr15 Fault
I21:S84	33021584	330L584	Intelligent Reader	21	Rdr16 Fault	I21 Rdr16 Fault
I21:S85	30121585	301L585	Intelligent Reader	21	Ext AC fail	I21 Ext AC fail
I21:S86	30221586	302L586	Intelligent Reader	21	Ext Low Battery	I21 Ext Low Battery
I21:S87	30021587	300L587	Intelligent Reader	21	Ext LAN Fuse	I21 Ext LAN Fuse
I21:S88	30021588	300L588	Intelligent Reader	21	Ext Detector Fuse	I21 Ext Detector Fuse
I21:S89	30021589	300L589	Intelligent Reader	21	Ext Low Volts	I21 Ext Low Volts
I21:S90	30021590	300L590	Intelligent Reader	21	Ext PS Fail	I21 Ext PS Fail
I21:S91	30921591	309L591	Intelligent Reader	21	Ext Battery Test	I21 Ext Battery Test
I21:S92	15021592	150L592	Intelligent Reader	21	Spare2	I21 Spare2
I21:S93	15021593	150L593	Intelligent Reader	21	Spare3	I21 Spare3
I22:Z01	14022501	140M501	Intelligent Reader	22	Door1 Reed	I22 Door1 Reed
I22:Z02	14022502	140M502	Intelligent Reader	22	Door2 Reed	I22 Door2 Reed
I22:Z03	14022503	140M503	Intelligent Reader	22	Door1 Tongue	I22 Door1 Tongue
I22:Z04	14022504	140M504	Intelligent Reader	22	Door2 Tongue	I22 Door2 Tongue
I22:Z05	14022505	140M505	Intelligent Reader	22	Door1 REX	I22 Door1 REX
I22:Z06	14022506	140M506	Intelligent Reader	22	Door2 REX	I22 Door2 REX
I22:Z07	14022507	140M507	Intelligent Reader	22	Door1 REN	I22 Door1 REN
I22:Z08	14022508	140M508	Intelligent Reader	22	Door2 REN	I22 Door2 REN
I22:Z09	14022509	140M509	Intelligent Reader	22	Door3 Reed	I22 Door3 Reed
I22:Z10	14022510	140M510	Intelligent Reader	22	Door4 Reed	I22 Door4 Reed
I22:Z11	14022511	140M511	Intelligent Reader	22	Door3 Tongue	I22 Door3 Tongue
I22:Z12	14022512	140M512	Intelligent Reader	22	Door4 Tongue	I22 Door4 Tongue
I22:Z13	14022513	140M513	Intelligent Reader	22	Door3 REX	I22 Door3 REX
I22:Z14	14022514	140M514	Intelligent Reader	22	Door4 REX	I22 Door4 REX
I22:Z15	14022515	140M515	Intelligent Reader	22	Door3 REN	I22 Door3 REN
I22:Z16	14022516	140M516	Intelligent Reader	22	Door4 REN	I22 Door4 REN
I22:Z17	14022517	140M517	Intelligent Reader	22	Door5 Reed	I22 Door5 Reed
I22:Z18	14022518	140M518	Intelligent Reader	22	Door6 Reed	I22 Door6 Reed
I22:Z19	14022519	140M519	Intelligent Reader	22	Door5 Tongue	I22 Door5 Tongue
I22:Z20	14022520	140M520	Intelligent Reader	22	Door6 Tongue	I22 Door6 Tongue
I22:Z21	14022521	140M521	Intelligent Reader	22	Door5 REX	I22 Door5 REX
I22:Z22	14022522	140M522	Intelligent Reader	22	Door6 REX	I22 Door6 REX
I22:Z23	14022523	140M523	Intelligent Reader	22	Door5 REN	I22 Door5 REN
I22:Z24	14022524	140M524	Intelligent Reader	22	Door6 REN	I22 Door6 REN
I22:Z25	14022525	140M525	Intelligent Reader	22	Door7 Reed	I22 Door7 Reed
I22:Z26	14022526	140M526	Intelligent Reader	22	Door8 Reed	I22 Door8 Reed
I22:Z27	14022527	140M527	Intelligent Reader	22	Door7 Tongue	I22 Door7 Tongue
I22:Z28	14022528	140M528	Intelligent Reader	22	Door8 Tongue	I22 Door8 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I22:Z29	14022529	140M529	Intelligent Reader	22	Door7 REX	I22 Door7 REX
I22:Z30	14022530	140M530	Intelligent Reader	22	Door8 REX	I22 Door8 REX
I22:Z31	14022531	140M531	Intelligent Reader	22	Door7 REN	I22 Door7 REN
I22:Z32	14022532	140M532	Intelligent Reader	22	Door8 REN	I22 Door8 REN
I22:S01	14522501	145M501	Intelligent Reader	22	Cabinet Tamper	I22 Cabinet Tamper
I22:S02	30122502	301M502	Intelligent Reader	22	AC fail	I22 AC fail
I22:S03	30222503	302M503	Intelligent Reader	22	Low Battery	I22 Low Battery
I22:S04	30022504	300M504	Intelligent Reader	22	LAN Fuse	I22 LAN Fuse
I22:S05	30022505	300M505	Intelligent Reader	22	Detector Fuse	I22 Detector Fuse
I22:S06	30022506	300M506	Intelligent Reader	22	Low Volts	I22 Low Volts
I22:S07	30022507	300M507	Intelligent Reader	22	PS Fail	I22 PS Fail
I22:S08	30922508	309M508	Intelligent Reader	22	Battery Test	I22 Battery Test
I22:S09	33322509	333M509	Intelligent Reader	22	Unibus Fault	I22 Unibus Fault
I22:S10	30322510	303M510	Intelligent Reader	22	Download Fail	I22 Download Fail
I22:S11	15022511	150M511	Intelligent Reader	22	Spare1	I22 Spare1
I22:S12	14322512	143M512	Intelligent Reader	22	LAN Comms	I22 LAN Comms
I22:S13	43222513	432M513	Intelligent Reader	22	Door1 Fault	I22 Door1 Fault
I22:S14	43222514	432M514	Intelligent Reader	22	Door2 Fault	I22 Door2 Fault
I22:S15	43222515	432M515	Intelligent Reader	22	Door3 Fault	I22 Door3 Fault
I22:S16	43222516	432M516	Intelligent Reader	22	Door4 Fault	I22 Door4 Fault
I22:S17	43222517	432M517	Intelligent Reader	22	Door5 Fault	I22 Door5 Fault
I22:S18	43222518	432M518	Intelligent Reader	22	Door6 Fault	I22 Door6 Fault
I22:S19	43222519	432M519	Intelligent Reader	22	Door7 Fault	I22 Door7 Fault
I22:S20	43222520	432M520	Intelligent Reader	22	Door8 Fault	I22 Door8 Fault
I22:S21	42322521	423M521	Intelligent Reader	22	Door1 Forced	I22 Door1 Forced
I22:S22	42322522	423M522	Intelligent Reader	22	Door2 Forced	I22 Door2 Forced
I22:S23	42322523	423M523	Intelligent Reader	22	Door3 Forced	I22 Door3 Forced
I22:S24	42322524	423M524	Intelligent Reader	22	Door4 Forced	I22 Door4 Forced
I22:S25	42322525	423M525	Intelligent Reader	22	Door5 Forced	I22 Door5 Forced
I22:S26	42322526	423M526	Intelligent Reader	22	Door6 Forced	I22 Door6 Forced
I22:S27	42322527	423M527	Intelligent Reader	22	Door7 Forced	I22 Door7 Forced
I22:S28	42322528	423M528	Intelligent Reader	22	Door8 Forced	I22 Door8 Forced
I22:S29	42622529	426M529	Intelligent Reader	22	Door1 DOTL	I22 Door1 DOTL
I22:S30	42622530	426M530	Intelligent Reader	22	Door2 DOTL	I22 Door2 DOTL
I22:S31	42622531	426M531	Intelligent Reader	22	Door3 DOTL	I22 Door3 DOTL
I22:S32	42622532	426M532	Intelligent Reader	22	Door4 DOTL	I22 Door4 DOTL
I22:S33	42622533	426M533	Intelligent Reader	22	Door5 DOTL	I22 Door5 DOTL
I22:S34	42622534	426M534	Intelligent Reader	22	Door6 DOTL	I22 Door6 DOTL
I22:S35	42622535	426M535	Intelligent Reader	22	Door7 DOTL	I22 Door7 DOTL
I22:S36	42622536	426M536	Intelligent Reader	22	Door8 DOTL	I22 Door8 DOTL
I22:S37	15022537	150M537	Intelligent Reader	22	Rdr1 Invalid	I22 Rdr1 Invalid
I22:S38	15022538	150M538	Intelligent Reader	22	Rdr2 Invalid	I22 Rdr2 Invalid
I22:S39	15022539	150M539	Intelligent Reader	22	Rdr3 Invalid	I22 Rdr3 Invalid
I22:S40	15022540	150M540	Intelligent Reader	22	Rdr4 Invalid	I22 Rdr4 Invalid
I22:S41	15022541	150M541	Intelligent Reader	22	Rdr5 Invalid	I22 Rdr5 Invalid
I22:S42	15022542	150M542	Intelligent Reader	22	Rdr6 Invalid	I22 Rdr6 Invalid
I22:S43	15022543	150M543	Intelligent Reader	22	Rdr7 Invalid	I22 Rdr7 Invalid
I22:S44	15022544	150M544	Intelligent Reader	22	Rdr8 Invalid	I22 Rdr8 Invalid
I22:S45	15022545	150M545	Intelligent Reader	22	Rdr9 Invalid	I22 Rdr9 Invalid
I22:S46	15022546	150M546	Intelligent Reader	22	Rdr10 Invalid	I22 Rdr10 Invalid
I22:S47	15022547	150M547	Intelligent Reader	22	Rdr11 Invalid	I22 Rdr11 Invalid
I22:S48	15022548	150M548	Intelligent Reader	22	Rdr12 Invalid	I22 Rdr12 Invalid
I22:S49	15022549	150M549	Intelligent Reader	22	Rdr13 Invalid	I22 Rdr13 Invalid
I22:S50	15022550	150M550	Intelligent Reader	22	Rdr14 Invalid	I22 Rdr14 Invalid
I22:S51	15022551	150M551	Intelligent Reader	22	Rdr15 Invalid	I22 Rdr15 Invalid
I22:S52	15022552	150M552	Intelligent Reader	22	Rdr16 Invalid	I22 Rdr16 Invalid
I22:S53	12222553	122M553	Intelligent Reader	22	Rdr1 Duress	I22 Rdr1 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I22:S54	12222554	122M554	Intelligent Reader	22	Rdr2 Duress	I22 Rdr2 Duress
I22:S55	12222555	122M555	Intelligent Reader	22	Rdr3 Duress	I22 Rdr3 Duress
I22:S56	12222556	122M556	Intelligent Reader	22	Rdr4 Duress	I22 Rdr4 Duress
I22:S57	12222557	122M557	Intelligent Reader	22	Rdr5 Duress	I22 Rdr5 Duress
I22:S58	12222558	122M558	Intelligent Reader	22	Rdr6 Duress	I22 Rdr6 Duress
I22:S59	12222559	122M559	Intelligent Reader	22	Rdr7 Duress	I22 Rdr7 Duress
I22:S60	12222560	122M560	Intelligent Reader	22	Rdr8 Duress	I22 Rdr8 Duress
I22:S61	12222561	122M561	Intelligent Reader	22	Rdr9 Duress	I22 Rdr9 Duress
I22:S62	12222562	122M562	Intelligent Reader	22	Rdr10 Duress	I22 Rdr10 Duress
I22:S63	12222563	122M563	Intelligent Reader	22	Rdr11 Duress	I22 Rdr11 Duress
I22:S64	12222564	122M564	Intelligent Reader	22	Rdr12 Duress	I22 Rdr12 Duress
I22:S65	12222565	122M565	Intelligent Reader	22	Rdr13 Duress	I22 Rdr13 Duress
I22:S66	12222566	122M566	Intelligent Reader	22	Rdr14 Duress	I22 Rdr14 Duress
I22:S67	12222567	122M567	Intelligent Reader	22	Rdr15 Duress	I22 Rdr15 Duress
I22:S68	12222568	122M568	Intelligent Reader	22	Rdr16 Duress	I22 Rdr16 Duress
I22:S69	33022569	330M569	Intelligent Reader	22	Rdr1 Fault	I22 Rdr1 Fault
I22:S70	33022570	330M570	Intelligent Reader	22	Rdr2 Fault	I22 Rdr2 Fault
I22:S71	33022571	330M571	Intelligent Reader	22	Rdr3 Fault	I22 Rdr3 Fault
I22:S72	33022572	330M572	Intelligent Reader	22	Rdr4 Fault	I22 Rdr4 Fault
I22:S73	33022573	330M573	Intelligent Reader	22	Rdr5 Fault	I22 Rdr5 Fault
I22:S74	33022574	330M574	Intelligent Reader	22	Rdr6 Fault	I22 Rdr6 Fault
I22:S75	33022575	330M575	Intelligent Reader	22	Rdr7 Fault	I22 Rdr7 Fault
I22:S76	33022576	330M576	Intelligent Reader	22	Rdr8 Fault	I22 Rdr8 Fault
I22:S77	33022577	330M577	Intelligent Reader	22	Rdr9 Fault	I22 Rdr9 Fault
I22:S78	33022578	330M578	Intelligent Reader	22	Rdr10 Fault	I22 Rdr10 Fault
I22:S79	33022579	330M579	Intelligent Reader	22	Rdr11 Fault	I22 Rdr11 Fault
I22:S80	33022580	330M580	Intelligent Reader	22	Rdr12 Fault	I22 Rdr12 Fault
I22:S81	33022581	330M581	Intelligent Reader	22	Rdr13 Fault	I22 Rdr13 Fault
I22:S82	33022582	330M582	Intelligent Reader	22	Rdr14 Fault	I22 Rdr14 Fault
I22:S83	33022583	330M583	Intelligent Reader	22	Rdr15 Fault	I22 Rdr15 Fault
I22:S84	33022584	330M584	Intelligent Reader	22	Rdr16 Fault	I22 Rdr16 Fault
I22:S85	30122585	301M585	Intelligent Reader	22	Ext AC fail	I22 Ext AC fail
I22:S86	30222586	302M586	Intelligent Reader	22	Ext Low Battery	I22 Ext Low Battery
I22:S87	30022587	300M587	Intelligent Reader	22	Ext LAN Fuse	I22 Ext LAN Fuse
I22:S88	30022588	300M588	Intelligent Reader	22	Ext Detector Fuse	I22 Ext Detector Fuse
I22:S89	30022589	300M589	Intelligent Reader	22	Ext Low Volts	I22 Ext Low Volts
I22:S90	30022590	300M590	Intelligent Reader	22	Ext PS Fail	I22 Ext PS Fail
I22:S91	30922591	309M591	Intelligent Reader	22	Ext Battery Test	I22 Ext Battery Test
I22:S92	15022592	150M592	Intelligent Reader	22	Spare2	I22 Spare2
I22:S93	15022593	150M593	Intelligent Reader	22	Spare3	I22 Spare3
I23:Z01	14023501	140N501	Intelligent Reader	23	Door1 Reed	I23 Door1 Reed
I23:Z02	14023502	140N502	Intelligent Reader	23	Door2 Reed	I23 Door2 Reed
I23:Z03	14023503	140N503	Intelligent Reader	23	Door1 Tongue	I23 Door1 Tongue
I23:Z04	14023504	140N504	Intelligent Reader	23	Door2 Tongue	I23 Door2 Tongue
I23:Z05	14023505	140N505	Intelligent Reader	23	Door1 REX	I23 Door1 REX
I23:Z06	14023506	140N506	Intelligent Reader	23	Door2 REX	I23 Door2 REX
I23:Z07	14023507	140N507	Intelligent Reader	23	Door1 REN	I23 Door1 REN
I23:Z08	14023508	140N508	Intelligent Reader	23	Door2 REN	I23 Door2 REN
I23:Z09	14023509	140N509	Intelligent Reader	23	Door3 Reed	I23 Door3 Reed
I23:Z10	14023510	140N510	Intelligent Reader	23	Door4 Reed	I23 Door4 Reed
I23:Z11	14023511	140N511	Intelligent Reader	23	Door3 Tongue	I23 Door3 Tongue
I23:Z12	14023512	140N512	Intelligent Reader	23	Door4 Tongue	I23 Door4 Tongue
I23:Z13	14023513	140N513	Intelligent Reader	23	Door3 REX	I23 Door3 REX
I23:Z14	14023514	140N514	Intelligent Reader	23	Door4 REX	I23 Door4 REX
I23:Z15	14023515	140N515	Intelligent Reader	23	Door3 REN	I23 Door3 REN
I23:Z16	14023516	140N516	Intelligent Reader	23	Door4 REN	I23 Door4 REN
I23:Z17	14023517	140N517	Intelligent Reader	23	Door5 Reed	I23 Door5 Reed

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I23:Z18	14023518	140N518	Intelligent Reader	23	Door6 Reed	I23 Door6 Reed
I23:Z19	14023519	140N519	Intelligent Reader	23	Door5 Tongue	I23 Door5 Tongue
I23:Z20	14023520	140N520	Intelligent Reader	23	Door6 Tongue	I23 Door6 Tongue
I23:Z21	14023521	140N521	Intelligent Reader	23	Door5 REX	I23 Door5 REX
I23:Z22	14023522	140N522	Intelligent Reader	23	Door6 REX	I23 Door6 REX
I23:Z23	14023523	140N523	Intelligent Reader	23	Door5 REN	I23 Door5 REN
I23:Z24	14023524	140N524	Intelligent Reader	23	Door6 REN	I23 Door6 REN
I23:Z25	14023525	140N525	Intelligent Reader	23	Door7 Reed	I23 Door7 Reed
I23:Z26	14023526	140N526	Intelligent Reader	23	Door8 Reed	I23 Door8 Reed
I23:Z27	14023527	140N527	Intelligent Reader	23	Door7 Tongue	I23 Door7 Tongue
I23:Z28	14023528	140N528	Intelligent Reader	23	Door8 Tongue	I23 Door8 Tongue
I23:Z29	14023529	140N529	Intelligent Reader	23	Door7 REX	I23 Door7 REX
I23:Z30	14023530	140N530	Intelligent Reader	23	Door8 REX	I23 Door8 REX
I23:Z31	14023531	140N531	Intelligent Reader	23	Door7 REN	I23 Door7 REN
I23:Z32	14023532	140N532	Intelligent Reader	23	Door8 REN	I23 Door8 REN
I23:S01	14523501	145N501	Intelligent Reader	23	Cabinet Tamper	I23 Cabinet Tamper
I23:S02	30123502	301N502	Intelligent Reader	23	AC fail	I23 AC fail
I23:S03	30223503	302N503	Intelligent Reader	23	Low Battery	I23 Low Battery
I23:S04	30023504	300N504	Intelligent Reader	23	LAN Fuse	I23 LAN Fuse
I23:S05	30023505	300N505	Intelligent Reader	23	Detector Fuse	I23 Detector Fuse
I23:S06	30023506	300N506	Intelligent Reader	23	Low Volts	I23 Low Volts
I23:S07	30023507	300N507	Intelligent Reader	23	PS Fail	I23 PS Fail
I23:S08	30923508	309N508	Intelligent Reader	23	Battery Test	I23 Battery Test
I23:S09	33323509	333N509	Intelligent Reader	23	Unibus Fault	I23 Unibus Fault
I23:S10	30323510	303N510	Intelligent Reader	23	Download Fail	I23 Download Fail
I23:S11	15023511	150N511	Intelligent Reader	23	Spare1	I23 Spare1
I23:S12	14323512	143N512	Intelligent Reader	23	LAN Comms	I23 LAN Comms
I23:S13	43223513	432N513	Intelligent Reader	23	Door1 Fault	I23 Door1 Fault
I23:S14	43223514	432N514	Intelligent Reader	23	Door2 Fault	I23 Door2 Fault
I23:S15	43223515	432N515	Intelligent Reader	23	Door3 Fault	I23 Door3 Fault
I23:S16	43223516	432N516	Intelligent Reader	23	Door4 Fault	I23 Door4 Fault
I23:S17	43223517	432N517	Intelligent Reader	23	Door5 Fault	I23 Door5 Fault
I23:S18	43223518	432N518	Intelligent Reader	23	Door6 Fault	I23 Door6 Fault
I23:S19	43223519	432N519	Intelligent Reader	23	Door7 Fault	I23 Door7 Fault
I23:S20	43223520	432N520	Intelligent Reader	23	Door8 Fault	I23 Door8 Fault
I23:S21	42323521	423N521	Intelligent Reader	23	Door1 Forced	I23 Door1 Forced
I23:S22	42323522	423N522	Intelligent Reader	23	Door2 Forced	I23 Door2 Forced
I23:S23	42323523	423N523	Intelligent Reader	23	Door3 Forced	I23 Door3 Forced
I23:S24	42323524	423N524	Intelligent Reader	23	Door4 Forced	I23 Door4 Forced
I23:S25	42323525	423N525	Intelligent Reader	23	Door5 Forced	I23 Door5 Forced
I23:S26	42323526	423N526	Intelligent Reader	23	Door6 Forced	I23 Door6 Forced
I23:S27	42323527	423N527	Intelligent Reader	23	Door7 Forced	I23 Door7 Forced
I23:S28	42323528	423N528	Intelligent Reader	23	Door8 Forced	I23 Door8 Forced
I23:S29	42623529	426N529	Intelligent Reader	23	Door1 DOTL	I23 Door1 DOTL
I23:S30	42623530	426N530	Intelligent Reader	23	Door2 DOTL	I23 Door2 DOTL
I23:S31	42623531	426N531	Intelligent Reader	23	Door3 DOTL	I23 Door3 DOTL
I23:S32	42623532	426N532	Intelligent Reader	23	Door4 DOTL	I23 Door4 DOTL
I23:S33	42623533	426N533	Intelligent Reader	23	Door5 DOTL	I23 Door5 DOTL
I23:S34	42623534	426N534	Intelligent Reader	23	Door6 DOTL	I23 Door6 DOTL
I23:S35	42623535	426N535	Intelligent Reader	23	Door7 DOTL	I23 Door7 DOTL
I23:S36	42623536	426N536	Intelligent Reader	23	Door8 DOTL	I23 Door8 DOTL
I23:S37	15023537	150N537	Intelligent Reader	23	Rdr1 Invalid	I23 Rdr1 Invalid
I23:S38	15023538	150N538	Intelligent Reader	23	Rdr2 Invalid	I23 Rdr2 Invalid
I23:S39	15023539	150N539	Intelligent Reader	23	Rdr3 Invalid	I23 Rdr3 Invalid
I23:S40	15023540	150N540	Intelligent Reader	23	Rdr4 Invalid	I23 Rdr4 Invalid
I23:S41	15023541	150N541	Intelligent Reader	23	Rdr5 Invalid	I23 Rdr5 Invalid
I23:S42	15023542	150N542	Intelligent Reader	23	Rdr6 Invalid	I23 Rdr6 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I23:S43	15023543	150N543	Intelligent Reader	23	Rdr7 Invalid	I23 Rdr7 Invalid
I23:S44	15023544	150N544	Intelligent Reader	23	Rdr8 Invalid	I23 Rdr8 Invalid
I23:S45	15023545	150N545	Intelligent Reader	23	Rdr9 Invalid	I23 Rdr9 Invalid
I23:S46	15023546	150N546	Intelligent Reader	23	Rdr10 Invalid	I23 Rdr10 Invalid
I23:S47	15023547	150N547	Intelligent Reader	23	Rdr11 Invalid	I23 Rdr11 Invalid
I23:S48	15023548	150N548	Intelligent Reader	23	Rdr12 Invalid	I23 Rdr12 Invalid
I23:S49	15023549	150N549	Intelligent Reader	23	Rdr13 Invalid	I23 Rdr13 Invalid
I23:S50	15023550	150N550	Intelligent Reader	23	Rdr14 Invalid	I23 Rdr14 Invalid
I23:S51	15023551	150N551	Intelligent Reader	23	Rdr15 Invalid	I23 Rdr15 Invalid
I23:S52	15023552	150N552	Intelligent Reader	23	Rdr16 Invalid	I23 Rdr16 Invalid
I23:S53	12223553	122N553	Intelligent Reader	23	Rdr1 Duress	I23 Rdr1 Duress
I23:S54	12223554	122N554	Intelligent Reader	23	Rdr2 Duress	I23 Rdr2 Duress
I23:S55	12223555	122N555	Intelligent Reader	23	Rdr3 Duress	I23 Rdr3 Duress
I23:S56	12223556	122N556	Intelligent Reader	23	Rdr4 Duress	I23 Rdr4 Duress
I23:S57	12223557	122N557	Intelligent Reader	23	Rdr5 Duress	I23 Rdr5 Duress
I23:S58	12223558	122N558	Intelligent Reader	23	Rdr6 Duress	I23 Rdr6 Duress
I23:S59	12223559	122N559	Intelligent Reader	23	Rdr7 Duress	I23 Rdr7 Duress
I23:S60	12223560	122N560	Intelligent Reader	23	Rdr8 Duress	I23 Rdr8 Duress
I23:S61	12223561	122N561	Intelligent Reader	23	Rdr9 Duress	I23 Rdr9 Duress
I23:S62	12223562	122N562	Intelligent Reader	23	Rdr10 Duress	I23 Rdr10 Duress
I23:S63	12223563	122N563	Intelligent Reader	23	Rdr11 Duress	I23 Rdr11 Duress
I23:S64	12223564	122N564	Intelligent Reader	23	Rdr12 Duress	I23 Rdr12 Duress
I23:S65	12223565	122N565	Intelligent Reader	23	Rdr13 Duress	I23 Rdr13 Duress
I23:S66	12223566	122N566	Intelligent Reader	23	Rdr14 Duress	I23 Rdr14 Duress
I23:S67	12223567	122N567	Intelligent Reader	23	Rdr15 Duress	I23 Rdr15 Duress
I23:S68	12223568	122N568	Intelligent Reader	23	Rdr16 Duress	I23 Rdr16 Duress
I23:S69	33023569	330N569	Intelligent Reader	23	Rdr1 Fault	I23 Rdr1 Fault
I23:S70	33023570	330N570	Intelligent Reader	23	Rdr2 Fault	I23 Rdr2 Fault
I23:S71	33023571	330N571	Intelligent Reader	23	Rdr3 Fault	I23 Rdr3 Fault
I23:S72	33023572	330N572	Intelligent Reader	23	Rdr4 Fault	I23 Rdr4 Fault
I23:S73	33023573	330N573	Intelligent Reader	23	Rdr5 Fault	I23 Rdr5 Fault
I23:S74	33023574	330N574	Intelligent Reader	23	Rdr6 Fault	I23 Rdr6 Fault
I23:S75	33023575	330N575	Intelligent Reader	23	Rdr7 Fault	I23 Rdr7 Fault
I23:S76	33023576	330N576	Intelligent Reader	23	Rdr8 Fault	I23 Rdr8 Fault
I23:S77	33023577	330N577	Intelligent Reader	23	Rdr9 Fault	I23 Rdr9 Fault
I23:S78	33023578	330N578	Intelligent Reader	23	Rdr10 Fault	I23 Rdr10 Fault
I23:S79	33023579	330N579	Intelligent Reader	23	Rdr11 Fault	I23 Rdr11 Fault
I23:S80	33023580	330N580	Intelligent Reader	23	Rdr12 Fault	I23 Rdr12 Fault
I23:S81	33023581	330N581	Intelligent Reader	23	Rdr13 Fault	I23 Rdr13 Fault
I23:S82	33023582	330N582	Intelligent Reader	23	Rdr14 Fault	I23 Rdr14 Fault
I23:S83	33023583	330N583	Intelligent Reader	23	Rdr15 Fault	I23 Rdr15 Fault
I23:S84	33023584	330N584	Intelligent Reader	23	Rdr16 Fault	I23 Rdr16 Fault
I23:S85	30123585	301N585	Intelligent Reader	23	Ext AC fail	I23 Ext AC fail
I23:S86	30223586	302N586	Intelligent Reader	23	Ext Low Battery	I23 Ext Low Battery
I23:S87	30023587	300N587	Intelligent Reader	23	Ext LAN Fuse	I23 Ext LAN Fuse
I23:S88	30023588	300N588	Intelligent Reader	23	Ext Detector Fuse	I23 Ext Detector Fuse
I23:S89	30023589	300N589	Intelligent Reader	23	Ext Low Volts	I23 Ext Low Volts
I23:S90	30023590	300N590	Intelligent Reader	23	Ext PS Fail	I23 Ext PS Fail
I23:S91	30923591	309N591	Intelligent Reader	23	Ext Battery Test	I23 Ext Battery Test
I23:S92	15023592	150N592	Intelligent Reader	23	Spare2	I23 Spare2
I23:S93	15023593	150N593	Intelligent Reader	23	Spare3	I23 Spare3
I24:Z01	14024501	140O501	Intelligent Reader	24	Door1 Reed	I24 Door1 Reed
I24:Z02	14024502	140O502	Intelligent Reader	24	Door2 Reed	I24 Door2 Reed
I24:Z03	14024503	140O503	Intelligent Reader	24	Door1 Tongue	I24 Door1 Tongue
I24:Z04	14024504	140O504	Intelligent Reader	24	Door2 Tongue	I24 Door2 Tongue
I24:Z05	14024505	140O505	Intelligent Reader	24	Door1 REX	I24 Door1 REX
I24:Z06	14024506	140O506	Intelligent Reader	24	Door2 REX	I24 Door2 REX

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I24:Z07	14024507	1400507	Intelligent Reader	24	Door1 REN	I24 Door1 REN
I24:Z08	14024508	1400508	Intelligent Reader	24	Door2 REN	I24 Door2 REN
I24:Z09	14024509	1400509	Intelligent Reader	24	Door3 Reed	I24 Door3 Reed
I24:Z10	14024510	1400510	Intelligent Reader	24	Door4 Reed	I24 Door4 Reed
I24:Z11	14024511	1400511	Intelligent Reader	24	Door3 Tongue	I24 Door3 Tongue
I24:Z12	14024512	1400512	Intelligent Reader	24	Door4 Tongue	I24 Door4 Tongue
I24:Z13	14024513	1400513	Intelligent Reader	24	Door3 REX	I24 Door3 REX
I24:Z14	14024514	1400514	Intelligent Reader	24	Door4 REX	I24 Door4 REX
I24:Z15	14024515	1400515	Intelligent Reader	24	Door3 REN	I24 Door3 REN
I24:Z16	14024516	1400516	Intelligent Reader	24	Door4 REN	I24 Door4 REN
I24:Z17	14024517	1400517	Intelligent Reader	24	Door5 Reed	I24 Door5 Reed
I24:Z18	14024518	1400518	Intelligent Reader	24	Door6 Reed	I24 Door6 Reed
I24:Z19	14024519	1400519	Intelligent Reader	24	Door5 Tongue	I24 Door5 Tongue
I24:Z20	14024520	1400520	Intelligent Reader	24	Door6 Tongue	I24 Door6 Tongue
I24:Z21	14024521	1400521	Intelligent Reader	24	Door5 REX	I24 Door5 REX
I24:Z22	14024522	1400522	Intelligent Reader	24	Door6 REX	I24 Door6 REX
I24:Z23	14024523	1400523	Intelligent Reader	24	Door5 REN	I24 Door5 REN
I24:Z24	14024524	1400524	Intelligent Reader	24	Door6 REN	I24 Door6 REN
I24:Z25	14024525	1400525	Intelligent Reader	24	Door7 Reed	I24 Door7 Reed
I24:Z26	14024526	1400526	Intelligent Reader	24	Door8 Reed	I24 Door8 Reed
I24:Z27	14024527	1400527	Intelligent Reader	24	Door7 Tongue	I24 Door7 Tongue
I24:Z28	14024528	1400528	Intelligent Reader	24	Door8 Tongue	I24 Door8 Tongue
I24:Z29	14024529	1400529	Intelligent Reader	24	Door7 REX	I24 Door7 REX
I24:Z30	14024530	1400530	Intelligent Reader	24	Door8 REX	I24 Door8 REX
I24:Z31	14024531	1400531	Intelligent Reader	24	Door7 REN	I24 Door7 REN
I24:Z32	14024532	1400532	Intelligent Reader	24	Door8 REN	I24 Door8 REN
I24:S01	14524501	1450501	Intelligent Reader	24	Cabinet Tamper	I24 Cabinet Tamper
I24:S02	30124502	3010502	Intelligent Reader	24	AC fail	I24 AC fail
I24:S03	30224503	3020503	Intelligent Reader	24	Low Battery	I24 Low Battery
I24:S04	30024504	3000504	Intelligent Reader	24	LAN Fuse	I24 LAN Fuse
I24:S05	30024505	3000505	Intelligent Reader	24	Detector Fuse	I24 Detector Fuse
I24:S06	30024506	3000506	Intelligent Reader	24	Low Volts	I24 Low Volts
I24:S07	30024507	3000507	Intelligent Reader	24	PS Fail	I24 PS Fail
I24:S08	30924508	3090508	Intelligent Reader	24	Battery Test	I24 Battery Test
I24:S09	33324509	3330509	Intelligent Reader	24	Unibus Fault	I24 Unibus Fault
I24:S10	30324510	3030510	Intelligent Reader	24	Download Fail	I24 Download Fail
I24:S11	15024511	1500511	Intelligent Reader	24	Spare1	I24 Spare1
I24:S12	14324512	1430512	Intelligent Reader	24	LAN Comms	I24 LAN Comms
I24:S13	43224513	4320513	Intelligent Reader	24	Door1 Fault	I24 Door1 Fault
I24:S14	43224514	4320514	Intelligent Reader	24	Door2 Fault	I24 Door2 Fault
I24:S15	43224515	4320515	Intelligent Reader	24	Door3 Fault	I24 Door3 Fault
I24:S16	43224516	4320516	Intelligent Reader	24	Door4 Fault	I24 Door4 Fault
I24:S17	43224517	4320517	Intelligent Reader	24	Door5 Fault	I24 Door5 Fault
I24:S18	43224518	4320518	Intelligent Reader	24	Door6 Fault	I24 Door6 Fault
I24:S19	43224519	4320519	Intelligent Reader	24	Door7 Fault	I24 Door7 Fault
I24:S20	43224520	4320520	Intelligent Reader	24	Door8 Fault	I24 Door8 Fault
I24:S21	42324521	4230521	Intelligent Reader	24	Door1 Forced	I24 Door1 Forced
I24:S22	42324522	4230522	Intelligent Reader	24	Door2 Forced	I24 Door2 Forced
I24:S23	42324523	4230523	Intelligent Reader	24	Door3 Forced	I24 Door3 Forced
I24:S24	42324524	4230524	Intelligent Reader	24	Door4 Forced	I24 Door4 Forced
I24:S25	42324525	4230525	Intelligent Reader	24	Door5 Forced	I24 Door5 Forced
I24:S26	42324526	4230526	Intelligent Reader	24	Door6 Forced	I24 Door6 Forced
I24:S27	42324527	4230527	Intelligent Reader	24	Door7 Forced	I24 Door7 Forced
I24:S28	42324528	4230528	Intelligent Reader	24	Door8 Forced	I24 Door8 Forced
I24:S29	42624529	4260529	Intelligent Reader	24	Door1 DOTL	I24 Door1 DOTL
I24:S30	42624530	4260530	Intelligent Reader	24	Door2 DOTL	I24 Door2 DOTL
I24:S31	42624531	4260531	Intelligent Reader	24	Door3 DOTL	I24 Door3 DOTL

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I24:S32	42624532	4260532	Intelligent Reader	24	Door4 DOTL	I24 Door4 DOTL
I24:S33	42624533	4260533	Intelligent Reader	24	Door5 DOTL	I24 Door5 DOTL
I24:S34	42624534	4260534	Intelligent Reader	24	Door6 DOTL	I24 Door6 DOTL
I24:S35	42624535	4260535	Intelligent Reader	24	Door7 DOTL	I24 Door7 DOTL
I24:S36	42624536	4260536	Intelligent Reader	24	Door8 DOTL	I24 Door8 DOTL
I24:S37	15024537	1500537	Intelligent Reader	24	Rdr1 Invalid	I24 Rdr1 Invalid
I24:S38	15024538	1500538	Intelligent Reader	24	Rdr2 Invalid	I24 Rdr2 Invalid
I24:S39	15024539	1500539	Intelligent Reader	24	Rdr3 Invalid	I24 Rdr3 Invalid
I24:S40	15024540	1500540	Intelligent Reader	24	Rdr4 Invalid	I24 Rdr4 Invalid
I24:S41	15024541	1500541	Intelligent Reader	24	Rdr5 Invalid	I24 Rdr5 Invalid
I24:S42	15024542	1500542	Intelligent Reader	24	Rdr6 Invalid	I24 Rdr6 Invalid
I24:S43	15024543	1500543	Intelligent Reader	24	Rdr7 Invalid	I24 Rdr7 Invalid
I24:S44	15024544	1500544	Intelligent Reader	24	Rdr8 Invalid	I24 Rdr8 Invalid
I24:S45	15024545	1500545	Intelligent Reader	24	Rdr9 Invalid	I24 Rdr9 Invalid
I24:S46	15024546	1500546	Intelligent Reader	24	Rdr10 Invalid	I24 Rdr10 Invalid
I24:S47	15024547	1500547	Intelligent Reader	24	Rdr11 Invalid	I24 Rdr11 Invalid
I24:S48	15024548	1500548	Intelligent Reader	24	Rdr12 Invalid	I24 Rdr12 Invalid
I24:S49	15024549	1500549	Intelligent Reader	24	Rdr13 Invalid	I24 Rdr13 Invalid
I24:S50	15024550	1500550	Intelligent Reader	24	Rdr14 Invalid	I24 Rdr14 Invalid
I24:S51	15024551	1500551	Intelligent Reader	24	Rdr15 Invalid	I24 Rdr15 Invalid
I24:S52	15024552	1500552	Intelligent Reader	24	Rdr16 Invalid	I24 Rdr16 Invalid
I24:S53	12224553	1220553	Intelligent Reader	24	Rdr1 Duress	I24 Rdr1 Duress
I24:S54	12224554	1220554	Intelligent Reader	24	Rdr2 Duress	I24 Rdr2 Duress
I24:S55	12224555	1220555	Intelligent Reader	24	Rdr3 Duress	I24 Rdr3 Duress
I24:S56	12224556	1220556	Intelligent Reader	24	Rdr4 Duress	I24 Rdr4 Duress
I24:S57	12224557	1220557	Intelligent Reader	24	Rdr5 Duress	I24 Rdr5 Duress
I24:S58	12224558	1220558	Intelligent Reader	24	Rdr6 Duress	I24 Rdr6 Duress
I24:S59	12224559	1220559	Intelligent Reader	24	Rdr7 Duress	I24 Rdr7 Duress
I24:S60	12224560	1220560	Intelligent Reader	24	Rdr8 Duress	I24 Rdr8 Duress
I24:S61	12224561	1220561	Intelligent Reader	24	Rdr9 Duress	I24 Rdr9 Duress
I24:S62	12224562	1220562	Intelligent Reader	24	Rdr10 Duress	I24 Rdr10 Duress
I24:S63	12224563	1220563	Intelligent Reader	24	Rdr11 Duress	I24 Rdr11 Duress
I24:S64	12224564	1220564	Intelligent Reader	24	Rdr12 Duress	I24 Rdr12 Duress
I24:S65	12224565	1220565	Intelligent Reader	24	Rdr13 Duress	I24 Rdr13 Duress
I24:S66	12224566	1220566	Intelligent Reader	24	Rdr14 Duress	I24 Rdr14 Duress
I24:S67	12224567	1220567	Intelligent Reader	24	Rdr15 Duress	I24 Rdr15 Duress
I24:S68	12224568	1220568	Intelligent Reader	24	Rdr16 Duress	I24 Rdr16 Duress
I24:S69	33024569	3300569	Intelligent Reader	24	Rdr1 Fault	I24 Rdr1 Fault
I24:S70	33024570	3300570	Intelligent Reader	24	Rdr2 Fault	I24 Rdr2 Fault
I24:S71	33024571	3300571	Intelligent Reader	24	Rdr3 Fault	I24 Rdr3 Fault
I24:S72	33024572	3300572	Intelligent Reader	24	Rdr4 Fault	I24 Rdr4 Fault
I24:S73	33024573	3300573	Intelligent Reader	24	Rdr5 Fault	I24 Rdr5 Fault
I24:S74	33024574	3300574	Intelligent Reader	24	Rdr6 Fault	I24 Rdr6 Fault
I24:S75	33024575	3300575	Intelligent Reader	24	Rdr7 Fault	I24 Rdr7 Fault
I24:S76	33024576	3300576	Intelligent Reader	24	Rdr8 Fault	I24 Rdr8 Fault
I24:S77	33024577	3300577	Intelligent Reader	24	Rdr9 Fault	I24 Rdr9 Fault
I24:S78	33024578	3300578	Intelligent Reader	24	Rdr10 Fault	I24 Rdr10 Fault
I24:S79	33024579	3300579	Intelligent Reader	24	Rdr11 Fault	I24 Rdr11 Fault
I24:S80	33024580	3300580	Intelligent Reader	24	Rdr12 Fault	I24 Rdr12 Fault
I24:S81	33024581	3300581	Intelligent Reader	24	Rdr13 Fault	I24 Rdr13 Fault
I24:S82	33024582	3300582	Intelligent Reader	24	Rdr14 Fault	I24 Rdr14 Fault
I24:S83	33024583	3300583	Intelligent Reader	24	Rdr15 Fault	I24 Rdr15 Fault
I24:S84	33024584	3300584	Intelligent Reader	24	Rdr16 Fault	I24 Rdr16 Fault
I24:S85	30124585	3010585	Intelligent Reader	24	Ext AC fail	I24 Ext AC fail
I24:S86	30224586	3020586	Intelligent Reader	24	Ext Low Battery	I24 Ext Low Battery
I24:S87	30024587	3000587	Intelligent Reader	24	Ext LAN Fuse	I24 Ext LAN Fuse
I24:S88	30024588	3000588	Intelligent Reader	24	Ext Detector Fuse	I24 Ext Detector Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I24:S89	30024589	300O589	Intelligent Reader	24	Ext Low Volts	I24 Ext Low Volts
I24:S90	30024590	300O590	Intelligent Reader	24	Ext PS Fail	I24 Ext PS Fail
I24:S91	30924591	309O591	Intelligent Reader	24	Ext Battery Test	I24 Ext Battery Test
I24:S92	15024592	150O592	Intelligent Reader	24	Spare2	I24 Spare2
I24:S93	15024593	150O593	Intelligent Reader	24	Spare3	I24 Spare3
I25:Z01	14025501	140P501	Intelligent Reader	25	Door1 Reed	I25 Door1 Reed
I25:Z02	14025502	140P502	Intelligent Reader	25	Door2 Reed	I25 Door2 Reed
I25:Z03	14025503	140P503	Intelligent Reader	25	Door1 Tongue	I25 Door1 Tongue
I25:Z04	14025504	140P504	Intelligent Reader	25	Door2 Tongue	I25 Door2 Tongue
I25:Z05	14025505	140P505	Intelligent Reader	25	Door1 REX	I25 Door1 REX
I25:Z06	14025506	140P506	Intelligent Reader	25	Door2 REX	I25 Door2 REX
I25:Z07	14025507	140P507	Intelligent Reader	25	Door1 REN	I25 Door1 REN
I25:Z08	14025508	140P508	Intelligent Reader	25	Door2 REN	I25 Door2 REN
I25:Z09	14025509	140P509	Intelligent Reader	25	Door3 Reed	I25 Door3 Reed
I25:Z10	14025510	140P510	Intelligent Reader	25	Door4 Reed	I25 Door4 Reed
I25:Z11	14025511	140P511	Intelligent Reader	25	Door3 Tongue	I25 Door3 Tongue
I25:Z12	14025512	140P512	Intelligent Reader	25	Door4 Tongue	I25 Door4 Tongue
I25:Z13	14025513	140P513	Intelligent Reader	25	Door3 REX	I25 Door3 REX
I25:Z14	14025514	140P514	Intelligent Reader	25	Door4 REX	I25 Door4 REX
I25:Z15	14025515	140P515	Intelligent Reader	25	Door3 REN	I25 Door3 REN
I25:Z16	14025516	140P516	Intelligent Reader	25	Door4 REN	I25 Door4 REN
I25:Z17	14025517	140P517	Intelligent Reader	25	Door5 Reed	I25 Door5 Reed
I25:Z18	14025518	140P518	Intelligent Reader	25	Door6 Reed	I25 Door6 Reed
I25:Z19	14025519	140P519	Intelligent Reader	25	Door5 Tongue	I25 Door5 Tongue
I25:Z20	14025520	140P520	Intelligent Reader	25	Door6 Tongue	I25 Door6 Tongue
I25:Z21	14025521	140P521	Intelligent Reader	25	Door5 REX	I25 Door5 REX
I25:Z22	14025522	140P522	Intelligent Reader	25	Door6 REX	I25 Door6 REX
I25:Z23	14025523	140P523	Intelligent Reader	25	Door5 REN	I25 Door5 REN
I25:Z24	14025524	140P524	Intelligent Reader	25	Door6 REN	I25 Door6 REN
I25:Z25	14025525	140P525	Intelligent Reader	25	Door7 Reed	I25 Door7 Reed
I25:Z26	14025526	140P526	Intelligent Reader	25	Door8 Reed	I25 Door8 Reed
I25:Z27	14025527	140P527	Intelligent Reader	25	Door7 Tongue	I25 Door7 Tongue
I25:Z28	14025528	140P528	Intelligent Reader	25	Door8 Tongue	I25 Door8 Tongue
I25:Z29	14025529	140P529	Intelligent Reader	25	Door7 REX	I25 Door7 REX
I25:Z30	14025530	140P530	Intelligent Reader	25	Door8 REX	I25 Door8 REX
I25:Z31	14025531	140P531	Intelligent Reader	25	Door7 REN	I25 Door7 REN
I25:Z32	14025532	140P532	Intelligent Reader	25	Door8 REN	I25 Door8 REN
I25:S01	14525501	145P501	Intelligent Reader	25	Cabinet Tamper	I25 Cabinet Tamper
I25:S02	30125502	301P502	Intelligent Reader	25	AC fail	I25 AC fail
I25:S03	30225503	302P503	Intelligent Reader	25	Low Battery	I25 Low Battery
I25:S04	30025504	300P504	Intelligent Reader	25	LAN Fuse	I25 LAN Fuse
I25:S05	30025505	300P505	Intelligent Reader	25	Detector Fuse	I25 Detector Fuse
I25:S06	30025506	300P506	Intelligent Reader	25	Low Volts	I25 Low Volts
I25:S07	30025507	300P507	Intelligent Reader	25	PS Fail	I25 PS Fail
I25:S08	30925508	309P508	Intelligent Reader	25	Battery Test	I25 Battery Test
I25:S09	33325509	333P509	Intelligent Reader	25	Unibus Fault	I25 Unibus Fault
I25:S10	30325510	303P510	Intelligent Reader	25	Download Fail	I25 Download Fail
I25:S11	15025511	150P511	Intelligent Reader	25	Spare1	I25 Spare1
I25:S12	14325512	143P512	Intelligent Reader	25	LAN Comms	I25 LAN Comms
I25:S13	43225513	432P513	Intelligent Reader	25	Door1 Fault	I25 Door1 Fault
I25:S14	43225514	432P514	Intelligent Reader	25	Door2 Fault	I25 Door2 Fault
I25:S15	43225515	432P515	Intelligent Reader	25	Door3 Fault	I25 Door3 Fault
I25:S16	43225516	432P516	Intelligent Reader	25	Door4 Fault	I25 Door4 Fault
I25:S17	43225517	432P517	Intelligent Reader	25	Door5 Fault	I25 Door5 Fault
I25:S18	43225518	432P518	Intelligent Reader	25	Door6 Fault	I25 Door6 Fault
I25:S19	43225519	432P519	Intelligent Reader	25	Door7 Fault	I25 Door7 Fault
I25:S20	43225520	432P520	Intelligent Reader	25	Door8 Fault	I25 Door8 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I25:S21	42325521	423P521	Intelligent Reader	25	Door1 Forced	I25 Door1 Forced
I25:S22	42325522	423P522	Intelligent Reader	25	Door2 Forced	I25 Door2 Forced
I25:S23	42325523	423P523	Intelligent Reader	25	Door3 Forced	I25 Door3 Forced
I25:S24	42325524	423P524	Intelligent Reader	25	Door4 Forced	I25 Door4 Forced
I25:S25	42325525	423P525	Intelligent Reader	25	Door5 Forced	I25 Door5 Forced
I25:S26	42325526	423P526	Intelligent Reader	25	Door6 Forced	I25 Door6 Forced
I25:S27	42325527	423P527	Intelligent Reader	25	Door7 Forced	I25 Door7 Forced
I25:S28	42325528	423P528	Intelligent Reader	25	Door8 Forced	I25 Door8 Forced
I25:S29	42625529	426P529	Intelligent Reader	25	Door1 DOTL	I25 Door1 DOTL
I25:S30	42625530	426P530	Intelligent Reader	25	Door2 DOTL	I25 Door2 DOTL
I25:S31	42625531	426P531	Intelligent Reader	25	Door3 DOTL	I25 Door3 DOTL
I25:S32	42625532	426P532	Intelligent Reader	25	Door4 DOTL	I25 Door4 DOTL
I25:S33	42625533	426P533	Intelligent Reader	25	Door5 DOTL	I25 Door5 DOTL
I25:S34	42625534	426P534	Intelligent Reader	25	Door6 DOTL	I25 Door6 DOTL
I25:S35	42625535	426P535	Intelligent Reader	25	Door7 DOTL	I25 Door7 DOTL
I25:S36	42625536	426P536	Intelligent Reader	25	Door8 DOTL	I25 Door8 DOTL
I25:S37	15025537	150P537	Intelligent Reader	25	Rdr1 Invalid	I25 Rdr1 Invalid
I25:S38	15025538	150P538	Intelligent Reader	25	Rdr2 Invalid	I25 Rdr2 Invalid
I25:S39	15025539	150P539	Intelligent Reader	25	Rdr3 Invalid	I25 Rdr3 Invalid
I25:S40	15025540	150P540	Intelligent Reader	25	Rdr4 Invalid	I25 Rdr4 Invalid
I25:S41	15025541	150P541	Intelligent Reader	25	Rdr5 Invalid	I25 Rdr5 Invalid
I25:S42	15025542	150P542	Intelligent Reader	25	Rdr6 Invalid	I25 Rdr6 Invalid
I25:S43	15025543	150P543	Intelligent Reader	25	Rdr7 Invalid	I25 Rdr7 Invalid
I25:S44	15025544	150P544	Intelligent Reader	25	Rdr8 Invalid	I25 Rdr8 Invalid
I25:S45	15025545	150P545	Intelligent Reader	25	Rdr9 Invalid	I25 Rdr9 Invalid
I25:S46	15025546	150P546	Intelligent Reader	25	Rdr10 Invalid	I25 Rdr10 Invalid
I25:S47	15025547	150P547	Intelligent Reader	25	Rdr11 Invalid	I25 Rdr11 Invalid
I25:S48	15025548	150P548	Intelligent Reader	25	Rdr12 Invalid	I25 Rdr12 Invalid
I25:S49	15025549	150P549	Intelligent Reader	25	Rdr13 Invalid	I25 Rdr13 Invalid
I25:S50	15025550	150P550	Intelligent Reader	25	Rdr14 Invalid	I25 Rdr14 Invalid
I25:S51	15025551	150P551	Intelligent Reader	25	Rdr15 Invalid	I25 Rdr15 Invalid
I25:S52	15025552	150P552	Intelligent Reader	25	Rdr16 Invalid	I25 Rdr16 Invalid
I25:S53	12225553	122P553	Intelligent Reader	25	Rdr1 Duress	I25 Rdr1 Duress
I25:S54	12225554	122P554	Intelligent Reader	25	Rdr2 Duress	I25 Rdr2 Duress
I25:S55	12225555	122P555	Intelligent Reader	25	Rdr3 Duress	I25 Rdr3 Duress
I25:S56	12225556	122P556	Intelligent Reader	25	Rdr4 Duress	I25 Rdr4 Duress
I25:S57	12225557	122P557	Intelligent Reader	25	Rdr5 Duress	I25 Rdr5 Duress
I25:S58	12225558	122P558	Intelligent Reader	25	Rdr6 Duress	I25 Rdr6 Duress
I25:S59	12225559	122P559	Intelligent Reader	25	Rdr7 Duress	I25 Rdr7 Duress
I25:S60	12225560	122P560	Intelligent Reader	25	Rdr8 Duress	I25 Rdr8 Duress
I25:S61	12225561	122P561	Intelligent Reader	25	Rdr9 Duress	I25 Rdr9 Duress
I25:S62	12225562	122P562	Intelligent Reader	25	Rdr10 Duress	I25 Rdr10 Duress
I25:S63	12225563	122P563	Intelligent Reader	25	Rdr11 Duress	I25 Rdr11 Duress
I25:S64	12225564	122P564	Intelligent Reader	25	Rdr12 Duress	I25 Rdr12 Duress
I25:S65	12225565	122P565	Intelligent Reader	25	Rdr13 Duress	I25 Rdr13 Duress
I25:S66	12225566	122P566	Intelligent Reader	25	Rdr14 Duress	I25 Rdr14 Duress
I25:S67	12225567	122P567	Intelligent Reader	25	Rdr15 Duress	I25 Rdr15 Duress
I25:S68	12225568	122P568	Intelligent Reader	25	Rdr16 Duress	I25 Rdr16 Duress
I25:S69	33025569	330P569	Intelligent Reader	25	Rdr1 Fault	I25 Rdr1 Fault
I25:S70	33025570	330P570	Intelligent Reader	25	Rdr2 Fault	I25 Rdr2 Fault
I25:S71	33025571	330P571	Intelligent Reader	25	Rdr3 Fault	I25 Rdr3 Fault
I25:S72	33025572	330P572	Intelligent Reader	25	Rdr4 Fault	I25 Rdr4 Fault
I25:S73	33025573	330P573	Intelligent Reader	25	Rdr5 Fault	I25 Rdr5 Fault
I25:S74	33025574	330P574	Intelligent Reader	25	Rdr6 Fault	I25 Rdr6 Fault
I25:S75	33025575	330P575	Intelligent Reader	25	Rdr7 Fault	I25 Rdr7 Fault
I25:S76	33025576	330P576	Intelligent Reader	25	Rdr8 Fault	I25 Rdr8 Fault
I25:S77	33025577	330P577	Intelligent Reader	25	Rdr9 Fault	I25 Rdr9 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I25:S78	33025578	330P578	Intelligent Reader	25	Rdr10 Fault	I25 Rdr10 Fault
I25:S79	33025579	330P579	Intelligent Reader	25	Rdr11 Fault	I25 Rdr11 Fault
I25:S80	33025580	330P580	Intelligent Reader	25	Rdr12 Fault	I25 Rdr12 Fault
I25:S81	33025581	330P581	Intelligent Reader	25	Rdr13 Fault	I25 Rdr13 Fault
I25:S82	33025582	330P582	Intelligent Reader	25	Rdr14 Fault	I25 Rdr14 Fault
I25:S83	33025583	330P583	Intelligent Reader	25	Rdr15 Fault	I25 Rdr15 Fault
I25:S84	33025584	330P584	Intelligent Reader	25	Rdr16 Fault	I25 Rdr16 Fault
I25:S85	30125585	301P585	Intelligent Reader	25	Ext AC fail	I25 Ext AC fail
I25:S86	30225586	302P586	Intelligent Reader	25	Ext Low Battery	I25 Ext Low Battery
I25:S87	30025587	300P587	Intelligent Reader	25	Ext LAN Fuse	I25 Ext LAN Fuse
I25:S88	30025588	300P588	Intelligent Reader	25	Ext Detector Fuse	I25 Ext Detector Fuse
I25:S89	30025589	300P589	Intelligent Reader	25	Ext Low Volts	I25 Ext Low Volts
I25:S90	30025590	300P590	Intelligent Reader	25	Ext PS Fail	I25 Ext PS Fail
I25:S91	30925591	309P591	Intelligent Reader	25	Ext Battery Test	I25 Ext Battery Test
I25:S92	15025592	150P592	Intelligent Reader	25	Spare2	I25 Spare2
I25:S93	15025593	150P593	Intelligent Reader	25	Spare3	I25 Spare3
I26:Z01	14026501	140Q501	Intelligent Reader	26	Door1 Reed	I26 Door1 Reed
I26:Z02	14026502	140Q502	Intelligent Reader	26	Door2 Reed	I26 Door2 Reed
I26:Z03	14026503	140Q503	Intelligent Reader	26	Door1 Tongue	I26 Door1 Tongue
I26:Z04	14026504	140Q504	Intelligent Reader	26	Door2 Tongue	I26 Door2 Tongue
I26:Z05	14026505	140Q505	Intelligent Reader	26	Door1 REX	I26 Door1 REX
I26:Z06	14026506	140Q506	Intelligent Reader	26	Door2 REX	I26 Door2 REX
I26:Z07	14026507	140Q507	Intelligent Reader	26	Door1 REN	I26 Door1 REN
I26:Z08	14026508	140Q508	Intelligent Reader	26	Door2 REN	I26 Door2 REN
I26:Z09	14026509	140Q509	Intelligent Reader	26	Door3 Reed	I26 Door3 Reed
I26:Z10	14026510	140Q510	Intelligent Reader	26	Door4 Reed	I26 Door4 Reed
I26:Z11	14026511	140Q511	Intelligent Reader	26	Door3 Tongue	I26 Door3 Tongue
I26:Z12	14026512	140Q512	Intelligent Reader	26	Door4 Tongue	I26 Door4 Tongue
I26:Z13	14026513	140Q513	Intelligent Reader	26	Door3 REX	I26 Door3 REX
I26:Z14	14026514	140Q514	Intelligent Reader	26	Door4 REX	I26 Door4 REX
I26:Z15	14026515	140Q515	Intelligent Reader	26	Door3 REN	I26 Door3 REN
I26:Z16	14026516	140Q516	Intelligent Reader	26	Door4 REN	I26 Door4 REN
I26:Z17	14026517	140Q517	Intelligent Reader	26	Door5 Reed	I26 Door5 Reed
I26:Z18	14026518	140Q518	Intelligent Reader	26	Door6 Reed	I26 Door6 Reed
I26:Z19	14026519	140Q519	Intelligent Reader	26	Door5 Tongue	I26 Door5 Tongue
I26:Z20	14026520	140Q520	Intelligent Reader	26	Door6 Tongue	I26 Door6 Tongue
I26:Z21	14026521	140Q521	Intelligent Reader	26	Door5 REX	I26 Door5 REX
I26:Z22	14026522	140Q522	Intelligent Reader	26	Door6 REX	I26 Door6 REX
I26:Z23	14026523	140Q523	Intelligent Reader	26	Door5 REN	I26 Door5 REN
I26:Z24	14026524	140Q524	Intelligent Reader	26	Door6 REN	I26 Door6 REN
I26:Z25	14026525	140Q525	Intelligent Reader	26	Door7 Reed	I26 Door7 Reed
I26:Z26	14026526	140Q526	Intelligent Reader	26	Door8 Reed	I26 Door8 Reed
I26:Z27	14026527	140Q527	Intelligent Reader	26	Door7 Tongue	I26 Door7 Tongue
I26:Z28	14026528	140Q528	Intelligent Reader	26	Door8 Tongue	I26 Door8 Tongue
I26:Z29	14026529	140Q529	Intelligent Reader	26	Door7 REX	I26 Door7 REX
I26:Z30	14026530	140Q530	Intelligent Reader	26	Door8 REX	I26 Door8 REX
I26:Z31	14026531	140Q531	Intelligent Reader	26	Door7 REN	I26 Door7 REN
I26:Z32	14026532	140Q532	Intelligent Reader	26	Door8 REN	I26 Door8 REN
I26:S01	14526501	145Q501	Intelligent Reader	26	Cabinet Tamper	I26 Cabinet Tamper
I26:S02	30126502	301Q502	Intelligent Reader	26	AC fail	I26 AC fail
I26:S03	30226503	302Q503	Intelligent Reader	26	Low Battery	I26 Low Battery
I26:S04	30026504	300Q504	Intelligent Reader	26	LAN Fuse	I26 LAN Fuse
I26:S05	30026505	300Q505	Intelligent Reader	26	Detector Fuse	I26 Detector Fuse
I26:S06	30026506	300Q506	Intelligent Reader	26	Low Volts	I26 Low Volts
I26:S07	30026507	300Q507	Intelligent Reader	26	PS Fail	I26 PS Fail
I26:S08	30926508	309Q508	Intelligent Reader	26	Battery Test	I26 Battery Test
I26:S09	33326509	333Q509	Intelligent Reader	26	Unibus Fault	I26 Unibus Fault

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I26:S10	30326510	303Q510	Intelligent Reader	26	Download Fail	I26 Download Fail
I26:S11	15026511	150Q511	Intelligent Reader	26	Spare1	I26 Spare1
I26:S12	14326512	143Q512	Intelligent Reader	26	LAN Comms	I26 LAN Comms
I26:S13	43226513	432Q513	Intelligent Reader	26	Door1 Fault	I26 Door1 Fault
I26:S14	43226514	432Q514	Intelligent Reader	26	Door2 Fault	I26 Door2 Fault
I26:S15	43226515	432Q515	Intelligent Reader	26	Door3 Fault	I26 Door3 Fault
I26:S16	43226516	432Q516	Intelligent Reader	26	Door4 Fault	I26 Door4 Fault
I26:S17	43226517	432Q517	Intelligent Reader	26	Door5 Fault	I26 Door5 Fault
I26:S18	43226518	432Q518	Intelligent Reader	26	Door6 Fault	I26 Door6 Fault
I26:S19	43226519	432Q519	Intelligent Reader	26	Door7 Fault	I26 Door7 Fault
I26:S20	43226520	432Q520	Intelligent Reader	26	Door8 Fault	I26 Door8 Fault
I26:S21	42326521	423Q521	Intelligent Reader	26	Door1 Forced	I26 Door1 Forced
I26:S22	42326522	423Q522	Intelligent Reader	26	Door2 Forced	I26 Door2 Forced
I26:S23	42326523	423Q523	Intelligent Reader	26	Door3 Forced	I26 Door3 Forced
I26:S24	42326524	423Q524	Intelligent Reader	26	Door4 Forced	I26 Door4 Forced
I26:S25	42326525	423Q525	Intelligent Reader	26	Door5 Forced	I26 Door5 Forced
I26:S26	42326526	423Q526	Intelligent Reader	26	Door6 Forced	I26 Door6 Forced
I26:S27	42326527	423Q527	Intelligent Reader	26	Door7 Forced	I26 Door7 Forced
I26:S28	42326528	423Q528	Intelligent Reader	26	Door8 Forced	I26 Door8 Forced
I26:S29	42626529	426Q529	Intelligent Reader	26	Door1 DOTL	I26 Door1 DOTL
I26:S30	42626530	426Q530	Intelligent Reader	26	Door2 DOTL	I26 Door2 DOTL
I26:S31	42626531	426Q531	Intelligent Reader	26	Door3 DOTL	I26 Door3 DOTL
I26:S32	42626532	426Q532	Intelligent Reader	26	Door4 DOTL	I26 Door4 DOTL
I26:S33	42626533	426Q533	Intelligent Reader	26	Door5 DOTL	I26 Door5 DOTL
I26:S34	42626534	426Q534	Intelligent Reader	26	Door6 DOTL	I26 Door6 DOTL
I26:S35	42626535	426Q535	Intelligent Reader	26	Door7 DOTL	I26 Door7 DOTL
I26:S36	42626536	426Q536	Intelligent Reader	26	Door8 DOTL	I26 Door8 DOTL
I26:S37	15026537	150Q537	Intelligent Reader	26	Rdr1 Invalid	I26 Rdr1 Invalid
I26:S38	15026538	150Q538	Intelligent Reader	26	Rdr2 Invalid	I26 Rdr2 Invalid
I26:S39	15026539	150Q539	Intelligent Reader	26	Rdr3 Invalid	I26 Rdr3 Invalid
I26:S40	15026540	150Q540	Intelligent Reader	26	Rdr4 Invalid	I26 Rdr4 Invalid
I26:S41	15026541	150Q541	Intelligent Reader	26	Rdr5 Invalid	I26 Rdr5 Invalid
I26:S42	15026542	150Q542	Intelligent Reader	26	Rdr6 Invalid	I26 Rdr6 Invalid
I26:S43	15026543	150Q543	Intelligent Reader	26	Rdr7 Invalid	I26 Rdr7 Invalid
I26:S44	15026544	150Q544	Intelligent Reader	26	Rdr8 Invalid	I26 Rdr8 Invalid
I26:S45	15026545	150Q545	Intelligent Reader	26	Rdr9 Invalid	I26 Rdr9 Invalid
I26:S46	15026546	150Q546	Intelligent Reader	26	Rdr10 Invalid	I26 Rdr10 Invalid
I26:S47	15026547	150Q547	Intelligent Reader	26	Rdr11 Invalid	I26 Rdr11 Invalid
I26:S48	15026548	150Q548	Intelligent Reader	26	Rdr12 Invalid	I26 Rdr12 Invalid
I26:S49	15026549	150Q549	Intelligent Reader	26	Rdr13 Invalid	I26 Rdr13 Invalid
I26:S50	15026550	150Q550	Intelligent Reader	26	Rdr14 Invalid	I26 Rdr14 Invalid
I26:S51	15026551	150Q551	Intelligent Reader	26	Rdr15 Invalid	I26 Rdr15 Invalid
I26:S52	15026552	150Q552	Intelligent Reader	26	Rdr16 Invalid	I26 Rdr16 Invalid
I26:S53	12226553	122Q553	Intelligent Reader	26	Rdr1 Duress	I26 Rdr1 Duress
I26:S54	12226554	122Q554	Intelligent Reader	26	Rdr2 Duress	I26 Rdr2 Duress
I26:S55	12226555	122Q555	Intelligent Reader	26	Rdr3 Duress	I26 Rdr3 Duress
I26:S56	12226556	122Q556	Intelligent Reader	26	Rdr4 Duress	I26 Rdr4 Duress
I26:S57	12226557	122Q557	Intelligent Reader	26	Rdr5 Duress	I26 Rdr5 Duress
I26:S58	12226558	122Q558	Intelligent Reader	26	Rdr6 Duress	I26 Rdr6 Duress
I26:S59	12226559	122Q559	Intelligent Reader	26	Rdr7 Duress	I26 Rdr7 Duress
I26:S60	12226560	122Q560	Intelligent Reader	26	Rdr8 Duress	I26 Rdr8 Duress
I26:S61	12226561	122Q561	Intelligent Reader	26	Rdr9 Duress	I26 Rdr9 Duress
I26:S62	12226562	122Q562	Intelligent Reader	26	Rdr10 Duress	I26 Rdr10 Duress
I26:S63	12226563	122Q563	Intelligent Reader	26	Rdr11 Duress	I26 Rdr11 Duress
I26:S64	12226564	122Q564	Intelligent Reader	26	Rdr12 Duress	I26 Rdr12 Duress
I26:S65	12226565	122Q565	Intelligent Reader	26	Rdr13 Duress	I26 Rdr13 Duress
I26:S66	12226566	122Q566	Intelligent Reader	26	Rdr14 Duress	I26 Rdr14 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I26:S67	12226567	122Q567	Intelligent Reader	26	Rdr15 Duress	I26 Rdr15 Duress
I26:S68	12226568	122Q568	Intelligent Reader	26	Rdr16 Duress	I26 Rdr16 Duress
I26:S69	33026569	330Q569	Intelligent Reader	26	Rdr1 Fault	I26 Rdr1 Fault
I26:S70	33026570	330Q570	Intelligent Reader	26	Rdr2 Fault	I26 Rdr2 Fault
I26:S71	33026571	330Q571	Intelligent Reader	26	Rdr3 Fault	I26 Rdr3 Fault
I26:S72	33026572	330Q572	Intelligent Reader	26	Rdr4 Fault	I26 Rdr4 Fault
I26:S73	33026573	330Q573	Intelligent Reader	26	Rdr5 Fault	I26 Rdr5 Fault
I26:S74	33026574	330Q574	Intelligent Reader	26	Rdr6 Fault	I26 Rdr6 Fault
I26:S75	33026575	330Q575	Intelligent Reader	26	Rdr7 Fault	I26 Rdr7 Fault
I26:S76	33026576	330Q576	Intelligent Reader	26	Rdr8 Fault	I26 Rdr8 Fault
I26:S77	33026577	330Q577	Intelligent Reader	26	Rdr9 Fault	I26 Rdr9 Fault
I26:S78	33026578	330Q578	Intelligent Reader	26	Rdr10 Fault	I26 Rdr10 Fault
I26:S79	33026579	330Q579	Intelligent Reader	26	Rdr11 Fault	I26 Rdr11 Fault
I26:S80	33026580	330Q580	Intelligent Reader	26	Rdr12 Fault	I26 Rdr12 Fault
I26:S81	33026581	330Q581	Intelligent Reader	26	Rdr13 Fault	I26 Rdr13 Fault
I26:S82	33026582	330Q582	Intelligent Reader	26	Rdr14 Fault	I26 Rdr14 Fault
I26:S83	33026583	330Q583	Intelligent Reader	26	Rdr15 Fault	I26 Rdr15 Fault
I26:S84	33026584	330Q584	Intelligent Reader	26	Rdr16 Fault	I26 Rdr16 Fault
I26:S85	30126585	301Q585	Intelligent Reader	26	Ext AC fail	I26 Ext AC fail
I26:S86	30226586	302Q586	Intelligent Reader	26	Ext Low Battery	I26 Ext Low Battery
I26:S87	30026587	300Q587	Intelligent Reader	26	Ext LAN Fuse	I26 Ext LAN Fuse
I26:S88	30026588	300Q588	Intelligent Reader	26	Ext Detector Fuse	I26 Ext Detector Fuse
I26:S89	30026589	300Q589	Intelligent Reader	26	Ext Low Volts	I26 Ext Low Volts
I26:S90	30026590	300Q590	Intelligent Reader	26	Ext PS Fail	I26 Ext PS Fail
I26:S91	30926591	309Q591	Intelligent Reader	26	Ext Battery Test	I26 Ext Battery Test
I26:S92	15026592	150Q592	Intelligent Reader	26	Spare2	I26 Spare2
I26:S93	15026593	150Q593	Intelligent Reader	26	Spare3	I26 Spare3
I27:Z01	14027501	140R501	Intelligent Reader	27	Door1 Reed	I27 Door1 Reed
I27:Z02	14027502	140R502	Intelligent Reader	27	Door2 Reed	I27 Door2 Reed
I27:Z03	14027503	140R503	Intelligent Reader	27	Door1 Tongue	I27 Door1 Tongue
I27:Z04	14027504	140R504	Intelligent Reader	27	Door2 Tongue	I27 Door2 Tongue
I27:Z05	14027505	140R505	Intelligent Reader	27	Door1 REX	I27 Door1 REX
I27:Z06	14027506	140R506	Intelligent Reader	27	Door2 REX	I27 Door2 REX
I27:Z07	14027507	140R507	Intelligent Reader	27	Door1 REN	I27 Door1 REN
I27:Z08	14027508	140R508	Intelligent Reader	27	Door2 REN	I27 Door2 REN
I27:Z09	14027509	140R509	Intelligent Reader	27	Door3 Reed	I27 Door3 Reed
I27:Z10	14027510	140R510	Intelligent Reader	27	Door4 Reed	I27 Door4 Reed
I27:Z11	14027511	140R511	Intelligent Reader	27	Door3 Tongue	I27 Door3 Tongue
I27:Z12	14027512	140R512	Intelligent Reader	27	Door4 Tongue	I27 Door4 Tongue
I27:Z13	14027513	140R513	Intelligent Reader	27	Door3 REX	I27 Door3 REX
I27:Z14	14027514	140R514	Intelligent Reader	27	Door4 REX	I27 Door4 REX
I27:Z15	14027515	140R515	Intelligent Reader	27	Door3 REN	I27 Door3 REN
I27:Z16	14027516	140R516	Intelligent Reader	27	Door4 REN	I27 Door4 REN
I27:Z17	14027517	140R517	Intelligent Reader	27	Door5 Reed	I27 Door5 Reed
I27:Z18	14027518	140R518	Intelligent Reader	27	Door6 Reed	I27 Door6 Reed
I27:Z19	14027519	140R519	Intelligent Reader	27	Door5 Tongue	I27 Door5 Tongue
I27:Z20	14027520	140R520	Intelligent Reader	27	Door6 Tongue	I27 Door6 Tongue
I27:Z21	14027521	140R521	Intelligent Reader	27	Door5 REX	I27 Door5 REX
I27:Z22	14027522	140R522	Intelligent Reader	27	Door6 REX	I27 Door6 REX
I27:Z23	14027523	140R523	Intelligent Reader	27	Door5 REN	I27 Door5 REN
I27:Z24	14027524	140R524	Intelligent Reader	27	Door6 REN	I27 Door6 REN
I27:Z25	14027525	140R525	Intelligent Reader	27	Door7 Reed	I27 Door7 Reed
I27:Z26	14027526	140R526	Intelligent Reader	27	Door8 Reed	I27 Door8 Reed
I27:Z27	14027527	140R527	Intelligent Reader	27	Door7 Tongue	I27 Door7 Tongue
I27:Z28	14027528	140R528	Intelligent Reader	27	Door8 Tongue	I27 Door8 Tongue
I27:Z29	14027529	140R529	Intelligent Reader	27	Door7 REX	I27 Door7 REX
I27:Z30	14027530	140R530	Intelligent Reader	27	Door8 REX	I27 Door8 REX

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I27:Z31	14027531	140R531	Intelligent Reader	27	Door7 REN	I27 Door7 REN
I27:Z32	14027532	140R532	Intelligent Reader	27	Door8 REN	I27 Door8 REN
I27:S01	14527501	145R501	Intelligent Reader	27	Cabinet Tamper	I27 Cabinet Tamper
I27:S02	30127502	301R502	Intelligent Reader	27	AC fail	I27 AC fail
I27:S03	30227503	302R503	Intelligent Reader	27	Low Battery	I27 Low Battery
I27:S04	30027504	300R504	Intelligent Reader	27	LAN Fuse	I27 LAN Fuse
I27:S05	30027505	300R505	Intelligent Reader	27	Detector Fuse	I27 Detector Fuse
I27:S06	30027506	300R506	Intelligent Reader	27	Low Volts	I27 Low Volts
I27:S07	30027507	300R507	Intelligent Reader	27	PS Fail	I27 PS Fail
I27:S08	30927508	309R508	Intelligent Reader	27	Battery Test	I27 Battery Test
I27:S09	33327509	333R509	Intelligent Reader	27	Unibus Fault	I27 Unibus Fault
I27:S10	30327510	303R510	Intelligent Reader	27	Download Fail	I27 Download Fail
I27:S11	15027511	150R511	Intelligent Reader	27	Spare1	I27 Spare1
I27:S12	14327512	143R512	Intelligent Reader	27	LAN Comms	I27 LAN Comms
I27:S13	43227513	432R513	Intelligent Reader	27	Door1 Fault	I27 Door1 Fault
I27:S14	43227514	432R514	Intelligent Reader	27	Door2 Fault	I27 Door2 Fault
I27:S15	43227515	432R515	Intelligent Reader	27	Door3 Fault	I27 Door3 Fault
I27:S16	43227516	432R516	Intelligent Reader	27	Door4 Fault	I27 Door4 Fault
I27:S17	43227517	432R517	Intelligent Reader	27	Door5 Fault	I27 Door5 Fault
I27:S18	43227518	432R518	Intelligent Reader	27	Door6 Fault	I27 Door6 Fault
I27:S19	43227519	432R519	Intelligent Reader	27	Door7 Fault	I27 Door7 Fault
I27:S20	43227520	432R520	Intelligent Reader	27	Door8 Fault	I27 Door8 Fault
I27:S21	42327521	423R521	Intelligent Reader	27	Door1 Forced	I27 Door1 Forced
I27:S22	42327522	423R522	Intelligent Reader	27	Door2 Forced	I27 Door2 Forced
I27:S23	42327523	423R523	Intelligent Reader	27	Door3 Forced	I27 Door3 Forced
I27:S24	42327524	423R524	Intelligent Reader	27	Door4 Forced	I27 Door4 Forced
I27:S25	42327525	423R525	Intelligent Reader	27	Door5 Forced	I27 Door5 Forced
I27:S26	42327526	423R526	Intelligent Reader	27	Door6 Forced	I27 Door6 Forced
I27:S27	42327527	423R527	Intelligent Reader	27	Door7 Forced	I27 Door7 Forced
I27:S28	42327528	423R528	Intelligent Reader	27	Door8 Forced	I27 Door8 Forced
I27:S29	42627529	426R529	Intelligent Reader	27	Door1 DOTL	I27 Door1 DOTL
I27:S30	42627530	426R530	Intelligent Reader	27	Door2 DOTL	I27 Door2 DOTL
I27:S31	42627531	426R531	Intelligent Reader	27	Door3 DOTL	I27 Door3 DOTL
I27:S32	42627532	426R532	Intelligent Reader	27	Door4 DOTL	I27 Door4 DOTL
I27:S33	42627533	426R533	Intelligent Reader	27	Door5 DOTL	I27 Door5 DOTL
I27:S34	42627534	426R534	Intelligent Reader	27	Door6 DOTL	I27 Door6 DOTL
I27:S35	42627535	426R535	Intelligent Reader	27	Door7 DOTL	I27 Door7 DOTL
I27:S36	42627536	426R536	Intelligent Reader	27	Door8 DOTL	I27 Door8 DOTL
I27:S37	15027537	150R537	Intelligent Reader	27	Rdr1 Invalid	I27 Rdr1 Invalid
I27:S38	15027538	150R538	Intelligent Reader	27	Rdr2 Invalid	I27 Rdr2 Invalid
I27:S39	15027539	150R539	Intelligent Reader	27	Rdr3 Invalid	I27 Rdr3 Invalid
I27:S40	15027540	150R540	Intelligent Reader	27	Rdr4 Invalid	I27 Rdr4 Invalid
I27:S41	15027541	150R541	Intelligent Reader	27	Rdr5 Invalid	I27 Rdr5 Invalid
I27:S42	15027542	150R542	Intelligent Reader	27	Rdr6 Invalid	I27 Rdr6 Invalid
I27:S43	15027543	150R543	Intelligent Reader	27	Rdr7 Invalid	I27 Rdr7 Invalid
I27:S44	15027544	150R544	Intelligent Reader	27	Rdr8 Invalid	I27 Rdr8 Invalid
I27:S45	15027545	150R545	Intelligent Reader	27	Rdr9 Invalid	I27 Rdr9 Invalid
I27:S46	15027546	150R546	Intelligent Reader	27	Rdr10 Invalid	I27 Rdr10 Invalid
I27:S47	15027547	150R547	Intelligent Reader	27	Rdr11 Invalid	I27 Rdr11 Invalid
I27:S48	15027548	150R548	Intelligent Reader	27	Rdr12 Invalid	I27 Rdr12 Invalid
I27:S49	15027549	150R549	Intelligent Reader	27	Rdr13 Invalid	I27 Rdr13 Invalid
I27:S50	15027550	150R550	Intelligent Reader	27	Rdr14 Invalid	I27 Rdr14 Invalid
I27:S51	15027551	150R551	Intelligent Reader	27	Rdr15 Invalid	I27 Rdr15 Invalid
I27:S52	15027552	150R552	Intelligent Reader	27	Rdr16 Invalid	I27 Rdr16 Invalid
I27:S53	12227553	122R553	Intelligent Reader	27	Rdr1 Duress	I27 Rdr1 Duress
I27:S54	12227554	122R554	Intelligent Reader	27	Rdr2 Duress	I27 Rdr2 Duress
I27:S55	12227555	122R555	Intelligent Reader	27	Rdr3 Duress	I27 Rdr3 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I27:S56	12227556	122R556	Intelligent Reader	27	Rdr4 Duress	I27 Rdr4 Duress
I27:S57	12227557	122R557	Intelligent Reader	27	Rdr5 Duress	I27 Rdr5 Duress
I27:S58	12227558	122R558	Intelligent Reader	27	Rdr6 Duress	I27 Rdr6 Duress
I27:S59	12227559	122R559	Intelligent Reader	27	Rdr7 Duress	I27 Rdr7 Duress
I27:S60	12227560	122R560	Intelligent Reader	27	Rdr8 Duress	I27 Rdr8 Duress
I27:S61	12227561	122R561	Intelligent Reader	27	Rdr9 Duress	I27 Rdr9 Duress
I27:S62	12227562	122R562	Intelligent Reader	27	Rdr10 Duress	I27 Rdr10 Duress
I27:S63	12227563	122R563	Intelligent Reader	27	Rdr11 Duress	I27 Rdr11 Duress
I27:S64	12227564	122R564	Intelligent Reader	27	Rdr12 Duress	I27 Rdr12 Duress
I27:S65	12227565	122R565	Intelligent Reader	27	Rdr13 Duress	I27 Rdr13 Duress
I27:S66	12227566	122R566	Intelligent Reader	27	Rdr14 Duress	I27 Rdr14 Duress
I27:S67	12227567	122R567	Intelligent Reader	27	Rdr15 Duress	I27 Rdr15 Duress
I27:S68	12227568	122R568	Intelligent Reader	27	Rdr16 Duress	I27 Rdr16 Duress
I27:S69	33027569	330R569	Intelligent Reader	27	Rdr1 Fault	I27 Rdr1 Fault
I27:S70	33027570	330R570	Intelligent Reader	27	Rdr2 Fault	I27 Rdr2 Fault
I27:S71	33027571	330R571	Intelligent Reader	27	Rdr3 Fault	I27 Rdr3 Fault
I27:S72	33027572	330R572	Intelligent Reader	27	Rdr4 Fault	I27 Rdr4 Fault
I27:S73	33027573	330R573	Intelligent Reader	27	Rdr5 Fault	I27 Rdr5 Fault
I27:S74	33027574	330R574	Intelligent Reader	27	Rdr6 Fault	I27 Rdr6 Fault
I27:S75	33027575	330R575	Intelligent Reader	27	Rdr7 Fault	I27 Rdr7 Fault
I27:S76	33027576	330R576	Intelligent Reader	27	Rdr8 Fault	I27 Rdr8 Fault
I27:S77	33027577	330R577	Intelligent Reader	27	Rdr9 Fault	I27 Rdr9 Fault
I27:S78	33027578	330R578	Intelligent Reader	27	Rdr10 Fault	I27 Rdr10 Fault
I27:S79	33027579	330R579	Intelligent Reader	27	Rdr11 Fault	I27 Rdr11 Fault
I27:S80	33027580	330R580	Intelligent Reader	27	Rdr12 Fault	I27 Rdr12 Fault
I27:S81	33027581	330R581	Intelligent Reader	27	Rdr13 Fault	I27 Rdr13 Fault
I27:S82	33027582	330R582	Intelligent Reader	27	Rdr14 Fault	I27 Rdr14 Fault
I27:S83	33027583	330R583	Intelligent Reader	27	Rdr15 Fault	I27 Rdr15 Fault
I27:S84	33027584	330R584	Intelligent Reader	27	Rdr16 Fault	I27 Rdr16 Fault
I27:S85	30127585	301R585	Intelligent Reader	27	Ext AC fail	I27 Ext AC fail
I27:S86	30227586	302R586	Intelligent Reader	27	Ext Low Battery	I27 Ext Low Battery
I27:S87	30027587	300R587	Intelligent Reader	27	Ext LAN Fuse	I27 Ext LAN Fuse
I27:S88	30027588	300R588	Intelligent Reader	27	Ext Detector Fuse	I27 Ext Detector Fuse
I27:S89	30027589	300R589	Intelligent Reader	27	Ext Low Volts	I27 Ext Low Volts
I27:S90	30027590	300R590	Intelligent Reader	27	Ext PS Fail	I27 Ext PS Fail
I27:S91	30927591	309R591	Intelligent Reader	27	Ext Battery Test	I27 Ext Battery Test
I27:S92	15027592	150R592	Intelligent Reader	27	Spare2	I27 Spare2
I27:S93	15027593	150R593	Intelligent Reader	27	Spare3	I27 Spare3
I28:Z01	14028501	140S501	Intelligent Reader	28	Door1 Reed	I28 Door1 Reed
I28:Z02	14028502	140S502	Intelligent Reader	28	Door2 Reed	I28 Door2 Reed
I28:Z03	14028503	140S503	Intelligent Reader	28	Door1 Tongue	I28 Door1 Tongue
I28:Z04	14028504	140S504	Intelligent Reader	28	Door2 Tongue	I28 Door2 Tongue
I28:Z05	14028505	140S505	Intelligent Reader	28	Door1 REX	I28 Door1 REX
I28:Z06	14028506	140S506	Intelligent Reader	28	Door2 REX	I28 Door2 REX
I28:Z07	14028507	140S507	Intelligent Reader	28	Door1 REN	I28 Door1 REN
I28:Z08	14028508	140S508	Intelligent Reader	28	Door2 REN	I28 Door2 REN
I28:Z09	14028509	140S509	Intelligent Reader	28	Door3 Reed	I28 Door3 Reed
I28:Z10	14028510	140S510	Intelligent Reader	28	Door4 Reed	I28 Door4 Reed
I28:Z11	14028511	140S511	Intelligent Reader	28	Door3 Tongue	I28 Door3 Tongue
I28:Z12	14028512	140S512	Intelligent Reader	28	Door4 Tongue	I28 Door4 Tongue
I28:Z13	14028513	140S513	Intelligent Reader	28	Door3 REX	I28 Door3 REX
I28:Z14	14028514	140S514	Intelligent Reader	28	Door4 REX	I28 Door4 REX
I28:Z15	14028515	140S515	Intelligent Reader	28	Door3 REN	I28 Door3 REN
I28:Z16	14028516	140S516	Intelligent Reader	28	Door4 REN	I28 Door4 REN
I28:Z17	14028517	140S517	Intelligent Reader	28	Door5 Reed	I28 Door5 Reed
I28:Z18	14028518	140S518	Intelligent Reader	28	Door6 Reed	I28 Door6 Reed
I28:Z19	14028519	140S519	Intelligent Reader	28	Door5 Tongue	I28 Door5 Tongue

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I28:Z20	14028520	140S520	Intelligent Reader	28	Door6 Tongue	I28 Door6 Tongue
I28:Z21	14028521	140S521	Intelligent Reader	28	Door5 REX	I28 Door5 REX
I28:Z22	14028522	140S522	Intelligent Reader	28	Door6 REX	I28 Door6 REX
I28:Z23	14028523	140S523	Intelligent Reader	28	Door5 REN	I28 Door5 REN
I28:Z24	14028524	140S524	Intelligent Reader	28	Door6 REN	I28 Door6 REN
I28:Z25	14028525	140S525	Intelligent Reader	28	Door7 Reed	I28 Door7 Reed
I28:Z26	14028526	140S526	Intelligent Reader	28	Door8 Reed	I28 Door8 Reed
I28:Z27	14028527	140S527	Intelligent Reader	28	Door7 Tongue	I28 Door7 Tongue
I28:Z28	14028528	140S528	Intelligent Reader	28	Door8 Tongue	I28 Door8 Tongue
I28:Z29	14028529	140S529	Intelligent Reader	28	Door7 REX	I28 Door7 REX
I28:Z30	14028530	140S530	Intelligent Reader	28	Door8 REX	I28 Door8 REX
I28:Z31	14028531	140S531	Intelligent Reader	28	Door7 REN	I28 Door7 REN
I28:Z32	14028532	140S532	Intelligent Reader	28	Door8 REN	I28 Door8 REN
I28:S01	14528501	145S501	Intelligent Reader	28	Cabinet Tamper	I28 Cabinet Tamper
I28:S02	30128502	301S502	Intelligent Reader	28	AC fail	I28 AC fail
I28:S03	30228503	302S503	Intelligent Reader	28	Low Battery	I28 Low Battery
I28:S04	30028504	300S504	Intelligent Reader	28	LAN Fuse	I28 LAN Fuse
I28:S05	30028505	300S505	Intelligent Reader	28	Detector Fuse	I28 Detector Fuse
I28:S06	30028506	300S506	Intelligent Reader	28	Low Volts	I28 Low Volts
I28:S07	30028507	300S507	Intelligent Reader	28	PS Fail	I28 PS Fail
I28:S08	30928508	309S508	Intelligent Reader	28	Battery Test	I28 Battery Test
I28:S09	33328509	333S509	Intelligent Reader	28	Unibus Fault	I28 Unibus Fault
I28:S10	30328510	303S510	Intelligent Reader	28	Download Fail	I28 Download Fail
I28:S11	15028511	150S511	Intelligent Reader	28	Spare1	I28 Spare1
I28:S12	14328512	143S512	Intelligent Reader	28	LAN Comms	I28 LAN Comms
I28:S13	43228513	432S513	Intelligent Reader	28	Door1 Fault	I28 Door1 Fault
I28:S14	43228514	432S514	Intelligent Reader	28	Door2 Fault	I28 Door2 Fault
I28:S15	43228515	432S515	Intelligent Reader	28	Door3 Fault	I28 Door3 Fault
I28:S16	43228516	432S516	Intelligent Reader	28	Door4 Fault	I28 Door4 Fault
I28:S17	43228517	432S517	Intelligent Reader	28	Door5 Fault	I28 Door5 Fault
I28:S18	43228518	432S518	Intelligent Reader	28	Door6 Fault	I28 Door6 Fault
I28:S19	43228519	432S519	Intelligent Reader	28	Door7 Fault	I28 Door7 Fault
I28:S20	43228520	432S520	Intelligent Reader	28	Door8 Fault	I28 Door8 Fault
I28:S21	42328521	423S521	Intelligent Reader	28	Door1 Forced	I28 Door1 Forced
I28:S22	42328522	423S522	Intelligent Reader	28	Door2 Forced	I28 Door2 Forced
I28:S23	42328523	423S523	Intelligent Reader	28	Door3 Forced	I28 Door3 Forced
I28:S24	42328524	423S524	Intelligent Reader	28	Door4 Forced	I28 Door4 Forced
I28:S25	42328525	423S525	Intelligent Reader	28	Door5 Forced	I28 Door5 Forced
I28:S26	42328526	423S526	Intelligent Reader	28	Door6 Forced	I28 Door6 Forced
I28:S27	42328527	423S527	Intelligent Reader	28	Door7 Forced	I28 Door7 Forced
I28:S28	42328528	423S528	Intelligent Reader	28	Door8 Forced	I28 Door8 Forced
I28:S29	42628529	426S529	Intelligent Reader	28	Door1 DOTL	I28 Door1 DOTL
I28:S30	42628530	426S530	Intelligent Reader	28	Door2 DOTL	I28 Door2 DOTL
I28:S31	42628531	426S531	Intelligent Reader	28	Door3 DOTL	I28 Door3 DOTL
I28:S32	42628532	426S532	Intelligent Reader	28	Door4 DOTL	I28 Door4 DOTL
I28:S33	42628533	426S533	Intelligent Reader	28	Door5 DOTL	I28 Door5 DOTL
I28:S34	42628534	426S534	Intelligent Reader	28	Door6 DOTL	I28 Door6 DOTL
I28:S35	42628535	426S535	Intelligent Reader	28	Door7 DOTL	I28 Door7 DOTL
I28:S36	42628536	426S536	Intelligent Reader	28	Door8 DOTL	I28 Door8 DOTL
I28:S37	15028537	150S537	Intelligent Reader	28	Rdr1 Invalid	I28 Rdr1 Invalid
I28:S38	15028538	150S538	Intelligent Reader	28	Rdr2 Invalid	I28 Rdr2 Invalid
I28:S39	15028539	150S539	Intelligent Reader	28	Rdr3 Invalid	I28 Rdr3 Invalid
I28:S40	15028540	150S540	Intelligent Reader	28	Rdr4 Invalid	I28 Rdr4 Invalid
I28:S41	15028541	150S541	Intelligent Reader	28	Rdr5 Invalid	I28 Rdr5 Invalid
I28:S42	15028542	150S542	Intelligent Reader	28	Rdr6 Invalid	I28 Rdr6 Invalid
I28:S43	15028543	150S543	Intelligent Reader	28	Rdr7 Invalid	I28 Rdr7 Invalid
I28:S44	15028544	150S544	Intelligent Reader	28	Rdr8 Invalid	I28 Rdr8 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I28:S45	15028545	150S545	Intelligent Reader	28	Rdr9 Invalid	I28 Rdr9 Invalid
I28:S46	15028546	150S546	Intelligent Reader	28	Rdr10 Invalid	I28 Rdr10 Invalid
I28:S47	15028547	150S547	Intelligent Reader	28	Rdr11 Invalid	I28 Rdr11 Invalid
I28:S48	15028548	150S548	Intelligent Reader	28	Rdr12 Invalid	I28 Rdr12 Invalid
I28:S49	15028549	150S549	Intelligent Reader	28	Rdr13 Invalid	I28 Rdr13 Invalid
I28:S50	15028550	150S550	Intelligent Reader	28	Rdr14 Invalid	I28 Rdr14 Invalid
I28:S51	15028551	150S551	Intelligent Reader	28	Rdr15 Invalid	I28 Rdr15 Invalid
I28:S52	15028552	150S552	Intelligent Reader	28	Rdr16 Invalid	I28 Rdr16 Invalid
I28:S53	12228553	122S553	Intelligent Reader	28	Rdr1 Duress	I28 Rdr1 Duress
I28:S54	12228554	122S554	Intelligent Reader	28	Rdr2 Duress	I28 Rdr2 Duress
I28:S55	12228555	122S555	Intelligent Reader	28	Rdr3 Duress	I28 Rdr3 Duress
I28:S56	12228556	122S556	Intelligent Reader	28	Rdr4 Duress	I28 Rdr4 Duress
I28:S57	12228557	122S557	Intelligent Reader	28	Rdr5 Duress	I28 Rdr5 Duress
I28:S58	12228558	122S558	Intelligent Reader	28	Rdr6 Duress	I28 Rdr6 Duress
I28:S59	12228559	122S559	Intelligent Reader	28	Rdr7 Duress	I28 Rdr7 Duress
I28:S60	12228560	122S560	Intelligent Reader	28	Rdr8 Duress	I28 Rdr8 Duress
I28:S61	12228561	122S561	Intelligent Reader	28	Rdr9 Duress	I28 Rdr9 Duress
I28:S62	12228562	122S562	Intelligent Reader	28	Rdr10 Duress	I28 Rdr10 Duress
I28:S63	12228563	122S563	Intelligent Reader	28	Rdr11 Duress	I28 Rdr11 Duress
I28:S64	12228564	122S564	Intelligent Reader	28	Rdr12 Duress	I28 Rdr12 Duress
I28:S65	12228565	122S565	Intelligent Reader	28	Rdr13 Duress	I28 Rdr13 Duress
I28:S66	12228566	122S566	Intelligent Reader	28	Rdr14 Duress	I28 Rdr14 Duress
I28:S67	12228567	122S567	Intelligent Reader	28	Rdr15 Duress	I28 Rdr15 Duress
I28:S68	12228568	122S568	Intelligent Reader	28	Rdr16 Duress	I28 Rdr16 Duress
I28:S69	33028569	330S569	Intelligent Reader	28	Rdr1 Fault	I28 Rdr1 Fault
I28:S70	33028570	330S570	Intelligent Reader	28	Rdr2 Fault	I28 Rdr2 Fault
I28:S71	33028571	330S571	Intelligent Reader	28	Rdr3 Fault	I28 Rdr3 Fault
I28:S72	33028572	330S572	Intelligent Reader	28	Rdr4 Fault	I28 Rdr4 Fault
I28:S73	33028573	330S573	Intelligent Reader	28	Rdr5 Fault	I28 Rdr5 Fault
I28:S74	33028574	330S574	Intelligent Reader	28	Rdr6 Fault	I28 Rdr6 Fault
I28:S75	33028575	330S575	Intelligent Reader	28	Rdr7 Fault	I28 Rdr7 Fault
I28:S76	33028576	330S576	Intelligent Reader	28	Rdr8 Fault	I28 Rdr8 Fault
I28:S77	33028577	330S577	Intelligent Reader	28	Rdr9 Fault	I28 Rdr9 Fault
I28:S78	33028578	330S578	Intelligent Reader	28	Rdr10 Fault	I28 Rdr10 Fault
I28:S79	33028579	330S579	Intelligent Reader	28	Rdr11 Fault	I28 Rdr11 Fault
I28:S80	33028580	330S580	Intelligent Reader	28	Rdr12 Fault	I28 Rdr12 Fault
I28:S81	33028581	330S581	Intelligent Reader	28	Rdr13 Fault	I28 Rdr13 Fault
I28:S82	33028582	330S582	Intelligent Reader	28	Rdr14 Fault	I28 Rdr14 Fault
I28:S83	33028583	330S583	Intelligent Reader	28	Rdr15 Fault	I28 Rdr15 Fault
I28:S84	33028584	330S584	Intelligent Reader	28	Rdr16 Fault	I28 Rdr16 Fault
I28:S85	30128585	301S585	Intelligent Reader	28	Ext AC fail	I28 Ext AC fail
I28:S86	30228586	302S586	Intelligent Reader	28	Ext Low Battery	I28 Ext Low Battery
I28:S87	30028587	300S587	Intelligent Reader	28	Ext LAN Fuse	I28 Ext LAN Fuse
I28:S88	30028588	300S588	Intelligent Reader	28	Ext Detector Fuse	I28 Ext Detector Fuse
I28:S89	30028589	300S589	Intelligent Reader	28	Ext Low Volts	I28 Ext Low Volts
I28:S90	30028590	300S590	Intelligent Reader	28	Ext PS Fail	I28 Ext PS Fail
I28:S91	30928591	309S591	Intelligent Reader	28	Ext Battery Test	I28 Ext Battery Test
I28:S92	15028592	150S592	Intelligent Reader	28	Spare2	I28 Spare2
I28:S93	15028593	150S593	Intelligent Reader	28	Spare3	I28 Spare3
I29:Z01	14029501	140T501	Intelligent Reader	29	Door1 Reed	I29 Door1 Reed
I29:Z02	14029502	140T502	Intelligent Reader	29	Door2 Reed	I29 Door2 Reed
I29:Z03	14029503	140T503	Intelligent Reader	29	Door1 Tongue	I29 Door1 Tongue
I29:Z04	14029504	140T504	Intelligent Reader	29	Door2 Tongue	I29 Door2 Tongue
I29:Z05	14029505	140T505	Intelligent Reader	29	Door1 REX	I29 Door1 REX
I29:Z06	14029506	140T506	Intelligent Reader	29	Door2 REX	I29 Door2 REX
I29:Z07	14029507	140T507	Intelligent Reader	29	Door1 REN	I29 Door1 REN
I29:Z08	14029508	140T508	Intelligent Reader	29	Door2 REN	I29 Door2 REN

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I29:Z09	14029509	140T509	Intelligent Reader	29	Door3 Reed	I29 Door3 Reed
I29:Z10	14029510	140T510	Intelligent Reader	29	Door4 Reed	I29 Door4 Reed
I29:Z11	14029511	140T511	Intelligent Reader	29	Door3 Tongue	I29 Door3 Tongue
I29:Z12	14029512	140T512	Intelligent Reader	29	Door4 Tongue	I29 Door4 Tongue
I29:Z13	14029513	140T513	Intelligent Reader	29	Door3 REX	I29 Door3 REX
I29:Z14	14029514	140T514	Intelligent Reader	29	Door4 REX	I29 Door4 REX
I29:Z15	14029515	140T515	Intelligent Reader	29	Door3 REN	I29 Door3 REN
I29:Z16	14029516	140T516	Intelligent Reader	29	Door4 REN	I29 Door4 REN
I29:Z17	14029517	140T517	Intelligent Reader	29	Door5 Reed	I29 Door5 Reed
I29:Z18	14029518	140T518	Intelligent Reader	29	Door6 Reed	I29 Door6 Reed
I29:Z19	14029519	140T519	Intelligent Reader	29	Door5 Tongue	I29 Door5 Tongue
I29:Z20	14029520	140T520	Intelligent Reader	29	Door6 Tongue	I29 Door6 Tongue
I29:Z21	14029521	140T521	Intelligent Reader	29	Door5 REX	I29 Door5 REX
I29:Z22	14029522	140T522	Intelligent Reader	29	Door6 REX	I29 Door6 REX
I29:Z23	14029523	140T523	Intelligent Reader	29	Door5 REN	I29 Door5 REN
I29:Z24	14029524	140T524	Intelligent Reader	29	Door6 REN	I29 Door6 REN
I29:Z25	14029525	140T525	Intelligent Reader	29	Door7 Reed	I29 Door7 Reed
I29:Z26	14029526	140T526	Intelligent Reader	29	Door8 Reed	I29 Door8 Reed
I29:Z27	14029527	140T527	Intelligent Reader	29	Door7 Tongue	I29 Door7 Tongue
I29:Z28	14029528	140T528	Intelligent Reader	29	Door8 Tongue	I29 Door8 Tongue
I29:Z29	14029529	140T529	Intelligent Reader	29	Door7 REX	I29 Door7 REX
I29:Z30	14029530	140T530	Intelligent Reader	29	Door8 REX	I29 Door8 REX
I29:Z31	14029531	140T531	Intelligent Reader	29	Door7 REN	I29 Door7 REN
I29:Z32	14029532	140T532	Intelligent Reader	29	Door8 REN	I29 Door8 REN
I29:S01	14529501	145T501	Intelligent Reader	29	Cabinet Tamper	I29 Cabinet Tamper
I29:S02	30129502	301T502	Intelligent Reader	29	AC fail	I29 AC fail
I29:S03	30229503	302T503	Intelligent Reader	29	Low Battery	I29 Low Battery
I29:S04	30029504	300T504	Intelligent Reader	29	LAN Fuse	I29 LAN Fuse
I29:S05	30029505	300T505	Intelligent Reader	29	Detector Fuse	I29 Detector Fuse
I29:S06	30029506	300T506	Intelligent Reader	29	Low Volts	I29 Low Volts
I29:S07	30029507	300T507	Intelligent Reader	29	PS Fail	I29 PS Fail
I29:S08	30929508	309T508	Intelligent Reader	29	Battery Test	I29 Battery Test
I29:S09	33329509	333T509	Intelligent Reader	29	Unibus Fault	I29 Unibus Fault
I29:S10	30329510	303T510	Intelligent Reader	29	Download Fail	I29 Download Fail
I29:S11	15029511	150T511	Intelligent Reader	29	Spare1	I29 Spare1
I29:S12	14329512	143T512	Intelligent Reader	29	LAN Comms	I29 LAN Comms
I29:S13	43229513	432T513	Intelligent Reader	29	Door1 Fault	I29 Door1 Fault
I29:S14	43229514	432T514	Intelligent Reader	29	Door2 Fault	I29 Door2 Fault
I29:S15	43229515	432T515	Intelligent Reader	29	Door3 Fault	I29 Door3 Fault
I29:S16	43229516	432T516	Intelligent Reader	29	Door4 Fault	I29 Door4 Fault
I29:S17	43229517	432T517	Intelligent Reader	29	Door5 Fault	I29 Door5 Fault
I29:S18	43229518	432T518	Intelligent Reader	29	Door6 Fault	I29 Door6 Fault
I29:S19	43229519	432T519	Intelligent Reader	29	Door7 Fault	I29 Door7 Fault
I29:S20	43229520	432T520	Intelligent Reader	29	Door8 Fault	I29 Door8 Fault
I29:S21	42329521	423T521	Intelligent Reader	29	Door1 Forced	I29 Door1 Forced
I29:S22	42329522	423T522	Intelligent Reader	29	Door2 Forced	I29 Door2 Forced
I29:S23	42329523	423T523	Intelligent Reader	29	Door3 Forced	I29 Door3 Forced
I29:S24	42329524	423T524	Intelligent Reader	29	Door4 Forced	I29 Door4 Forced
I29:S25	42329525	423T525	Intelligent Reader	29	Door5 Forced	I29 Door5 Forced
I29:S26	42329526	423T526	Intelligent Reader	29	Door6 Forced	I29 Door6 Forced
I29:S27	42329527	423T527	Intelligent Reader	29	Door7 Forced	I29 Door7 Forced
I29:S28	42329528	423T528	Intelligent Reader	29	Door8 Forced	I29 Door8 Forced
I29:S29	42629529	426T529	Intelligent Reader	29	Door1 DOTL	I29 Door1 DOTL
I29:S30	42629530	426T530	Intelligent Reader	29	Door2 DOTL	I29 Door2 DOTL
I29:S31	42629531	426T531	Intelligent Reader	29	Door3 DOTL	I29 Door3 DOTL
I29:S32	42629532	426T532	Intelligent Reader	29	Door4 DOTL	I29 Door4 DOTL
I29:S33	42629533	426T533	Intelligent Reader	29	Door5 DOTL	I29 Door5 DOTL

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I29:S34	42629534	426T534	Intelligent Reader	29	Door6 DOTL	I29 Door6 DOTL
I29:S35	42629535	426T535	Intelligent Reader	29	Door7 DOTL	I29 Door7 DOTL
I29:S36	42629536	426T536	Intelligent Reader	29	Door8 DOTL	I29 Door8 DOTL
I29:S37	15029537	150T537	Intelligent Reader	29	Rdr1 Invalid	I29 Rdr1 Invalid
I29:S38	15029538	150T538	Intelligent Reader	29	Rdr2 Invalid	I29 Rdr2 Invalid
I29:S39	15029539	150T539	Intelligent Reader	29	Rdr3 Invalid	I29 Rdr3 Invalid
I29:S40	15029540	150T540	Intelligent Reader	29	Rdr4 Invalid	I29 Rdr4 Invalid
I29:S41	15029541	150T541	Intelligent Reader	29	Rdr5 Invalid	I29 Rdr5 Invalid
I29:S42	15029542	150T542	Intelligent Reader	29	Rdr6 Invalid	I29 Rdr6 Invalid
I29:S43	15029543	150T543	Intelligent Reader	29	Rdr7 Invalid	I29 Rdr7 Invalid
I29:S44	15029544	150T544	Intelligent Reader	29	Rdr8 Invalid	I29 Rdr8 Invalid
I29:S45	15029545	150T545	Intelligent Reader	29	Rdr9 Invalid	I29 Rdr9 Invalid
I29:S46	15029546	150T546	Intelligent Reader	29	Rdr10 Invalid	I29 Rdr10 Invalid
I29:S47	15029547	150T547	Intelligent Reader	29	Rdr11 Invalid	I29 Rdr11 Invalid
I29:S48	15029548	150T548	Intelligent Reader	29	Rdr12 Invalid	I29 Rdr12 Invalid
I29:S49	15029549	150T549	Intelligent Reader	29	Rdr13 Invalid	I29 Rdr13 Invalid
I29:S50	15029550	150T550	Intelligent Reader	29	Rdr14 Invalid	I29 Rdr14 Invalid
I29:S51	15029551	150T551	Intelligent Reader	29	Rdr15 Invalid	I29 Rdr15 Invalid
I29:S52	15029552	150T552	Intelligent Reader	29	Rdr16 Invalid	I29 Rdr16 Invalid
I29:S53	12229553	122T553	Intelligent Reader	29	Rdr1 Duress	I29 Rdr1 Duress
I29:S54	12229554	122T554	Intelligent Reader	29	Rdr2 Duress	I29 Rdr2 Duress
I29:S55	12229555	122T555	Intelligent Reader	29	Rdr3 Duress	I29 Rdr3 Duress
I29:S56	12229556	122T556	Intelligent Reader	29	Rdr4 Duress	I29 Rdr4 Duress
I29:S57	12229557	122T557	Intelligent Reader	29	Rdr5 Duress	I29 Rdr5 Duress
I29:S58	12229558	122T558	Intelligent Reader	29	Rdr6 Duress	I29 Rdr6 Duress
I29:S59	12229559	122T559	Intelligent Reader	29	Rdr7 Duress	I29 Rdr7 Duress
I29:S60	12229560	122T560	Intelligent Reader	29	Rdr8 Duress	I29 Rdr8 Duress
I29:S61	12229561	122T561	Intelligent Reader	29	Rdr9 Duress	I29 Rdr9 Duress
I29:S62	12229562	122T562	Intelligent Reader	29	Rdr10 Duress	I29 Rdr10 Duress
I29:S63	12229563	122T563	Intelligent Reader	29	Rdr11 Duress	I29 Rdr11 Duress
I29:S64	12229564	122T564	Intelligent Reader	29	Rdr12 Duress	I29 Rdr12 Duress
I29:S65	12229565	122T565	Intelligent Reader	29	Rdr13 Duress	I29 Rdr13 Duress
I29:S66	12229566	122T566	Intelligent Reader	29	Rdr14 Duress	I29 Rdr14 Duress
I29:S67	12229567	122T567	Intelligent Reader	29	Rdr15 Duress	I29 Rdr15 Duress
I29:S68	12229568	122T568	Intelligent Reader	29	Rdr16 Duress	I29 Rdr16 Duress
I29:S69	33029569	330T569	Intelligent Reader	29	Rdr1 Fault	I29 Rdr1 Fault
I29:S70	33029570	330T570	Intelligent Reader	29	Rdr2 Fault	I29 Rdr2 Fault
I29:S71	33029571	330T571	Intelligent Reader	29	Rdr3 Fault	I29 Rdr3 Fault
I29:S72	33029572	330T572	Intelligent Reader	29	Rdr4 Fault	I29 Rdr4 Fault
I29:S73	33029573	330T573	Intelligent Reader	29	Rdr5 Fault	I29 Rdr5 Fault
I29:S74	33029574	330T574	Intelligent Reader	29	Rdr6 Fault	I29 Rdr6 Fault
I29:S75	33029575	330T575	Intelligent Reader	29	Rdr7 Fault	I29 Rdr7 Fault
I29:S76	33029576	330T576	Intelligent Reader	29	Rdr8 Fault	I29 Rdr8 Fault
I29:S77	33029577	330T577	Intelligent Reader	29	Rdr9 Fault	I29 Rdr9 Fault
I29:S78	33029578	330T578	Intelligent Reader	29	Rdr10 Fault	I29 Rdr10 Fault
I29:S79	33029579	330T579	Intelligent Reader	29	Rdr11 Fault	I29 Rdr11 Fault
I29:S80	33029580	330T580	Intelligent Reader	29	Rdr12 Fault	I29 Rdr12 Fault
I29:S81	33029581	330T581	Intelligent Reader	29	Rdr13 Fault	I29 Rdr13 Fault
I29:S82	33029582	330T582	Intelligent Reader	29	Rdr14 Fault	I29 Rdr14 Fault
I29:S83	33029583	330T583	Intelligent Reader	29	Rdr15 Fault	I29 Rdr15 Fault
I29:S84	33029584	330T584	Intelligent Reader	29	Rdr16 Fault	I29 Rdr16 Fault
I29:S85	30129585	301T585	Intelligent Reader	29	Ext AC fail	I29 Ext AC fail
I29:S86	30229586	302T586	Intelligent Reader	29	Ext Low Battery	I29 Ext Low Battery
I29:S87	30029587	300T587	Intelligent Reader	29	Ext LAN Fuse	I29 Ext LAN Fuse
I29:S88	30029588	300T588	Intelligent Reader	29	Ext Detector Fuse	I29 Ext Detector Fuse
I29:S89	30029589	300T589	Intelligent Reader	29	Ext Low Volts	I29 Ext Low Volts
I29:S90	30029590	300T590	Intelligent Reader	29	Ext PS Fail	I29 Ext PS Fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I29:S91	30929591	309T591	Intelligent Reader	29	Ext Battery Test	I29 Ext Battery Test
I29:S92	15029592	150T592	Intelligent Reader	29	Spare2	I29 Spare2
I29:S93	15029593	150T593	Intelligent Reader	29	Spare3	I29 Spare3
I30:Z01	14030501	140U501	Intelligent Reader	30	Door1 Reed	I30 Door1 Reed
I30:Z02	14030502	140U502	Intelligent Reader	30	Door2 Reed	I30 Door2 Reed
I30:Z03	14030503	140U503	Intelligent Reader	30	Door1 Tongue	I30 Door1 Tongue
I30:Z04	14030504	140U504	Intelligent Reader	30	Door2 Tongue	I30 Door2 Tongue
I30:Z05	14030505	140U505	Intelligent Reader	30	Door1 REX	I30 Door1 REX
I30:Z06	14030506	140U506	Intelligent Reader	30	Door2 REX	I30 Door2 REX
I30:Z07	14030507	140U507	Intelligent Reader	30	Door1 REN	I30 Door1 REN
I30:Z08	14030508	140U508	Intelligent Reader	30	Door2 REN	I30 Door2 REN
I30:Z09	14030509	140U509	Intelligent Reader	30	Door3 Reed	I30 Door3 Reed
I30:Z10	14030510	140U510	Intelligent Reader	30	Door4 Reed	I30 Door4 Reed
I30:Z11	14030511	140U511	Intelligent Reader	30	Door3 Tongue	I30 Door3 Tongue
I30:Z12	14030512	140U512	Intelligent Reader	30	Door4 Tongue	I30 Door4 Tongue
I30:Z13	14030513	140U513	Intelligent Reader	30	Door3 REX	I30 Door3 REX
I30:Z14	14030514	140U514	Intelligent Reader	30	Door4 REX	I30 Door4 REX
I30:Z15	14030515	140U515	Intelligent Reader	30	Door3 REN	I30 Door3 REN
I30:Z16	14030516	140U516	Intelligent Reader	30	Door4 REN	I30 Door4 REN
I30:Z17	14030517	140U517	Intelligent Reader	30	Door5 Reed	I30 Door5 Reed
I30:Z18	14030518	140U518	Intelligent Reader	30	Door6 Reed	I30 Door6 Reed
I30:Z19	14030519	140U519	Intelligent Reader	30	Door5 Tongue	I30 Door5 Tongue
I30:Z20	14030520	140U520	Intelligent Reader	30	Door6 Tongue	I30 Door6 Tongue
I30:Z21	14030521	140U521	Intelligent Reader	30	Door5 REX	I30 Door5 REX
I30:Z22	14030522	140U522	Intelligent Reader	30	Door6 REX	I30 Door6 REX
I30:Z23	14030523	140U523	Intelligent Reader	30	Door5 REN	I30 Door5 REN
I30:Z24	14030524	140U524	Intelligent Reader	30	Door6 REN	I30 Door6 REN
I30:Z25	14030525	140U525	Intelligent Reader	30	Door7 Reed	I30 Door7 Reed
I30:Z26	14030526	140U526	Intelligent Reader	30	Door8 Reed	I30 Door8 Reed
I30:Z27	14030527	140U527	Intelligent Reader	30	Door7 Tongue	I30 Door7 Tongue
I30:Z28	14030528	140U528	Intelligent Reader	30	Door8 Tongue	I30 Door8 Tongue
I30:Z29	14030529	140U529	Intelligent Reader	30	Door7 REX	I30 Door7 REX
I30:Z30	14030530	140U530	Intelligent Reader	30	Door8 REX	I30 Door8 REX
I30:Z31	14030531	140U531	Intelligent Reader	30	Door7 REN	I30 Door7 REN
I30:Z32	14030532	140U532	Intelligent Reader	30	Door8 REN	I30 Door8 REN
I30:S01	14530501	145U501	Intelligent Reader	30	Cabinet Tamper	I30 Cabinet Tamper
I30:S02	30130502	301U502	Intelligent Reader	30	AC fail	I30 AC fail
I30:S03	30230503	302U503	Intelligent Reader	30	Low Battery	I30 Low Battery
I30:S04	30030504	300U504	Intelligent Reader	30	LAN Fuse	I30 LAN Fuse
I30:S05	30030505	300U505	Intelligent Reader	30	Detector Fuse	I30 Detector Fuse
I30:S06	30030506	300U506	Intelligent Reader	30	Low Volts	I30 Low Volts
I30:S07	30030507	300U507	Intelligent Reader	30	PS Fail	I30 PS Fail
I30:S08	30930508	309U508	Intelligent Reader	30	Battery Test	I30 Battery Test
I30:S09	33330509	333U509	Intelligent Reader	30	Unibus Fault	I30 Unibus Fault
I30:S10	30330510	303U510	Intelligent Reader	30	Download Fail	I30 Download Fail
I30:S11	15030511	150U511	Intelligent Reader	30	Spare1	I30 Spare1
I30:S12	14330512	143U512	Intelligent Reader	30	LAN Comms	I30 LAN Comms
I30:S13	43230513	432U513	Intelligent Reader	30	Door1 Fault	I30 Door1 Fault
I30:S14	43230514	432U514	Intelligent Reader	30	Door2 Fault	I30 Door2 Fault
I30:S15	43230515	432U515	Intelligent Reader	30	Door3 Fault	I30 Door3 Fault
I30:S16	43230516	432U516	Intelligent Reader	30	Door4 Fault	I30 Door4 Fault
I30:S17	43230517	432U517	Intelligent Reader	30	Door5 Fault	I30 Door5 Fault
I30:S18	43230518	432U518	Intelligent Reader	30	Door6 Fault	I30 Door6 Fault
I30:S19	43230519	432U519	Intelligent Reader	30	Door7 Fault	I30 Door7 Fault
I30:S20	43230520	432U520	Intelligent Reader	30	Door8 Fault	I30 Door8 Fault
I30:S21	42330521	423U521	Intelligent Reader	30	Door1 Forced	I30 Door1 Forced
I30:S22	42330522	423U522	Intelligent Reader	30	Door2 Forced	I30 Door2 Forced

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I30:S23	42330523	423U523	Intelligent Reader	30	Door3 Forced	I30 Door3 Forced
I30:S24	42330524	423U524	Intelligent Reader	30	Door4 Forced	I30 Door4 Forced
I30:S25	42330525	423U525	Intelligent Reader	30	Door5 Forced	I30 Door5 Forced
I30:S26	42330526	423U526	Intelligent Reader	30	Door6 Forced	I30 Door6 Forced
I30:S27	42330527	423U527	Intelligent Reader	30	Door7 Forced	I30 Door7 Forced
I30:S28	42330528	423U528	Intelligent Reader	30	Door8 Forced	I30 Door8 Forced
I30:S29	42630529	426U529	Intelligent Reader	30	Door1 DOTL	I30 Door1 DOTL
I30:S30	42630530	426U530	Intelligent Reader	30	Door2 DOTL	I30 Door2 DOTL
I30:S31	42630531	426U531	Intelligent Reader	30	Door3 DOTL	I30 Door3 DOTL
I30:S32	42630532	426U532	Intelligent Reader	30	Door4 DOTL	I30 Door4 DOTL
I30:S33	42630533	426U533	Intelligent Reader	30	Door5 DOTL	I30 Door5 DOTL
I30:S34	42630534	426U534	Intelligent Reader	30	Door6 DOTL	I30 Door6 DOTL
I30:S35	42630535	426U535	Intelligent Reader	30	Door7 DOTL	I30 Door7 DOTL
I30:S36	42630536	426U536	Intelligent Reader	30	Door8 DOTL	I30 Door8 DOTL
I30:S37	15030537	150U537	Intelligent Reader	30	Rdr1 Invalid	I30 Rdr1 Invalid
I30:S38	15030538	150U538	Intelligent Reader	30	Rdr2 Invalid	I30 Rdr2 Invalid
I30:S39	15030539	150U539	Intelligent Reader	30	Rdr3 Invalid	I30 Rdr3 Invalid
I30:S40	15030540	150U540	Intelligent Reader	30	Rdr4 Invalid	I30 Rdr4 Invalid
I30:S41	15030541	150U541	Intelligent Reader	30	Rdr5 Invalid	I30 Rdr5 Invalid
I30:S42	15030542	150U542	Intelligent Reader	30	Rdr6 Invalid	I30 Rdr6 Invalid
I30:S43	15030543	150U543	Intelligent Reader	30	Rdr7 Invalid	I30 Rdr7 Invalid
I30:S44	15030544	150U544	Intelligent Reader	30	Rdr8 Invalid	I30 Rdr8 Invalid
I30:S45	15030545	150U545	Intelligent Reader	30	Rdr9 Invalid	I30 Rdr9 Invalid
I30:S46	15030546	150U546	Intelligent Reader	30	Rdr10 Invalid	I30 Rdr10 Invalid
I30:S47	15030547	150U547	Intelligent Reader	30	Rdr11 Invalid	I30 Rdr11 Invalid
I30:S48	15030548	150U548	Intelligent Reader	30	Rdr12 Invalid	I30 Rdr12 Invalid
I30:S49	15030549	150U549	Intelligent Reader	30	Rdr13 Invalid	I30 Rdr13 Invalid
I30:S50	15030550	150U550	Intelligent Reader	30	Rdr14 Invalid	I30 Rdr14 Invalid
I30:S51	15030551	150U551	Intelligent Reader	30	Rdr15 Invalid	I30 Rdr15 Invalid
I30:S52	15030552	150U552	Intelligent Reader	30	Rdr16 Invalid	I30 Rdr16 Invalid
I30:S53	12230553	122U553	Intelligent Reader	30	Rdr1 Duress	I30 Rdr1 Duress
I30:S54	12230554	122U554	Intelligent Reader	30	Rdr2 Duress	I30 Rdr2 Duress
I30:S55	12230555	122U555	Intelligent Reader	30	Rdr3 Duress	I30 Rdr3 Duress
I30:S56	12230556	122U556	Intelligent Reader	30	Rdr4 Duress	I30 Rdr4 Duress
I30:S57	12230557	122U557	Intelligent Reader	30	Rdr5 Duress	I30 Rdr5 Duress
I30:S58	12230558	122U558	Intelligent Reader	30	Rdr6 Duress	I30 Rdr6 Duress
I30:S59	12230559	122U559	Intelligent Reader	30	Rdr7 Duress	I30 Rdr7 Duress
I30:S60	12230560	122U560	Intelligent Reader	30	Rdr8 Duress	I30 Rdr8 Duress
I30:S61	12230561	122U561	Intelligent Reader	30	Rdr9 Duress	I30 Rdr9 Duress
I30:S62	12230562	122U562	Intelligent Reader	30	Rdr10 Duress	I30 Rdr10 Duress
I30:S63	12230563	122U563	Intelligent Reader	30	Rdr11 Duress	I30 Rdr11 Duress
I30:S64	12230564	122U564	Intelligent Reader	30	Rdr12 Duress	I30 Rdr12 Duress
I30:S65	12230565	122U565	Intelligent Reader	30	Rdr13 Duress	I30 Rdr13 Duress
I30:S66	12230566	122U566	Intelligent Reader	30	Rdr14 Duress	I30 Rdr14 Duress
I30:S67	12230567	122U567	Intelligent Reader	30	Rdr15 Duress	I30 Rdr15 Duress
I30:S68	12230568	122U568	Intelligent Reader	30	Rdr16 Duress	I30 Rdr16 Duress
I30:S69	33030569	330U569	Intelligent Reader	30	Rdr1 Fault	I30 Rdr1 Fault
I30:S70	33030570	330U570	Intelligent Reader	30	Rdr2 Fault	I30 Rdr2 Fault
I30:S71	33030571	330U571	Intelligent Reader	30	Rdr3 Fault	I30 Rdr3 Fault
I30:S72	33030572	330U572	Intelligent Reader	30	Rdr4 Fault	I30 Rdr4 Fault
I30:S73	33030573	330U573	Intelligent Reader	30	Rdr5 Fault	I30 Rdr5 Fault
I30:S74	33030574	330U574	Intelligent Reader	30	Rdr6 Fault	I30 Rdr6 Fault
I30:S75	33030575	330U575	Intelligent Reader	30	Rdr7 Fault	I30 Rdr7 Fault
I30:S76	33030576	330U576	Intelligent Reader	30	Rdr8 Fault	I30 Rdr8 Fault
I30:S77	33030577	330U577	Intelligent Reader	30	Rdr9 Fault	I30 Rdr9 Fault
I30:S78	33030578	330U578	Intelligent Reader	30	Rdr10 Fault	I30 Rdr10 Fault
I30:S79	33030579	330U579	Intelligent Reader	30	Rdr11 Fault	I30 Rdr11 Fault

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I30:S80	33030580	330U580	Intelligent Reader	30	Rdr12 Fault	I30 Rdr12 Fault
I30:S81	33030581	330U581	Intelligent Reader	30	Rdr13 Fault	I30 Rdr13 Fault
I30:S82	33030582	330U582	Intelligent Reader	30	Rdr14 Fault	I30 Rdr14 Fault
I30:S83	33030583	330U583	Intelligent Reader	30	Rdr15 Fault	I30 Rdr15 Fault
I30:S84	33030584	330U584	Intelligent Reader	30	Rdr16 Fault	I30 Rdr16 Fault
I30:S85	30130585	301U585	Intelligent Reader	30	Ext AC fail	I30 Ext AC fail
I30:S86	30230586	302U586	Intelligent Reader	30	Ext Low Battery	I30 Ext Low Battery
I30:S87	30030587	300U587	Intelligent Reader	30	Ext LAN Fuse	I30 Ext LAN Fuse
I30:S88	30030588	300U588	Intelligent Reader	30	Ext Detector Fuse	I30 Ext Detector Fuse
I30:S89	30030589	300U589	Intelligent Reader	30	Ext Low Volts	I30 Ext Low Volts
I30:S90	30030590	300U590	Intelligent Reader	30	Ext PS Fail	I30 Ext PS Fail
I30:S91	30930591	309U591	Intelligent Reader	30	Ext Battery Test	I30 Ext Battery Test
I30:S92	15030592	150U592	Intelligent Reader	30	Spare2	I30 Spare2
I30:S93	15030593	150U593	Intelligent Reader	30	Spare3	I30 Spare3
I31:Z01	14031501	140V501	Intelligent Reader	31	Door1 Reed	I31 Door1 Reed
I31:Z02	14031502	140V502	Intelligent Reader	31	Door2 Reed	I31 Door2 Reed
I31:Z03	14031503	140V503	Intelligent Reader	31	Door1 Tongue	I31 Door1 Tongue
I31:Z04	14031504	140V504	Intelligent Reader	31	Door2 Tongue	I31 Door2 Tongue
I31:Z05	14031505	140V505	Intelligent Reader	31	Door1 REX	I31 Door1 REX
I31:Z06	14031506	140V506	Intelligent Reader	31	Door2 REX	I31 Door2 REX
I31:Z07	14031507	140V507	Intelligent Reader	31	Door1 REN	I31 Door1 REN
I31:Z08	14031508	140V508	Intelligent Reader	31	Door2 REN	I31 Door2 REN
I31:Z09	14031509	140V509	Intelligent Reader	31	Door3 Reed	I31 Door3 Reed
I31:Z10	14031510	140V510	Intelligent Reader	31	Door4 Reed	I31 Door4 Reed
I31:Z11	14031511	140V511	Intelligent Reader	31	Door3 Tongue	I31 Door3 Tongue
I31:Z12	14031512	140V512	Intelligent Reader	31	Door4 Tongue	I31 Door4 Tongue
I31:Z13	14031513	140V513	Intelligent Reader	31	Door3 REX	I31 Door3 REX
I31:Z14	14031514	140V514	Intelligent Reader	31	Door4 REX	I31 Door4 REX
I31:Z15	14031515	140V515	Intelligent Reader	31	Door3 REN	I31 Door3 REN
I31:Z16	14031516	140V516	Intelligent Reader	31	Door4 REN	I31 Door4 REN
I31:Z17	14031517	140V517	Intelligent Reader	31	Door5 Reed	I31 Door5 Reed
I31:Z18	14031518	140V518	Intelligent Reader	31	Door6 Reed	I31 Door6 Reed
I31:Z19	14031519	140V519	Intelligent Reader	31	Door5 Tongue	I31 Door5 Tongue
I31:Z20	14031520	140V520	Intelligent Reader	31	Door6 Tongue	I31 Door6 Tongue
I31:Z21	14031521	140V521	Intelligent Reader	31	Door5 REX	I31 Door5 REX
I31:Z22	14031522	140V522	Intelligent Reader	31	Door6 REX	I31 Door6 REX
I31:Z23	14031523	140V523	Intelligent Reader	31	Door5 REN	I31 Door5 REN
I31:Z24	14031524	140V524	Intelligent Reader	31	Door6 REN	I31 Door6 REN
I31:Z25	14031525	140V525	Intelligent Reader	31	Door7 Reed	I31 Door7 Reed
I31:Z26	14031526	140V526	Intelligent Reader	31	Door8 Reed	I31 Door8 Reed
I31:Z27	14031527	140V527	Intelligent Reader	31	Door7 Tongue	I31 Door7 Tongue
I31:Z28	14031528	140V528	Intelligent Reader	31	Door8 Tongue	I31 Door8 Tongue
I31:Z29	14031529	140V529	Intelligent Reader	31	Door7 REX	I31 Door7 REX
I31:Z30	14031530	140V530	Intelligent Reader	31	Door8 REX	I31 Door8 REX
I31:Z31	14031531	140V531	Intelligent Reader	31	Door7 REN	I31 Door7 REN
I31:Z32	14031532	140V532	Intelligent Reader	31	Door8 REN	I31 Door8 REN
I31:S01	14531501	145V501	Intelligent Reader	31	Cabinet Tamper	I31 Cabinet Tamper
I31:S02	30131502	301V502	Intelligent Reader	31	AC fail	I31 AC fail
I31:S03	30231503	302V503	Intelligent Reader	31	Low Battery	I31 Low Battery
I31:S04	30031504	300V504	Intelligent Reader	31	LAN Fuse	I31 LAN Fuse
I31:S05	30031505	300V505	Intelligent Reader	31	Detector Fuse	I31 Detector Fuse
I31:S06	30031506	300V506	Intelligent Reader	31	Low Volts	I31 Low Volts
I31:S07	30031507	300V507	Intelligent Reader	31	PS Fail	I31 PS Fail
I31:S08	30931508	309V508	Intelligent Reader	31	Battery Test	I31 Battery Test
I31:S09	33331509	333V509	Intelligent Reader	31	Unibus Fault	I31 Unibus Fault
I31:S10	30331510	303V510	Intelligent Reader	31	Download Fail	I31 Download Fail
I31:S11	15031511	150V511	Intelligent Reader	31	Spare1	I31 Spare1

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I31:S12	14331512	143V512	Intelligent Reader	31	LAN Comms	I31 LAN Comms
I31:S13	43231513	432V513	Intelligent Reader	31	Door1 Fault	I31 Door1 Fault
I31:S14	43231514	432V514	Intelligent Reader	31	Door2 Fault	I31 Door2 Fault
I31:S15	43231515	432V515	Intelligent Reader	31	Door3 Fault	I31 Door3 Fault
I31:S16	43231516	432V516	Intelligent Reader	31	Door4 Fault	I31 Door4 Fault
I31:S17	43231517	432V517	Intelligent Reader	31	Door5 Fault	I31 Door5 Fault
I31:S18	43231518	432V518	Intelligent Reader	31	Door6 Fault	I31 Door6 Fault
I31:S19	43231519	432V519	Intelligent Reader	31	Door7 Fault	I31 Door7 Fault
I31:S20	43231520	432V520	Intelligent Reader	31	Door8 Fault	I31 Door8 Fault
I31:S21	42331521	423V521	Intelligent Reader	31	Door1 Forced	I31 Door1 Forced
I31:S22	42331522	423V522	Intelligent Reader	31	Door2 Forced	I31 Door2 Forced
I31:S23	42331523	423V523	Intelligent Reader	31	Door3 Forced	I31 Door3 Forced
I31:S24	42331524	423V524	Intelligent Reader	31	Door4 Forced	I31 Door4 Forced
I31:S25	42331525	423V525	Intelligent Reader	31	Door5 Forced	I31 Door5 Forced
I31:S26	42331526	423V526	Intelligent Reader	31	Door6 Forced	I31 Door6 Forced
I31:S27	42331527	423V527	Intelligent Reader	31	Door7 Forced	I31 Door7 Forced
I31:S28	42331528	423V528	Intelligent Reader	31	Door8 Forced	I31 Door8 Forced
I31:S29	42631529	426V529	Intelligent Reader	31	Door1 DOTL	I31 Door1 DOTL
I31:S30	42631530	426V530	Intelligent Reader	31	Door2 DOTL	I31 Door2 DOTL
I31:S31	42631531	426V531	Intelligent Reader	31	Door3 DOTL	I31 Door3 DOTL
I31:S32	42631532	426V532	Intelligent Reader	31	Door4 DOTL	I31 Door4 DOTL
I31:S33	42631533	426V533	Intelligent Reader	31	Door5 DOTL	I31 Door5 DOTL
I31:S34	42631534	426V534	Intelligent Reader	31	Door6 DOTL	I31 Door6 DOTL
I31:S35	42631535	426V535	Intelligent Reader	31	Door7 DOTL	I31 Door7 DOTL
I31:S36	42631536	426V536	Intelligent Reader	31	Door8 DOTL	I31 Door8 DOTL
I31:S37	15031537	150V537	Intelligent Reader	31	Rdr1 Invalid	I31 Rdr1 Invalid
I31:S38	15031538	150V538	Intelligent Reader	31	Rdr2 Invalid	I31 Rdr2 Invalid
I31:S39	15031539	150V539	Intelligent Reader	31	Rdr3 Invalid	I31 Rdr3 Invalid
I31:S40	15031540	150V540	Intelligent Reader	31	Rdr4 Invalid	I31 Rdr4 Invalid
I31:S41	15031541	150V541	Intelligent Reader	31	Rdr5 Invalid	I31 Rdr5 Invalid
I31:S42	15031542	150V542	Intelligent Reader	31	Rdr6 Invalid	I31 Rdr6 Invalid
I31:S43	15031543	150V543	Intelligent Reader	31	Rdr7 Invalid	I31 Rdr7 Invalid
I31:S44	15031544	150V544	Intelligent Reader	31	Rdr8 Invalid	I31 Rdr8 Invalid
I31:S45	15031545	150V545	Intelligent Reader	31	Rdr9 Invalid	I31 Rdr9 Invalid
I31:S46	15031546	150V546	Intelligent Reader	31	Rdr10 Invalid	I31 Rdr10 Invalid
I31:S47	15031547	150V547	Intelligent Reader	31	Rdr11 Invalid	I31 Rdr11 Invalid
I31:S48	15031548	150V548	Intelligent Reader	31	Rdr12 Invalid	I31 Rdr12 Invalid
I31:S49	15031549	150V549	Intelligent Reader	31	Rdr13 Invalid	I31 Rdr13 Invalid
I31:S50	15031550	150V550	Intelligent Reader	31	Rdr14 Invalid	I31 Rdr14 Invalid
I31:S51	15031551	150V551	Intelligent Reader	31	Rdr15 Invalid	I31 Rdr15 Invalid
I31:S52	15031552	150V552	Intelligent Reader	31	Rdr16 Invalid	I31 Rdr16 Invalid
I31:S53	12231553	122V553	Intelligent Reader	31	Rdr1 Duress	I31 Rdr1 Duress
I31:S54	12231554	122V554	Intelligent Reader	31	Rdr2 Duress	I31 Rdr2 Duress
I31:S55	12231555	122V555	Intelligent Reader	31	Rdr3 Duress	I31 Rdr3 Duress
I31:S56	12231556	122V556	Intelligent Reader	31	Rdr4 Duress	I31 Rdr4 Duress
I31:S57	12231557	122V557	Intelligent Reader	31	Rdr5 Duress	I31 Rdr5 Duress
I31:S58	12231558	122V558	Intelligent Reader	31	Rdr6 Duress	I31 Rdr6 Duress
I31:S59	12231559	122V559	Intelligent Reader	31	Rdr7 Duress	I31 Rdr7 Duress
I31:S60	12231560	122V560	Intelligent Reader	31	Rdr8 Duress	I31 Rdr8 Duress
I31:S61	12231561	122V561	Intelligent Reader	31	Rdr9 Duress	I31 Rdr9 Duress
I31:S62	12231562	122V562	Intelligent Reader	31	Rdr10 Duress	I31 Rdr10 Duress
I31:S63	12231563	122V563	Intelligent Reader	31	Rdr11 Duress	I31 Rdr11 Duress
I31:S64	12231564	122V564	Intelligent Reader	31	Rdr12 Duress	I31 Rdr12 Duress
I31:S65	12231565	122V565	Intelligent Reader	31	Rdr13 Duress	I31 Rdr13 Duress
I31:S66	12231566	122V566	Intelligent Reader	31	Rdr14 Duress	I31 Rdr14 Duress
I31:S67	12231567	122V567	Intelligent Reader	31	Rdr15 Duress	I31 Rdr15 Duress
I31:S68	12231568	122V568	Intelligent Reader	31	Rdr16 Duress	I31 Rdr16 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I31:S69	33031569	330V569	Intelligent Reader	31	Rdr1 Fault	I31 Rdr1 Fault
I31:S70	33031570	330V570	Intelligent Reader	31	Rdr2 Fault	I31 Rdr2 Fault
I31:S71	33031571	330V571	Intelligent Reader	31	Rdr3 Fault	I31 Rdr3 Fault
I31:S72	33031572	330V572	Intelligent Reader	31	Rdr4 Fault	I31 Rdr4 Fault
I31:S73	33031573	330V573	Intelligent Reader	31	Rdr5 Fault	I31 Rdr5 Fault
I31:S74	33031574	330V574	Intelligent Reader	31	Rdr6 Fault	I31 Rdr6 Fault
I31:S75	33031575	330V575	Intelligent Reader	31	Rdr7 Fault	I31 Rdr7 Fault
I31:S76	33031576	330V576	Intelligent Reader	31	Rdr8 Fault	I31 Rdr8 Fault
I31:S77	33031577	330V577	Intelligent Reader	31	Rdr9 Fault	I31 Rdr9 Fault
I31:S78	33031578	330V578	Intelligent Reader	31	Rdr10 Fault	I31 Rdr10 Fault
I31:S79	33031579	330V579	Intelligent Reader	31	Rdr11 Fault	I31 Rdr11 Fault
I31:S80	33031580	330V580	Intelligent Reader	31	Rdr12 Fault	I31 Rdr12 Fault
I31:S81	33031581	330V581	Intelligent Reader	31	Rdr13 Fault	I31 Rdr13 Fault
I31:S82	33031582	330V582	Intelligent Reader	31	Rdr14 Fault	I31 Rdr14 Fault
I31:S83	33031583	330V583	Intelligent Reader	31	Rdr15 Fault	I31 Rdr15 Fault
I31:S84	33031584	330V584	Intelligent Reader	31	Rdr16 Fault	I31 Rdr16 Fault
I31:S85	30131585	301V585	Intelligent Reader	31	Ext AC fail	I31 Ext AC fail
I31:S86	30231586	302V586	Intelligent Reader	31	Ext Low Battery	I31 Ext Low Battery
I31:S87	30031587	300V587	Intelligent Reader	31	Ext LAN Fuse	I31 Ext LAN Fuse
I31:S88	30031588	300V588	Intelligent Reader	31	Ext Detector Fuse	I31 Ext Detector Fuse
I31:S89	30031589	300V589	Intelligent Reader	31	Ext Low Volts	I31 Ext Low Volts
I31:S90	30031590	300V590	Intelligent Reader	31	Ext PS Fail	I31 Ext PS Fail
I31:S91	30931591	309V591	Intelligent Reader	31	Ext Battery Test	I31 Ext Battery Test
I31:S92	15031592	150V592	Intelligent Reader	31	Spare2	I31 Spare2
I31:S93	15031593	150V593	Intelligent Reader	31	Spare3	I31 Spare3
I32:Z01	14032501	140W501	Intelligent Reader	32	Door1 Reed	I32 Door1 Reed
I32:Z02	14032502	140W502	Intelligent Reader	32	Door2 Reed	I32 Door2 Reed
I32:Z03	14032503	140W503	Intelligent Reader	32	Door1 Tongue	I32 Door1 Tongue
I32:Z04	14032504	140W504	Intelligent Reader	32	Door2 Tongue	I32 Door2 Tongue
I32:Z05	14032505	140W505	Intelligent Reader	32	Door1 REX	I32 Door1 REX
I32:Z06	14032506	140W506	Intelligent Reader	32	Door2 REX	I32 Door2 REX
I32:Z07	14032507	140W507	Intelligent Reader	32	Door1 REN	I32 Door1 REN
I32:Z08	14032508	140W508	Intelligent Reader	32	Door2 REN	I32 Door2 REN
I32:Z09	14032509	140W509	Intelligent Reader	32	Door3 Reed	I32 Door3 Reed
I32:Z10	14032510	140W510	Intelligent Reader	32	Door4 Reed	I32 Door4 Reed
I32:Z11	14032511	140W511	Intelligent Reader	32	Door3 Tongue	I32 Door3 Tongue
I32:Z12	14032512	140W512	Intelligent Reader	32	Door4 Tongue	I32 Door4 Tongue
I32:Z13	14032513	140W513	Intelligent Reader	32	Door3 REX	I32 Door3 REX
I32:Z14	14032514	140W514	Intelligent Reader	32	Door4 REX	I32 Door4 REX
I32:Z15	14032515	140W515	Intelligent Reader	32	Door3 REN	I32 Door3 REN
I32:Z16	14032516	140W516	Intelligent Reader	32	Door4 REN	I32 Door4 REN
I32:Z17	14032517	140W517	Intelligent Reader	32	Door5 Reed	I32 Door5 Reed
I32:Z18	14032518	140W518	Intelligent Reader	32	Door6 Reed	I32 Door6 Reed
I32:Z19	14032519	140W519	Intelligent Reader	32	Door5 Tongue	I32 Door5 Tongue
I32:Z20	14032520	140W520	Intelligent Reader	32	Door6 Tongue	I32 Door6 Tongue
I32:Z21	14032521	140W521	Intelligent Reader	32	Door5 REX	I32 Door5 REX
I32:Z22	14032522	140W522	Intelligent Reader	32	Door6 REX	I32 Door6 REX
I32:Z23	14032523	140W523	Intelligent Reader	32	Door5 REN	I32 Door5 REN
I32:Z24	14032524	140W524	Intelligent Reader	32	Door6 REN	I32 Door6 REN
I32:Z25	14032525	140W525	Intelligent Reader	32	Door7 Reed	I32 Door7 Reed
I32:Z26	14032526	140W526	Intelligent Reader	32	Door8 Reed	I32 Door8 Reed
I32:Z27	14032527	140W527	Intelligent Reader	32	Door7 Tongue	I32 Door7 Tongue
I32:Z28	14032528	140W528	Intelligent Reader	32	Door8 Tongue	I32 Door8 Tongue
I32:Z29	14032529	140W529	Intelligent Reader	32	Door7 REX	I32 Door7 REX
I32:Z30	14032530	140W530	Intelligent Reader	32	Door8 REX	I32 Door8 REX
I32:Z31	14032531	140W531	Intelligent Reader	32	Door7 REN	I32 Door7 REN
I32:Z32	14032532	140W532	Intelligent Reader	32	Door8 REN	I32 Door8 REN

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I32:S01	14532501	145W501	Intelligent Reader	32	Cabinet Tamper	I32 Cabinet Tamper
I32:S02	30132502	301W502	Intelligent Reader	32	AC fail	I32 AC fail
I32:S03	30232503	302W503	Intelligent Reader	32	Low Battery	I32 Low Battery
I32:S04	30032504	300W504	Intelligent Reader	32	LAN Fuse	I32 LAN Fuse
I32:S05	30032505	300W505	Intelligent Reader	32	Detector Fuse	I32 Detector Fuse
I32:S06	30032506	300W506	Intelligent Reader	32	Low Volts	I32 Low Volts
I32:S07	30032507	300W507	Intelligent Reader	32	PS Fail	I32 PS Fail
I32:S08	30932508	309W508	Intelligent Reader	32	Battery Test	I32 Battery Test
I32:S09	33332509	333W509	Intelligent Reader	32	Unibus Fault	I32 Unibus Fault
I32:S10	30332510	303W510	Intelligent Reader	32	Download Fail	I32 Download Fail
I32:S11	15032511	150W511	Intelligent Reader	32	Spare1	I32 Spare1
I32:S12	14332512	143W512	Intelligent Reader	32	LAN Comms	I32 LAN Comms
I32:S13	43232513	432W513	Intelligent Reader	32	Door1 Fault	I32 Door1 Fault
I32:S14	43232514	432W514	Intelligent Reader	32	Door2 Fault	I32 Door2 Fault
I32:S15	43232515	432W515	Intelligent Reader	32	Door3 Fault	I32 Door3 Fault
I32:S16	43232516	432W516	Intelligent Reader	32	Door4 Fault	I32 Door4 Fault
I32:S17	43232517	432W517	Intelligent Reader	32	Door5 Fault	I32 Door5 Fault
I32:S18	43232518	432W518	Intelligent Reader	32	Door6 Fault	I32 Door6 Fault
I32:S19	43232519	432W519	Intelligent Reader	32	Door7 Fault	I32 Door7 Fault
I32:S20	43232520	432W520	Intelligent Reader	32	Door8 Fault	I32 Door8 Fault
I32:S21	42332521	423W521	Intelligent Reader	32	Door1 Forced	I32 Door1 Forced
I32:S22	42332522	423W522	Intelligent Reader	32	Door2 Forced	I32 Door2 Forced
I32:S23	42332523	423W523	Intelligent Reader	32	Door3 Forced	I32 Door3 Forced
I32:S24	42332524	423W524	Intelligent Reader	32	Door4 Forced	I32 Door4 Forced
I32:S25	42332525	423W525	Intelligent Reader	32	Door5 Forced	I32 Door5 Forced
I32:S26	42332526	423W526	Intelligent Reader	32	Door6 Forced	I32 Door6 Forced
I32:S27	42332527	423W527	Intelligent Reader	32	Door7 Forced	I32 Door7 Forced
I32:S28	42332528	423W528	Intelligent Reader	32	Door8 Forced	I32 Door8 Forced
I32:S29	42632529	426W529	Intelligent Reader	32	Door1 DOTL	I32 Door1 DOTL
I32:S30	42632530	426W530	Intelligent Reader	32	Door2 DOTL	I32 Door2 DOTL
I32:S31	42632531	426W531	Intelligent Reader	32	Door3 DOTL	I32 Door3 DOTL
I32:S32	42632532	426W532	Intelligent Reader	32	Door4 DOTL	I32 Door4 DOTL
I32:S33	42632533	426W533	Intelligent Reader	32	Door5 DOTL	I32 Door5 DOTL
I32:S34	42632534	426W534	Intelligent Reader	32	Door6 DOTL	I32 Door6 DOTL
I32:S35	42632535	426W535	Intelligent Reader	32	Door7 DOTL	I32 Door7 DOTL
I32:S36	42632536	426W536	Intelligent Reader	32	Door8 DOTL	I32 Door8 DOTL
I32:S37	15032537	150W537	Intelligent Reader	32	Rdr1 Invalid	I32 Rdr1 Invalid
I32:S38	15032538	150W538	Intelligent Reader	32	Rdr2 Invalid	I32 Rdr2 Invalid
I32:S39	15032539	150W539	Intelligent Reader	32	Rdr3 Invalid	I32 Rdr3 Invalid
I32:S40	15032540	150W540	Intelligent Reader	32	Rdr4 Invalid	I32 Rdr4 Invalid
I32:S41	15032541	150W541	Intelligent Reader	32	Rdr5 Invalid	I32 Rdr5 Invalid
I32:S42	15032542	150W542	Intelligent Reader	32	Rdr6 Invalid	I32 Rdr6 Invalid
I32:S43	15032543	150W543	Intelligent Reader	32	Rdr7 Invalid	I32 Rdr7 Invalid
I32:S44	15032544	150W544	Intelligent Reader	32	Rdr8 Invalid	I32 Rdr8 Invalid
I32:S45	15032545	150W545	Intelligent Reader	32	Rdr9 Invalid	I32 Rdr9 Invalid
I32:S46	15032546	150W546	Intelligent Reader	32	Rdr10 Invalid	I32 Rdr10 Invalid
I32:S47	15032547	150W547	Intelligent Reader	32	Rdr11 Invalid	I32 Rdr11 Invalid
I32:S48	15032548	150W548	Intelligent Reader	32	Rdr12 Invalid	I32 Rdr12 Invalid
I32:S49	15032549	150W549	Intelligent Reader	32	Rdr13 Invalid	I32 Rdr13 Invalid
I32:S50	15032550	150W550	Intelligent Reader	32	Rdr14 Invalid	I32 Rdr14 Invalid
I32:S51	15032551	150W551	Intelligent Reader	32	Rdr15 Invalid	I32 Rdr15 Invalid
I32:S52	15032552	150W552	Intelligent Reader	32	Rdr16 Invalid	I32 Rdr16 Invalid
I32:S53	12232553	122W553	Intelligent Reader	32	Rdr1 Duress	I32 Rdr1 Duress
I32:S54	12232554	122W554	Intelligent Reader	32	Rdr2 Duress	I32 Rdr2 Duress
I32:S55	12232555	122W555	Intelligent Reader	32	Rdr3 Duress	I32 Rdr3 Duress
I32:S56	12232556	122W556	Intelligent Reader	32	Rdr4 Duress	I32 Rdr4 Duress
I32:S57	12232557	122W557	Intelligent Reader	32	Rdr5 Duress	I32 Rdr5 Duress

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I32:S58	12232558	122W558	Intelligent Reader	32	Rdr6 Duress	I32 Rdr6 Duress
I32:S59	12232559	122W559	Intelligent Reader	32	Rdr7 Duress	I32 Rdr7 Duress
I32:S60	12232560	122W560	Intelligent Reader	32	Rdr8 Duress	I32 Rdr8 Duress
I32:S61	12232561	122W561	Intelligent Reader	32	Rdr9 Duress	I32 Rdr9 Duress
I32:S62	12232562	122W562	Intelligent Reader	32	Rdr10 Duress	I32 Rdr10 Duress
I32:S63	12232563	122W563	Intelligent Reader	32	Rdr11 Duress	I32 Rdr11 Duress
I32:S64	12232564	122W564	Intelligent Reader	32	Rdr12 Duress	I32 Rdr12 Duress
I32:S65	12232565	122W565	Intelligent Reader	32	Rdr13 Duress	I32 Rdr13 Duress
I32:S66	12232566	122W566	Intelligent Reader	32	Rdr14 Duress	I32 Rdr14 Duress
I32:S67	12232567	122W567	Intelligent Reader	32	Rdr15 Duress	I32 Rdr15 Duress
I32:S68	12232568	122W568	Intelligent Reader	32	Rdr16 Duress	I32 Rdr16 Duress
I32:S69	33032569	330W569	Intelligent Reader	32	Rdr1 Fault	I32 Rdr1 Fault
I32:S70	33032570	330W570	Intelligent Reader	32	Rdr2 Fault	I32 Rdr2 Fault
I32:S71	33032571	330W571	Intelligent Reader	32	Rdr3 Fault	I32 Rdr3 Fault
I32:S72	33032572	330W572	Intelligent Reader	32	Rdr4 Fault	I32 Rdr4 Fault
I32:S73	33032573	330W573	Intelligent Reader	32	Rdr5 Fault	I32 Rdr5 Fault
I32:S74	33032574	330W574	Intelligent Reader	32	Rdr6 Fault	I32 Rdr6 Fault
I32:S75	33032575	330W575	Intelligent Reader	32	Rdr7 Fault	I32 Rdr7 Fault
I32:S76	33032576	330W576	Intelligent Reader	32	Rdr8 Fault	I32 Rdr8 Fault
I32:S77	33032577	330W577	Intelligent Reader	32	Rdr9 Fault	I32 Rdr9 Fault
I32:S78	33032578	330W578	Intelligent Reader	32	Rdr10 Fault	I32 Rdr10 Fault
I32:S79	33032579	330W579	Intelligent Reader	32	Rdr11 Fault	I32 Rdr11 Fault
I32:S80	33032580	330W580	Intelligent Reader	32	Rdr12 Fault	I32 Rdr12 Fault
I32:S81	33032581	330W581	Intelligent Reader	32	Rdr13 Fault	I32 Rdr13 Fault
I32:S82	33032582	330W582	Intelligent Reader	32	Rdr14 Fault	I32 Rdr14 Fault
I32:S83	33032583	330W583	Intelligent Reader	32	Rdr15 Fault	I32 Rdr15 Fault
I32:S84	33032584	330W584	Intelligent Reader	32	Rdr16 Fault	I32 Rdr16 Fault
I32:S85	30132585	301W585	Intelligent Reader	32	Ext AC fail	I32 Ext AC fail
I32:S86	30232586	302W586	Intelligent Reader	32	Ext Low Battery	I32 Ext Low Battery
I32:S87	30032587	300W587	Intelligent Reader	32	Ext LAN Fuse	I32 Ext LAN Fuse
I32:S88	30032588	300W588	Intelligent Reader	32	Ext Detector Fuse	I32 Ext Detector Fuse
I32:S89	30032589	300W589	Intelligent Reader	32	Ext Low Volts	I32 Ext Low Volts
I32:S90	30032590	300W590	Intelligent Reader	32	Ext PS Fail	I32 Ext PS Fail
I32:S91	30932591	309W591	Intelligent Reader	32	Ext Battery Test	I32 Ext Battery Test
I32:S92	15032592	150W592	Intelligent Reader	32	Spare2	I32 Spare2
I32:S93	15032593	150W593	Intelligent Reader	32	Spare3	I32 Spare3
I33:Z01	14033501	140X501	Intelligent Reader	33	Door1 Reed	I33 Door1 Reed
I33:Z02	14033502	140X502	Intelligent Reader	33	Door2 Reed	I33 Door2 Reed
I33:Z03	14033503	140X503	Intelligent Reader	33	Door1 Tongue	I33 Door1 Tongue
I33:Z04	14033504	140X504	Intelligent Reader	33	Door2 Tongue	I33 Door2 Tongue
I33:Z05	14033505	140X505	Intelligent Reader	33	Door1 REX	I33 Door1 REX
I33:Z06	14033506	140X506	Intelligent Reader	33	Door2 REX	I33 Door2 REX
I33:Z07	14033507	140X507	Intelligent Reader	33	Door1 REN	I33 Door1 REN
I33:Z08	14033508	140X508	Intelligent Reader	33	Door2 REN	I33 Door2 REN
I33:Z09	14033509	140X509	Intelligent Reader	33	Door3 Reed	I33 Door3 Reed
I33:Z10	14033510	140X510	Intelligent Reader	33	Door4 Reed	I33 Door4 Reed
I33:Z11	14033511	140X511	Intelligent Reader	33	Door3 Tongue	I33 Door3 Tongue
I33:Z12	14033512	140X512	Intelligent Reader	33	Door4 Tongue	I33 Door4 Tongue
I33:Z13	14033513	140X513	Intelligent Reader	33	Door3 REX	I33 Door3 REX
I33:Z14	14033514	140X514	Intelligent Reader	33	Door4 REX	I33 Door4 REX
I33:Z15	14033515	140X515	Intelligent Reader	33	Door3 REN	I33 Door3 REN
I33:Z16	14033516	140X516	Intelligent Reader	33	Door4 REN	I33 Door4 REN
I33:Z17	14033517	140X517	Intelligent Reader	33	Door5 Reed	I33 Door5 Reed
I33:Z18	14033518	140X518	Intelligent Reader	33	Door6 Reed	I33 Door6 Reed
I33:Z19	14033519	140X519	Intelligent Reader	33	Door5 Tongue	I33 Door5 Tongue
I33:Z20	14033520	140X520	Intelligent Reader	33	Door6 Tongue	I33 Door6 Tongue
I33:Z21	14033521	140X521	Intelligent Reader	33	Door5 REX	I33 Door5 REX

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I33:Z22	14033522	140X522	Intelligent Reader	33	Door6 REX	I33 Door6 REX
I33:Z23	14033523	140X523	Intelligent Reader	33	Door5 REN	I33 Door5 REN
I33:Z24	14033524	140X524	Intelligent Reader	33	Door6 REN	I33 Door6 REN
I33:Z25	14033525	140X525	Intelligent Reader	33	Door7 Reed	I33 Door7 Reed
I33:Z26	14033526	140X526	Intelligent Reader	33	Door8 Reed	I33 Door8 Reed
I33:Z27	14033527	140X527	Intelligent Reader	33	Door7 Tongue	I33 Door7 Tongue
I33:Z28	14033528	140X528	Intelligent Reader	33	Door8 Tongue	I33 Door8 Tongue
I33:Z29	14033529	140X529	Intelligent Reader	33	Door7 REX	I33 Door7 REX
I33:Z30	14033530	140X530	Intelligent Reader	33	Door8 REX	I33 Door8 REX
I33:Z31	14033531	140X531	Intelligent Reader	33	Door7 REN	I33 Door7 REN
I33:Z32	14033532	140X532	Intelligent Reader	33	Door8 REN	I33 Door8 REN
I33:S01	14533501	145X501	Intelligent Reader	33	Cabinet Tamper	I33 Cabinet Tamper
I33:S02	30133502	301X502	Intelligent Reader	33	AC fail	I33 AC fail
I33:S03	30233503	302X503	Intelligent Reader	33	Low Battery	I33 Low Battery
I33:S04	30033504	300X504	Intelligent Reader	33	LAN Fuse	I33 LAN Fuse
I33:S05	30033505	300X505	Intelligent Reader	33	Detector Fuse	I33 Detector Fuse
I33:S06	30033506	300X506	Intelligent Reader	33	Low Volts	I33 Low Volts
I33:S07	30033507	300X507	Intelligent Reader	33	PS Fail	I33 PS Fail
I33:S08	30933508	309X508	Intelligent Reader	33	Battery Test	I33 Battery Test
I33:S09	33333509	333X509	Intelligent Reader	33	Unibus Fault	I33 Unibus Fault
I33:S10	30333510	303X510	Intelligent Reader	33	Download Fail	I33 Download Fail
I33:S11	15033511	150X511	Intelligent Reader	33	Spare1	I33 Spare1
I33:S12	14333512	143X512	Intelligent Reader	33	LAN Comms	I33 LAN Comms
I33:S13	43233513	432X513	Intelligent Reader	33	Door1 Fault	I33 Door1 Fault
I33:S14	43233514	432X514	Intelligent Reader	33	Door2 Fault	I33 Door2 Fault
I33:S15	43233515	432X515	Intelligent Reader	33	Door3 Fault	I33 Door3 Fault
I33:S16	43233516	432X516	Intelligent Reader	33	Door4 Fault	I33 Door4 Fault
I33:S17	43233517	432X517	Intelligent Reader	33	Door5 Fault	I33 Door5 Fault
I33:S18	43233518	432X518	Intelligent Reader	33	Door6 Fault	I33 Door6 Fault
I33:S19	43233519	432X519	Intelligent Reader	33	Door7 Fault	I33 Door7 Fault
I33:S20	43233520	432X520	Intelligent Reader	33	Door8 Fault	I33 Door8 Fault
I33:S21	42333521	423X521	Intelligent Reader	33	Door1 Forced	I33 Door1 Forced
I33:S22	42333522	423X522	Intelligent Reader	33	Door2 Forced	I33 Door2 Forced
I33:S23	42333523	423X523	Intelligent Reader	33	Door3 Forced	I33 Door3 Forced
I33:S24	42333524	423X524	Intelligent Reader	33	Door4 Forced	I33 Door4 Forced
I33:S25	42333525	423X525	Intelligent Reader	33	Door5 Forced	I33 Door5 Forced
I33:S26	42333526	423X526	Intelligent Reader	33	Door6 Forced	I33 Door6 Forced
I33:S27	42333527	423X527	Intelligent Reader	33	Door7 Forced	I33 Door7 Forced
I33:S28	42333528	423X528	Intelligent Reader	33	Door8 Forced	I33 Door8 Forced
I33:S29	42633529	426X529	Intelligent Reader	33	Door1 DOTL	I33 Door1 DOTL
I33:S30	42633530	426X530	Intelligent Reader	33	Door2 DOTL	I33 Door2 DOTL
I33:S31	42633531	426X531	Intelligent Reader	33	Door3 DOTL	I33 Door3 DOTL
I33:S32	42633532	426X532	Intelligent Reader	33	Door4 DOTL	I33 Door4 DOTL
I33:S33	42633533	426X533	Intelligent Reader	33	Door5 DOTL	I33 Door5 DOTL
I33:S34	42633534	426X534	Intelligent Reader	33	Door6 DOTL	I33 Door6 DOTL
I33:S35	42633535	426X535	Intelligent Reader	33	Door7 DOTL	I33 Door7 DOTL
I33:S36	42633536	426X536	Intelligent Reader	33	Door8 DOTL	I33 Door8 DOTL
I33:S37	15033537	150X537	Intelligent Reader	33	Rdr1 Invalid	I33 Rdr1 Invalid
I33:S38	15033538	150X538	Intelligent Reader	33	Rdr2 Invalid	I33 Rdr2 Invalid
I33:S39	15033539	150X539	Intelligent Reader	33	Rdr3 Invalid	I33 Rdr3 Invalid
I33:S40	15033540	150X540	Intelligent Reader	33	Rdr4 Invalid	I33 Rdr4 Invalid
I33:S41	15033541	150X541	Intelligent Reader	33	Rdr5 Invalid	I33 Rdr5 Invalid
I33:S42	15033542	150X542	Intelligent Reader	33	Rdr6 Invalid	I33 Rdr6 Invalid
I33:S43	15033543	150X543	Intelligent Reader	33	Rdr7 Invalid	I33 Rdr7 Invalid
I33:S44	15033544	150X544	Intelligent Reader	33	Rdr8 Invalid	I33 Rdr8 Invalid
I33:S45	15033545	150X545	Intelligent Reader	33	Rdr9 Invalid	I33 Rdr9 Invalid
I33:S46	15033546	150X546	Intelligent Reader	33	Rdr10 Invalid	I33 Rdr10 Invalid

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I33:S47	15033547	150X547	Intelligent Reader	33	Rdr11 Invalid	I33 Rdr11 Invalid
I33:S48	15033548	150X548	Intelligent Reader	33	Rdr12 Invalid	I33 Rdr12 Invalid
I33:S49	15033549	150X549	Intelligent Reader	33	Rdr13 Invalid	I33 Rdr13 Invalid
I33:S50	15033550	150X550	Intelligent Reader	33	Rdr14 Invalid	I33 Rdr14 Invalid
I33:S51	15033551	150X551	Intelligent Reader	33	Rdr15 Invalid	I33 Rdr15 Invalid
I33:S52	15033552	150X552	Intelligent Reader	33	Rdr16 Invalid	I33 Rdr16 Invalid
I33:S53	12233553	122X553	Intelligent Reader	33	Rdr1 Duress	I33 Rdr1 Duress
I33:S54	12233554	122X554	Intelligent Reader	33	Rdr2 Duress	I33 Rdr2 Duress
I33:S55	12233555	122X555	Intelligent Reader	33	Rdr3 Duress	I33 Rdr3 Duress
I33:S56	12233556	122X556	Intelligent Reader	33	Rdr4 Duress	I33 Rdr4 Duress
I33:S57	12233557	122X557	Intelligent Reader	33	Rdr5 Duress	I33 Rdr5 Duress
I33:S58	12233558	122X558	Intelligent Reader	33	Rdr6 Duress	I33 Rdr6 Duress
I33:S59	12233559	122X559	Intelligent Reader	33	Rdr7 Duress	I33 Rdr7 Duress
I33:S60	12233560	122X560	Intelligent Reader	33	Rdr8 Duress	I33 Rdr8 Duress
I33:S61	12233561	122X561	Intelligent Reader	33	Rdr9 Duress	I33 Rdr9 Duress
I33:S62	12233562	122X562	Intelligent Reader	33	Rdr10 Duress	I33 Rdr10 Duress
I33:S63	12233563	122X563	Intelligent Reader	33	Rdr11 Duress	I33 Rdr11 Duress
I33:S64	12233564	122X564	Intelligent Reader	33	Rdr12 Duress	I33 Rdr12 Duress
I33:S65	12233565	122X565	Intelligent Reader	33	Rdr13 Duress	I33 Rdr13 Duress
I33:S66	12233566	122X566	Intelligent Reader	33	Rdr14 Duress	I33 Rdr14 Duress
I33:S67	12233567	122X567	Intelligent Reader	33	Rdr15 Duress	I33 Rdr15 Duress
I33:S68	12233568	122X568	Intelligent Reader	33	Rdr16 Duress	I33 Rdr16 Duress
I33:S69	33033569	330X569	Intelligent Reader	33	Rdr1 Fault	I33 Rdr1 Fault
I33:S70	33033570	330X570	Intelligent Reader	33	Rdr2 Fault	I33 Rdr2 Fault
I33:S71	33033571	330X571	Intelligent Reader	33	Rdr3 Fault	I33 Rdr3 Fault
I33:S72	33033572	330X572	Intelligent Reader	33	Rdr4 Fault	I33 Rdr4 Fault
I33:S73	33033573	330X573	Intelligent Reader	33	Rdr5 Fault	I33 Rdr5 Fault
I33:S74	33033574	330X574	Intelligent Reader	33	Rdr6 Fault	I33 Rdr6 Fault
I33:S75	33033575	330X575	Intelligent Reader	33	Rdr7 Fault	I33 Rdr7 Fault
I33:S76	33033576	330X576	Intelligent Reader	33	Rdr8 Fault	I33 Rdr8 Fault
I33:S77	33033577	330X577	Intelligent Reader	33	Rdr9 Fault	I33 Rdr9 Fault
I33:S78	33033578	330X578	Intelligent Reader	33	Rdr10 Fault	I33 Rdr10 Fault
I33:S79	33033579	330X579	Intelligent Reader	33	Rdr11 Fault	I33 Rdr11 Fault
I33:S80	33033580	330X580	Intelligent Reader	33	Rdr12 Fault	I33 Rdr12 Fault
I33:S81	33033581	330X581	Intelligent Reader	33	Rdr13 Fault	I33 Rdr13 Fault
I33:S82	33033582	330X582	Intelligent Reader	33	Rdr14 Fault	I33 Rdr14 Fault
I33:S83	33033583	330X583	Intelligent Reader	33	Rdr15 Fault	I33 Rdr15 Fault
I33:S84	33033584	330X584	Intelligent Reader	33	Rdr16 Fault	I33 Rdr16 Fault
I33:S85	30133585	301X585	Intelligent Reader	33	Ext AC fail	I33 Ext AC fail
I33:S86	30233586	302X586	Intelligent Reader	33	Ext Low Battery	I33 Ext Low Battery
I33:S87	30033587	300X587	Intelligent Reader	33	Ext LAN Fuse	I33 Ext LAN Fuse
I33:S88	30033588	300X588	Intelligent Reader	33	Ext Detector Fuse	I33 Ext Detector Fuse
I33:S89	30033589	300X589	Intelligent Reader	33	Ext Low Volts	I33 Ext Low Volts
I33:S90	30033590	300X590	Intelligent Reader	33	Ext PS Fail	I33 Ext PS Fail
I33:S91	30933591	309X591	Intelligent Reader	33	Ext Battery Test	I33 Ext Battery Test
I33:S92	15033592	150X592	Intelligent Reader	33	Spare2	I33 Spare2
I33:S93	15033593	150X593	Intelligent Reader	33	Spare3	I33 Spare3
I34:Z01	14034501	140Y501	Intelligent Reader	34	Door1 Reed	I34 Door1 Reed
I34:Z02	14034502	140Y502	Intelligent Reader	34	Door2 Reed	I34 Door2 Reed
I34:Z03	14034503	140Y503	Intelligent Reader	34	Door1 Tongue	I34 Door1 Tongue
I34:Z04	14034504	140Y504	Intelligent Reader	34	Door2 Tongue	I34 Door2 Tongue
I34:Z05	14034505	140Y505	Intelligent Reader	34	Door1 REX	I34 Door1 REX
I34:Z06	14034506	140Y506	Intelligent Reader	34	Door2 REX	I34 Door2 REX
I34:Z07	14034507	140Y507	Intelligent Reader	34	Door1 REN	I34 Door1 REN
I34:Z08	14034508	140Y508	Intelligent Reader	34	Door2 REN	I34 Door2 REN
I34:Z09	14034509	140Y509	Intelligent Reader	34	Door3 Reed	I34 Door3 Reed
I34:Z10	14034510	140Y510	Intelligent Reader	34	Door4 Reed	I34 Door4 Reed

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I34:Z11	14034511	140Y511	Intelligent Reader	34	Door3 Tongue	I34 Door3 Tongue
I34:Z12	14034512	140Y512	Intelligent Reader	34	Door4 Tongue	I34 Door4 Tongue
I34:Z13	14034513	140Y513	Intelligent Reader	34	Door3 REX	I34 Door3 REX
I34:Z14	14034514	140Y514	Intelligent Reader	34	Door4 REX	I34 Door4 REX
I34:Z15	14034515	140Y515	Intelligent Reader	34	Door3 REN	I34 Door3 REN
I34:Z16	14034516	140Y516	Intelligent Reader	34	Door4 REN	I34 Door4 REN
I34:Z17	14034517	140Y517	Intelligent Reader	34	Door5 Reed	I34 Door5 Reed
I34:Z18	14034518	140Y518	Intelligent Reader	34	Door6 Reed	I34 Door6 Reed
I34:Z19	14034519	140Y519	Intelligent Reader	34	Door5 Tongue	I34 Door5 Tongue
I34:Z20	14034520	140Y520	Intelligent Reader	34	Door6 Tongue	I34 Door6 Tongue
I34:Z21	14034521	140Y521	Intelligent Reader	34	Door5 REX	I34 Door5 REX
I34:Z22	14034522	140Y522	Intelligent Reader	34	Door6 REX	I34 Door6 REX
I34:Z23	14034523	140Y523	Intelligent Reader	34	Door5 REN	I34 Door5 REN
I34:Z24	14034524	140Y524	Intelligent Reader	34	Door6 REN	I34 Door6 REN
I34:Z25	14034525	140Y525	Intelligent Reader	34	Door7 Reed	I34 Door7 Reed
I34:Z26	14034526	140Y526	Intelligent Reader	34	Door8 Reed	I34 Door8 Reed
I34:Z27	14034527	140Y527	Intelligent Reader	34	Door7 Tongue	I34 Door7 Tongue
I34:Z28	14034528	140Y528	Intelligent Reader	34	Door8 Tongue	I34 Door8 Tongue
I34:Z29	14034529	140Y529	Intelligent Reader	34	Door7 REX	I34 Door7 REX
I34:Z30	14034530	140Y530	Intelligent Reader	34	Door8 REX	I34 Door8 REX
I34:Z31	14034531	140Y531	Intelligent Reader	34	Door7 REN	I34 Door7 REN
I34:Z32	14034532	140Y532	Intelligent Reader	34	Door8 REN	I34 Door8 REN
I34:S01	14534501	145Y501	Intelligent Reader	34	Cabinet Tamper	I34 Cabinet Tamper
I34:S02	30134502	301Y502	Intelligent Reader	34	AC fail	I34 AC fail
I34:S03	30234503	302Y503	Intelligent Reader	34	Low Battery	I34 Low Battery
I34:S04	30034504	300Y504	Intelligent Reader	34	LAN Fuse	I34 LAN Fuse
I34:S05	30034505	300Y505	Intelligent Reader	34	Detector Fuse	I34 Detector Fuse
I34:S06	30034506	300Y506	Intelligent Reader	34	Low Volts	I34 Low Volts
I34:S07	30034507	300Y507	Intelligent Reader	34	PS Fail	I34 PS Fail
I34:S08	30934508	309Y508	Intelligent Reader	34	Battery Test	I34 Battery Test
I34:S09	33334509	333Y509	Intelligent Reader	34	Unibus Fault	I34 Unibus Fault
I34:S10	30334510	303Y510	Intelligent Reader	34	Download Fail	I34 Download Fail
I34:S11	15034511	150Y511	Intelligent Reader	34	Spare1	I34 Spare1
I34:S12	14334512	143Y512	Intelligent Reader	34	LAN Comms	I34 LAN Comms
I34:S13	43234513	432Y513	Intelligent Reader	34	Door1 Fault	I34 Door1 Fault
I34:S14	43234514	432Y514	Intelligent Reader	34	Door2 Fault	I34 Door2 Fault
I34:S15	43234515	432Y515	Intelligent Reader	34	Door3 Fault	I34 Door3 Fault
I34:S16	43234516	432Y516	Intelligent Reader	34	Door4 Fault	I34 Door4 Fault
I34:S17	43234517	432Y517	Intelligent Reader	34	Door5 Fault	I34 Door5 Fault
I34:S18	43234518	432Y518	Intelligent Reader	34	Door6 Fault	I34 Door6 Fault
I34:S19	43234519	432Y519	Intelligent Reader	34	Door7 Fault	I34 Door7 Fault
I34:S20	43234520	432Y520	Intelligent Reader	34	Door8 Fault	I34 Door8 Fault
I34:S21	42334521	423Y521	Intelligent Reader	34	Door1 Forced	I34 Door1 Forced
I34:S22	42334522	423Y522	Intelligent Reader	34	Door2 Forced	I34 Door2 Forced
I34:S23	42334523	423Y523	Intelligent Reader	34	Door3 Forced	I34 Door3 Forced
I34:S24	42334524	423Y524	Intelligent Reader	34	Door4 Forced	I34 Door4 Forced
I34:S25	42334525	423Y525	Intelligent Reader	34	Door5 Forced	I34 Door5 Forced
I34:S26	42334526	423Y526	Intelligent Reader	34	Door6 Forced	I34 Door6 Forced
I34:S27	42334527	423Y527	Intelligent Reader	34	Door7 Forced	I34 Door7 Forced
I34:S28	42334528	423Y528	Intelligent Reader	34	Door8 Forced	I34 Door8 Forced
I34:S29	42634529	426Y529	Intelligent Reader	34	Door1 DOTL	I34 Door1 DOTL
I34:S30	42634530	426Y530	Intelligent Reader	34	Door2 DOTL	I34 Door2 DOTL
I34:S31	42634531	426Y531	Intelligent Reader	34	Door3 DOTL	I34 Door3 DOTL
I34:S32	42634532	426Y532	Intelligent Reader	34	Door4 DOTL	I34 Door4 DOTL
I34:S33	42634533	426Y533	Intelligent Reader	34	Door5 DOTL	I34 Door5 DOTL
I34:S34	42634534	426Y534	Intelligent Reader	34	Door6 DOTL	I34 Door6 DOTL
I34:S35	42634535	426Y535	Intelligent Reader	34	Door7 DOTL	I34 Door7 DOTL

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I34:S36	42634536	426Y536	Intelligent Reader	34	Door8 DOTL	I34 Door8 DOTL
I34:S37	15034537	150Y537	Intelligent Reader	34	Rdr1 Invalid	I34 Rdr1 Invalid
I34:S38	15034538	150Y538	Intelligent Reader	34	Rdr2 Invalid	I34 Rdr2 Invalid
I34:S39	15034539	150Y539	Intelligent Reader	34	Rdr3 Invalid	I34 Rdr3 Invalid
I34:S40	15034540	150Y540	Intelligent Reader	34	Rdr4 Invalid	I34 Rdr4 Invalid
I34:S41	15034541	150Y541	Intelligent Reader	34	Rdr5 Invalid	I34 Rdr5 Invalid
I34:S42	15034542	150Y542	Intelligent Reader	34	Rdr6 Invalid	I34 Rdr6 Invalid
I34:S43	15034543	150Y543	Intelligent Reader	34	Rdr7 Invalid	I34 Rdr7 Invalid
I34:S44	15034544	150Y544	Intelligent Reader	34	Rdr8 Invalid	I34 Rdr8 Invalid
I34:S45	15034545	150Y545	Intelligent Reader	34	Rdr9 Invalid	I34 Rdr9 Invalid
I34:S46	15034546	150Y546	Intelligent Reader	34	Rdr10 Invalid	I34 Rdr10 Invalid
I34:S47	15034547	150Y547	Intelligent Reader	34	Rdr11 Invalid	I34 Rdr11 Invalid
I34:S48	15034548	150Y548	Intelligent Reader	34	Rdr12 Invalid	I34 Rdr12 Invalid
I34:S49	15034549	150Y549	Intelligent Reader	34	Rdr13 Invalid	I34 Rdr13 Invalid
I34:S50	15034550	150Y550	Intelligent Reader	34	Rdr14 Invalid	I34 Rdr14 Invalid
I34:S51	15034551	150Y551	Intelligent Reader	34	Rdr15 Invalid	I34 Rdr15 Invalid
I34:S52	15034552	150Y552	Intelligent Reader	34	Rdr16 Invalid	I34 Rdr16 Invalid
I34:S53	12234553	122Y553	Intelligent Reader	34	Rdr1 Duress	I34 Rdr1 Duress
I34:S54	12234554	122Y554	Intelligent Reader	34	Rdr2 Duress	I34 Rdr2 Duress
I34:S55	12234555	122Y555	Intelligent Reader	34	Rdr3 Duress	I34 Rdr3 Duress
I34:S56	12234556	122Y556	Intelligent Reader	34	Rdr4 Duress	I34 Rdr4 Duress
I34:S57	12234557	122Y557	Intelligent Reader	34	Rdr5 Duress	I34 Rdr5 Duress
I34:S58	12234558	122Y558	Intelligent Reader	34	Rdr6 Duress	I34 Rdr6 Duress
I34:S59	12234559	122Y559	Intelligent Reader	34	Rdr7 Duress	I34 Rdr7 Duress
I34:S60	12234560	122Y560	Intelligent Reader	34	Rdr8 Duress	I34 Rdr8 Duress
I34:S61	12234561	122Y561	Intelligent Reader	34	Rdr9 Duress	I34 Rdr9 Duress
I34:S62	12234562	122Y562	Intelligent Reader	34	Rdr10 Duress	I34 Rdr10 Duress
I34:S63	12234563	122Y563	Intelligent Reader	34	Rdr11 Duress	I34 Rdr11 Duress
I34:S64	12234564	122Y564	Intelligent Reader	34	Rdr12 Duress	I34 Rdr12 Duress
I34:S65	12234565	122Y565	Intelligent Reader	34	Rdr13 Duress	I34 Rdr13 Duress
I34:S66	12234566	122Y566	Intelligent Reader	34	Rdr14 Duress	I34 Rdr14 Duress
I34:S67	12234567	122Y567	Intelligent Reader	34	Rdr15 Duress	I34 Rdr15 Duress
I34:S68	12234568	122Y568	Intelligent Reader	34	Rdr16 Duress	I34 Rdr16 Duress
I34:S69	33034569	330Y569	Intelligent Reader	34	Rdr1 Fault	I34 Rdr1 Fault
I34:S70	33034570	330Y570	Intelligent Reader	34	Rdr2 Fault	I34 Rdr2 Fault
I34:S71	33034571	330Y571	Intelligent Reader	34	Rdr3 Fault	I34 Rdr3 Fault
I34:S72	33034572	330Y572	Intelligent Reader	34	Rdr4 Fault	I34 Rdr4 Fault
I34:S73	33034573	330Y573	Intelligent Reader	34	Rdr5 Fault	I34 Rdr5 Fault
I34:S74	33034574	330Y574	Intelligent Reader	34	Rdr6 Fault	I34 Rdr6 Fault
I34:S75	33034575	330Y575	Intelligent Reader	34	Rdr7 Fault	I34 Rdr7 Fault
I34:S76	33034576	330Y576	Intelligent Reader	34	Rdr8 Fault	I34 Rdr8 Fault
I34:S77	33034577	330Y577	Intelligent Reader	34	Rdr9 Fault	I34 Rdr9 Fault
I34:S78	33034578	330Y578	Intelligent Reader	34	Rdr10 Fault	I34 Rdr10 Fault
I34:S79	33034579	330Y579	Intelligent Reader	34	Rdr11 Fault	I34 Rdr11 Fault
I34:S80	33034580	330Y580	Intelligent Reader	34	Rdr12 Fault	I34 Rdr12 Fault
I34:S81	33034581	330Y581	Intelligent Reader	34	Rdr13 Fault	I34 Rdr13 Fault
I34:S82	33034582	330Y582	Intelligent Reader	34	Rdr14 Fault	I34 Rdr14 Fault
I34:S83	33034583	330Y583	Intelligent Reader	34	Rdr15 Fault	I34 Rdr15 Fault
I34:S84	33034584	330Y584	Intelligent Reader	34	Rdr16 Fault	I34 Rdr16 Fault
I34:S85	30134585	301Y585	Intelligent Reader	34	Ext AC fail	I34 Ext AC fail
I34:S86	30234586	302Y586	Intelligent Reader	34	Ext Low Battery	I34 Ext Low Battery
I34:S87	30034587	300Y587	Intelligent Reader	34	Ext LAN Fuse	I34 Ext LAN Fuse
I34:S88	30034588	300Y588	Intelligent Reader	34	Ext Detector Fuse	I34 Ext Detector Fuse
I34:S89	30034589	300Y589	Intelligent Reader	34	Ext Low Volts	I34 Ext Low Volts
I34:S90	30034590	300Y590	Intelligent Reader	34	Ext PS Fail	I34 Ext PS Fail
I34:S91	30934591	309Y591	Intelligent Reader	34	Ext Battery Test	I34 Ext Battery Test
I34:S92	15034592	150Y592	Intelligent Reader	34	Spare2	I34 Spare2

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I34:S93	15034593	150Y593	Intelligent Reader	34	Spare3	I34 Spare3
I35-I99:Z01	14035501	140Z501	Intelligent Reader	35	Door1 Reed	I35-I99 Door1 Reed
I35-I99:Z02	14035502	140Z502	Intelligent Reader	35	Door2 Reed	I35-I99 Door2 Reed
I35-I99:Z03	14035503	140Z503	Intelligent Reader	35	Door1 Tongue	I35-I99 Door1 Tongue
I35-I99:Z04	14035504	140Z504	Intelligent Reader	35	Door2 Tongue	I35-I99 Door2 Tongue
I35-I99:Z05	14035505	140Z505	Intelligent Reader	35	Door1 REX	I35-I99 Door1 REX
I35-I99:Z06	14035506	140Z506	Intelligent Reader	35	Door2 REX	I35-I99 Door2 REX
I35-I99:Z07	14035507	140Z507	Intelligent Reader	35	Door1 REN	I35-I99 Door1 REN
I35-I99:Z08	14035508	140Z508	Intelligent Reader	35	Door2 REN	I35-I99 Door2 REN
I35-I99:Z09	14035509	140Z509	Intelligent Reader	35	Door3 Reed	I35-I99 Door3 Reed
I35-I99:Z10	14035510	140Z510	Intelligent Reader	35	Door4 Reed	I35-I99 Door4 Reed
I35-I99:Z11	14035511	140Z511	Intelligent Reader	35	Door3 Tongue	I35-I99 Door3 Tongue
I35-I99:Z12	14035512	140Z512	Intelligent Reader	35	Door4 Tongue	I35-I99 Door4 Tongue
I35-I99:Z13	14035513	140Z513	Intelligent Reader	35	Door3 REX	I35-I99 Door3 REX
I35-I99:Z14	14035514	140Z514	Intelligent Reader	35	Door4 REX	I35-I99 Door4 REX
I35-I99:Z15	14035515	140Z515	Intelligent Reader	35	Door3 REN	I35-I99 Door3 REN
I35-I99:Z16	14035516	140Z516	Intelligent Reader	35	Door4 REN	I35-I99 Door4 REN
I35-I99:Z17	14035517	140Z517	Intelligent Reader	35	Door5 Reed	I35-I99 Door5 Reed
I35-I99:Z18	14035518	140Z518	Intelligent Reader	35	Door6 Reed	I35-I99 Door6 Reed
I35-I99:Z19	14035519	140Z519	Intelligent Reader	35	Door5 Tongue	I35-I99 Door5 Tongue
I35-I99:Z20	14035520	140Z520	Intelligent Reader	35	Door6 Tongue	I35-I99 Door6 Tongue
I35-I99:Z21	14035521	140Z521	Intelligent Reader	35	Door5 REX	I35-I99 Door5 REX
I35-I99:Z22	14035522	140Z522	Intelligent Reader	35	Door6 REX	I35-I99 Door6 REX
I35-I99:Z23	14035523	140Z523	Intelligent Reader	35	Door5 REN	I35-I99 Door5 REN
I35-I99:Z24	14035524	140Z524	Intelligent Reader	35	Door6 REN	I35-I99 Door6 REN
I35-I99:Z25	14035525	140Z525	Intelligent Reader	35	Door7 Reed	I35-I99 Door7 Reed
I35-I99:Z26	14035526	140Z526	Intelligent Reader	35	Door8 Reed	I35-I99 Door8 Reed
I35-I99:Z27	14035527	140Z527	Intelligent Reader	35	Door7 Tongue	I35-I99 Door7 Tongue
I35-I99:Z28	14035528	140Z528	Intelligent Reader	35	Door8 Tongue	I35-I99 Door8 Tongue
I35-I99:Z29	14035529	140Z529	Intelligent Reader	35	Door7 REX	I35-I99 Door7 REX
I35-I99:Z30	14035530	140Z530	Intelligent Reader	35	Door8 REX	I35-I99 Door8 REX
I35-I99:Z31	14035531	140Z531	Intelligent Reader	35	Door7 REN	I35-I99 Door7 REN
I35-I99:Z32	14035532	140Z532	Intelligent Reader	35	Door8 REN	I35-I99 Door8 REN
I35-I99:S01	14535501	145Z501	Intelligent Reader	35	Cabinet Tamper	I35-I99 Cabinet Tamper
I35-I99:S02	30135502	301Z502	Intelligent Reader	35	AC fail	I35-I99 AC fail
I35-I99:S03	30235503	302Z503	Intelligent Reader	35	Low Battery	I35-I99 Low Battery
I35-I99:S04	30035504	300Z504	Intelligent Reader	35	LAN Fuse	I35-I99 LAN Fuse
I35-I99:S05	30035505	300Z505	Intelligent Reader	35	Detector Fuse	I35-I99 Detector Fuse
I35-I99:S06	30035506	300Z506	Intelligent Reader	35	Low Volts	I35-I99 Low Volts
I35-I99:S07	30035507	300Z507	Intelligent Reader	35	PS Fail	I35-I99 PS Fail
I35-I99:S08	30935508	309Z508	Intelligent Reader	35	Battery Test	I35-I99 Battery Test
I35-I99:S09	33335509	333Z509	Intelligent Reader	35	Unibus Fault	I35-I99 Unibus Fault
I35-I99:S10	30335510	303Z510	Intelligent Reader	35	Download Fail	I35-I99 Download Fail
I35-I99:S11	15035511	150Z511	Intelligent Reader	35	Spare1	I35-I99 Spare1
I35-I99:S12	14335512	143Z512	Intelligent Reader	35	LAN Comms	I35-I99 LAN Comms
I35-I99:S13	43235513	432Z513	Intelligent Reader	35	Door1 Fault	I35-I99 Door1 Fault
I35-I99:S14	43235514	432Z514	Intelligent Reader	35	Door2 Fault	I35-I99 Door2 Fault
I35-I99:S15	43235515	432Z515	Intelligent Reader	35	Door3 Fault	I35-I99 Door3 Fault
I35-I99:S16	43235516	432Z516	Intelligent Reader	35	Door4 Fault	I35-I99 Door4 Fault
I35-I99:S17	43235517	432Z517	Intelligent Reader	35	Door5 Fault	I35-I99 Door5 Fault
I35-I99:S18	43235518	432Z518	Intelligent Reader	35	Door6 Fault	I35-I99 Door6 Fault
I35-I99:S19	43235519	432Z519	Intelligent Reader	35	Door7 Fault	I35-I99 Door7 Fault
I35-I99:S20	43235520	432Z520	Intelligent Reader	35	Door8 Fault	I35-I99 Door8 Fault
I35-I99:S21	42335521	423Z521	Intelligent Reader	35	Door1 Forced	I35-I99 Door1 Forced
I35-I99:S22	42335522	423Z522	Intelligent Reader	35	Door2 Forced	I35-I99 Door2 Forced
I35-I99:S23	42335523	423Z523	Intelligent Reader	35	Door3 Forced	I35-I99 Door3 Forced
I35-I99:S24	42335524	423Z524	Intelligent Reader	35	Door4 Forced	I35-I99 Door4 Forced

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I35-I99:S25	42335525	423Z525	Intelligent Reader	35	Door5 Forced	I35-I99 Door5 Forced
I35-I99:S26	42335526	423Z526	Intelligent Reader	35	Door6 Forced	I35-I99 Door6 Forced
I35-I99:S27	42335527	423Z527	Intelligent Reader	35	Door7 Forced	I35-I99 Door7 Forced
I35-I99:S28	42335528	423Z528	Intelligent Reader	35	Door8 Forced	I35-I99 Door8 Forced
I35-I99:S29	42635529	426Z529	Intelligent Reader	35	Door1 DOTL	I35-I99 Door1 DOTL
I35-I99:S30	42635530	426Z530	Intelligent Reader	35	Door2 DOTL	I35-I99 Door2 DOTL
I35-I99:S31	42635531	426Z531	Intelligent Reader	35	Door3 DOTL	I35-I99 Door3 DOTL
I35-I99:S32	42635532	426Z532	Intelligent Reader	35	Door4 DOTL	I35-I99 Door4 DOTL
I35-I99:S33	42635533	426Z533	Intelligent Reader	35	Door5 DOTL	I35-I99 Door5 DOTL
I35-I99:S34	42635534	426Z534	Intelligent Reader	35	Door6 DOTL	I35-I99 Door6 DOTL
I35-I99:S35	42635535	426Z535	Intelligent Reader	35	Door7 DOTL	I35-I99 Door7 DOTL
I35-I99:S36	42635536	426Z536	Intelligent Reader	35	Door8 DOTL	I35-I99 Door8 DOTL
I35-I99:S37	15035537	150Z537	Intelligent Reader	35	Rdr1 Invalid	I35-I99 Rdr1 Invalid
I35-I99:S38	15035538	150Z538	Intelligent Reader	35	Rdr2 Invalid	I35-I99 Rdr2 Invalid
I35-I99:S39	15035539	150Z539	Intelligent Reader	35	Rdr3 Invalid	I35-I99 Rdr3 Invalid
I35-I99:S40	15035540	150Z540	Intelligent Reader	35	Rdr4 Invalid	I35-I99 Rdr4 Invalid
I35-I99:S41	15035541	150Z541	Intelligent Reader	35	Rdr5 Invalid	I35-I99 Rdr5 Invalid
I35-I99:S42	15035542	150Z542	Intelligent Reader	35	Rdr6 Invalid	I35-I99 Rdr6 Invalid
I35-I99:S43	15035543	150Z543	Intelligent Reader	35	Rdr7 Invalid	I35-I99 Rdr7 Invalid
I35-I99:S44	15035544	150Z544	Intelligent Reader	35	Rdr8 Invalid	I35-I99 Rdr8 Invalid
I35-I99:S45	15035545	150Z545	Intelligent Reader	35	Rdr9 Invalid	I35-I99 Rdr9 Invalid
I35-I99:S46	15035546	150Z546	Intelligent Reader	35	Rdr10 Invalid	I35-I99 Rdr10 Invalid
I35-I99:S47	15035547	150Z547	Intelligent Reader	35	Rdr11 Invalid	I35-I99 Rdr11 Invalid
I35-I99:S48	15035548	150Z548	Intelligent Reader	35	Rdr12 Invalid	I35-I99 Rdr12 Invalid
I35-I99:S49	15035549	150Z549	Intelligent Reader	35	Rdr13 Invalid	I35-I99 Rdr13 Invalid
I35-I99:S50	15035550	150Z550	Intelligent Reader	35	Rdr14 Invalid	I35-I99 Rdr14 Invalid
I35-I99:S51	15035551	150Z551	Intelligent Reader	35	Rdr15 Invalid	I35-I99 Rdr15 Invalid
I35-I99:S52	15035552	150Z552	Intelligent Reader	35	Rdr16 Invalid	I35-I99 Rdr16 Invalid
I35-I99:S53	12235553	122Z553	Intelligent Reader	35	Rdr1 Duress	I35-I99 Rdr1 Duress
I35-I99:S54	12235554	122Z554	Intelligent Reader	35	Rdr2 Duress	I35-I99 Rdr2 Duress
I35-I99:S55	12235555	122Z555	Intelligent Reader	35	Rdr3 Duress	I35-I99 Rdr3 Duress
I35-I99:S56	12235556	122Z556	Intelligent Reader	35	Rdr4 Duress	I35-I99 Rdr4 Duress
I35-I99:S57	12235557	122Z557	Intelligent Reader	35	Rdr5 Duress	I35-I99 Rdr5 Duress
I35-I99:S58	12235558	122Z558	Intelligent Reader	35	Rdr6 Duress	I35-I99 Rdr6 Duress
I35-I99:S59	12235559	122Z559	Intelligent Reader	35	Rdr7 Duress	I35-I99 Rdr7 Duress
I35-I99:S60	12235560	122Z560	Intelligent Reader	35	Rdr8 Duress	I35-I99 Rdr8 Duress
I35-I99:S61	12235561	122Z561	Intelligent Reader	35	Rdr9 Duress	I35-I99 Rdr9 Duress
I35-I99:S62	12235562	122Z562	Intelligent Reader	35	Rdr10 Duress	I35-I99 Rdr10 Duress
I35-I99:S63	12235563	122Z563	Intelligent Reader	35	Rdr11 Duress	I35-I99 Rdr11 Duress
I35-I99:S64	12235564	122Z564	Intelligent Reader	35	Rdr12 Duress	I35-I99 Rdr12 Duress
I35-I99:S65	12235565	122Z565	Intelligent Reader	35	Rdr13 Duress	I35-I99 Rdr13 Duress
I35-I99:S66	12235566	122Z566	Intelligent Reader	35	Rdr14 Duress	I35-I99 Rdr14 Duress
I35-I99:S67	12235567	122Z567	Intelligent Reader	35	Rdr15 Duress	I35-I99 Rdr15 Duress
I35-I99:S68	12235568	122Z568	Intelligent Reader	35	Rdr16 Duress	I35-I99 Rdr16 Duress
I35-I99:S69	33035569	330Z569	Intelligent Reader	35	Rdr1 Fault	I35-I99 Rdr1 Fault
I35-I99:S70	33035570	330Z570	Intelligent Reader	35	Rdr2 Fault	I35-I99 Rdr2 Fault
I35-I99:S71	33035571	330Z571	Intelligent Reader	35	Rdr3 Fault	I35-I99 Rdr3 Fault
I35-I99:S72	33035572	330Z572	Intelligent Reader	35	Rdr4 Fault	I35-I99 Rdr4 Fault
I35-I99:S73	33035573	330Z573	Intelligent Reader	35	Rdr5 Fault	I35-I99 Rdr5 Fault
I35-I99:S74	33035574	330Z574	Intelligent Reader	35	Rdr6 Fault	I35-I99 Rdr6 Fault
I35-I99:S75	33035575	330Z575	Intelligent Reader	35	Rdr7 Fault	I35-I99 Rdr7 Fault
I35-I99:S76	33035576	330Z576	Intelligent Reader	35	Rdr8 Fault	I35-I99 Rdr8 Fault
I35-I99:S77	33035577	330Z577	Intelligent Reader	35	Rdr9 Fault	I35-I99 Rdr9 Fault
I35-I99:S78	33035578	330Z578	Intelligent Reader	35	Rdr10 Fault	I35-I99 Rdr10 Fault
I35-I99:S79	33035579	330Z579	Intelligent Reader	35	Rdr11 Fault	I35-I99 Rdr11 Fault
I35-I99:S80	33035580	330Z580	Intelligent Reader	35	Rdr12 Fault	I35-I99 Rdr12 Fault
I35-I99:S81	33035581	330Z581	Intelligent Reader	35	Rdr13 Fault	I35-I99 Rdr13 Fault

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
I35-I99:S82	33035582	330Z582	Intelligent Reader	35	Rdr14 Fault	I35-I99 Rdr14 Fault
I35-I99:S83	33035583	330Z583	Intelligent Reader	35	Rdr15 Fault	I35-I99 Rdr15 Fault
I35-I99:S84	33035584	330Z584	Intelligent Reader	35	Rdr16 Fault	I35-I99 Rdr16 Fault
I35-I99:S85	30135585	301Z585	Intelligent Reader	35	Ext AC fail	I35-I99 Ext AC fail
I35-I99:S86	30235586	302Z586	Intelligent Reader	35	Ext Low Battery	I35-I99 Ext Low Battery
I35-I99:S87	30035587	300Z587	Intelligent Reader	35	Ext LAN Fuse	I35-I99 Ext LAN Fuse
I35-I99:S88	30035588	300Z588	Intelligent Reader	35	Ext Detector Fuse	I35-I99 Ext Detector Fuse
I35-I99:S89	30035589	300Z589	Intelligent Reader	35	Ext Low Volts	I35-I99 Ext Low Volts
I35-I99:S90	30035590	300Z590	Intelligent Reader	35	Ext PS Fail	I35-I99 Ext PS Fail
I35-I99:S91	30935591	309Z591	Intelligent Reader	35	Ext Battery Test	I35-I99 Ext Battery Test
I35-I99:S92	15035592	150Z592	Intelligent Reader	35	Spare2	I35-I99 Spare2
I35-I99:S93	15035593	150Z593	Intelligent Reader	35	Spare3	I35-I99 Spare3
F01:Z01	14001601	1401601	RF Expander	1	Z01	F01:Z01
F01:Z02	14001602	1401602	RF Expander	1	Z02	F01:Z02
F01:Z03	14001603	1401603	RF Expander	1	Z03	F01:Z03
F01:Z04	14001604	1401604	RF Expander	1	Z04	F01:Z04
F01:Z05	14001605	1401605	RF Expander	1	Z05	F01:Z05
F01:Z06	14001606	1401606	RF Expander	1	Z06	F01:Z06
F01:Z07	14001607	1401607	RF Expander	1	Z07	F01:Z07
F01:Z08	14001608	1401608	RF Expander	1	Z08	F01:Z08
F01:Z09	14001609	1401609	RF Expander	1	Z09	F01:Z09
F01:Z10	14001610	1401610	RF Expander	1	Z10	F01:Z10
F01:Z11	14001611	1401611	RF Expander	1	Z11	F01:Z11
F01:Z12	14001612	1401612	RF Expander	1	Z12	F01:Z12
F01:Z13	14001613	1401613	RF Expander	1	Z13	F01:Z13
F01:Z14	14001614	1401614	RF Expander	1	Z14	F01:Z14
F01:Z15	14001615	1401615	RF Expander	1	Z15	F01:Z15
F01:Z16	14001616	1401616	RF Expander	1	Z16	F01:Z16
F01:Z17	14001617	1401617	RF Expander	1	Z17	F01:Z17
F01:Z18	14001618	1401618	RF Expander	1	Z18	F01:Z18
F01:Z19	14001619	1401619	RF Expander	1	Z19	F01:Z19
F01:Z20	14001620	1401620	RF Expander	1	Z20	F01:Z20
F01:Z21	14001621	1401621	RF Expander	1	Z21	F01:Z21
F01:Z22	14001622	1401622	RF Expander	1	Z22	F01:Z22
F01:Z23	14001623	1401623	RF Expander	1	Z23	F01:Z23
F01:Z24	14001624	1401624	RF Expander	1	Z24	F01:Z24
F01:Z25	14001625	1401625	RF Expander	1	Z25	F01:Z25
F01:Z26	14001626	1401626	RF Expander	1	Z26	F01:Z26
F01:Z27	14001627	1401627	RF Expander	1	Z27	F01:Z27
F01:Z28	14001628	1401628	RF Expander	1	Z28	F01:Z28
F01:Z29	14001629	1401629	RF Expander	1	Z29	F01:Z29
F01:Z30	14001630	1401630	RF Expander	1	Z30	F01:Z30
F01:Z31	14001631	1401631	RF Expander	1	Z31	F01:Z31
F01:Z32	14001632	1401632	RF Expander	1	Z32	F01:Z32
F01:S01	38401601	3841601	RF Expander	1	Transmitter Low Battery	F01 Transmitter Low Battery
F01:S02	38101602	3811602	RF Expander	1	Transmitter Poll Fail	F01 Transmitter Poll Fail
F01:S03	34401603	3441603	RF Expander	1	Transmitter Jam	F01 Transmitter Jam
F01:S04	14501604	1451604	RF Expander	1	Cabinet Tamper	F01 Cabinet Tamper
F01:S05	30101605	3011605	RF Expander	1	AC fail	F01 AC fail
F01:S06	30201606	3021606	RF Expander	1	Low Battery	F01 Low Battery
F01:S07	30001607	3001607	RF Expander	1	LAN Fuse	F01 LAN Fuse
F01:S08	30001608	3001608	RF Expander	1	Detector Fuse	F01 Detector Fuse
F01:S09	30001609	3001609	RF Expander	1	Low Volts	F01 Low Volts
F01:S10	30001610	3001610	RF Expander	1	PS Fail	F01 PS Fail
F01:S11	30901611	3091611	RF Expander	1	Battery Test	F01 Battery Test
F01:S12	14301612	1431612	RF Expander	1	LAN Comms	F01 LAN Comms
F01:S13	15001613	1501613	RF Expander	1	Spare1	F01 Spare1

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F01:S14	15001614	1501614	RF Expander	1	Spare2	F01 Spare2
F02:Z01	14002601	1402601	RF Expander	2	Z01	F02:Z01
F02:Z02	14002602	1402602	RF Expander	2	Z02	F02:Z02
F02:Z03	14002603	1402603	RF Expander	2	Z03	F02:Z03
F02:Z04	14002604	1402604	RF Expander	2	Z04	F02:Z04
F02:Z05	14002605	1402605	RF Expander	2	Z05	F02:Z05
F02:Z06	14002606	1402606	RF Expander	2	Z06	F02:Z06
F02:Z07	14002607	1402607	RF Expander	2	Z07	F02:Z07
F02:Z08	14002608	1402608	RF Expander	2	Z08	F02:Z08
F02:Z09	14002609	1402609	RF Expander	2	Z09	F02:Z09
F02:Z10	14002610	1402610	RF Expander	2	Z10	F02:Z10
F02:Z11	14002611	1402611	RF Expander	2	Z11	F02:Z11
F02:Z12	14002612	1402612	RF Expander	2	Z12	F02:Z12
F02:Z13	14002613	1402613	RF Expander	2	Z13	F02:Z13
F02:Z14	14002614	1402614	RF Expander	2	Z14	F02:Z14
F02:Z15	14002615	1402615	RF Expander	2	Z15	F02:Z15
F02:Z16	14002616	1402616	RF Expander	2	Z16	F02:Z16
F02:Z17	14002617	1402617	RF Expander	2	Z17	F02:Z17
F02:Z18	14002618	1402618	RF Expander	2	Z18	F02:Z18
F02:Z19	14002619	1402619	RF Expander	2	Z19	F02:Z19
F02:Z20	14002620	1402620	RF Expander	2	Z20	F02:Z20
F02:Z21	14002621	1402621	RF Expander	2	Z21	F02:Z21
F02:Z22	14002622	1402622	RF Expander	2	Z22	F02:Z22
F02:Z23	14002623	1402623	RF Expander	2	Z23	F02:Z23
F02:Z24	14002624	1402624	RF Expander	2	Z24	F02:Z24
F02:Z25	14002625	1402625	RF Expander	2	Z25	F02:Z25
F02:Z26	14002626	1402626	RF Expander	2	Z26	F02:Z26
F02:Z27	14002627	1402627	RF Expander	2	Z27	F02:Z27
F02:Z28	14002628	1402628	RF Expander	2	Z28	F02:Z28
F02:Z29	14002629	1402629	RF Expander	2	Z29	F02:Z29
F02:Z30	14002630	1402630	RF Expander	2	Z30	F02:Z30
F02:Z31	14002631	1402631	RF Expander	2	Z31	F02:Z31
F02:Z32	14002632	1402632	RF Expander	2	Z32	F02:Z32
F02:S01	38402601	3842601	RF Expander	2	Transmitter Low Battery	F02 Transmitter Low Battery
F02:S02	38102602	3812602	RF Expander	2	Transmitter Poll Fail	F02 Transmitter Poll Fail
F02:S03	34402603	3442603	RF Expander	2	Transmitter Jam	F02 Transmitter Jam
F02:S04	14502604	1452604	RF Expander	2	Cabinet Tamper	F02 Cabinet Tamper
F02:S05	30102605	3012605	RF Expander	2	AC fail	F02 AC fail
F02:S06	30202606	3022606	RF Expander	2	Low Battery	F02 Low Battery
F02:S07	30002607	3002607	RF Expander	2	LAN Fuse	F02 LAN Fuse
F02:S08	30002608	3002608	RF Expander	2	Detector Fuse	F02 Detector Fuse
F02:S09	30002609	3002609	RF Expander	2	Low Volts	F02 Low Volts
F02:S10	30002610	3002610	RF Expander	2	PS Fail	F02 PS Fail
F02:S11	30902611	3092611	RF Expander	2	Battery Test	F02 Battery Test
F02:S12	14302612	1432612	RF Expander	2	LAN Comms	F02 LAN Comms
F02:S13	15002613	1502613	RF Expander	2	Spare1	F02 Spare1
F02:S14	15002614	1502614	RF Expander	2	Spare2	F02 Spare2
F03:Z01	14003601	1403601	RF Expander	3	Z01	F03:Z01
F03:Z02	14003602	1403602	RF Expander	3	Z02	F03:Z02
F03:Z03	14003603	1403603	RF Expander	3	Z03	F03:Z03
F03:Z04	14003604	1403604	RF Expander	3	Z04	F03:Z04
F03:Z05	14003605	1403605	RF Expander	3	Z05	F03:Z05
F03:Z06	14003606	1403606	RF Expander	3	Z06	F03:Z06
F03:Z07	14003607	1403607	RF Expander	3	Z07	F03:Z07
F03:Z08	14003608	1403608	RF Expander	3	Z08	F03:Z08
F03:Z09	14003609	1403609	RF Expander	3	Z09	F03:Z09
F03:Z10	14003610	1403610	RF Expander	3	Z10	F03:Z10

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F03:Z11	14003611	1403611	RF Expander	3	Z11	F03:Z11
F03:Z12	14003612	1403612	RF Expander	3	Z12	F03:Z12
F03:Z13	14003613	1403613	RF Expander	3	Z13	F03:Z13
F03:Z14	14003614	1403614	RF Expander	3	Z14	F03:Z14
F03:Z15	14003615	1403615	RF Expander	3	Z15	F03:Z15
F03:Z16	14003616	1403616	RF Expander	3	Z16	F03:Z16
F03:Z17	14003617	1403617	RF Expander	3	Z17	F03:Z17
F03:Z18	14003618	1403618	RF Expander	3	Z18	F03:Z18
F03:Z19	14003619	1403619	RF Expander	3	Z19	F03:Z19
F03:Z20	14003620	1403620	RF Expander	3	Z20	F03:Z20
F03:Z21	14003621	1403621	RF Expander	3	Z21	F03:Z21
F03:Z22	14003622	1403622	RF Expander	3	Z22	F03:Z22
F03:Z23	14003623	1403623	RF Expander	3	Z23	F03:Z23
F03:Z24	14003624	1403624	RF Expander	3	Z24	F03:Z24
F03:Z25	14003625	1403625	RF Expander	3	Z25	F03:Z25
F03:Z26	14003626	1403626	RF Expander	3	Z26	F03:Z26
F03:Z27	14003627	1403627	RF Expander	3	Z27	F03:Z27
F03:Z28	14003628	1403628	RF Expander	3	Z28	F03:Z28
F03:Z29	14003629	1403629	RF Expander	3	Z29	F03:Z29
F03:Z30	14003630	1403630	RF Expander	3	Z30	F03:Z30
F03:Z31	14003631	1403631	RF Expander	3	Z31	F03:Z31
F03:Z32	14003632	1403632	RF Expander	3	Z32	F03:Z32
F03:S01	38403601	3843601	RF Expander	3	Transmitter Low Battery	F03 Transmitter Low Battery
F03:S02	38103602	3813602	RF Expander	3	Transmitter Poll Fail	F03 Transmitter Poll Fail
F03:S03	34403603	3443603	RF Expander	3	Transmitter Jam	F03 Transmitter Jam
F03:S04	14503604	1453604	RF Expander	3	Cabinet Tamper	F03 Cabinet Tamper
F03:S05	30103605	3013605	RF Expander	3	AC fail	F03 AC fail
F03:S06	30203606	3023606	RF Expander	3	Low Battery	F03 Low Battery
F03:S07	30003607	3003607	RF Expander	3	LAN Fuse	F03 LAN Fuse
F03:S08	30003608	3003608	RF Expander	3	Detector Fuse	F03 Detector Fuse
F03:S09	30003609	3003609	RF Expander	3	Low Volts	F03 Low Volts
F03:S10	30003610	3003610	RF Expander	3	PS Fail	F03 PS Fail
F03:S11	30903611	3093611	RF Expander	3	Battery Test	F03 Battery Test
F03:S12	14303612	1433612	RF Expander	3	LAN Comms	F03 LAN Comms
F03:S13	15003613	1503613	RF Expander	3	Spare1	F03 Spare1
F03:S14	15003614	1503614	RF Expander	3	Spare2	F03 Spare2
F04:Z01	14004601	1404601	RF Expander	4	Z01	F04:Z01
F04:Z02	14004602	1404602	RF Expander	4	Z02	F04:Z02
F04:Z03	14004603	1404603	RF Expander	4	Z03	F04:Z03
F04:Z04	14004604	1404604	RF Expander	4	Z04	F04:Z04
F04:Z05	14004605	1404605	RF Expander	4	Z05	F04:Z05
F04:Z06	14004606	1404606	RF Expander	4	Z06	F04:Z06
F04:Z07	14004607	1404607	RF Expander	4	Z07	F04:Z07
F04:Z08	14004608	1404608	RF Expander	4	Z08	F04:Z08
F04:Z09	14004609	1404609	RF Expander	4	Z09	F04:Z09
F04:Z10	14004610	1404610	RF Expander	4	Z10	F04:Z10
F04:Z11	14004611	1404611	RF Expander	4	Z11	F04:Z11
F04:Z12	14004612	1404612	RF Expander	4	Z12	F04:Z12
F04:Z13	14004613	1404613	RF Expander	4	Z13	F04:Z13
F04:Z14	14004614	1404614	RF Expander	4	Z14	F04:Z14
F04:Z15	14004615	1404615	RF Expander	4	Z15	F04:Z15
F04:Z16	14004616	1404616	RF Expander	4	Z16	F04:Z16
F04:Z17	14004617	1404617	RF Expander	4	Z17	F04:Z17
F04:Z18	14004618	1404618	RF Expander	4	Z18	F04:Z18
F04:Z19	14004619	1404619	RF Expander	4	Z19	F04:Z19
F04:Z20	14004620	1404620	RF Expander	4	Z20	F04:Z20
F04:Z21	14004621	1404621	RF Expander	4	Z21	F04:Z21

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F04:Z22	14004622	1404622	RF Expander	4	Z22	F04:Z22
F04:Z23	14004623	1404623	RF Expander	4	Z23	F04:Z23
F04:Z24	14004624	1404624	RF Expander	4	Z24	F04:Z24
F04:Z25	14004625	1404625	RF Expander	4	Z25	F04:Z25
F04:Z26	14004626	1404626	RF Expander	4	Z26	F04:Z26
F04:Z27	14004627	1404627	RF Expander	4	Z27	F04:Z27
F04:Z28	14004628	1404628	RF Expander	4	Z28	F04:Z28
F04:Z29	14004629	1404629	RF Expander	4	Z29	F04:Z29
F04:Z30	14004630	1404630	RF Expander	4	Z30	F04:Z30
F04:Z31	14004631	1404631	RF Expander	4	Z31	F04:Z31
F04:Z32	14004632	1404632	RF Expander	4	Z32	F04:Z32
F04:S01	38404601	3844601	RF Expander	4	Transmitter Low Battery	F04 Transmitter Low Battery
F04:S02	38104602	3814602	RF Expander	4	Transmitter Poll Fail	F04 Transmitter Poll Fail
F04:S03	34404603	3444603	RF Expander	4	Transmitter Jam	F04 Transmitter Jam
F04:S04	14504604	1454604	RF Expander	4	Cabinet Tamper	F04 Cabinet Tamper
F04:S05	30104605	3014605	RF Expander	4	AC fail	F04 AC fail
F04:S06	30204606	3024606	RF Expander	4	Low Battery	F04 Low Battery
F04:S07	30004607	3004607	RF Expander	4	LAN Fuse	F04 LAN Fuse
F04:S08	30004608	3004608	RF Expander	4	Detector Fuse	F04 Detector Fuse
F04:S09	30004609	3004609	RF Expander	4	Low Volts	F04 Low Volts
F04:S10	30004610	3004610	RF Expander	4	PS Fail	F04 PS Fail
F04:S11	30904611	3094611	RF Expander	4	Battery Test	F04 Battery Test
F04:S12	14304612	1434612	RF Expander	4	LAN Comms	F04 LAN Comms
F04:S13	15004613	1504613	RF Expander	4	Spare1	F04 Spare1
F04:S14	15004614	1504614	RF Expander	4	Spare2	F04 Spare2
F05:Z01	14005601	1405601	RF Expander	5	Z01	F05:Z01
F05:Z02	14005602	1405602	RF Expander	5	Z02	F05:Z02
F05:Z03	14005603	1405603	RF Expander	5	Z03	F05:Z03
F05:Z04	14005604	1405604	RF Expander	5	Z04	F05:Z04
F05:Z05	14005605	1405605	RF Expander	5	Z05	F05:Z05
F05:Z06	14005606	1405606	RF Expander	5	Z06	F05:Z06
F05:Z07	14005607	1405607	RF Expander	5	Z07	F05:Z07
F05:Z08	14005608	1405608	RF Expander	5	Z08	F05:Z08
F05:Z09	14005609	1405609	RF Expander	5	Z09	F05:Z09
F05:Z10	14005610	1405610	RF Expander	5	Z10	F05:Z10
F05:Z11	14005611	1405611	RF Expander	5	Z11	F05:Z11
F05:Z12	14005612	1405612	RF Expander	5	Z12	F05:Z12
F05:Z13	14005613	1405613	RF Expander	5	Z13	F05:Z13
F05:Z14	14005614	1405614	RF Expander	5	Z14	F05:Z14
F05:Z15	14005615	1405615	RF Expander	5	Z15	F05:Z15
F05:Z16	14005616	1405616	RF Expander	5	Z16	F05:Z16
F05:Z17	14005617	1405617	RF Expander	5	Z17	F05:Z17
F05:Z18	14005618	1405618	RF Expander	5	Z18	F05:Z18
F05:Z19	14005619	1405619	RF Expander	5	Z19	F05:Z19
F05:Z20	14005620	1405620	RF Expander	5	Z20	F05:Z20
F05:Z21	14005621	1405621	RF Expander	5	Z21	F05:Z21
F05:Z22	14005622	1405622	RF Expander	5	Z22	F05:Z22
F05:Z23	14005623	1405623	RF Expander	5	Z23	F05:Z23
F05:Z24	14005624	1405624	RF Expander	5	Z24	F05:Z24
F05:Z25	14005625	1405625	RF Expander	5	Z25	F05:Z25
F05:Z26	14005626	1405626	RF Expander	5	Z26	F05:Z26
F05:Z27	14005627	1405627	RF Expander	5	Z27	F05:Z27
F05:Z28	14005628	1405628	RF Expander	5	Z28	F05:Z28
F05:Z29	14005629	1405629	RF Expander	5	Z29	F05:Z29
F05:Z30	14005630	1405630	RF Expander	5	Z30	F05:Z30
F05:Z31	14005631	1405631	RF Expander	5	Z31	F05:Z31
F05:Z32	14005632	1405632	RF Expander	5	Z32	F05:Z32

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F05:S01	38405601	3845601	RF Expander	5	Transmitter Low Battery	F05 Transmitter Low Battery
F05:S02	38105602	3815602	RF Expander	5	Transmitter Poll Fail	F05 Transmitter Poll Fail
F05:S03	34405603	3445603	RF Expander	5	Transmitter Jam	F05 Transmitter Jam
F05:S04	14505604	1455604	RF Expander	5	Cabinet Tamper	F05 Cabinet Tamper
F05:S05	30105605	3015605	RF Expander	5	AC fail	F05 AC fail
F05:S06	30205606	3025606	RF Expander	5	Low Battery	F05 Low Battery
F05:S07	30005607	3005607	RF Expander	5	LAN Fuse	F05 LAN Fuse
F05:S08	30005608	3005608	RF Expander	5	Detector Fuse	F05 Detector Fuse
F05:S09	30005609	3005609	RF Expander	5	Low Volts	F05 Low Volts
F05:S10	30005610	3005610	RF Expander	5	PS Fail	F05 PS Fail
F05:S11	30905611	3095611	RF Expander	5	Battery Test	F05 Battery Test
F05:S12	14305612	1435612	RF Expander	5	LAN Comms	F05 LAN Comms
F05:S13	15005613	1505613	RF Expander	5	Spare1	F05 Spare1
F05:S14	15005614	1505614	RF Expander	5	Spare2	F05 Spare2
F06:Z01	14006601	1406601	RF Expander	6	Z01	F06:Z01
F06:Z02	14006602	1406602	RF Expander	6	Z02	F06:Z02
F06:Z03	14006603	1406603	RF Expander	6	Z03	F06:Z03
F06:Z04	14006604	1406604	RF Expander	6	Z04	F06:Z04
F06:Z05	14006605	1406605	RF Expander	6	Z05	F06:Z05
F06:Z06	14006606	1406606	RF Expander	6	Z06	F06:Z06
F06:Z07	14006607	1406607	RF Expander	6	Z07	F06:Z07
F06:Z08	14006608	1406608	RF Expander	6	Z08	F06:Z08
F06:Z09	14006609	1406609	RF Expander	6	Z09	F06:Z09
F06:Z10	14006610	1406610	RF Expander	6	Z10	F06:Z10
F06:Z11	14006611	1406611	RF Expander	6	Z11	F06:Z11
F06:Z12	14006612	1406612	RF Expander	6	Z12	F06:Z12
F06:Z13	14006613	1406613	RF Expander	6	Z13	F06:Z13
F06:Z14	14006614	1406614	RF Expander	6	Z14	F06:Z14
F06:Z15	14006615	1406615	RF Expander	6	Z15	F06:Z15
F06:Z16	14006616	1406616	RF Expander	6	Z16	F06:Z16
F06:Z17	14006617	1406617	RF Expander	6	Z17	F06:Z17
F06:Z18	14006618	1406618	RF Expander	6	Z18	F06:Z18
F06:Z19	14006619	1406619	RF Expander	6	Z19	F06:Z19
F06:Z20	14006620	1406620	RF Expander	6	Z20	F06:Z20
F06:Z21	14006621	1406621	RF Expander	6	Z21	F06:Z21
F06:Z22	14006622	1406622	RF Expander	6	Z22	F06:Z22
F06:Z23	14006623	1406623	RF Expander	6	Z23	F06:Z23
F06:Z24	14006624	1406624	RF Expander	6	Z24	F06:Z24
F06:Z25	14006625	1406625	RF Expander	6	Z25	F06:Z25
F06:Z26	14006626	1406626	RF Expander	6	Z26	F06:Z26
F06:Z27	14006627	1406627	RF Expander	6	Z27	F06:Z27
F06:Z28	14006628	1406628	RF Expander	6	Z28	F06:Z28
F06:Z29	14006629	1406629	RF Expander	6	Z29	F06:Z29
F06:Z30	14006630	1406630	RF Expander	6	Z30	F06:Z30
F06:Z31	14006631	1406631	RF Expander	6	Z31	F06:Z31
F06:Z32	14006632	1406632	RF Expander	6	Z32	F06:Z32
F06:S01	38406601	3846601	RF Expander	6	Transmitter Low Battery	F06 Transmitter Low Battery
F06:S02	38106602	3816602	RF Expander	6	Transmitter Poll Fail	F06 Transmitter Poll Fail
F06:S03	34406603	3446603	RF Expander	6	Transmitter Jam	F06 Transmitter Jam
F06:S04	14506604	1456604	RF Expander	6	Cabinet Tamper	F06 Cabinet Tamper
F06:S05	30106605	3016605	RF Expander	6	AC fail	F06 AC fail
F06:S06	30206606	3026606	RF Expander	6	Low Battery	F06 Low Battery
F06:S07	30006607	3006607	RF Expander	6	LAN Fuse	F06 LAN Fuse
F06:S08	30006608	3006608	RF Expander	6	Detector Fuse	F06 Detector Fuse
F06:S09	30006609	3006609	RF Expander	6	Low Volts	F06 Low Volts
F06:S10	30006610	3006610	RF Expander	6	PS Fail	F06 PS Fail
F06:S11	30906611	3096611	RF Expander	6	Battery Test	F06 Battery Test

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F06:S12	14306612	1436612	RF Expander	6	LAN Comms	F06 LAN Comms
F06:S13	15006613	1506613	RF Expander	6	Spare1	F06 Spare1
F06:S14	15006614	1506614	RF Expander	6	Spare2	F06 Spare2
F07:Z01	14007601	1407601	RF Expander	7	Z01	F07:Z01
F07:Z02	14007602	1407602	RF Expander	7	Z02	F07:Z02
F07:Z03	14007603	1407603	RF Expander	7	Z03	F07:Z03
F07:Z04	14007604	1407604	RF Expander	7	Z04	F07:Z04
F07:Z05	14007605	1407605	RF Expander	7	Z05	F07:Z05
F07:Z06	14007606	1407606	RF Expander	7	Z06	F07:Z06
F07:Z07	14007607	1407607	RF Expander	7	Z07	F07:Z07
F07:Z08	14007608	1407608	RF Expander	7	Z08	F07:Z08
F07:Z09	14007609	1407609	RF Expander	7	Z09	F07:Z09
F07:Z10	14007610	1407610	RF Expander	7	Z10	F07:Z10
F07:Z11	14007611	1407611	RF Expander	7	Z11	F07:Z11
F07:Z12	14007612	1407612	RF Expander	7	Z12	F07:Z12
F07:Z13	14007613	1407613	RF Expander	7	Z13	F07:Z13
F07:Z14	14007614	1407614	RF Expander	7	Z14	F07:Z14
F07:Z15	14007615	1407615	RF Expander	7	Z15	F07:Z15
F07:Z16	14007616	1407616	RF Expander	7	Z16	F07:Z16
F07:Z17	14007617	1407617	RF Expander	7	Z17	F07:Z17
F07:Z18	14007618	1407618	RF Expander	7	Z18	F07:Z18
F07:Z19	14007619	1407619	RF Expander	7	Z19	F07:Z19
F07:Z20	14007620	1407620	RF Expander	7	Z20	F07:Z20
F07:Z21	14007621	1407621	RF Expander	7	Z21	F07:Z21
F07:Z22	14007622	1407622	RF Expander	7	Z22	F07:Z22
F07:Z23	14007623	1407623	RF Expander	7	Z23	F07:Z23
F07:Z24	14007624	1407624	RF Expander	7	Z24	F07:Z24
F07:Z25	14007625	1407625	RF Expander	7	Z25	F07:Z25
F07:Z26	14007626	1407626	RF Expander	7	Z26	F07:Z26
F07:Z27	14007627	1407627	RF Expander	7	Z27	F07:Z27
F07:Z28	14007628	1407628	RF Expander	7	Z28	F07:Z28
F07:Z29	14007629	1407629	RF Expander	7	Z29	F07:Z29
F07:Z30	14007630	1407630	RF Expander	7	Z30	F07:Z30
F07:Z31	14007631	1407631	RF Expander	7	Z31	F07:Z31
F07:Z32	14007632	1407632	RF Expander	7	Z32	F07:Z32
F07:S01	38407601	3847601	RF Expander	7	Transmitter Low Battery	F07 Transmitter Low Battery
F07:S02	38107602	3817602	RF Expander	7	Transmitter Poll Fail	F07 Transmitter Poll Fail
F07:S03	34407603	3447603	RF Expander	7	Transmitter Jam	F07 Transmitter Jam
F07:S04	14507604	1457604	RF Expander	7	Cabinet Tamper	F07 Cabinet Tamper
F07:S05	30107605	3017605	RF Expander	7	AC fail	F07 AC fail
F07:S06	30207606	3027606	RF Expander	7	Low Battery	F07 Low Battery
F07:S07	30007607	3007607	RF Expander	7	LAN Fuse	F07 LAN Fuse
F07:S08	30007608	3007608	RF Expander	7	Detector Fuse	F07 Detector Fuse
F07:S09	30007609	3007609	RF Expander	7	Low Volts	F07 Low Volts
F07:S10	30007610	3007610	RF Expander	7	PS Fail	F07 PS Fail
F07:S11	30907611	3097611	RF Expander	7	Battery Test	F07 Battery Test
F07:S12	14307612	1437612	RF Expander	7	LAN Comms	F07 LAN Comms
F07:S13	15007613	1507613	RF Expander	7	Spare1	F07 Spare1
F07:S14	15007614	1507614	RF Expander	7	Spare2	F07 Spare2
F08:Z01	14008601	1408601	RF Expander	8	Z01	F08:Z01
F08:Z02	14008602	1408602	RF Expander	8	Z02	F08:Z02
F08:Z03	14008603	1408603	RF Expander	8	Z03	F08:Z03
F08:Z04	14008604	1408604	RF Expander	8	Z04	F08:Z04
F08:Z05	14008605	1408605	RF Expander	8	Z05	F08:Z05
F08:Z06	14008606	1408606	RF Expander	8	Z06	F08:Z06
F08:Z07	14008607	1408607	RF Expander	8	Z07	F08:Z07
F08:Z08	14008608	1408608	RF Expander	8	Z08	F08:Z08

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F08:Z09	14008609	1408609	RF Expander	8	Z09	F08:Z09
F08:Z10	14008610	1408610	RF Expander	8	Z10	F08:Z10
F08:Z11	14008611	1408611	RF Expander	8	Z11	F08:Z11
F08:Z12	14008612	1408612	RF Expander	8	Z12	F08:Z12
F08:Z13	14008613	1408613	RF Expander	8	Z13	F08:Z13
F08:Z14	14008614	1408614	RF Expander	8	Z14	F08:Z14
F08:Z15	14008615	1408615	RF Expander	8	Z15	F08:Z15
F08:Z16	14008616	1408616	RF Expander	8	Z16	F08:Z16
F08:Z17	14008617	1408617	RF Expander	8	Z17	F08:Z17
F08:Z18	14008618	1408618	RF Expander	8	Z18	F08:Z18
F08:Z19	14008619	1408619	RF Expander	8	Z19	F08:Z19
F08:Z20	14008620	1408620	RF Expander	8	Z20	F08:Z20
F08:Z21	14008621	1408621	RF Expander	8	Z21	F08:Z21
F08:Z22	14008622	1408622	RF Expander	8	Z22	F08:Z22
F08:Z23	14008623	1408623	RF Expander	8	Z23	F08:Z23
F08:Z24	14008624	1408624	RF Expander	8	Z24	F08:Z24
F08:Z25	14008625	1408625	RF Expander	8	Z25	F08:Z25
F08:Z26	14008626	1408626	RF Expander	8	Z26	F08:Z26
F08:Z27	14008627	1408627	RF Expander	8	Z27	F08:Z27
F08:Z28	14008628	1408628	RF Expander	8	Z28	F08:Z28
F08:Z29	14008629	1408629	RF Expander	8	Z29	F08:Z29
F08:Z30	14008630	1408630	RF Expander	8	Z30	F08:Z30
F08:Z31	14008631	1408631	RF Expander	8	Z31	F08:Z31
F08:Z32	14008632	1408632	RF Expander	8	Z32	F08:Z32
F08:S01	38408601	3848601	RF Expander	8	Transmitter Low Battery	F08 Transmitter Low Battery
F08:S02	38108602	3818602	RF Expander	8	Transmitter Poll Fail	F08 Transmitter Poll Fail
F08:S03	34408603	3448603	RF Expander	8	Transmitter Jam	F08 Transmitter Jam
F08:S04	14508604	1458604	RF Expander	8	Cabinet Tamper	F08 Cabinet Tamper
F08:S05	30108605	3018605	RF Expander	8	AC fail	F08 AC fail
F08:S06	30208606	3028606	RF Expander	8	Low Battery	F08 Low Battery
F08:S07	30008607	3008607	RF Expander	8	LAN Fuse	F08 LAN Fuse
F08:S08	30008608	3008608	RF Expander	8	Detector Fuse	F08 Detector Fuse
F08:S09	30008609	3008609	RF Expander	8	Low Volts	F08 Low Volts
F08:S10	30008610	3008610	RF Expander	8	PS Fail	F08 PS Fail
F08:S11	30908611	3098611	RF Expander	8	Battery Test	F08 Battery Test
F08:S12	14308612	1438612	RF Expander	8	LAN Comms	F08 LAN Comms
F08:S13	15008613	1508613	RF Expander	8	Spare1	F08 Spare1
F08:S14	15008614	1508614	RF Expander	8	Spare2	F08 Spare2
F09:Z01	14009601	1409601	RF Expander	9	Z01	F09:Z01
F09:Z02	14009602	1409602	RF Expander	9	Z02	F09:Z02
F09:Z03	14009603	1409603	RF Expander	9	Z03	F09:Z03
F09:Z04	14009604	1409604	RF Expander	9	Z04	F09:Z04
F09:Z05	14009605	1409605	RF Expander	9	Z05	F09:Z05
F09:Z06	14009606	1409606	RF Expander	9	Z06	F09:Z06
F09:Z07	14009607	1409607	RF Expander	9	Z07	F09:Z07
F09:Z08	14009608	1409608	RF Expander	9	Z08	F09:Z08
F09:Z09	14009609	1409609	RF Expander	9	Z09	F09:Z09
F09:Z10	14009610	1409610	RF Expander	9	Z10	F09:Z10
F09:Z11	14009611	1409611	RF Expander	9	Z11	F09:Z11
F09:Z12	14009612	1409612	RF Expander	9	Z12	F09:Z12
F09:Z13	14009613	1409613	RF Expander	9	Z13	F09:Z13
F09:Z14	14009614	1409614	RF Expander	9	Z14	F09:Z14
F09:Z15	14009615	1409615	RF Expander	9	Z15	F09:Z15
F09:Z16	14009616	1409616	RF Expander	9	Z16	F09:Z16
F09:Z17	14009617	1409617	RF Expander	9	Z17	F09:Z17
F09:Z18	14009618	1409618	RF Expander	9	Z18	F09:Z18
F09:Z19	14009619	1409619	RF Expander	9	Z19	F09:Z19

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F09:Z20	14009620	1409620	RF Expander	9	Z20	F09:Z20
F09:Z21	14009621	1409621	RF Expander	9	Z21	F09:Z21
F09:Z22	14009622	1409622	RF Expander	9	Z22	F09:Z22
F09:Z23	14009623	1409623	RF Expander	9	Z23	F09:Z23
F09:Z24	14009624	1409624	RF Expander	9	Z24	F09:Z24
F09:Z25	14009625	1409625	RF Expander	9	Z25	F09:Z25
F09:Z26	14009626	1409626	RF Expander	9	Z26	F09:Z26
F09:Z27	14009627	1409627	RF Expander	9	Z27	F09:Z27
F09:Z28	14009628	1409628	RF Expander	9	Z28	F09:Z28
F09:Z29	14009629	1409629	RF Expander	9	Z29	F09:Z29
F09:Z30	14009630	1409630	RF Expander	9	Z30	F09:Z30
F09:Z31	14009631	1409631	RF Expander	9	Z31	F09:Z31
F09:Z32	14009632	1409632	RF Expander	9	Z32	F09:Z32
F09:S01	38409601	3849601	RF Expander	9	Transmitter Low Battery	F09 Transmitter Low Battery
F09:S02	38109602	3819602	RF Expander	9	Transmitter Poll Fail	F09 Transmitter Poll Fail
F09:S03	34409603	3449603	RF Expander	9	Transmitter Jam	F09 Transmitter Jam
F09:S04	14509604	1459604	RF Expander	9	Cabinet Tamper	F09 Cabinet Tamper
F09:S05	30109605	3019605	RF Expander	9	AC fail	F09 AC fail
F09:S06	30209606	3029606	RF Expander	9	Low Battery	F09 Low Battery
F09:S07	30009607	3009607	RF Expander	9	LAN Fuse	F09 LAN Fuse
F09:S08	30009608	3009608	RF Expander	9	Detector Fuse	F09 Detector Fuse
F09:S09	30009609	3009609	RF Expander	9	Low Volts	F09 Low Volts
F09:S10	30009610	3009610	RF Expander	9	PS Fail	F09 PS Fail
F09:S11	30909611	3099611	RF Expander	9	Battery Test	F09 Battery Test
F09:S12	14309612	1439612	RF Expander	9	LAN Comms	F09 LAN Comms
F09:S13	15009613	1509613	RF Expander	9	Spare1	F09 Spare1
F09:S14	15009614	1509614	RF Expander	9	Spare2	F09 Spare2
F10:Z01	14010601	140A601	RF Expander	10	Z01	F10:Z01
F10:Z02	14010602	140A602	RF Expander	10	Z02	F10:Z02
F10:Z03	14010603	140A603	RF Expander	10	Z03	F10:Z03
F10:Z04	14010604	140A604	RF Expander	10	Z04	F10:Z04
F10:Z05	14010605	140A605	RF Expander	10	Z05	F10:Z05
F10:Z06	14010606	140A606	RF Expander	10	Z06	F10:Z06
F10:Z07	14010607	140A607	RF Expander	10	Z07	F10:Z07
F10:Z08	14010608	140A608	RF Expander	10	Z08	F10:Z08
F10:Z09	14010609	140A609	RF Expander	10	Z09	F10:Z09
F10:Z10	14010610	140A610	RF Expander	10	Z10	F10:Z10
F10:Z11	14010611	140A611	RF Expander	10	Z11	F10:Z11
F10:Z12	14010612	140A612	RF Expander	10	Z12	F10:Z12
F10:Z13	14010613	140A613	RF Expander	10	Z13	F10:Z13
F10:Z14	14010614	140A614	RF Expander	10	Z14	F10:Z14
F10:Z15	14010615	140A615	RF Expander	10	Z15	F10:Z15
F10:Z16	14010616	140A616	RF Expander	10	Z16	F10:Z16
F10:Z17	14010617	140A617	RF Expander	10	Z17	F10:Z17
F10:Z18	14010618	140A618	RF Expander	10	Z18	F10:Z18
F10:Z19	14010619	140A619	RF Expander	10	Z19	F10:Z19
F10:Z20	14010620	140A620	RF Expander	10	Z20	F10:Z20
F10:Z21	14010621	140A621	RF Expander	10	Z21	F10:Z21
F10:Z22	14010622	140A622	RF Expander	10	Z22	F10:Z22
F10:Z23	14010623	140A623	RF Expander	10	Z23	F10:Z23
F10:Z24	14010624	140A624	RF Expander	10	Z24	F10:Z24
F10:Z25	14010625	140A625	RF Expander	10	Z25	F10:Z25
F10:Z26	14010626	140A626	RF Expander	10	Z26	F10:Z26
F10:Z27	14010627	140A627	RF Expander	10	Z27	F10:Z27
F10:Z28	14010628	140A628	RF Expander	10	Z28	F10:Z28
F10:Z29	14010629	140A629	RF Expander	10	Z29	F10:Z29
F10:Z30	14010630	140A630	RF Expander	10	Z30	F10:Z30

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F10:Z31	14010631	140A631	RF Expander	10	Z31	F10:Z31
F10:Z32	14010632	140A632	RF Expander	10	Z32	F10:Z32
F10:S01	38410601	384A601	RF Expander	10	Transmitter Low Battery	F10 Transmitter Low Battery
F10:S02	38110602	381A602	RF Expander	10	Transmitter Poll Fail	F10 Transmitter Poll Fail
F10:S03	34410603	344A603	RF Expander	10	Transmitter Jam	F10 Transmitter Jam
F10:S04	14510604	145A604	RF Expander	10	Cabinet Tamper	F10 Cabinet Tamper
F10:S05	30110605	301A605	RF Expander	10	AC fail	F10 AC fail
F10:S06	30210606	302A606	RF Expander	10	Low Battery	F10 Low Battery
F10:S07	30010607	300A607	RF Expander	10	LAN Fuse	F10 LAN Fuse
F10:S08	30010608	300A608	RF Expander	10	Detector Fuse	F10 Detector Fuse
F10:S09	30010609	300A609	RF Expander	10	Low Volts	F10 Low Volts
F10:S10	30010610	300A610	RF Expander	10	PS Fail	F10 PS Fail
F10:S11	30910611	309A611	RF Expander	10	Battery Test	F10 Battery Test
F10:S12	14310612	143A612	RF Expander	10	LAN Comms	F10 LAN Comms
F10:S13	15010613	150A613	RF Expander	10	Spare1	F10 Spare1
F10:S14	15010614	150A614	RF Expander	10	Spare2	F10 Spare2
F11:Z01	14011601	140B601	RF Expander	11	Z01	F11:Z01
F11:Z02	14011602	140B602	RF Expander	11	Z02	F11:Z02
F11:Z03	14011603	140B603	RF Expander	11	Z03	F11:Z03
F11:Z04	14011604	140B604	RF Expander	11	Z04	F11:Z04
F11:Z05	14011605	140B605	RF Expander	11	Z05	F11:Z05
F11:Z06	14011606	140B606	RF Expander	11	Z06	F11:Z06
F11:Z07	14011607	140B607	RF Expander	11	Z07	F11:Z07
F11:Z08	14011608	140B608	RF Expander	11	Z08	F11:Z08
F11:Z09	14011609	140B609	RF Expander	11	Z09	F11:Z09
F11:Z10	14011610	140B610	RF Expander	11	Z10	F11:Z10
F11:Z11	14011611	140B611	RF Expander	11	Z11	F11:Z11
F11:Z12	14011612	140B612	RF Expander	11	Z12	F11:Z12
F11:Z13	14011613	140B613	RF Expander	11	Z13	F11:Z13
F11:Z14	14011614	140B614	RF Expander	11	Z14	F11:Z14
F11:Z15	14011615	140B615	RF Expander	11	Z15	F11:Z15
F11:Z16	14011616	140B616	RF Expander	11	Z16	F11:Z16
F11:Z17	14011617	140B617	RF Expander	11	Z17	F11:Z17
F11:Z18	14011618	140B618	RF Expander	11	Z18	F11:Z18
F11:Z19	14011619	140B619	RF Expander	11	Z19	F11:Z19
F11:Z20	14011620	140B620	RF Expander	11	Z20	F11:Z20
F11:Z21	14011621	140B621	RF Expander	11	Z21	F11:Z21
F11:Z22	14011622	140B622	RF Expander	11	Z22	F11:Z22
F11:Z23	14011623	140B623	RF Expander	11	Z23	F11:Z23
F11:Z24	14011624	140B624	RF Expander	11	Z24	F11:Z24
F11:Z25	14011625	140B625	RF Expander	11	Z25	F11:Z25
F11:Z26	14011626	140B626	RF Expander	11	Z26	F11:Z26
F11:Z27	14011627	140B627	RF Expander	11	Z27	F11:Z27
F11:Z28	14011628	140B628	RF Expander	11	Z28	F11:Z28
F11:Z29	14011629	140B629	RF Expander	11	Z29	F11:Z29
F11:Z30	14011630	140B630	RF Expander	11	Z30	F11:Z30
F11:Z31	14011631	140B631	RF Expander	11	Z31	F11:Z31
F11:Z32	14011632	140B632	RF Expander	11	Z32	F11:Z32
F11:S01	38411601	384B601	RF Expander	11	Transmitter Low Battery	F11 Transmitter Low Battery
F11:S02	38111602	381B602	RF Expander	11	Transmitter Poll Fail	F11 Transmitter Poll Fail
F11:S03	34411603	344B603	RF Expander	11	Transmitter Jam	F11 Transmitter Jam
F11:S04	14511604	145B604	RF Expander	11	Cabinet Tamper	F11 Cabinet Tamper
F11:S05	30111605	301B605	RF Expander	11	AC fail	F11 AC fail
F11:S06	30211606	302B606	RF Expander	11	Low Battery	F11 Low Battery
F11:S07	30011607	300B607	RF Expander	11	LAN Fuse	F11 LAN Fuse
F11:S08	30011608	300B608	RF Expander	11	Detector Fuse	F11 Detector Fuse
F11:S09	30011609	300B609	RF Expander	11	Low Volts	F11 Low Volts

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F11:S10	30011610	300B610	RF Expander	11	PS Fail	F11 PS Fail
F11:S11	30911611	309B611	RF Expander	11	Battery Test	F11 Battery Test
F11:S12	14311612	143B612	RF Expander	11	LAN Comms	F11 LAN Comms
F11:S13	15011613	150B613	RF Expander	11	Spare1	F11 Spare1
F11:S14	15011614	150B614	RF Expander	11	Spare2	F11 Spare2
F12:Z01	14012601	140C601	RF Expander	12	Z01	F12:Z01
F12:Z02	14012602	140C602	RF Expander	12	Z02	F12:Z02
F12:Z03	14012603	140C603	RF Expander	12	Z03	F12:Z03
F12:Z04	14012604	140C604	RF Expander	12	Z04	F12:Z04
F12:Z05	14012605	140C605	RF Expander	12	Z05	F12:Z05
F12:Z06	14012606	140C606	RF Expander	12	Z06	F12:Z06
F12:Z07	14012607	140C607	RF Expander	12	Z07	F12:Z07
F12:Z08	14012608	140C608	RF Expander	12	Z08	F12:Z08
F12:Z09	14012609	140C609	RF Expander	12	Z09	F12:Z09
F12:Z10	14012610	140C610	RF Expander	12	Z10	F12:Z10
F12:Z11	14012611	140C611	RF Expander	12	Z11	F12:Z11
F12:Z12	14012612	140C612	RF Expander	12	Z12	F12:Z12
F12:Z13	14012613	140C613	RF Expander	12	Z13	F12:Z13
F12:Z14	14012614	140C614	RF Expander	12	Z14	F12:Z14
F12:Z15	14012615	140C615	RF Expander	12	Z15	F12:Z15
F12:Z16	14012616	140C616	RF Expander	12	Z16	F12:Z16
F12:Z17	14012617	140C617	RF Expander	12	Z17	F12:Z17
F12:Z18	14012618	140C618	RF Expander	12	Z18	F12:Z18
F12:Z19	14012619	140C619	RF Expander	12	Z19	F12:Z19
F12:Z20	14012620	140C620	RF Expander	12	Z20	F12:Z20
F12:Z21	14012621	140C621	RF Expander	12	Z21	F12:Z21
F12:Z22	14012622	140C622	RF Expander	12	Z22	F12:Z22
F12:Z23	14012623	140C623	RF Expander	12	Z23	F12:Z23
F12:Z24	14012624	140C624	RF Expander	12	Z24	F12:Z24
F12:Z25	14012625	140C625	RF Expander	12	Z25	F12:Z25
F12:Z26	14012626	140C626	RF Expander	12	Z26	F12:Z26
F12:Z27	14012627	140C627	RF Expander	12	Z27	F12:Z27
F12:Z28	14012628	140C628	RF Expander	12	Z28	F12:Z28
F12:Z29	14012629	140C629	RF Expander	12	Z29	F12:Z29
F12:Z30	14012630	140C630	RF Expander	12	Z30	F12:Z30
F12:Z31	14012631	140C631	RF Expander	12	Z31	F12:Z31
F12:Z32	14012632	140C632	RF Expander	12	Z32	F12:Z32
F12:S01	38412601	384C601	RF Expander	12	Transmitter Low Battery	F12 Transmitter Low Battery
F12:S02	38112602	381C602	RF Expander	12	Transmitter Poll Fail	F12 Transmitter Poll Fail
F12:S03	34412603	344C603	RF Expander	12	Transmitter Jam	F12 Transmitter Jam
F12:S04	14512604	145C604	RF Expander	12	Cabinet Tamper	F12 Cabinet Tamper
F12:S05	30112605	301C605	RF Expander	12	AC fail	F12 AC fail
F12:S06	30212606	302C606	RF Expander	12	Low Battery	F12 Low Battery
F12:S07	30012607	300C607	RF Expander	12	LAN Fuse	F12 LAN Fuse
F12:S08	30012608	300C608	RF Expander	12	Detector Fuse	F12 Detector Fuse
F12:S09	30012609	300C609	RF Expander	12	Low Volts	F12 Low Volts
F12:S10	30012610	300C610	RF Expander	12	PS Fail	F12 PS Fail
F12:S11	30912611	309C611	RF Expander	12	Battery Test	F12 Battery Test
F12:S12	14312612	143C612	RF Expander	12	LAN Comms	F12 LAN Comms
F12:S13	15012613	150C613	RF Expander	12	Spare1	F12 Spare1
F12:S14	15012614	150C614	RF Expander	12	Spare2	F12 Spare2
F13:Z01	14013601	140D601	RF Expander	13	Z01	F13:Z01
F13:Z02	14013602	140D602	RF Expander	13	Z02	F13:Z02
F13:Z03	14013603	140D603	RF Expander	13	Z03	F13:Z03
F13:Z04	14013604	140D604	RF Expander	13	Z04	F13:Z04
F13:Z05	14013605	140D605	RF Expander	13	Z05	F13:Z05
F13:Z06	14013606	140D606	RF Expander	13	Z06	F13:Z06

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F13:Z07	14013607	140D607	RF Expander	13	Z07	F13:Z07
F13:Z08	14013608	140D608	RF Expander	13	Z08	F13:Z08
F13:Z09	14013609	140D609	RF Expander	13	Z09	F13:Z09
F13:Z10	14013610	140D610	RF Expander	13	Z10	F13:Z10
F13:Z11	14013611	140D611	RF Expander	13	Z11	F13:Z11
F13:Z12	14013612	140D612	RF Expander	13	Z12	F13:Z12
F13:Z13	14013613	140D613	RF Expander	13	Z13	F13:Z13
F13:Z14	14013614	140D614	RF Expander	13	Z14	F13:Z14
F13:Z15	14013615	140D615	RF Expander	13	Z15	F13:Z15
F13:Z16	14013616	140D616	RF Expander	13	Z16	F13:Z16
F13:Z17	14013617	140D617	RF Expander	13	Z17	F13:Z17
F13:Z18	14013618	140D618	RF Expander	13	Z18	F13:Z18
F13:Z19	14013619	140D619	RF Expander	13	Z19	F13:Z19
F13:Z20	14013620	140D620	RF Expander	13	Z20	F13:Z20
F13:Z21	14013621	140D621	RF Expander	13	Z21	F13:Z21
F13:Z22	14013622	140D622	RF Expander	13	Z22	F13:Z22
F13:Z23	14013623	140D623	RF Expander	13	Z23	F13:Z23
F13:Z24	14013624	140D624	RF Expander	13	Z24	F13:Z24
F13:Z25	14013625	140D625	RF Expander	13	Z25	F13:Z25
F13:Z26	14013626	140D626	RF Expander	13	Z26	F13:Z26
F13:Z27	14013627	140D627	RF Expander	13	Z27	F13:Z27
F13:Z28	14013628	140D628	RF Expander	13	Z28	F13:Z28
F13:Z29	14013629	140D629	RF Expander	13	Z29	F13:Z29
F13:Z30	14013630	140D630	RF Expander	13	Z30	F13:Z30
F13:Z31	14013631	140D631	RF Expander	13	Z31	F13:Z31
F13:Z32	14013632	140D632	RF Expander	13	Z32	F13:Z32
F13:S01	38413601	384D601	RF Expander	13	Transmitter Low Battery	F13 Transmitter Low Battery
F13:S02	38113602	381D602	RF Expander	13	Transmitter Poll Fail	F13 Transmitter Poll Fail
F13:S03	34413603	344D603	RF Expander	13	Transmitter Jam	F13 Transmitter Jam
F13:S04	14513604	145D604	RF Expander	13	Cabinet Tamper	F13 Cabinet Tamper
F13:S05	30113605	301D605	RF Expander	13	AC fail	F13 AC fail
F13:S06	30213606	302D606	RF Expander	13	Low Battery	F13 Low Battery
F13:S07	30013607	300D607	RF Expander	13	LAN Fuse	F13 LAN Fuse
F13:S08	30013608	300D608	RF Expander	13	Detector Fuse	F13 Detector Fuse
F13:S09	30013609	300D609	RF Expander	13	Low Volts	F13 Low Volts
F13:S10	30013610	300D610	RF Expander	13	PS Fail	F13 PS Fail
F13:S11	30913611	309D611	RF Expander	13	Battery Test	F13 Battery Test
F13:S12	14313612	143D612	RF Expander	13	LAN Comms	F13 LAN Comms
F13:S13	15013613	150D613	RF Expander	13	Spare1	F13 Spare1
F13:S14	15013614	150D614	RF Expander	13	Spare2	F13 Spare2
F14:Z01	14014601	140E601	RF Expander	14	Z01	F14:Z01
F14:Z02	14014602	140E602	RF Expander	14	Z02	F14:Z02
F14:Z03	14014603	140E603	RF Expander	14	Z03	F14:Z03
F14:Z04	14014604	140E604	RF Expander	14	Z04	F14:Z04
F14:Z05	14014605	140E605	RF Expander	14	Z05	F14:Z05
F14:Z06	14014606	140E606	RF Expander	14	Z06	F14:Z06
F14:Z07	14014607	140E607	RF Expander	14	Z07	F14:Z07
F14:Z08	14014608	140E608	RF Expander	14	Z08	F14:Z08
F14:Z09	14014609	140E609	RF Expander	14	Z09	F14:Z09
F14:Z10	14014610	140E610	RF Expander	14	Z10	F14:Z10
F14:Z11	14014611	140E611	RF Expander	14	Z11	F14:Z11
F14:Z12	14014612	140E612	RF Expander	14	Z12	F14:Z12
F14:Z13	14014613	140E613	RF Expander	14	Z13	F14:Z13
F14:Z14	14014614	140E614	RF Expander	14	Z14	F14:Z14
F14:Z15	14014615	140E615	RF Expander	14	Z15	F14:Z15
F14:Z16	14014616	140E616	RF Expander	14	Z16	F14:Z16
F14:Z17	14014617	140E617	RF Expander	14	Z17	F14:Z17

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F14:Z18	14014618	140E618	RF Expander	14	Z18	F14:Z18
F14:Z19	14014619	140E619	RF Expander	14	Z19	F14:Z19
F14:Z20	14014620	140E620	RF Expander	14	Z20	F14:Z20
F14:Z21	14014621	140E621	RF Expander	14	Z21	F14:Z21
F14:Z22	14014622	140E622	RF Expander	14	Z22	F14:Z22
F14:Z23	14014623	140E623	RF Expander	14	Z23	F14:Z23
F14:Z24	14014624	140E624	RF Expander	14	Z24	F14:Z24
F14:Z25	14014625	140E625	RF Expander	14	Z25	F14:Z25
F14:Z26	14014626	140E626	RF Expander	14	Z26	F14:Z26
F14:Z27	14014627	140E627	RF Expander	14	Z27	F14:Z27
F14:Z28	14014628	140E628	RF Expander	14	Z28	F14:Z28
F14:Z29	14014629	140E629	RF Expander	14	Z29	F14:Z29
F14:Z30	14014630	140E630	RF Expander	14	Z30	F14:Z30
F14:Z31	14014631	140E631	RF Expander	14	Z31	F14:Z31
F14:Z32	14014632	140E632	RF Expander	14	Z32	F14:Z32
F14:S01	38414601	384E601	RF Expander	14	Transmitter Low Battery	F14 Transmitter Low Battery
F14:S02	38114602	381E602	RF Expander	14	Transmitter Poll Fail	F14 Transmitter Poll Fail
F14:S03	34414603	344E603	RF Expander	14	Transmitter Jam	F14 Transmitter Jam
F14:S04	14514604	145E604	RF Expander	14	Cabinet Tamper	F14 Cabinet Tamper
F14:S05	30114605	301E605	RF Expander	14	AC fail	F14 AC fail
F14:S06	30214606	302E606	RF Expander	14	Low Battery	F14 Low Battery
F14:S07	30014607	300E607	RF Expander	14	LAN Fuse	F14 LAN Fuse
F14:S08	30014608	300E608	RF Expander	14	Detector Fuse	F14 Detector Fuse
F14:S09	30014609	300E609	RF Expander	14	Low Volts	F14 Low Volts
F14:S10	30014610	300E610	RF Expander	14	PS Fail	F14 PS Fail
F14:S11	30914611	309E611	RF Expander	14	Battery Test	F14 Battery Test
F14:S12	14314612	143E612	RF Expander	14	LAN Comms	F14 LAN Comms
F14:S13	15014613	150E613	RF Expander	14	Spare1	F14 Spare1
F14:S14	15014614	150E614	RF Expander	14	Spare2	F14 Spare2
F15:Z01	14015601	140F601	RF Expander	15	Z01	F15:Z01
F15:Z02	14015602	140F602	RF Expander	15	Z02	F15:Z02
F15:Z03	14015603	140F603	RF Expander	15	Z03	F15:Z03
F15:Z04	14015604	140F604	RF Expander	15	Z04	F15:Z04
F15:Z05	14015605	140F605	RF Expander	15	Z05	F15:Z05
F15:Z06	14015606	140F606	RF Expander	15	Z06	F15:Z06
F15:Z07	14015607	140F607	RF Expander	15	Z07	F15:Z07
F15:Z08	14015608	140F608	RF Expander	15	Z08	F15:Z08
F15:Z09	14015609	140F609	RF Expander	15	Z09	F15:Z09
F15:Z10	14015610	140F610	RF Expander	15	Z10	F15:Z10
F15:Z11	14015611	140F611	RF Expander	15	Z11	F15:Z11
F15:Z12	14015612	140F612	RF Expander	15	Z12	F15:Z12
F15:Z13	14015613	140F613	RF Expander	15	Z13	F15:Z13
F15:Z14	14015614	140F614	RF Expander	15	Z14	F15:Z14
F15:Z15	14015615	140F615	RF Expander	15	Z15	F15:Z15
F15:Z16	14015616	140F616	RF Expander	15	Z16	F15:Z16
F15:Z17	14015617	140F617	RF Expander	15	Z17	F15:Z17
F15:Z18	14015618	140F618	RF Expander	15	Z18	F15:Z18
F15:Z19	14015619	140F619	RF Expander	15	Z19	F15:Z19
F15:Z20	14015620	140F620	RF Expander	15	Z20	F15:Z20
F15:Z21	14015621	140F621	RF Expander	15	Z21	F15:Z21
F15:Z22	14015622	140F622	RF Expander	15	Z22	F15:Z22
F15:Z23	14015623	140F623	RF Expander	15	Z23	F15:Z23
F15:Z24	14015624	140F624	RF Expander	15	Z24	F15:Z24
F15:Z25	14015625	140F625	RF Expander	15	Z25	F15:Z25
F15:Z26	14015626	140F626	RF Expander	15	Z26	F15:Z26
F15:Z27	14015627	140F627	RF Expander	15	Z27	F15:Z27
F15:Z28	14015628	140F628	RF Expander	15	Z28	F15:Z28

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F15:Z29	14015629	140F629	RF Expander	15	Z29	F15:Z29
F15:Z30	14015630	140F630	RF Expander	15	Z30	F15:Z30
F15:Z31	14015631	140F631	RF Expander	15	Z31	F15:Z31
F15:Z32	14015632	140F632	RF Expander	15	Z32	F15:Z32
F15:S01	38415601	384F601	RF Expander	15	Transmitter Low Battery	F15 Transmitter Low Battery
F15:S02	38115602	381F602	RF Expander	15	Transmitter Poll Fail	F15 Transmitter Poll Fail
F15:S03	34415603	344F603	RF Expander	15	Transmitter Jam	F15 Transmitter Jam
F15:S04	14515604	145F604	RF Expander	15	Cabinet Tamper	F15 Cabinet Tamper
F15:S05	30115605	301F605	RF Expander	15	AC fail	F15 AC fail
F15:S06	30215606	302F606	RF Expander	15	Low Battery	F15 Low Battery
F15:S07	30015607	300F607	RF Expander	15	LAN Fuse	F15 LAN Fuse
F15:S08	30015608	300F608	RF Expander	15	Detector Fuse	F15 Detector Fuse
F15:S09	30015609	300F609	RF Expander	15	Low Volts	F15 Low Volts
F15:S10	30015610	300F610	RF Expander	15	PS Fail	F15 PS Fail
F15:S11	30915611	309F611	RF Expander	15	Battery Test	F15 Battery Test
F15:S12	14315612	143F612	RF Expander	15	LAN Comms	F15 LAN Comms
F15:S13	15015613	150F613	RF Expander	15	Spare1	F15 Spare1
F15:S14	15015614	150F614	RF Expander	15	Spare2	F15 Spare2
F16:Z01	14016601	140G601	RF Expander	16	Z01	F16:Z01
F16:Z02	14016602	140G602	RF Expander	16	Z02	F16:Z02
F16:Z03	14016603	140G603	RF Expander	16	Z03	F16:Z03
F16:Z04	14016604	140G604	RF Expander	16	Z04	F16:Z04
F16:Z05	14016605	140G605	RF Expander	16	Z05	F16:Z05
F16:Z06	14016606	140G606	RF Expander	16	Z06	F16:Z06
F16:Z07	14016607	140G607	RF Expander	16	Z07	F16:Z07
F16:Z08	14016608	140G608	RF Expander	16	Z08	F16:Z08
F16:Z09	14016609	140G609	RF Expander	16	Z09	F16:Z09
F16:Z10	14016610	140G610	RF Expander	16	Z10	F16:Z10
F16:Z11	14016611	140G611	RF Expander	16	Z11	F16:Z11
F16:Z12	14016612	140G612	RF Expander	16	Z12	F16:Z12
F16:Z13	14016613	140G613	RF Expander	16	Z13	F16:Z13
F16:Z14	14016614	140G614	RF Expander	16	Z14	F16:Z14
F16:Z15	14016615	140G615	RF Expander	16	Z15	F16:Z15
F16:Z16	14016616	140G616	RF Expander	16	Z16	F16:Z16
F16:Z17	14016617	140G617	RF Expander	16	Z17	F16:Z17
F16:Z18	14016618	140G618	RF Expander	16	Z18	F16:Z18
F16:Z19	14016619	140G619	RF Expander	16	Z19	F16:Z19
F16:Z20	14016620	140G620	RF Expander	16	Z20	F16:Z20
F16:Z21	14016621	140G621	RF Expander	16	Z21	F16:Z21
F16:Z22	14016622	140G622	RF Expander	16	Z22	F16:Z22
F16:Z23	14016623	140G623	RF Expander	16	Z23	F16:Z23
F16:Z24	14016624	140G624	RF Expander	16	Z24	F16:Z24
F16:Z25	14016625	140G625	RF Expander	16	Z25	F16:Z25
F16:Z26	14016626	140G626	RF Expander	16	Z26	F16:Z26
F16:Z27	14016627	140G627	RF Expander	16	Z27	F16:Z27
F16:Z28	14016628	140G628	RF Expander	16	Z28	F16:Z28
F16:Z29	14016629	140G629	RF Expander	16	Z29	F16:Z29
F16:Z30	14016630	140G630	RF Expander	16	Z30	F16:Z30
F16:Z31	14016631	140G631	RF Expander	16	Z31	F16:Z31
F16:Z32	14016632	140G632	RF Expander	16	Z32	F16:Z32
F16:S01	38416601	384G601	RF Expander	16	Transmitter Low Battery	F16 Transmitter Low Battery
F16:S02	38116602	381G602	RF Expander	16	Transmitter Poll Fail	F16 Transmitter Poll Fail
F16:S03	34416603	344G603	RF Expander	16	Transmitter Jam	F16 Transmitter Jam
F16:S04	14516604	145G604	RF Expander	16	Cabinet Tamper	F16 Cabinet Tamper
F16:S05	30116605	301G605	RF Expander	16	AC fail	F16 AC fail
F16:S06	30216606	302G606	RF Expander	16	Low Battery	F16 Low Battery
F16:S07	30016607	300G607	RF Expander	16	LAN Fuse	F16 LAN Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F16:S08	30016608	300G608	RF Expander	16	Detector Fuse	F16 Detector Fuse
F16:S09	30016609	300G609	RF Expander	16	Low Volts	F16 Low Volts
F16:S10	30016610	300G610	RF Expander	16	PS Fail	F16 PS Fail
F16:S11	30916611	309G611	RF Expander	16	Battery Test	F16 Battery Test
F16:S12	14316612	143G612	RF Expander	16	LAN Comms	F16 LAN Comms
F16:S13	15016613	150G613	RF Expander	16	Spare1	F16 Spare1
F16:S14	15016614	150G614	RF Expander	16	Spare2	F16 Spare2
F17:Z01	14017601	140H601	RF Expander	17	Z01	F17:Z01
F17:Z02	14017602	140H602	RF Expander	17	Z02	F17:Z02
F17:Z03	14017603	140H603	RF Expander	17	Z03	F17:Z03
F17:Z04	14017604	140H604	RF Expander	17	Z04	F17:Z04
F17:Z05	14017605	140H605	RF Expander	17	Z05	F17:Z05
F17:Z06	14017606	140H606	RF Expander	17	Z06	F17:Z06
F17:Z07	14017607	140H607	RF Expander	17	Z07	F17:Z07
F17:Z08	14017608	140H608	RF Expander	17	Z08	F17:Z08
F17:Z09	14017609	140H609	RF Expander	17	Z09	F17:Z09
F17:Z10	14017610	140H610	RF Expander	17	Z10	F17:Z10
F17:Z11	14017611	140H611	RF Expander	17	Z11	F17:Z11
F17:Z12	14017612	140H612	RF Expander	17	Z12	F17:Z12
F17:Z13	14017613	140H613	RF Expander	17	Z13	F17:Z13
F17:Z14	14017614	140H614	RF Expander	17	Z14	F17:Z14
F17:Z15	14017615	140H615	RF Expander	17	Z15	F17:Z15
F17:Z16	14017616	140H616	RF Expander	17	Z16	F17:Z16
F17:Z17	14017617	140H617	RF Expander	17	Z17	F17:Z17
F17:Z18	14017618	140H618	RF Expander	17	Z18	F17:Z18
F17:Z19	14017619	140H619	RF Expander	17	Z19	F17:Z19
F17:Z20	14017620	140H620	RF Expander	17	Z20	F17:Z20
F17:Z21	14017621	140H621	RF Expander	17	Z21	F17:Z21
F17:Z22	14017622	140H622	RF Expander	17	Z22	F17:Z22
F17:Z23	14017623	140H623	RF Expander	17	Z23	F17:Z23
F17:Z24	14017624	140H624	RF Expander	17	Z24	F17:Z24
F17:Z25	14017625	140H625	RF Expander	17	Z25	F17:Z25
F17:Z26	14017626	140H626	RF Expander	17	Z26	F17:Z26
F17:Z27	14017627	140H627	RF Expander	17	Z27	F17:Z27
F17:Z28	14017628	140H628	RF Expander	17	Z28	F17:Z28
F17:Z29	14017629	140H629	RF Expander	17	Z29	F17:Z29
F17:Z30	14017630	140H630	RF Expander	17	Z30	F17:Z30
F17:Z31	14017631	140H631	RF Expander	17	Z31	F17:Z31
F17:Z32	14017632	140H632	RF Expander	17	Z32	F17:Z32
F17:S01	38417601	384H601	RF Expander	17	Transmitter Low Battery	F17 Transmitter Low Battery
F17:S02	38117602	381H602	RF Expander	17	Transmitter Poll Fail	F17 Transmitter Poll Fail
F17:S03	34417603	344H603	RF Expander	17	Transmitter Jam	F17 Transmitter Jam
F17:S04	14517604	145H604	RF Expander	17	Cabinet Tamper	F17 Cabinet Tamper
F17:S05	30117605	301H605	RF Expander	17	AC fail	F17 AC fail
F17:S06	30217606	302H606	RF Expander	17	Low Battery	F17 Low Battery
F17:S07	30017607	300H607	RF Expander	17	LAN Fuse	F17 LAN Fuse
F17:S08	30017608	300H608	RF Expander	17	Detector Fuse	F17 Detector Fuse
F17:S09	30017609	300H609	RF Expander	17	Low Volts	F17 Low Volts
F17:S10	30017610	300H610	RF Expander	17	PS Fail	F17 PS Fail
F17:S11	30917611	309H611	RF Expander	17	Battery Test	F17 Battery Test
F17:S12	14317612	143H612	RF Expander	17	LAN Comms	F17 LAN Comms
F17:S13	15017613	150H613	RF Expander	17	Spare1	F17 Spare1
F17:S14	15017614	150H614	RF Expander	17	Spare2	F17 Spare2
F18:Z01	14018601	140I601	RF Expander	18	Z01	F18:Z01
F18:Z02	14018602	140I602	RF Expander	18	Z02	F18:Z02
F18:Z03	14018603	140I603	RF Expander	18	Z03	F18:Z03
F18:Z04	14018604	140I604	RF Expander	18	Z04	F18:Z04

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F18:Z05	14018605	140I605	RF Expander	18	Z05	F18:Z05
F18:Z06	14018606	140I606	RF Expander	18	Z06	F18:Z06
F18:Z07	14018607	140I607	RF Expander	18	Z07	F18:Z07
F18:Z08	14018608	140I608	RF Expander	18	Z08	F18:Z08
F18:Z09	14018609	140I609	RF Expander	18	Z09	F18:Z09
F18:Z10	14018610	140I610	RF Expander	18	Z10	F18:Z10
F18:Z11	14018611	140I611	RF Expander	18	Z11	F18:Z11
F18:Z12	14018612	140I612	RF Expander	18	Z12	F18:Z12
F18:Z13	14018613	140I613	RF Expander	18	Z13	F18:Z13
F18:Z14	14018614	140I614	RF Expander	18	Z14	F18:Z14
F18:Z15	14018615	140I615	RF Expander	18	Z15	F18:Z15
F18:Z16	14018616	140I616	RF Expander	18	Z16	F18:Z16
F18:Z17	14018617	140I617	RF Expander	18	Z17	F18:Z17
F18:Z18	14018618	140I618	RF Expander	18	Z18	F18:Z18
F18:Z19	14018619	140I619	RF Expander	18	Z19	F18:Z19
F18:Z20	14018620	140I620	RF Expander	18	Z20	F18:Z20
F18:Z21	14018621	140I621	RF Expander	18	Z21	F18:Z21
F18:Z22	14018622	140I622	RF Expander	18	Z22	F18:Z22
F18:Z23	14018623	140I623	RF Expander	18	Z23	F18:Z23
F18:Z24	14018624	140I624	RF Expander	18	Z24	F18:Z24
F18:Z25	14018625	140I625	RF Expander	18	Z25	F18:Z25
F18:Z26	14018626	140I626	RF Expander	18	Z26	F18:Z26
F18:Z27	14018627	140I627	RF Expander	18	Z27	F18:Z27
F18:Z28	14018628	140I628	RF Expander	18	Z28	F18:Z28
F18:Z29	14018629	140I629	RF Expander	18	Z29	F18:Z29
F18:Z30	14018630	140I630	RF Expander	18	Z30	F18:Z30
F18:Z31	14018631	140I631	RF Expander	18	Z31	F18:Z31
F18:Z32	14018632	140I632	RF Expander	18	Z32	F18:Z32
F18:S01	38418601	384I601	RF Expander	18	Transmitter Low Battery	F18 Transmitter Low Battery
F18:S02	38118602	381I602	RF Expander	18	Transmitter Poll Fail	F18 Transmitter Poll Fail
F18:S03	34418603	344I603	RF Expander	18	Transmitter Jam	F18 Transmitter Jam
F18:S04	14518604	145I604	RF Expander	18	Cabinet Tamper	F18 Cabinet Tamper
F18:S05	30118605	301I605	RF Expander	18	AC fail	F18 AC fail
F18:S06	30218606	302I606	RF Expander	18	Low Battery	F18 Low Battery
F18:S07	30018607	300I607	RF Expander	18	LAN Fuse	F18 LAN Fuse
F18:S08	30018608	300I608	RF Expander	18	Detector Fuse	F18 Detector Fuse
F18:S09	30018609	300I609	RF Expander	18	Low Volts	F18 Low Volts
F18:S10	30018610	300I610	RF Expander	18	PS Fail	F18 PS Fail
F18:S11	30918611	309I611	RF Expander	18	Battery Test	F18 Battery Test
F18:S12	14318612	143I612	RF Expander	18	LAN Comms	F18 LAN Comms
F18:S13	15018613	150I613	RF Expander	18	Spare1	F18 Spare1
F18:S14	15018614	150I614	RF Expander	18	Spare2	F18 Spare2
F19:Z01	14019601	140J601	RF Expander	19	Z01	F19:Z01
F19:Z02	14019602	140J602	RF Expander	19	Z02	F19:Z02
F19:Z03	14019603	140J603	RF Expander	19	Z03	F19:Z03
F19:Z04	14019604	140J604	RF Expander	19	Z04	F19:Z04
F19:Z05	14019605	140J605	RF Expander	19	Z05	F19:Z05
F19:Z06	14019606	140J606	RF Expander	19	Z06	F19:Z06
F19:Z07	14019607	140J607	RF Expander	19	Z07	F19:Z07
F19:Z08	14019608	140J608	RF Expander	19	Z08	F19:Z08
F19:Z09	14019609	140J609	RF Expander	19	Z09	F19:Z09
F19:Z10	14019610	140J610	RF Expander	19	Z10	F19:Z10
F19:Z11	14019611	140J611	RF Expander	19	Z11	F19:Z11
F19:Z12	14019612	140J612	RF Expander	19	Z12	F19:Z12
F19:Z13	14019613	140J613	RF Expander	19	Z13	F19:Z13
F19:Z14	14019614	140J614	RF Expander	19	Z14	F19:Z14
F19:Z15	14019615	140J615	RF Expander	19	Z15	F19:Z15

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F19:Z16	14019616	140J616	RF Expander	19	Z16	F19:Z16
F19:Z17	14019617	140J617	RF Expander	19	Z17	F19:Z17
F19:Z18	14019618	140J618	RF Expander	19	Z18	F19:Z18
F19:Z19	14019619	140J619	RF Expander	19	Z19	F19:Z19
F19:Z20	14019620	140J620	RF Expander	19	Z20	F19:Z20
F19:Z21	14019621	140J621	RF Expander	19	Z21	F19:Z21
F19:Z22	14019622	140J622	RF Expander	19	Z22	F19:Z22
F19:Z23	14019623	140J623	RF Expander	19	Z23	F19:Z23
F19:Z24	14019624	140J624	RF Expander	19	Z24	F19:Z24
F19:Z25	14019625	140J625	RF Expander	19	Z25	F19:Z25
F19:Z26	14019626	140J626	RF Expander	19	Z26	F19:Z26
F19:Z27	14019627	140J627	RF Expander	19	Z27	F19:Z27
F19:Z28	14019628	140J628	RF Expander	19	Z28	F19:Z28
F19:Z29	14019629	140J629	RF Expander	19	Z29	F19:Z29
F19:Z30	14019630	140J630	RF Expander	19	Z30	F19:Z30
F19:Z31	14019631	140J631	RF Expander	19	Z31	F19:Z31
F19:Z32	14019632	140J632	RF Expander	19	Z32	F19:Z32
F19:S01	38419601	384J601	RF Expander	19	Transmitter Low Battery	F19 Transmitter Low Battery
F19:S02	38119602	381J602	RF Expander	19	Transmitter Poll Fail	F19 Transmitter Poll Fail
F19:S03	34419603	344J603	RF Expander	19	Transmitter Jam	F19 Transmitter Jam
F19:S04	14519604	145J604	RF Expander	19	Cabinet Tamper	F19 Cabinet Tamper
F19:S05	30119605	301J605	RF Expander	19	AC fail	F19 AC fail
F19:S06	30219606	302J606	RF Expander	19	Low Battery	F19 Low Battery
F19:S07	30019607	300J607	RF Expander	19	LAN Fuse	F19 LAN Fuse
F19:S08	30019608	300J608	RF Expander	19	Detector Fuse	F19 Detector Fuse
F19:S09	30019609	300J609	RF Expander	19	Low Volts	F19 Low Volts
F19:S10	30019610	300J610	RF Expander	19	PS Fail	F19 PS Fail
F19:S11	30919611	309J611	RF Expander	19	Battery Test	F19 Battery Test
F19:S12	14319612	143J612	RF Expander	19	LAN Comms	F19 LAN Comms
F19:S13	15019613	150J613	RF Expander	19	Spare1	F19 Spare1
F19:S14	15019614	150J614	RF Expander	19	Spare2	F19 Spare2
F20:Z01	14020601	140K601	RF Expander	20	Z01	F20:Z01
F20:Z02	14020602	140K602	RF Expander	20	Z02	F20:Z02
F20:Z03	14020603	140K603	RF Expander	20	Z03	F20:Z03
F20:Z04	14020604	140K604	RF Expander	20	Z04	F20:Z04
F20:Z05	14020605	140K605	RF Expander	20	Z05	F20:Z05
F20:Z06	14020606	140K606	RF Expander	20	Z06	F20:Z06
F20:Z07	14020607	140K607	RF Expander	20	Z07	F20:Z07
F20:Z08	14020608	140K608	RF Expander	20	Z08	F20:Z08
F20:Z09	14020609	140K609	RF Expander	20	Z09	F20:Z09
F20:Z10	14020610	140K610	RF Expander	20	Z10	F20:Z10
F20:Z11	14020611	140K611	RF Expander	20	Z11	F20:Z11
F20:Z12	14020612	140K612	RF Expander	20	Z12	F20:Z12
F20:Z13	14020613	140K613	RF Expander	20	Z13	F20:Z13
F20:Z14	14020614	140K614	RF Expander	20	Z14	F20:Z14
F20:Z15	14020615	140K615	RF Expander	20	Z15	F20:Z15
F20:Z16	14020616	140K616	RF Expander	20	Z16	F20:Z16
F20:Z17	14020617	140K617	RF Expander	20	Z17	F20:Z17
F20:Z18	14020618	140K618	RF Expander	20	Z18	F20:Z18
F20:Z19	14020619	140K619	RF Expander	20	Z19	F20:Z19
F20:Z20	14020620	140K620	RF Expander	20	Z20	F20:Z20
F20:Z21	14020621	140K621	RF Expander	20	Z21	F20:Z21
F20:Z22	14020622	140K622	RF Expander	20	Z22	F20:Z22
F20:Z23	14020623	140K623	RF Expander	20	Z23	F20:Z23
F20:Z24	14020624	140K624	RF Expander	20	Z24	F20:Z24
F20:Z25	14020625	140K625	RF Expander	20	Z25	F20:Z25
F20:Z26	14020626	140K626	RF Expander	20	Z26	F20:Z26

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F20:Z27	14020627	140K627	RF Expander	20	Z27	F20:Z27
F20:Z28	14020628	140K628	RF Expander	20	Z28	F20:Z28
F20:Z29	14020629	140K629	RF Expander	20	Z29	F20:Z29
F20:Z30	14020630	140K630	RF Expander	20	Z30	F20:Z30
F20:Z31	14020631	140K631	RF Expander	20	Z31	F20:Z31
F20:Z32	14020632	140K632	RF Expander	20	Z32	F20:Z32
F20:S01	38420601	384K601	RF Expander	20	Transmitter Low Battery	F20 Transmitter Low Battery
F20:S02	38120602	381K602	RF Expander	20	Transmitter Poll Fail	F20 Transmitter Poll Fail
F20:S03	34420603	344K603	RF Expander	20	Transmitter Jam	F20 Transmitter Jam
F20:S04	14520604	145K604	RF Expander	20	Cabinet Tamper	F20 Cabinet Tamper
F20:S05	30120605	301K605	RF Expander	20	AC fail	F20 AC fail
F20:S06	30220606	302K606	RF Expander	20	Low Battery	F20 Low Battery
F20:S07	30020607	300K607	RF Expander	20	LAN Fuse	F20 LAN Fuse
F20:S08	30020608	300K608	RF Expander	20	Detector Fuse	F20 Detector Fuse
F20:S09	30020609	300K609	RF Expander	20	Low Volts	F20 Low Volts
F20:S10	30020610	300K610	RF Expander	20	PS Fail	F20 PS Fail
F20:S11	30920611	309K611	RF Expander	20	Battery Test	F20 Battery Test
F20:S12	14320612	143K612	RF Expander	20	LAN Comms	F20 LAN Comms
F20:S13	15020613	150K613	RF Expander	20	Spare1	F20 Spare1
F20:S14	15020614	150K614	RF Expander	20	Spare2	F20 Spare2
F21:Z01	14021601	140L601	RF Expander	21	Z01	F21:Z01
F21:Z02	14021602	140L602	RF Expander	21	Z02	F21:Z02
F21:Z03	14021603	140L603	RF Expander	21	Z03	F21:Z03
F21:Z04	14021604	140L604	RF Expander	21	Z04	F21:Z04
F21:Z05	14021605	140L605	RF Expander	21	Z05	F21:Z05
F21:Z06	14021606	140L606	RF Expander	21	Z06	F21:Z06
F21:Z07	14021607	140L607	RF Expander	21	Z07	F21:Z07
F21:Z08	14021608	140L608	RF Expander	21	Z08	F21:Z08
F21:Z09	14021609	140L609	RF Expander	21	Z09	F21:Z09
F21:Z10	14021610	140L610	RF Expander	21	Z10	F21:Z10
F21:Z11	14021611	140L611	RF Expander	21	Z11	F21:Z11
F21:Z12	14021612	140L612	RF Expander	21	Z12	F21:Z12
F21:Z13	14021613	140L613	RF Expander	21	Z13	F21:Z13
F21:Z14	14021614	140L614	RF Expander	21	Z14	F21:Z14
F21:Z15	14021615	140L615	RF Expander	21	Z15	F21:Z15
F21:Z16	14021616	140L616	RF Expander	21	Z16	F21:Z16
F21:Z17	14021617	140L617	RF Expander	21	Z17	F21:Z17
F21:Z18	14021618	140L618	RF Expander	21	Z18	F21:Z18
F21:Z19	14021619	140L619	RF Expander	21	Z19	F21:Z19
F21:Z20	14021620	140L620	RF Expander	21	Z20	F21:Z20
F21:Z21	14021621	140L621	RF Expander	21	Z21	F21:Z21
F21:Z22	14021622	140L622	RF Expander	21	Z22	F21:Z22
F21:Z23	14021623	140L623	RF Expander	21	Z23	F21:Z23
F21:Z24	14021624	140L624	RF Expander	21	Z24	F21:Z24
F21:Z25	14021625	140L625	RF Expander	21	Z25	F21:Z25
F21:Z26	14021626	140L626	RF Expander	21	Z26	F21:Z26
F21:Z27	14021627	140L627	RF Expander	21	Z27	F21:Z27
F21:Z28	14021628	140L628	RF Expander	21	Z28	F21:Z28
F21:Z29	14021629	140L629	RF Expander	21	Z29	F21:Z29
F21:Z30	14021630	140L630	RF Expander	21	Z30	F21:Z30
F21:Z31	14021631	140L631	RF Expander	21	Z31	F21:Z31
F21:Z32	14021632	140L632	RF Expander	21	Z32	F21:Z32
F21:S01	38421601	384L601	RF Expander	21	Transmitter Low Battery	F21 Transmitter Low Battery
F21:S02	38121602	381L602	RF Expander	21	Transmitter Poll Fail	F21 Transmitter Poll Fail
F21:S03	34421603	344L603	RF Expander	21	Transmitter Jam	F21 Transmitter Jam
F21:S04	14521604	145L604	RF Expander	21	Cabinet Tamper	F21 Cabinet Tamper
F21:S05	30121605	301L605	RF Expander	21	AC fail	F21 AC fail

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F21:S06	30221606	302L606	RF Expander	21	Low Battery	F21 Low Battery
F21:S07	30021607	300L607	RF Expander	21	LAN Fuse	F21 LAN Fuse
F21:S08	30021608	300L608	RF Expander	21	Detector Fuse	F21 Detector Fuse
F21:S09	30021609	300L609	RF Expander	21	Low Volts	F21 Low Volts
F21:S10	30021610	300L610	RF Expander	21	PS Fail	F21 PS Fail
F21:S11	30921611	309L611	RF Expander	21	Battery Test	F21 Battery Test
F21:S12	14321612	143L612	RF Expander	21	LAN Comms	F21 LAN Comms
F21:S13	15021613	150L613	RF Expander	21	Spare1	F21 Spare1
F21:S14	15021614	150L614	RF Expander	21	Spare2	F21 Spare2
F22:Z01	14022601	140M601	RF Expander	22	Z01	F22:Z01
F22:Z02	14022602	140M602	RF Expander	22	Z02	F22:Z02
F22:Z03	14022603	140M603	RF Expander	22	Z03	F22:Z03
F22:Z04	14022604	140M604	RF Expander	22	Z04	F22:Z04
F22:Z05	14022605	140M605	RF Expander	22	Z05	F22:Z05
F22:Z06	14022606	140M606	RF Expander	22	Z06	F22:Z06
F22:Z07	14022607	140M607	RF Expander	22	Z07	F22:Z07
F22:Z08	14022608	140M608	RF Expander	22	Z08	F22:Z08
F22:Z09	14022609	140M609	RF Expander	22	Z09	F22:Z09
F22:Z10	14022610	140M610	RF Expander	22	Z10	F22:Z10
F22:Z11	14022611	140M611	RF Expander	22	Z11	F22:Z11
F22:Z12	14022612	140M612	RF Expander	22	Z12	F22:Z12
F22:Z13	14022613	140M613	RF Expander	22	Z13	F22:Z13
F22:Z14	14022614	140M614	RF Expander	22	Z14	F22:Z14
F22:Z15	14022615	140M615	RF Expander	22	Z15	F22:Z15
F22:Z16	14022616	140M616	RF Expander	22	Z16	F22:Z16
F22:Z17	14022617	140M617	RF Expander	22	Z17	F22:Z17
F22:Z18	14022618	140M618	RF Expander	22	Z18	F22:Z18
F22:Z19	14022619	140M619	RF Expander	22	Z19	F22:Z19
F22:Z20	14022620	140M620	RF Expander	22	Z20	F22:Z20
F22:Z21	14022621	140M621	RF Expander	22	Z21	F22:Z21
F22:Z22	14022622	140M622	RF Expander	22	Z22	F22:Z22
F22:Z23	14022623	140M623	RF Expander	22	Z23	F22:Z23
F22:Z24	14022624	140M624	RF Expander	22	Z24	F22:Z24
F22:Z25	14022625	140M625	RF Expander	22	Z25	F22:Z25
F22:Z26	14022626	140M626	RF Expander	22	Z26	F22:Z26
F22:Z27	14022627	140M627	RF Expander	22	Z27	F22:Z27
F22:Z28	14022628	140M628	RF Expander	22	Z28	F22:Z28
F22:Z29	14022629	140M629	RF Expander	22	Z29	F22:Z29
F22:Z30	14022630	140M630	RF Expander	22	Z30	F22:Z30
F22:Z31	14022631	140M631	RF Expander	22	Z31	F22:Z31
F22:Z32	14022632	140M632	RF Expander	22	Z32	F22:Z32
F22:S01	38422601	384M601	RF Expander	22	Transmitter Low Battery	F22 Transmitter Low Battery
F22:S02	38122602	381M602	RF Expander	22	Transmitter Poll Fail	F22 Transmitter Poll Fail
F22:S03	34422603	344M603	RF Expander	22	Transmitter Jam	F22 Transmitter Jam
F22:S04	14522604	145M604	RF Expander	22	Cabinet Tamper	F22 Cabinet Tamper
F22:S05	30122605	301M605	RF Expander	22	AC fail	F22 AC fail
F22:S06	30222606	302M606	RF Expander	22	Low Battery	F22 Low Battery
F22:S07	30022607	300M607	RF Expander	22	LAN Fuse	F22 LAN Fuse
F22:S08	30022608	300M608	RF Expander	22	Detector Fuse	F22 Detector Fuse
F22:S09	30022609	300M609	RF Expander	22	Low Volts	F22 Low Volts
F22:S10	30022610	300M610	RF Expander	22	PS Fail	F22 PS Fail
F22:S11	30922611	309M611	RF Expander	22	Battery Test	F22 Battery Test
F22:S12	14322612	143M612	RF Expander	22	LAN Comms	F22 LAN Comms
F22:S13	15022613	150M613	RF Expander	22	Spare1	F22 Spare1
F22:S14	15022614	150M614	RF Expander	22	Spare2	F22 Spare2
F23:Z01	14023601	140N601	RF Expander	23	Z01	F23:Z01
F23:Z02	14023602	140N602	RF Expander	23	Z02	F23:Z02

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F23:Z03	14023603	140N603	RF Expander	23	Z03	F23:Z03
F23:Z04	14023604	140N604	RF Expander	23	Z04	F23:Z04
F23:Z05	14023605	140N605	RF Expander	23	Z05	F23:Z05
F23:Z06	14023606	140N606	RF Expander	23	Z06	F23:Z06
F23:Z07	14023607	140N607	RF Expander	23	Z07	F23:Z07
F23:Z08	14023608	140N608	RF Expander	23	Z08	F23:Z08
F23:Z09	14023609	140N609	RF Expander	23	Z09	F23:Z09
F23:Z10	14023610	140N610	RF Expander	23	Z10	F23:Z10
F23:Z11	14023611	140N611	RF Expander	23	Z11	F23:Z11
F23:Z12	14023612	140N612	RF Expander	23	Z12	F23:Z12
F23:Z13	14023613	140N613	RF Expander	23	Z13	F23:Z13
F23:Z14	14023614	140N614	RF Expander	23	Z14	F23:Z14
F23:Z15	14023615	140N615	RF Expander	23	Z15	F23:Z15
F23:Z16	14023616	140N616	RF Expander	23	Z16	F23:Z16
F23:Z17	14023617	140N617	RF Expander	23	Z17	F23:Z17
F23:Z18	14023618	140N618	RF Expander	23	Z18	F23:Z18
F23:Z19	14023619	140N619	RF Expander	23	Z19	F23:Z19
F23:Z20	14023620	140N620	RF Expander	23	Z20	F23:Z20
F23:Z21	14023621	140N621	RF Expander	23	Z21	F23:Z21
F23:Z22	14023622	140N622	RF Expander	23	Z22	F23:Z22
F23:Z23	14023623	140N623	RF Expander	23	Z23	F23:Z23
F23:Z24	14023624	140N624	RF Expander	23	Z24	F23:Z24
F23:Z25	14023625	140N625	RF Expander	23	Z25	F23:Z25
F23:Z26	14023626	140N626	RF Expander	23	Z26	F23:Z26
F23:Z27	14023627	140N627	RF Expander	23	Z27	F23:Z27
F23:Z28	14023628	140N628	RF Expander	23	Z28	F23:Z28
F23:Z29	14023629	140N629	RF Expander	23	Z29	F23:Z29
F23:Z30	14023630	140N630	RF Expander	23	Z30	F23:Z30
F23:Z31	14023631	140N631	RF Expander	23	Z31	F23:Z31
F23:Z32	14023632	140N632	RF Expander	23	Z32	F23:Z32
F23:S01	38423601	384N601	RF Expander	23	Transmitter Low Battery	F23 Transmitter Low Battery
F23:S02	38123602	381N602	RF Expander	23	Transmitter Poll Fail	F23 Transmitter Poll Fail
F23:S03	34423603	344N603	RF Expander	23	Transmitter Jam	F23 Transmitter Jam
F23:S04	14523604	145N604	RF Expander	23	Cabinet Tamper	F23 Cabinet Tamper
F23:S05	30123605	301N605	RF Expander	23	AC fail	F23 AC fail
F23:S06	30223606	302N606	RF Expander	23	Low Battery	F23 Low Battery
F23:S07	30023607	300N607	RF Expander	23	LAN Fuse	F23 LAN Fuse
F23:S08	30023608	300N608	RF Expander	23	Detector Fuse	F23 Detector Fuse
F23:S09	30023609	300N609	RF Expander	23	Low Volts	F23 Low Volts
F23:S10	30023610	300N610	RF Expander	23	PS Fail	F23 PS Fail
F23:S11	30923611	309N611	RF Expander	23	Battery Test	F23 Battery Test
F23:S12	14323612	143N612	RF Expander	23	LAN Comms	F23 LAN Comms
F23:S13	15023613	150N613	RF Expander	23	Spare1	F23 Spare1
F23:S14	15023614	150N614	RF Expander	23	Spare2	F23 Spare2
F24:Z01	14024601	140O601	RF Expander	24	Z01	F24:Z01
F24:Z02	14024602	140O602	RF Expander	24	Z02	F24:Z02
F24:Z03	14024603	140O603	RF Expander	24	Z03	F24:Z03
F24:Z04	14024604	140O604	RF Expander	24	Z04	F24:Z04
F24:Z05	14024605	140O605	RF Expander	24	Z05	F24:Z05
F24:Z06	14024606	140O606	RF Expander	24	Z06	F24:Z06
F24:Z07	14024607	140O607	RF Expander	24	Z07	F24:Z07
F24:Z08	14024608	140O608	RF Expander	24	Z08	F24:Z08
F24:Z09	14024609	140O609	RF Expander	24	Z09	F24:Z09
F24:Z10	14024610	140O610	RF Expander	24	Z10	F24:Z10
F24:Z11	14024611	140O611	RF Expander	24	Z11	F24:Z11
F24:Z12	14024612	140O612	RF Expander	24	Z12	F24:Z12
F24:Z13	14024613	140O613	RF Expander	24	Z13	F24:Z13

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F24:Z14	14024614	140O614	RF Expander	24	Z14	F24:Z14
F24:Z15	14024615	140O615	RF Expander	24	Z15	F24:Z15
F24:Z16	14024616	140O616	RF Expander	24	Z16	F24:Z16
F24:Z17	14024617	140O617	RF Expander	24	Z17	F24:Z17
F24:Z18	14024618	140O618	RF Expander	24	Z18	F24:Z18
F24:Z19	14024619	140O619	RF Expander	24	Z19	F24:Z19
F24:Z20	14024620	140O620	RF Expander	24	Z20	F24:Z20
F24:Z21	14024621	140O621	RF Expander	24	Z21	F24:Z21
F24:Z22	14024622	140O622	RF Expander	24	Z22	F24:Z22
F24:Z23	14024623	140O623	RF Expander	24	Z23	F24:Z23
F24:Z24	14024624	140O624	RF Expander	24	Z24	F24:Z24
F24:Z25	14024625	140O625	RF Expander	24	Z25	F24:Z25
F24:Z26	14024626	140O626	RF Expander	24	Z26	F24:Z26
F24:Z27	14024627	140O627	RF Expander	24	Z27	F24:Z27
F24:Z28	14024628	140O628	RF Expander	24	Z28	F24:Z28
F24:Z29	14024629	140O629	RF Expander	24	Z29	F24:Z29
F24:Z30	14024630	140O630	RF Expander	24	Z30	F24:Z30
F24:Z31	14024631	140O631	RF Expander	24	Z31	F24:Z31
F24:Z32	14024632	140O632	RF Expander	24	Z32	F24:Z32
F24:S01	38424601	384O601	RF Expander	24	Transmitter Low Battery	F24 Transmitter Low Battery
F24:S02	38124602	381O602	RF Expander	24	Transmitter Poll Fail	F24 Transmitter Poll Fail
F24:S03	34424603	344O603	RF Expander	24	Transmitter Jam	F24 Transmitter Jam
F24:S04	14524604	145O604	RF Expander	24	Cabinet Tamper	F24 Cabinet Tamper
F24:S05	30124605	301O605	RF Expander	24	AC fail	F24 AC fail
F24:S06	30224606	302O606	RF Expander	24	Low Battery	F24 Low Battery
F24:S07	30024607	300O607	RF Expander	24	LAN Fuse	F24 LAN Fuse
F24:S08	30024608	300O608	RF Expander	24	Detector Fuse	F24 Detector Fuse
F24:S09	30024609	300O609	RF Expander	24	Low Volts	F24 Low Volts
F24:S10	30024610	300O610	RF Expander	24	PS Fail	F24 PS Fail
F24:S11	30924611	309O611	RF Expander	24	Battery Test	F24 Battery Test
F24:S12	14324612	143O612	RF Expander	24	LAN Comms	F24 LAN Comms
F24:S13	15024613	150O613	RF Expander	24	Spare1	F24 Spare1
F24:S14	15024614	150O614	RF Expander	24	Spare2	F24 Spare2
F25:Z01	14025601	140P601	RF Expander	25	Z01	F25:Z01
F25:Z02	14025602	140P602	RF Expander	25	Z02	F25:Z02
F25:Z03	14025603	140P603	RF Expander	25	Z03	F25:Z03
F25:Z04	14025604	140P604	RF Expander	25	Z04	F25:Z04
F25:Z05	14025605	140P605	RF Expander	25	Z05	F25:Z05
F25:Z06	14025606	140P606	RF Expander	25	Z06	F25:Z06
F25:Z07	14025607	140P607	RF Expander	25	Z07	F25:Z07
F25:Z08	14025608	140P608	RF Expander	25	Z08	F25:Z08
F25:Z09	14025609	140P609	RF Expander	25	Z09	F25:Z09
F25:Z10	14025610	140P610	RF Expander	25	Z10	F25:Z10
F25:Z11	14025611	140P611	RF Expander	25	Z11	F25:Z11
F25:Z12	14025612	140P612	RF Expander	25	Z12	F25:Z12
F25:Z13	14025613	140P613	RF Expander	25	Z13	F25:Z13
F25:Z14	14025614	140P614	RF Expander	25	Z14	F25:Z14
F25:Z15	14025615	140P615	RF Expander	25	Z15	F25:Z15
F25:Z16	14025616	140P616	RF Expander	25	Z16	F25:Z16
F25:Z17	14025617	140P617	RF Expander	25	Z17	F25:Z17
F25:Z18	14025618	140P618	RF Expander	25	Z18	F25:Z18
F25:Z19	14025619	140P619	RF Expander	25	Z19	F25:Z19
F25:Z20	14025620	140P620	RF Expander	25	Z20	F25:Z20
F25:Z21	14025621	140P621	RF Expander	25	Z21	F25:Z21
F25:Z22	14025622	140P622	RF Expander	25	Z22	F25:Z22
F25:Z23	14025623	140P623	RF Expander	25	Z23	F25:Z23
F25:Z24	14025624	140P624	RF Expander	25	Z24	F25:Z24

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F25:Z25	14025625	140P625	RF Expander	25	Z25	F25:Z25
F25:Z26	14025626	140P626	RF Expander	25	Z26	F25:Z26
F25:Z27	14025627	140P627	RF Expander	25	Z27	F25:Z27
F25:Z28	14025628	140P628	RF Expander	25	Z28	F25:Z28
F25:Z29	14025629	140P629	RF Expander	25	Z29	F25:Z29
F25:Z30	14025630	140P630	RF Expander	25	Z30	F25:Z30
F25:Z31	14025631	140P631	RF Expander	25	Z31	F25:Z31
F25:Z32	14025632	140P632	RF Expander	25	Z32	F25:Z32
F25:S01	38425601	384P601	RF Expander	25	Transmitter Low Battery	F25 Transmitter Low Battery
F25:S02	38125602	381P602	RF Expander	25	Transmitter Poll Fail	F25 Transmitter Poll Fail
F25:S03	34425603	344P603	RF Expander	25	Transmitter Jam	F25 Transmitter Jam
F25:S04	14525604	145P604	RF Expander	25	Cabinet Tamper	F25 Cabinet Tamper
F25:S05	30125605	301P605	RF Expander	25	AC fail	F25 AC fail
F25:S06	30225606	302P606	RF Expander	25	Low Battery	F25 Low Battery
F25:S07	30025607	300P607	RF Expander	25	LAN Fuse	F25 LAN Fuse
F25:S08	30025608	300P608	RF Expander	25	Detector Fuse	F25 Detector Fuse
F25:S09	30025609	300P609	RF Expander	25	Low Volts	F25 Low Volts
F25:S10	30025610	300P610	RF Expander	25	PS Fail	F25 PS Fail
F25:S11	30925611	309P611	RF Expander	25	Battery Test	F25 Battery Test
F25:S12	14325612	143P612	RF Expander	25	LAN Comms	F25 LAN Comms
F25:S13	15025613	150P613	RF Expander	25	Spare1	F25 Spare1
F25:S14	15025614	150P614	RF Expander	25	Spare2	F25 Spare2
F26:Z01	14026601	140Q601	RF Expander	26	Z01	F26:Z01
F26:Z02	14026602	140Q602	RF Expander	26	Z02	F26:Z02
F26:Z03	14026603	140Q603	RF Expander	26	Z03	F26:Z03
F26:Z04	14026604	140Q604	RF Expander	26	Z04	F26:Z04
F26:Z05	14026605	140Q605	RF Expander	26	Z05	F26:Z05
F26:Z06	14026606	140Q606	RF Expander	26	Z06	F26:Z06
F26:Z07	14026607	140Q607	RF Expander	26	Z07	F26:Z07
F26:Z08	14026608	140Q608	RF Expander	26	Z08	F26:Z08
F26:Z09	14026609	140Q609	RF Expander	26	Z09	F26:Z09
F26:Z10	14026610	140Q610	RF Expander	26	Z10	F26:Z10
F26:Z11	14026611	140Q611	RF Expander	26	Z11	F26:Z11
F26:Z12	14026612	140Q612	RF Expander	26	Z12	F26:Z12
F26:Z13	14026613	140Q613	RF Expander	26	Z13	F26:Z13
F26:Z14	14026614	140Q614	RF Expander	26	Z14	F26:Z14
F26:Z15	14026615	140Q615	RF Expander	26	Z15	F26:Z15
F26:Z16	14026616	140Q616	RF Expander	26	Z16	F26:Z16
F26:Z17	14026617	140Q617	RF Expander	26	Z17	F26:Z17
F26:Z18	14026618	140Q618	RF Expander	26	Z18	F26:Z18
F26:Z19	14026619	140Q619	RF Expander	26	Z19	F26:Z19
F26:Z20	14026620	140Q620	RF Expander	26	Z20	F26:Z20
F26:Z21	14026621	140Q621	RF Expander	26	Z21	F26:Z21
F26:Z22	14026622	140Q622	RF Expander	26	Z22	F26:Z22
F26:Z23	14026623	140Q623	RF Expander	26	Z23	F26:Z23
F26:Z24	14026624	140Q624	RF Expander	26	Z24	F26:Z24
F26:Z25	14026625	140Q625	RF Expander	26	Z25	F26:Z25
F26:Z26	14026626	140Q626	RF Expander	26	Z26	F26:Z26
F26:Z27	14026627	140Q627	RF Expander	26	Z27	F26:Z27
F26:Z28	14026628	140Q628	RF Expander	26	Z28	F26:Z28
F26:Z29	14026629	140Q629	RF Expander	26	Z29	F26:Z29
F26:Z30	14026630	140Q630	RF Expander	26	Z30	F26:Z30
F26:Z31	14026631	140Q631	RF Expander	26	Z31	F26:Z31
F26:Z32	14026632	140Q632	RF Expander	26	Z32	F26:Z32
F26:S01	38426601	384Q601	RF Expander	26	Transmitter Low Battery	F26 Transmitter Low Battery
F26:S02	38126602	381Q602	RF Expander	26	Transmitter Poll Fail	F26 Transmitter Poll Fail
F26:S03	34426603	344Q603	RF Expander	26	Transmitter Jam	F26 Transmitter Jam

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F26:S04	14526604	145Q604	RF Expander	26	Cabinet Tamper	F26 Cabinet Tamper
F26:S05	30126605	301Q605	RF Expander	26	AC fail	F26 AC fail
F26:S06	30226606	302Q606	RF Expander	26	Low Battery	F26 Low Battery
F26:S07	30026607	300Q607	RF Expander	26	LAN Fuse	F26 LAN Fuse
F26:S08	30026608	300Q608	RF Expander	26	Detector Fuse	F26 Detector Fuse
F26:S09	30026609	300Q609	RF Expander	26	Low Volts	F26 Low Volts
F26:S10	30026610	300Q610	RF Expander	26	PS Fail	F26 PS Fail
F26:S11	30926611	309Q611	RF Expander	26	Battery Test	F26 Battery Test
F26:S12	14326612	143Q612	RF Expander	26	LAN Comms	F26 LAN Comms
F26:S13	15026613	150Q613	RF Expander	26	Spare1	F26 Spare1
F26:S14	15026614	150Q614	RF Expander	26	Spare2	F26 Spare2
F27:Z01	14027601	140R601	RF Expander	27	Z01	F27:Z01
F27:Z02	14027602	140R602	RF Expander	27	Z02	F27:Z02
F27:Z03	14027603	140R603	RF Expander	27	Z03	F27:Z03
F27:Z04	14027604	140R604	RF Expander	27	Z04	F27:Z04
F27:Z05	14027605	140R605	RF Expander	27	Z05	F27:Z05
F27:Z06	14027606	140R606	RF Expander	27	Z06	F27:Z06
F27:Z07	14027607	140R607	RF Expander	27	Z07	F27:Z07
F27:Z08	14027608	140R608	RF Expander	27	Z08	F27:Z08
F27:Z09	14027609	140R609	RF Expander	27	Z09	F27:Z09
F27:Z10	14027610	140R610	RF Expander	27	Z10	F27:Z10
F27:Z11	14027611	140R611	RF Expander	27	Z11	F27:Z11
F27:Z12	14027612	140R612	RF Expander	27	Z12	F27:Z12
F27:Z13	14027613	140R613	RF Expander	27	Z13	F27:Z13
F27:Z14	14027614	140R614	RF Expander	27	Z14	F27:Z14
F27:Z15	14027615	140R615	RF Expander	27	Z15	F27:Z15
F27:Z16	14027616	140R616	RF Expander	27	Z16	F27:Z16
F27:Z17	14027617	140R617	RF Expander	27	Z17	F27:Z17
F27:Z18	14027618	140R618	RF Expander	27	Z18	F27:Z18
F27:Z19	14027619	140R619	RF Expander	27	Z19	F27:Z19
F27:Z20	14027620	140R620	RF Expander	27	Z20	F27:Z20
F27:Z21	14027621	140R621	RF Expander	27	Z21	F27:Z21
F27:Z22	14027622	140R622	RF Expander	27	Z22	F27:Z22
F27:Z23	14027623	140R623	RF Expander	27	Z23	F27:Z23
F27:Z24	14027624	140R624	RF Expander	27	Z24	F27:Z24
F27:Z25	14027625	140R625	RF Expander	27	Z25	F27:Z25
F27:Z26	14027626	140R626	RF Expander	27	Z26	F27:Z26
F27:Z27	14027627	140R627	RF Expander	27	Z27	F27:Z27
F27:Z28	14027628	140R628	RF Expander	27	Z28	F27:Z28
F27:Z29	14027629	140R629	RF Expander	27	Z29	F27:Z29
F27:Z30	14027630	140R630	RF Expander	27	Z30	F27:Z30
F27:Z31	14027631	140R631	RF Expander	27	Z31	F27:Z31
F27:Z32	14027632	140R632	RF Expander	27	Z32	F27:Z32
F27:S01	38427601	384R601	RF Expander	27	Transmitter Low Battery	F27 Transmitter Low Battery
F27:S02	38127602	381R602	RF Expander	27	Transmitter Poll Fail	F27 Transmitter Poll Fail
F27:S03	34427603	344R603	RF Expander	27	Transmitter Jam	F27 Transmitter Jam
F27:S04	14527604	145R604	RF Expander	27	Cabinet Tamper	F27 Cabinet Tamper
F27:S05	30127605	301R605	RF Expander	27	AC fail	F27 AC fail
F27:S06	30227606	302R606	RF Expander	27	Low Battery	F27 Low Battery
F27:S07	30027607	300R607	RF Expander	27	LAN Fuse	F27 LAN Fuse
F27:S08	30027608	300R608	RF Expander	27	Detector Fuse	F27 Detector Fuse
F27:S09	30027609	300R609	RF Expander	27	Low Volts	F27 Low Volts
F27:S10	30027610	300R610	RF Expander	27	PS Fail	F27 PS Fail
F27:S11	30927611	309R611	RF Expander	27	Battery Test	F27 Battery Test
F27:S12	14327612	143R612	RF Expander	27	LAN Comms	F27 LAN Comms
F27:S13	15027613	150R613	RF Expander	27	Spare1	F27 Spare1
F27:S14	15027614	150R614	RF Expander	27	Spare2	F27 Spare2

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F28:Z01	14028601	140S601	RF Expander	28	Z01	F28:Z01
F28:Z02	14028602	140S602	RF Expander	28	Z02	F28:Z02
F28:Z03	14028603	140S603	RF Expander	28	Z03	F28:Z03
F28:Z04	14028604	140S604	RF Expander	28	Z04	F28:Z04
F28:Z05	14028605	140S605	RF Expander	28	Z05	F28:Z05
F28:Z06	14028606	140S606	RF Expander	28	Z06	F28:Z06
F28:Z07	14028607	140S607	RF Expander	28	Z07	F28:Z07
F28:Z08	14028608	140S608	RF Expander	28	Z08	F28:Z08
F28:Z09	14028609	140S609	RF Expander	28	Z09	F28:Z09
F28:Z10	14028610	140S610	RF Expander	28	Z10	F28:Z10
F28:Z11	14028611	140S611	RF Expander	28	Z11	F28:Z11
F28:Z12	14028612	140S612	RF Expander	28	Z12	F28:Z12
F28:Z13	14028613	140S613	RF Expander	28	Z13	F28:Z13
F28:Z14	14028614	140S614	RF Expander	28	Z14	F28:Z14
F28:Z15	14028615	140S615	RF Expander	28	Z15	F28:Z15
F28:Z16	14028616	140S616	RF Expander	28	Z16	F28:Z16
F28:Z17	14028617	140S617	RF Expander	28	Z17	F28:Z17
F28:Z18	14028618	140S618	RF Expander	28	Z18	F28:Z18
F28:Z19	14028619	140S619	RF Expander	28	Z19	F28:Z19
F28:Z20	14028620	140S620	RF Expander	28	Z20	F28:Z20
F28:Z21	14028621	140S621	RF Expander	28	Z21	F28:Z21
F28:Z22	14028622	140S622	RF Expander	28	Z22	F28:Z22
F28:Z23	14028623	140S623	RF Expander	28	Z23	F28:Z23
F28:Z24	14028624	140S624	RF Expander	28	Z24	F28:Z24
F28:Z25	14028625	140S625	RF Expander	28	Z25	F28:Z25
F28:Z26	14028626	140S626	RF Expander	28	Z26	F28:Z26
F28:Z27	14028627	140S627	RF Expander	28	Z27	F28:Z27
F28:Z28	14028628	140S628	RF Expander	28	Z28	F28:Z28
F28:Z29	14028629	140S629	RF Expander	28	Z29	F28:Z29
F28:Z30	14028630	140S630	RF Expander	28	Z30	F28:Z30
F28:Z31	14028631	140S631	RF Expander	28	Z31	F28:Z31
F28:Z32	14028632	140S632	RF Expander	28	Z32	F28:Z32
F28:S01	38428601	384S601	RF Expander	28	Transmitter Low Battery	F28 Transmitter Low Battery
F28:S02	38128602	381S602	RF Expander	28	Transmitter Poll Fail	F28 Transmitter Poll Fail
F28:S03	34428603	344S603	RF Expander	28	Transmitter Jam	F28 Transmitter Jam
F28:S04	14528604	145S604	RF Expander	28	Cabinet Tamper	F28 Cabinet Tamper
F28:S05	30128605	301S605	RF Expander	28	AC fail	F28 AC fail
F28:S06	30228606	302S606	RF Expander	28	Low Battery	F28 Low Battery
F28:S07	30028607	300S607	RF Expander	28	LAN Fuse	F28 LAN Fuse
F28:S08	30028608	300S608	RF Expander	28	Detector Fuse	F28 Detector Fuse
F28:S09	30028609	300S609	RF Expander	28	Low Volts	F28 Low Volts
F28:S10	30028610	300S610	RF Expander	28	PS Fail	F28 PS Fail
F28:S11	30928611	309S611	RF Expander	28	Battery Test	F28 Battery Test
F28:S12	14328612	143S612	RF Expander	28	LAN Comms	F28 LAN Comms
F28:S13	15028613	150S613	RF Expander	28	Spare1	F28 Spare1
F28:S14	15028614	150S614	RF Expander	28	Spare2	F28 Spare2
F29:Z01	14029601	140T601	RF Expander	29	Z01	F29:Z01
F29:Z02	14029602	140T602	RF Expander	29	Z02	F29:Z02
F29:Z03	14029603	140T603	RF Expander	29	Z03	F29:Z03
F29:Z04	14029604	140T604	RF Expander	29	Z04	F29:Z04
F29:Z05	14029605	140T605	RF Expander	29	Z05	F29:Z05
F29:Z06	14029606	140T606	RF Expander	29	Z06	F29:Z06
F29:Z07	14029607	140T607	RF Expander	29	Z07	F29:Z07
F29:Z08	14029608	140T608	RF Expander	29	Z08	F29:Z08
F29:Z09	14029609	140T609	RF Expander	29	Z09	F29:Z09
F29:Z10	14029610	140T610	RF Expander	29	Z10	F29:Z10
F29:Z11	14029611	140T611	RF Expander	29	Z11	F29:Z11

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F29:Z12	14029612	140T612	RF Expander	29	Z12	F29:Z12
F29:Z13	14029613	140T613	RF Expander	29	Z13	F29:Z13
F29:Z14	14029614	140T614	RF Expander	29	Z14	F29:Z14
F29:Z15	14029615	140T615	RF Expander	29	Z15	F29:Z15
F29:Z16	14029616	140T616	RF Expander	29	Z16	F29:Z16
F29:Z17	14029617	140T617	RF Expander	29	Z17	F29:Z17
F29:Z18	14029618	140T618	RF Expander	29	Z18	F29:Z18
F29:Z19	14029619	140T619	RF Expander	29	Z19	F29:Z19
F29:Z20	14029620	140T620	RF Expander	29	Z20	F29:Z20
F29:Z21	14029621	140T621	RF Expander	29	Z21	F29:Z21
F29:Z22	14029622	140T622	RF Expander	29	Z22	F29:Z22
F29:Z23	14029623	140T623	RF Expander	29	Z23	F29:Z23
F29:Z24	14029624	140T624	RF Expander	29	Z24	F29:Z24
F29:Z25	14029625	140T625	RF Expander	29	Z25	F29:Z25
F29:Z26	14029626	140T626	RF Expander	29	Z26	F29:Z26
F29:Z27	14029627	140T627	RF Expander	29	Z27	F29:Z27
F29:Z28	14029628	140T628	RF Expander	29	Z28	F29:Z28
F29:Z29	14029629	140T629	RF Expander	29	Z29	F29:Z29
F29:Z30	14029630	140T630	RF Expander	29	Z30	F29:Z30
F29:Z31	14029631	140T631	RF Expander	29	Z31	F29:Z31
F29:Z32	14029632	140T632	RF Expander	29	Z32	F29:Z32
F29:S01	38429601	384T601	RF Expander	29	Transmitter Low Battery	F29 Transmitter Low Battery
F29:S02	38129602	381T602	RF Expander	29	Transmitter Poll Fail	F29 Transmitter Poll Fail
F29:S03	34429603	344T603	RF Expander	29	Transmitter Jam	F29 Transmitter Jam
F29:S04	14529604	145T604	RF Expander	29	Cabinet Tamper	F29 Cabinet Tamper
F29:S05	30129605	301T605	RF Expander	29	AC fail	F29 AC fail
F29:S06	30229606	302T606	RF Expander	29	Low Battery	F29 Low Battery
F29:S07	30029607	300T607	RF Expander	29	LAN Fuse	F29 LAN Fuse
F29:S08	30029608	300T608	RF Expander	29	Detector Fuse	F29 Detector Fuse
F29:S09	30029609	300T609	RF Expander	29	Low Volts	F29 Low Volts
F29:S10	30029610	300T610	RF Expander	29	PS Fail	F29 PS Fail
F29:S11	30929611	309T611	RF Expander	29	Battery Test	F29 Battery Test
F29:S12	14329612	143T612	RF Expander	29	LAN Comms	F29 LAN Comms
F29:S13	15029613	150T613	RF Expander	29	Spare1	F29 Spare1
F29:S14	15029614	150T614	RF Expander	29	Spare2	F29 Spare2
F30:Z01	14030601	140U601	RF Expander	30	Z01	F30:Z01
F30:Z02	14030602	140U602	RF Expander	30	Z02	F30:Z02
F30:Z03	14030603	140U603	RF Expander	30	Z03	F30:Z03
F30:Z04	14030604	140U604	RF Expander	30	Z04	F30:Z04
F30:Z05	14030605	140U605	RF Expander	30	Z05	F30:Z05
F30:Z06	14030606	140U606	RF Expander	30	Z06	F30:Z06
F30:Z07	14030607	140U607	RF Expander	30	Z07	F30:Z07
F30:Z08	14030608	140U608	RF Expander	30	Z08	F30:Z08
F30:Z09	14030609	140U609	RF Expander	30	Z09	F30:Z09
F30:Z10	14030610	140U610	RF Expander	30	Z10	F30:Z10
F30:Z11	14030611	140U611	RF Expander	30	Z11	F30:Z11
F30:Z12	14030612	140U612	RF Expander	30	Z12	F30:Z12
F30:Z13	14030613	140U613	RF Expander	30	Z13	F30:Z13
F30:Z14	14030614	140U614	RF Expander	30	Z14	F30:Z14
F30:Z15	14030615	140U615	RF Expander	30	Z15	F30:Z15
F30:Z16	14030616	140U616	RF Expander	30	Z16	F30:Z16
F30:Z17	14030617	140U617	RF Expander	30	Z17	F30:Z17
F30:Z18	14030618	140U618	RF Expander	30	Z18	F30:Z18
F30:Z19	14030619	140U619	RF Expander	30	Z19	F30:Z19
F30:Z20	14030620	140U620	RF Expander	30	Z20	F30:Z20
F30:Z21	14030621	140U621	RF Expander	30	Z21	F30:Z21
F30:Z22	14030622	140U622	RF Expander	30	Z22	F30:Z22

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F30:Z23	14030623	140U623	RF Expander	30	Z23	F30:Z23
F30:Z24	14030624	140U624	RF Expander	30	Z24	F30:Z24
F30:Z25	14030625	140U625	RF Expander	30	Z25	F30:Z25
F30:Z26	14030626	140U626	RF Expander	30	Z26	F30:Z26
F30:Z27	14030627	140U627	RF Expander	30	Z27	F30:Z27
F30:Z28	14030628	140U628	RF Expander	30	Z28	F30:Z28
F30:Z29	14030629	140U629	RF Expander	30	Z29	F30:Z29
F30:Z30	14030630	140U630	RF Expander	30	Z30	F30:Z30
F30:Z31	14030631	140U631	RF Expander	30	Z31	F30:Z31
F30:Z32	14030632	140U632	RF Expander	30	Z32	F30:Z32
F30:S01	38430601	384U601	RF Expander	30	Transmitter Low Battery	F30 Transmitter Low Battery
F30:S02	38130602	381U602	RF Expander	30	Transmitter Poll Fail	F30 Transmitter Poll Fail
F30:S03	34430603	344U603	RF Expander	30	Transmitter Jam	F30 Transmitter Jam
F30:S04	14530604	145U604	RF Expander	30	Cabinet Tamper	F30 Cabinet Tamper
F30:S05	30130605	301U605	RF Expander	30	AC fail	F30 AC fail
F30:S06	30230606	302U606	RF Expander	30	Low Battery	F30 Low Battery
F30:S07	30030607	300U607	RF Expander	30	LAN Fuse	F30 LAN Fuse
F30:S08	30030608	300U608	RF Expander	30	Detector Fuse	F30 Detector Fuse
F30:S09	30030609	300U609	RF Expander	30	Low Volts	F30 Low Volts
F30:S10	30030610	300U610	RF Expander	30	PS Fail	F30 PS Fail
F30:S11	30930611	309U611	RF Expander	30	Battery Test	F30 Battery Test
F30:S12	14330612	143U612	RF Expander	30	LAN Comms	F30 LAN Comms
F30:S13	15030613	150U613	RF Expander	30	Spare1	F30 Spare1
F30:S14	15030614	150U614	RF Expander	30	Spare2	F30 Spare2
F31:Z01	14031601	140V601	RF Expander	31	Z01	F31:Z01
F31:Z02	14031602	140V602	RF Expander	31	Z02	F31:Z02
F31:Z03	14031603	140V603	RF Expander	31	Z03	F31:Z03
F31:Z04	14031604	140V604	RF Expander	31	Z04	F31:Z04
F31:Z05	14031605	140V605	RF Expander	31	Z05	F31:Z05
F31:Z06	14031606	140V606	RF Expander	31	Z06	F31:Z06
F31:Z07	14031607	140V607	RF Expander	31	Z07	F31:Z07
F31:Z08	14031608	140V608	RF Expander	31	Z08	F31:Z08
F31:Z09	14031609	140V609	RF Expander	31	Z09	F31:Z09
F31:Z10	14031610	140V610	RF Expander	31	Z10	F31:Z10
F31:Z11	14031611	140V611	RF Expander	31	Z11	F31:Z11
F31:Z12	14031612	140V612	RF Expander	31	Z12	F31:Z12
F31:Z13	14031613	140V613	RF Expander	31	Z13	F31:Z13
F31:Z14	14031614	140V614	RF Expander	31	Z14	F31:Z14
F31:Z15	14031615	140V615	RF Expander	31	Z15	F31:Z15
F31:Z16	14031616	140V616	RF Expander	31	Z16	F31:Z16
F31:Z17	14031617	140V617	RF Expander	31	Z17	F31:Z17
F31:Z18	14031618	140V618	RF Expander	31	Z18	F31:Z18
F31:Z19	14031619	140V619	RF Expander	31	Z19	F31:Z19
F31:Z20	14031620	140V620	RF Expander	31	Z20	F31:Z20
F31:Z21	14031621	140V621	RF Expander	31	Z21	F31:Z21
F31:Z22	14031622	140V622	RF Expander	31	Z22	F31:Z22
F31:Z23	14031623	140V623	RF Expander	31	Z23	F31:Z23
F31:Z24	14031624	140V624	RF Expander	31	Z24	F31:Z24
F31:Z25	14031625	140V625	RF Expander	31	Z25	F31:Z25
F31:Z26	14031626	140V626	RF Expander	31	Z26	F31:Z26
F31:Z27	14031627	140V627	RF Expander	31	Z27	F31:Z27
F31:Z28	14031628	140V628	RF Expander	31	Z28	F31:Z28
F31:Z29	14031629	140V629	RF Expander	31	Z29	F31:Z29
F31:Z30	14031630	140V630	RF Expander	31	Z30	F31:Z30
F31:Z31	14031631	140V631	RF Expander	31	Z31	F31:Z31
F31:Z32	14031632	140V632	RF Expander	31	Z32	F31:Z32
F31:S01	38431601	384V601	RF Expander	31	Transmitter Low Battery	F31 Transmitter Low Battery

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F31:S02	38131602	381V602	RF Expander	31	Transmitter Poll Fail	F31 Transmitter Poll Fail
F31:S03	34431603	344V603	RF Expander	31	Transmitter Jam	F31 Transmitter Jam
F31:S04	14531604	145V604	RF Expander	31	Cabinet Tamper	F31 Cabinet Tamper
F31:S05	30131605	301V605	RF Expander	31	AC fail	F31 AC fail
F31:S06	30231606	302V606	RF Expander	31	Low Battery	F31 Low Battery
F31:S07	30031607	300V607	RF Expander	31	LAN Fuse	F31 LAN Fuse
F31:S08	30031608	300V608	RF Expander	31	Detector Fuse	F31 Detector Fuse
F31:S09	30031609	300V609	RF Expander	31	Low Volts	F31 Low Volts
F31:S10	30031610	300V610	RF Expander	31	PS Fail	F31 PS Fail
F31:S11	30931611	309V611	RF Expander	31	Battery Test	F31 Battery Test
F31:S12	14331612	143V612	RF Expander	31	LAN Comms	F31 LAN Comms
F31:S13	15031613	150V613	RF Expander	31	Spare1	F31 Spare1
F31:S14	15031614	150V614	RF Expander	31	Spare2	F31 Spare2
F32:Z01	14032601	140W601	RF Expander	32	Z01	F32:Z01
F32:Z02	14032602	140W602	RF Expander	32	Z02	F32:Z02
F32:Z03	14032603	140W603	RF Expander	32	Z03	F32:Z03
F32:Z04	14032604	140W604	RF Expander	32	Z04	F32:Z04
F32:Z05	14032605	140W605	RF Expander	32	Z05	F32:Z05
F32:Z06	14032606	140W606	RF Expander	32	Z06	F32:Z06
F32:Z07	14032607	140W607	RF Expander	32	Z07	F32:Z07
F32:Z08	14032608	140W608	RF Expander	32	Z08	F32:Z08
F32:Z09	14032609	140W609	RF Expander	32	Z09	F32:Z09
F32:Z10	14032610	140W610	RF Expander	32	Z10	F32:Z10
F32:Z11	14032611	140W611	RF Expander	32	Z11	F32:Z11
F32:Z12	14032612	140W612	RF Expander	32	Z12	F32:Z12
F32:Z13	14032613	140W613	RF Expander	32	Z13	F32:Z13
F32:Z14	14032614	140W614	RF Expander	32	Z14	F32:Z14
F32:Z15	14032615	140W615	RF Expander	32	Z15	F32:Z15
F32:Z16	14032616	140W616	RF Expander	32	Z16	F32:Z16
F32:Z17	14032617	140W617	RF Expander	32	Z17	F32:Z17
F32:Z18	14032618	140W618	RF Expander	32	Z18	F32:Z18
F32:Z19	14032619	140W619	RF Expander	32	Z19	F32:Z19
F32:Z20	14032620	140W620	RF Expander	32	Z20	F32:Z20
F32:Z21	14032621	140W621	RF Expander	32	Z21	F32:Z21
F32:Z22	14032622	140W622	RF Expander	32	Z22	F32:Z22
F32:Z23	14032623	140W623	RF Expander	32	Z23	F32:Z23
F32:Z24	14032624	140W624	RF Expander	32	Z24	F32:Z24
F32:Z25	14032625	140W625	RF Expander	32	Z25	F32:Z25
F32:Z26	14032626	140W626	RF Expander	32	Z26	F32:Z26
F32:Z27	14032627	140W627	RF Expander	32	Z27	F32:Z27
F32:Z28	14032628	140W628	RF Expander	32	Z28	F32:Z28
F32:Z29	14032629	140W629	RF Expander	32	Z29	F32:Z29
F32:Z30	14032630	140W630	RF Expander	32	Z30	F32:Z30
F32:Z31	14032631	140W631	RF Expander	32	Z31	F32:Z31
F32:Z32	14032632	140W632	RF Expander	32	Z32	F32:Z32
F32:S01	38432601	384W601	RF Expander	32	Transmitter Low Battery	F32 Transmitter Low Battery
F32:S02	38132602	381W602	RF Expander	32	Transmitter Poll Fail	F32 Transmitter Poll Fail
F32:S03	34432603	344W603	RF Expander	32	Transmitter Jam	F32 Transmitter Jam
F32:S04	14532604	145W604	RF Expander	32	Cabinet Tamper	F32 Cabinet Tamper
F32:S05	30132605	301W605	RF Expander	32	AC fail	F32 AC fail
F32:S06	30232606	302W606	RF Expander	32	Low Battery	F32 Low Battery
F32:S07	30032607	300W607	RF Expander	32	LAN Fuse	F32 LAN Fuse
F32:S08	30032608	300W608	RF Expander	32	Detector Fuse	F32 Detector Fuse
F32:S09	30032609	300W609	RF Expander	32	Low Volts	F32 Low Volts
F32:S10	30032610	300W610	RF Expander	32	PS Fail	F32 PS Fail
F32:S11	30932611	309W611	RF Expander	32	Battery Test	F32 Battery Test
F32:S12	14332612	143W612	RF Expander	32	LAN Comms	F32 LAN Comms

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F32:S13	15032613	150W613	RF Expander	32	Spare1	F32 Spare1
F32:S14	15032614	150W614	RF Expander	32	Spare2	F32 Spare2
F33:Z01	14033601	140X601	RF Expander	33	Z01	F33:Z01
F33:Z02	14033602	140X602	RF Expander	33	Z02	F33:Z02
F33:Z03	14033603	140X603	RF Expander	33	Z03	F33:Z03
F33:Z04	14033604	140X604	RF Expander	33	Z04	F33:Z04
F33:Z05	14033605	140X605	RF Expander	33	Z05	F33:Z05
F33:Z06	14033606	140X606	RF Expander	33	Z06	F33:Z06
F33:Z07	14033607	140X607	RF Expander	33	Z07	F33:Z07
F33:Z08	14033608	140X608	RF Expander	33	Z08	F33:Z08
F33:Z09	14033609	140X609	RF Expander	33	Z09	F33:Z09
F33:Z10	14033610	140X610	RF Expander	33	Z10	F33:Z10
F33:Z11	14033611	140X611	RF Expander	33	Z11	F33:Z11
F33:Z12	14033612	140X612	RF Expander	33	Z12	F33:Z12
F33:Z13	14033613	140X613	RF Expander	33	Z13	F33:Z13
F33:Z14	14033614	140X614	RF Expander	33	Z14	F33:Z14
F33:Z15	14033615	140X615	RF Expander	33	Z15	F33:Z15
F33:Z16	14033616	140X616	RF Expander	33	Z16	F33:Z16
F33:Z17	14033617	140X617	RF Expander	33	Z17	F33:Z17
F33:Z18	14033618	140X618	RF Expander	33	Z18	F33:Z18
F33:Z19	14033619	140X619	RF Expander	33	Z19	F33:Z19
F33:Z20	14033620	140X620	RF Expander	33	Z20	F33:Z20
F33:Z21	14033621	140X621	RF Expander	33	Z21	F33:Z21
F33:Z22	14033622	140X622	RF Expander	33	Z22	F33:Z22
F33:Z23	14033623	140X623	RF Expander	33	Z23	F33:Z23
F33:Z24	14033624	140X624	RF Expander	33	Z24	F33:Z24
F33:Z25	14033625	140X625	RF Expander	33	Z25	F33:Z25
F33:Z26	14033626	140X626	RF Expander	33	Z26	F33:Z26
F33:Z27	14033627	140X627	RF Expander	33	Z27	F33:Z27
F33:Z28	14033628	140X628	RF Expander	33	Z28	F33:Z28
F33:Z29	14033629	140X629	RF Expander	33	Z29	F33:Z29
F33:Z30	14033630	140X630	RF Expander	33	Z30	F33:Z30
F33:Z31	14033631	140X631	RF Expander	33	Z31	F33:Z31
F33:Z32	14033632	140X632	RF Expander	33	Z32	F33:Z32
F33:S01	38433601	384X601	RF Expander	33	Transmitter Low Battery	F33 Transmitter Low Battery
F33:S02	38133602	381X602	RF Expander	33	Transmitter Poll Fail	F33 Transmitter Poll Fail
F33:S03	34433603	344X603	RF Expander	33	Transmitter Jam	F33 Transmitter Jam
F33:S04	14533604	145X604	RF Expander	33	Cabinet Tamper	F33 Cabinet Tamper
F33:S05	30133605	301X605	RF Expander	33	AC fail	F33 AC fail
F33:S06	30233606	302X606	RF Expander	33	Low Battery	F33 Low Battery
F33:S07	30033607	300X607	RF Expander	33	LAN Fuse	F33 LAN Fuse
F33:S08	30033608	300X608	RF Expander	33	Detector Fuse	F33 Detector Fuse
F33:S09	30033609	300X609	RF Expander	33	Low Volts	F33 Low Volts
F33:S10	30033610	300X610	RF Expander	33	PS Fail	F33 PS Fail
F33:S11	30933611	309X611	RF Expander	33	Battery Test	F33 Battery Test
F33:S12	14333612	143X612	RF Expander	33	LAN Comms	F33 LAN Comms
F33:S13	15033613	150X613	RF Expander	33	Spare1	F33 Spare1
F33:S14	15033614	150X614	RF Expander	33	Spare2	F33 Spare2
F34:Z01	14034601	140Y601	RF Expander	34	Z01	F34:Z01
F34:Z02	14034602	140Y602	RF Expander	34	Z02	F34:Z02
F34:Z03	14034603	140Y603	RF Expander	34	Z03	F34:Z03
F34:Z04	14034604	140Y604	RF Expander	34	Z04	F34:Z04
F34:Z05	14034605	140Y605	RF Expander	34	Z05	F34:Z05
F34:Z06	14034606	140Y606	RF Expander	34	Z06	F34:Z06
F34:Z07	14034607	140Y607	RF Expander	34	Z07	F34:Z07
F34:Z08	14034608	140Y608	RF Expander	34	Z08	F34:Z08
F34:Z09	14034609	140Y609	RF Expander	34	Z09	F34:Z09

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F34:Z10	14034610	140Y610	RF Expander	34	Z10	F34:Z10
F34:Z11	14034611	140Y611	RF Expander	34	Z11	F34:Z11
F34:Z12	14034612	140Y612	RF Expander	34	Z12	F34:Z12
F34:Z13	14034613	140Y613	RF Expander	34	Z13	F34:Z13
F34:Z14	14034614	140Y614	RF Expander	34	Z14	F34:Z14
F34:Z15	14034615	140Y615	RF Expander	34	Z15	F34:Z15
F34:Z16	14034616	140Y616	RF Expander	34	Z16	F34:Z16
F34:Z17	14034617	140Y617	RF Expander	34	Z17	F34:Z17
F34:Z18	14034618	140Y618	RF Expander	34	Z18	F34:Z18
F34:Z19	14034619	140Y619	RF Expander	34	Z19	F34:Z19
F34:Z20	14034620	140Y620	RF Expander	34	Z20	F34:Z20
F34:Z21	14034621	140Y621	RF Expander	34	Z21	F34:Z21
F34:Z22	14034622	140Y622	RF Expander	34	Z22	F34:Z22
F34:Z23	14034623	140Y623	RF Expander	34	Z23	F34:Z23
F34:Z24	14034624	140Y624	RF Expander	34	Z24	F34:Z24
F34:Z25	14034625	140Y625	RF Expander	34	Z25	F34:Z25
F34:Z26	14034626	140Y626	RF Expander	34	Z26	F34:Z26
F34:Z27	14034627	140Y627	RF Expander	34	Z27	F34:Z27
F34:Z28	14034628	140Y628	RF Expander	34	Z28	F34:Z28
F34:Z29	14034629	140Y629	RF Expander	34	Z29	F34:Z29
F34:Z30	14034630	140Y630	RF Expander	34	Z30	F34:Z30
F34:Z31	14034631	140Y631	RF Expander	34	Z31	F34:Z31
F34:Z32	14034632	140Y632	RF Expander	34	Z32	F34:Z32
F34:S01	38434601	384Y601	RF Expander	34	Transmitter Low Battery	F34 Transmitter Low Battery
F34:S02	38134602	381Y602	RF Expander	34	Transmitter Poll Fail	F34 Transmitter Poll Fail
F34:S03	34434603	344Y603	RF Expander	34	Transmitter Jam	F34 Transmitter Jam
F34:S04	14534604	145Y604	RF Expander	34	Cabinet Tamper	F34 Cabinet Tamper
F34:S05	30134605	301Y605	RF Expander	34	AC fail	F34 AC fail
F34:S06	30234606	302Y606	RF Expander	34	Low Battery	F34 Low Battery
F34:S07	30034607	300Y607	RF Expander	34	LAN Fuse	F34 LAN Fuse
F34:S08	30034608	300Y608	RF Expander	34	Detector Fuse	F34 Detector Fuse
F34:S09	30034609	300Y609	RF Expander	34	Low Volts	F34 Low Volts
F34:S10	30034610	300Y610	RF Expander	34	PS Fail	F34 PS Fail
F34:S11	30934611	309Y611	RF Expander	34	Battery Test	F34 Battery Test
F34:S12	14334612	143Y612	RF Expander	34	LAN Comms	F34 LAN Comms
F34:S13	15034613	150Y613	RF Expander	34	Spare1	F34 Spare1
F34:S14	15034614	150Y614	RF Expander	34	Spare2	F34 Spare2
F35-F99:Z01	14035601	140Z601	RF Expander	35	Z01	F35-F99:Z01
F35-F99:Z02	14035602	140Z602	RF Expander	35	Z02	F35-F99:Z02
F35-F99:Z03	14035603	140Z603	RF Expander	35	Z03	F35-F99:Z03
F35-F99:Z04	14035604	140Z604	RF Expander	35	Z04	F35-F99:Z04
F35-F99:Z05	14035605	140Z605	RF Expander	35	Z05	F35-F99:Z05
F35-F99:Z06	14035606	140Z606	RF Expander	35	Z06	F35-F99:Z06
F35-F99:Z07	14035607	140Z607	RF Expander	35	Z07	F35-F99:Z07
F35-F99:Z08	14035608	140Z608	RF Expander	35	Z08	F35-F99:Z08
F35-F99:Z09	14035609	140Z609	RF Expander	35	Z09	F35-F99:Z09
F35-F99:Z10	14035610	140Z610	RF Expander	35	Z10	F35-F99:Z10
F35-F99:Z11	14035611	140Z611	RF Expander	35	Z11	F35-F99:Z11
F35-F99:Z12	14035612	140Z612	RF Expander	35	Z12	F35-F99:Z12
F35-F99:Z13	14035613	140Z613	RF Expander	35	Z13	F35-F99:Z13
F35-F99:Z14	14035614	140Z614	RF Expander	35	Z14	F35-F99:Z14
F35-F99:Z15	14035615	140Z615	RF Expander	35	Z15	F35-F99:Z15
F35-F99:Z16	14035616	140Z616	RF Expander	35	Z16	F35-F99:Z16
F35-F99:Z17	14035617	140Z617	RF Expander	35	Z17	F35-F99:Z17
F35-F99:Z18	14035618	140Z618	RF Expander	35	Z18	F35-F99:Z18
F35-F99:Z19	14035619	140Z619	RF Expander	35	Z19	F35-F99:Z19
F35-F99:Z20	14035620	140Z620	RF Expander	35	Z20	F35-F99:Z20

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
F35-F99:Z21	14035621	140Z621	RF Expander	35	Z21	F35-F99:Z21
F35-F99:Z22	14035622	140Z622	RF Expander	35	Z22	F35-F99:Z22
F35-F99:Z23	14035623	140Z623	RF Expander	35	Z23	F35-F99:Z23
F35-F99:Z24	14035624	140Z624	RF Expander	35	Z24	F35-F99:Z24
F35-F99:Z25	14035625	140Z625	RF Expander	35	Z25	F35-F99:Z25
F35-F99:Z26	14035626	140Z626	RF Expander	35	Z26	F35-F99:Z26
F35-F99:Z27	14035627	140Z627	RF Expander	35	Z27	F35-F99:Z27
F35-F99:Z28	14035628	140Z628	RF Expander	35	Z28	F35-F99:Z28
F35-F99:Z29	14035629	140Z629	RF Expander	35	Z29	F35-F99:Z29
F35-F99:Z30	14035630	140Z630	RF Expander	35	Z30	F35-F99:Z30
F35-F99:Z31	14035631	140Z631	RF Expander	35	Z31	F35-F99:Z31
F35-F99:Z32	14035632	140Z632	RF Expander	35	Z32	F35-F99:Z32
F35-F99:S01	38435601	384Z601	RF Expander	35	Transmitter Low Battery	F35-F99 Transmitter Low Battery
F35-F99:S02	38135602	381Z602	RF Expander	35	Transmitter Poll Fail	F35-F99 Transmitter Poll Fail
F35-F99:S03	34435603	344Z603	RF Expander	35	Transmitter Jam	F35-F99 Transmitter Jam
F35-F99:S04	14535604	145Z604	RF Expander	35	Cabinet Tamper	F35-F99 Cabinet Tamper
F35-F99:S05	30135605	301Z605	RF Expander	35	AC fail	F35-F99 AC fail
F35-F99:S06	30235606	302Z606	RF Expander	35	Low Battery	F35-F99 Low Battery
F35-F99:S07	30035607	300Z607	RF Expander	35	LAN Fuse	F35-F99 LAN Fuse
F35-F99:S08	30035608	300Z608	RF Expander	35	Detector Fuse	F35-F99 Detector Fuse
F35-F99:S09	30035609	300Z609	RF Expander	35	Low Volts	F35-F99 Low Volts
F35-F99:S10	30035610	300Z610	RF Expander	35	PS Fail	F35-F99 PS Fail
F35-F99:S11	30935611	309Z611	RF Expander	35	Battery Test	F35-F99 Battery Test
F35-F99:S12	14335612	143Z612	RF Expander	35	LAN Comms	F35-F99 LAN Comms
F35-F99:S13	15035613	150Z613	RF Expander	35	Spare1	F35-F99 Spare1
F35-F99:S14	15035614	150Z614	RF Expander	35	Spare2	F35-F99 Spare2
P01:Z01	14001701	1401701	Power Module	1	Z01	P01:Z01
P01:Z02	14001702	1401702	Power Module	1	Z02	P01:Z02
P01:S01	14501701	1451701	Power Module	1	Cabinet Tamper	P01 Cabinet Tamper
P01:S02	30101702	3011702	Power Module	1	AC fail	P01 AC fail
P01:S03	30201703	3021703	Power Module	1	Low Battery	P01 Low Battery
P01:S04	31101704	3111704	Power Module	1	Battery Fail	P01 Battery Fail
P01:S05	30001705	3001705	Power Module	1	Detector Fuse	P01 Detector Fuse
P01:S06	30001706	3001706	Power Module	1	LAN Fuse	P01 LAN Fuse
P01:S07	30001707	3001707	Power Module	1	Battery Fuse	P01 Battery Fuse
P01:S08	30001708	3001708	Power Module	1	Aux2 Fuse	P01 Aux2 Fuse
P01:S09	32001709	3201709	Power Module	1	Aux2 Tamper	P01 Aux2 Tamper
P01:S10	31201710	3121710	Power Module	1	Detector Over Current	P01 Detector Over Current
P01:S11	31201711	3121711	Power Module	1	Charger Over Current	P01 Charger Over Current
P01:S12	15001712	1501712	Power Module	1	Over Volts	P01 Over Volts
P01:S13	15001713	1501713	Power Module	1	Under Volts	P01 Under Volts
P01:S14	33001714	3301714	Power Module	1	Slave Fail	P01 Slave Fail
P01:S15	30901715	3091715	Power Module	1	Battery Test	P01 Battery Test
P01:S16	14301716	1431716	Power Module	1	LAN Comms	P01 LAN Comms
P02:Z01	14002701	1402701	Power Module	2	Z01	P02:Z01
P02:Z02	14002702	1402702	Power Module	2	Z02	P02:Z02
P02:S01	14502701	1452701	Power Module	2	Cabinet Tamper	P02 Cabinet Tamper
P02:S02	30102702	3012702	Power Module	2	AC fail	P02 AC fail
P02:S03	30202703	3022703	Power Module	2	Low Battery	P02 Low Battery
P02:S04	31102704	3112704	Power Module	2	Battery Fail	P02 Battery Fail
P02:S05	30002705	3002705	Power Module	2	Detector Fuse	P02 Detector Fuse
P02:S06	30002706	3002706	Power Module	2	LAN Fuse	P02 LAN Fuse
P02:S07	30002707	3002707	Power Module	2	Battery Fuse	P02 Battery Fuse
P02:S08	30002708	3002708	Power Module	2	Aux2 Fuse	P02 Aux2 Fuse
P02:S09	32002709	3202709	Power Module	2	Aux2 Tamper	P02 Aux2 Tamper
P02:S10	31202710	3122710	Power Module	2	Detector Over Current	P02 Detector Over Current
P02:S11	31202711	3122711	Power Module	2	Charger Over Current	P02 Charger Over Current

Integrity Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P02:S12	15002712	1502712	Power Module	2	Over Volts	P02 Over Volts
P02:S13	15002713	1502713	Power Module	2	Under Volts	P02 Under Volts
P02:S14	33002714	3302714	Power Module	2	Slave Fail	P02 Slave Fail
P02:S15	30902715	3092715	Power Module	2	Battery Test	P02 Battery Test
P02:S16	14302716	1432716	Power Module	2	LAN Comms	P02 LAN Comms
P03:Z01	14003701	1403701	Power Module	3	Z01	P03:Z01
P03:Z02	14003702	1403702	Power Module	3	Z02	P03:Z02
P03:S01	14503701	1453701	Power Module	3	Cabinet Tamper	P03 Cabinet Tamper
P03:S02	30103702	3013702	Power Module	3	AC fail	P03 AC fail
P03:S03	30203703	3023703	Power Module	3	Low Battery	P03 Low Battery
P03:S04	31103704	3113704	Power Module	3	Battery Fail	P03 Battery Fail
P03:S05	30003705	3003705	Power Module	3	Detector Fuse	P03 Detector Fuse
P03:S06	30003706	3003706	Power Module	3	LAN Fuse	P03 LAN Fuse
P03:S07	30003707	3003707	Power Module	3	Battery Fuse	P03 Battery Fuse
P03:S08	30003708	3003708	Power Module	3	Aux2 Fuse	P03 Aux2 Fuse
P03:S09	32003709	3203709	Power Module	3	Aux2 Tamper	P03 Aux2 Tamper
P03:S10	31203710	3123710	Power Module	3	Detector Over Current	P03 Detector Over Current
P03:S11	31203711	3123711	Power Module	3	Charger Over Current	P03 Charger Over Current
P03:S12	15003712	1503712	Power Module	3	Over Volts	P03 Over Volts
P03:S13	15003713	1503713	Power Module	3	Under Volts	P03 Under Volts
P03:S14	33003714	3303714	Power Module	3	Slave Fail	P03 Slave Fail
P03:S15	30903715	3093715	Power Module	3	Battery Test	P03 Battery Test
P03:S16	14303716	1433716	Power Module	3	LAN Comms	P03 LAN Comms
P04:Z01	14004701	1404701	Power Module	4	Z01	P04:Z01
P04:Z02	14004702	1404702	Power Module	4	Z02	P04:Z02
P04:S01	14504701	1454701	Power Module	4	Cabinet Tamper	P04 Cabinet Tamper
P04:S02	30104702	3014702	Power Module	4	AC fail	P04 AC fail
P04:S03	30204703	3024703	Power Module	4	Low Battery	P04 Low Battery
P04:S04	31104704	3114704	Power Module	4	Battery Fail	P04 Battery Fail
P04:S05	30004705	3004705	Power Module	4	Detector Fuse	P04 Detector Fuse
P04:S06	30004706	3004706	Power Module	4	LAN Fuse	P04 LAN Fuse
P04:S07	30004707	3004707	Power Module	4	Battery Fuse	P04 Battery Fuse
P04:S08	30004708	3004708	Power Module	4	Aux2 Fuse	P04 Aux2 Fuse
P04:S09	32004709	3204709	Power Module	4	Aux2 Tamper	P04 Aux2 Tamper
P04:S10	31204710	3124710	Power Module	4	Detector Over Current	P04 Detector Over Current
P04:S11	31204711	3124711	Power Module	4	Charger Over Current	P04 Charger Over Current
P04:S12	15004712	1504712	Power Module	4	Over Volts	P04 Over Volts
P04:S13	15004713	1504713	Power Module	4	Under Volts	P04 Under Volts
P04:S14	33004714	3304714	Power Module	4	Slave Fail	P04 Slave Fail
P04:S15	30904715	3094715	Power Module	4	Battery Test	P04 Battery Test
P04:S16	14304716	1434716	Power Module	4	LAN Comms	P04 LAN Comms
P05:Z01	14005701	1405701	Power Module	5	Z01	P05:Z01
P05:Z02	14005702	1405702	Power Module	5	Z02	P05:Z02
P05:S01	14505701	1455701	Power Module	5	Cabinet Tamper	P05 Cabinet Tamper
P05:S02	30105702	3015702	Power Module	5	AC fail	P05 AC fail
P05:S03	30205703	3025703	Power Module	5	Low Battery	P05 Low Battery
P05:S04	31105704	3115704	Power Module	5	Battery Fail	P05 Battery Fail
P05:S05	30005705	3005705	Power Module	5	Detector Fuse	P05 Detector Fuse
P05:S06	30005706	3005706	Power Module	5	LAN Fuse	P05 LAN Fuse
P05:S07	30005707	3005707	Power Module	5	Battery Fuse	P05 Battery Fuse
P05:S08	30005708	3005708	Power Module	5	Aux2 Fuse	P05 Aux2 Fuse
P05:S09	32005709	3205709	Power Module	5	Aux2 Tamper	P05 Aux2 Tamper
P05:S10	31205710	3125710	Power Module	5	Detector Over Current	P05 Detector Over Current
P05:S11	31205711	3125711	Power Module	5	Charger Over Current	P05 Charger Over Current
P05:S12	15005712	1505712	Power Module	5	Over Volts	P05 Over Volts
P05:S13	15005713	1505713	Power Module	5	Under Volts	P05 Under Volts
P05:S14	33005714	3305714	Power Module	5	Slave Fail	P05 Slave Fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P05:S15	30905715	3095715	Power Module	5	Battery Test	P05 Battery Test
P05:S16	14305716	1435716	Power Module	5	LAN Comms	P05 LAN Comms
P06:Z01	14006701	1406701	Power Module	6	Z01	P06:Z01
P06:Z02	14006702	1406702	Power Module	6	Z02	P06:Z02
P06:S01	14506701	1456701	Power Module	6	Cabinet Tamper	P06 Cabinet Tamper
P06:S02	30106702	3016702	Power Module	6	AC fail	P06 AC fail
P06:S03	30206703	3026703	Power Module	6	Low Battery	P06 Low Battery
P06:S04	31106704	3116704	Power Module	6	Battery Fail	P06 Battery Fail
P06:S05	30006705	3006705	Power Module	6	Detector Fuse	P06 Detector Fuse
P06:S06	30006706	3006706	Power Module	6	LAN Fuse	P06 LAN Fuse
P06:S07	30006707	3006707	Power Module	6	Battery Fuse	P06 Battery Fuse
P06:S08	30006708	3006708	Power Module	6	Aux2 Fuse	P06 Aux2 Fuse
P06:S09	32006709	3206709	Power Module	6	Aux2 Tamper	P06 Aux2 Tamper
P06:S10	31206710	3126710	Power Module	6	Detector Over Current	P06 Detector Over Current
P06:S11	31206711	3126711	Power Module	6	Charger Over Current	P06 Charger Over Current
P06:S12	15006712	1506712	Power Module	6	Over Volts	P06 Over Volts
P06:S13	15006713	1506713	Power Module	6	Under Volts	P06 Under Volts
P06:S14	33006714	3306714	Power Module	6	Slave Fail	P06 Slave Fail
P06:S15	30906715	3096715	Power Module	6	Battery Test	P06 Battery Test
P06:S16	14306716	1436716	Power Module	6	LAN Comms	P06 LAN Comms
P07:Z01	14007701	1407701	Power Module	7	Z01	P07:Z01
P07:Z02	14007702	1407702	Power Module	7	Z02	P07:Z02
P07:S01	14507701	1457701	Power Module	7	Cabinet Tamper	P07 Cabinet Tamper
P07:S02	30107702	3017702	Power Module	7	AC fail	P07 AC fail
P07:S03	30207703	3027703	Power Module	7	Low Battery	P07 Low Battery
P07:S04	31107704	3117704	Power Module	7	Battery Fail	P07 Battery Fail
P07:S05	30007705	3007705	Power Module	7	Detector Fuse	P07 Detector Fuse
P07:S06	30007706	3007706	Power Module	7	LAN Fuse	P07 LAN Fuse
P07:S07	30007707	3007707	Power Module	7	Battery Fuse	P07 Battery Fuse
P07:S08	30007708	3007708	Power Module	7	Aux2 Fuse	P07 Aux2 Fuse
P07:S09	32007709	3207709	Power Module	7	Aux2 Tamper	P07 Aux2 Tamper
P07:S10	31207710	3127710	Power Module	7	Detector Over Current	P07 Detector Over Current
P07:S11	31207711	3127711	Power Module	7	Charger Over Current	P07 Charger Over Current
P07:S12	15007712	1507712	Power Module	7	Over Volts	P07 Over Volts
P07:S13	15007713	1507713	Power Module	7	Under Volts	P07 Under Volts
P07:S14	33007714	3307714	Power Module	7	Slave Fail	P07 Slave Fail
P07:S15	30907715	3097715	Power Module	7	Battery Test	P07 Battery Test
P07:S16	14307716	1437716	Power Module	7	LAN Comms	P07 LAN Comms
P08:Z01	14008701	1408701	Power Module	8	Z01	P08:Z01
P08:Z02	14008702	1408702	Power Module	8	Z02	P08:Z02
P08:S01	14508701	1458701	Power Module	8	Cabinet Tamper	P08 Cabinet Tamper
P08:S02	30108702	3018702	Power Module	8	AC fail	P08 AC fail
P08:S03	30208703	3028703	Power Module	8	Low Battery	P08 Low Battery
P08:S04	31108704	3118704	Power Module	8	Battery Fail	P08 Battery Fail
P08:S05	30008705	3008705	Power Module	8	Detector Fuse	P08 Detector Fuse
P08:S06	30008706	3008706	Power Module	8	LAN Fuse	P08 LAN Fuse
P08:S07	30008707	3008707	Power Module	8	Battery Fuse	P08 Battery Fuse
P08:S08	30008708	3008708	Power Module	8	Aux2 Fuse	P08 Aux2 Fuse
P08:S09	32008709	3208709	Power Module	8	Aux2 Tamper	P08 Aux2 Tamper
P08:S10	31208710	3128710	Power Module	8	Detector Over Current	P08 Detector Over Current
P08:S11	31208711	3128711	Power Module	8	Charger Over Current	P08 Charger Over Current
P08:S12	15008712	1508712	Power Module	8	Over Volts	P08 Over Volts
P08:S13	15008713	1508713	Power Module	8	Under Volts	P08 Under Volts
P08:S14	33008714	3308714	Power Module	8	Slave Fail	P08 Slave Fail
P08:S15	30908715	3098715	Power Module	8	Battery Test	P08 Battery Test
P08:S16	14308716	1438716	Power Module	8	LAN Comms	P08 LAN Comms
P09:Z01	14009701	1409701	Power Module	9	Z01	P09:Z01

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P09:Z02	14009702	1409702	Power Module	9	Z02	P09:Z02
P09:S01	14509701	1459701	Power Module	9	Cabinet Tamper	P09 Cabinet Tamper
P09:S02	30109702	3019702	Power Module	9	AC fail	P09 AC fail
P09:S03	30209703	3029703	Power Module	9	Low Battery	P09 Low Battery
P09:S04	31109704	3119704	Power Module	9	Battery Fail	P09 Battery Fail
P09:S05	30009705	3009705	Power Module	9	Detector Fuse	P09 Detector Fuse
P09:S06	30009706	3009706	Power Module	9	LAN Fuse	P09 LAN Fuse
P09:S07	30009707	3009707	Power Module	9	Battery Fuse	P09 Battery Fuse
P09:S08	30009708	3009708	Power Module	9	Aux2 Fuse	P09 Aux2 Fuse
P09:S09	32009709	3209709	Power Module	9	Aux2 Tamper	P09 Aux2 Tamper
P09:S10	31209710	3129710	Power Module	9	Detector Over Current	P09 Detector Over Current
P09:S11	31209711	3129711	Power Module	9	Charger Over Current	P09 Charger Over Current
P09:S12	15009712	1509712	Power Module	9	Over Volts	P09 Over Volts
P09:S13	15009713	1509713	Power Module	9	Under Volts	P09 Under Volts
P09:S14	33009714	3309714	Power Module	9	Slave Fail	P09 Slave Fail
P09:S15	30909715	3099715	Power Module	9	Battery Test	P09 Battery Test
P09:S16	14309716	1439716	Power Module	9	LAN Comms	P09 LAN Comms
P10:Z01	14010701	140A701	Power Module	10	Z01	P10:Z01
P10:Z02	14010702	140A702	Power Module	10	Z02	P10:Z02
P10:S01	14510701	145A701	Power Module	10	Cabinet Tamper	P10 Cabinet Tamper
P10:S02	30110702	301A702	Power Module	10	AC fail	P10 AC fail
P10:S03	30210703	302A703	Power Module	10	Low Battery	P10 Low Battery
P10:S04	31110704	311A704	Power Module	10	Battery Fail	P10 Battery Fail
P10:S05	30010705	300A705	Power Module	10	Detector Fuse	P10 Detector Fuse
P10:S06	30010706	300A706	Power Module	10	LAN Fuse	P10 LAN Fuse
P10:S07	30010707	300A707	Power Module	10	Battery Fuse	P10 Battery Fuse
P10:S08	30010708	300A708	Power Module	10	Aux2 Fuse	P10 Aux2 Fuse
P10:S09	32010709	320A709	Power Module	10	Aux2 Tamper	P10 Aux2 Tamper
P10:S10	31210710	312A710	Power Module	10	Detector Over Current	P10 Detector Over Current
P10:S11	31210711	312A711	Power Module	10	Charger Over Current	P10 Charger Over Current
P10:S12	15010712	150A712	Power Module	10	Over Volts	P10 Over Volts
P10:S13	15010713	150A713	Power Module	10	Under Volts	P10 Under Volts
P10:S14	33010714	330A714	Power Module	10	Slave Fail	P10 Slave Fail
P10:S15	30910715	309A715	Power Module	10	Battery Test	P10 Battery Test
P10:S16	14310716	143A716	Power Module	10	LAN Comms	P10 LAN Comms
P11:Z01	14011701	140B701	Power Module	11	Z01	P11:Z01
P11:Z02	14011702	140B702	Power Module	11	Z02	P11:Z02
P11:S01	14511701	145B701	Power Module	11	Cabinet Tamper	P11 Cabinet Tamper
P11:S02	30111702	301B702	Power Module	11	AC fail	P11 AC fail
P11:S03	30211703	302B703	Power Module	11	Low Battery	P11 Low Battery
P11:S04	31111704	311B704	Power Module	11	Battery Fail	P11 Battery Fail
P11:S05	30011705	300B705	Power Module	11	Detector Fuse	P11 Detector Fuse
P11:S06	30011706	300B706	Power Module	11	LAN Fuse	P11 LAN Fuse
P11:S07	30011707	300B707	Power Module	11	Battery Fuse	P11 Battery Fuse
P11:S08	30011708	300B708	Power Module	11	Aux2 Fuse	P11 Aux2 Fuse
P11:S09	32011709	320B709	Power Module	11	Aux2 Tamper	P11 Aux2 Tamper
P11:S10	31211710	312B710	Power Module	11	Detector Over Current	P11 Detector Over Current
P11:S11	31211711	312B711	Power Module	11	Charger Over Current	P11 Charger Over Current
P11:S12	15011712	150B712	Power Module	11	Over Volts	P11 Over Volts
P11:S13	15011713	150B713	Power Module	11	Under Volts	P11 Under Volts
P11:S14	33011714	330B714	Power Module	11	Slave Fail	P11 Slave Fail
P11:S15	30911715	309B715	Power Module	11	Battery Test	P11 Battery Test
P11:S16	14311716	143B716	Power Module	11	LAN Comms	P11 LAN Comms
P12:Z01	14012701	140C701	Power Module	12	Z01	P12:Z01
P12:Z02	14012702	140C702	Power Module	12	Z02	P12:Z02
P12:S01	14512701	145C701	Power Module	12	Cabinet Tamper	P12 Cabinet Tamper
P12:S02	30112702	301C702	Power Module	12	AC fail	P12 AC fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P12:S03	30212703	302C703	Power Module	12	Low Battery	P12 Low Battery
P12:S04	31112704	311C704	Power Module	12	Battery Fail	P12 Battery Fail
P12:S05	30012705	300C705	Power Module	12	Detector Fuse	P12 Detector Fuse
P12:S06	30012706	300C706	Power Module	12	LAN Fuse	P12 LAN Fuse
P12:S07	30012707	300C707	Power Module	12	Battery Fuse	P12 Battery Fuse
P12:S08	30012708	300C708	Power Module	12	Aux2 Fuse	P12 Aux2 Fuse
P12:S09	32012709	320C709	Power Module	12	Aux2 Tamper	P12 Aux2 Tamper
P12:S10	31212710	312C710	Power Module	12	Detector Over Current	P12 Detector Over Current
P12:S11	31212711	312C711	Power Module	12	Charger Over Current	P12 Charger Over Current
P12:S12	15012712	150C712	Power Module	12	Over Volts	P12 Over Volts
P12:S13	15012713	150C713	Power Module	12	Under Volts	P12 Under Volts
P12:S14	33012714	330C714	Power Module	12	Slave Fail	P12 Slave Fail
P12:S15	30912715	309C715	Power Module	12	Battery Test	P12 Battery Test
P12:S16	14312716	143C716	Power Module	12	LAN Comms	P12 LAN Comms
P13:Z01	14013701	140D701	Power Module	13	Z01	P13:Z01
P13:Z02	14013702	140D702	Power Module	13	Z02	P13:Z02
P13:S01	14513701	145D701	Power Module	13	Cabinet Tamper	P13 Cabinet Tamper
P13:S02	30113702	301D702	Power Module	13	AC fail	P13 AC fail
P13:S03	30213703	302D703	Power Module	13	Low Battery	P13 Low Battery
P13:S04	31113704	311D704	Power Module	13	Battery Fail	P13 Battery Fail
P13:S05	30013705	300D705	Power Module	13	Detector Fuse	P13 Detector Fuse
P13:S06	30013706	300D706	Power Module	13	LAN Fuse	P13 LAN Fuse
P13:S07	30013707	300D707	Power Module	13	Battery Fuse	P13 Battery Fuse
P13:S08	30013708	300D708	Power Module	13	Aux2 Fuse	P13 Aux2 Fuse
P13:S09	32013709	320D709	Power Module	13	Aux2 Tamper	P13 Aux2 Tamper
P13:S10	31213710	312D710	Power Module	13	Detector Over Current	P13 Detector Over Current
P13:S11	31213711	312D711	Power Module	13	Charger Over Current	P13 Charger Over Current
P13:S12	15013712	150D712	Power Module	13	Over Volts	P13 Over Volts
P13:S13	15013713	150D713	Power Module	13	Under Volts	P13 Under Volts
P13:S14	33013714	330D714	Power Module	13	Slave Fail	P13 Slave Fail
P13:S15	30913715	309D715	Power Module	13	Battery Test	P13 Battery Test
P13:S16	14313716	143D716	Power Module	13	LAN Comms	P13 LAN Comms
P14:Z01	14014701	140E701	Power Module	14	Z01	P14:Z01
P14:Z02	14014702	140E702	Power Module	14	Z02	P14:Z02
P14:S01	14514701	145E701	Power Module	14	Cabinet Tamper	P14 Cabinet Tamper
P14:S02	30114702	301E702	Power Module	14	AC fail	P14 AC fail
P14:S03	30214703	302E703	Power Module	14	Low Battery	P14 Low Battery
P14:S04	31114704	311E704	Power Module	14	Battery Fail	P14 Battery Fail
P14:S05	30014705	300E705	Power Module	14	Detector Fuse	P14 Detector Fuse
P14:S06	30014706	300E706	Power Module	14	LAN Fuse	P14 LAN Fuse
P14:S07	30014707	300E707	Power Module	14	Battery Fuse	P14 Battery Fuse
P14:S08	30014708	300E708	Power Module	14	Aux2 Fuse	P14 Aux2 Fuse
P14:S09	32014709	320E709	Power Module	14	Aux2 Tamper	P14 Aux2 Tamper
P14:S10	31214710	312E710	Power Module	14	Detector Over Current	P14 Detector Over Current
P14:S11	31214711	312E711	Power Module	14	Charger Over Current	P14 Charger Over Current
P14:S12	15014712	150E712	Power Module	14	Over Volts	P14 Over Volts
P14:S13	15014713	150E713	Power Module	14	Under Volts	P14 Under Volts
P14:S14	33014714	330E714	Power Module	14	Slave Fail	P14 Slave Fail
P14:S15	30914715	309E715	Power Module	14	Battery Test	P14 Battery Test
P14:S16	14314716	143E716	Power Module	14	LAN Comms	P14 LAN Comms
P15:Z01	14015701	140F701	Power Module	15	Z01	P15:Z01
P15:Z02	14015702	140F702	Power Module	15	Z02	P15:Z02
P15:S01	14515701	145F701	Power Module	15	Cabinet Tamper	P15 Cabinet Tamper
P15:S02	30115702	301F702	Power Module	15	AC fail	P15 AC fail
P15:S03	30215703	302F703	Power Module	15	Low Battery	P15 Low Battery
P15:S04	31115704	311F704	Power Module	15	Battery Fail	P15 Battery Fail
P15:S05	30015705	300F705	Power Module	15	Detector Fuse	P15 Detector Fuse

IntegrITI Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P15:S06	30015706	300F706	Power Module	15	LAN Fuse	P15 LAN Fuse
P15:S07	30015707	300F707	Power Module	15	Battery Fuse	P15 Battery Fuse
P15:S08	30015708	300F708	Power Module	15	Aux2 Fuse	P15 Aux2 Fuse
P15:S09	32015709	320F709	Power Module	15	Aux2 Tamper	P15 Aux2 Tamper
P15:S10	31215710	312F710	Power Module	15	Detector Over Current	P15 Detector Over Current
P15:S11	31215711	312F711	Power Module	15	Charger Over Current	P15 Charger Over Current
P15:S12	15015712	150F712	Power Module	15	Over Volts	P15 Over Volts
P15:S13	15015713	150F713	Power Module	15	Under Volts	P15 Under Volts
P15:S14	33015714	330F714	Power Module	15	Slave Fail	P15 Slave Fail
P15:S15	30915715	309F715	Power Module	15	Battery Test	P15 Battery Test
P15:S16	14315716	143F716	Power Module	15	LAN Comms	P15 LAN Comms
P16:Z01	14016701	140G701	Power Module	16	Z01	P16:Z01
P16:Z02	14016702	140G702	Power Module	16	Z02	P16:Z02
P16:S01	14516701	145G701	Power Module	16	Cabinet Tamper	P16 Cabinet Tamper
P16:S02	30116702	301G702	Power Module	16	AC fail	P16 AC fail
P16:S03	30216703	302G703	Power Module	16	Low Battery	P16 Low Battery
P16:S04	31116704	311G704	Power Module	16	Battery Fail	P16 Battery Fail
P16:S05	30016705	300G705	Power Module	16	Detector Fuse	P16 Detector Fuse
P16:S06	30016706	300G706	Power Module	16	LAN Fuse	P16 LAN Fuse
P16:S07	30016707	300G707	Power Module	16	Battery Fuse	P16 Battery Fuse
P16:S08	30016708	300G708	Power Module	16	Aux2 Fuse	P16 Aux2 Fuse
P16:S09	32016709	320G709	Power Module	16	Aux2 Tamper	P16 Aux2 Tamper
P16:S10	31216710	312G710	Power Module	16	Detector Over Current	P16 Detector Over Current
P16:S11	31216711	312G711	Power Module	16	Charger Over Current	P16 Charger Over Current
P16:S12	15016712	150G712	Power Module	16	Over Volts	P16 Over Volts
P16:S13	15016713	150G713	Power Module	16	Under Volts	P16 Under Volts
P16:S14	33016714	330G714	Power Module	16	Slave Fail	P16 Slave Fail
P16:S15	30916715	309G715	Power Module	16	Battery Test	P16 Battery Test
P16:S16	14316716	143G716	Power Module	16	LAN Comms	P16 LAN Comms
P17:Z01	14017701	140H701	Power Module	17	Z01	P17:Z01
P17:Z02	14017702	140H702	Power Module	17	Z02	P17:Z02
P17:S01	14517701	145H701	Power Module	17	Cabinet Tamper	P17 Cabinet Tamper
P17:S02	30117702	301H702	Power Module	17	AC fail	P17 AC fail
P17:S03	30217703	302H703	Power Module	17	Low Battery	P17 Low Battery
P17:S04	31117704	311H704	Power Module	17	Battery Fail	P17 Battery Fail
P17:S05	30017705	300H705	Power Module	17	Detector Fuse	P17 Detector Fuse
P17:S06	30017706	300H706	Power Module	17	LAN Fuse	P17 LAN Fuse
P17:S07	30017707	300H707	Power Module	17	Battery Fuse	P17 Battery Fuse
P17:S08	30017708	300H708	Power Module	17	Aux2 Fuse	P17 Aux2 Fuse
P17:S09	32017709	320H709	Power Module	17	Aux2 Tamper	P17 Aux2 Tamper
P17:S10	31217710	312H710	Power Module	17	Detector Over Current	P17 Detector Over Current
P17:S11	31217711	312H711	Power Module	17	Charger Over Current	P17 Charger Over Current
P17:S12	15017712	150H712	Power Module	17	Over Volts	P17 Over Volts
P17:S13	15017713	150H713	Power Module	17	Under Volts	P17 Under Volts
P17:S14	33017714	330H714	Power Module	17	Slave Fail	P17 Slave Fail
P17:S15	30917715	309H715	Power Module	17	Battery Test	P17 Battery Test
P17:S16	14317716	143H716	Power Module	17	LAN Comms	P17 LAN Comms
P18:Z01	14018701	140I701	Power Module	18	Z01	P18:Z01
P18:Z02	14018702	140I702	Power Module	18	Z02	P18:Z02
P18:S01	14518701	145I701	Power Module	18	Cabinet Tamper	P18 Cabinet Tamper
P18:S02	30118702	301I702	Power Module	18	AC fail	P18 AC fail
P18:S03	30218703	302I703	Power Module	18	Low Battery	P18 Low Battery
P18:S04	31118704	311I704	Power Module	18	Battery Fail	P18 Battery Fail
P18:S05	30018705	300I705	Power Module	18	Detector Fuse	P18 Detector Fuse
P18:S06	30018706	300I706	Power Module	18	LAN Fuse	P18 LAN Fuse
P18:S07	30018707	300I707	Power Module	18	Battery Fuse	P18 Battery Fuse
P18:S08	30018708	300I708	Power Module	18	Aux2 Fuse	P18 Aux2 Fuse

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P18:S09	32018709	320I709	Power Module	18	Aux2 Tamper	P18 Aux2 Tamper
P18:S10	31218710	312I710	Power Module	18	Detector Over Current	P18 Detector Over Current
P18:S11	31218711	312I711	Power Module	18	Charger Over Current	P18 Charger Over Current
P18:S12	15018712	150I712	Power Module	18	Over Volts	P18 Over Volts
P18:S13	15018713	150I713	Power Module	18	Under Volts	P18 Under Volts
P18:S14	33018714	330I714	Power Module	18	Slave Fail	P18 Slave Fail
P18:S15	30918715	309I715	Power Module	18	Battery Test	P18 Battery Test
P18:S16	14318716	143I716	Power Module	18	LAN Comms	P18 LAN Comms
P19:Z01	14019701	140J701	Power Module	19	Z01	P19:Z01
P19:Z02	14019702	140J702	Power Module	19	Z02	P19:Z02
P19:S01	14519701	145J701	Power Module	19	Cabinet Tamper	P19 Cabinet Tamper
P19:S02	30119702	301J702	Power Module	19	AC fail	P19 AC fail
P19:S03	30219703	302J703	Power Module	19	Low Battery	P19 Low Battery
P19:S04	31119704	311J704	Power Module	19	Battery Fail	P19 Battery Fail
P19:S05	30019705	300J705	Power Module	19	Detector Fuse	P19 Detector Fuse
P19:S06	30019706	300J706	Power Module	19	LAN Fuse	P19 LAN Fuse
P19:S07	30019707	300J707	Power Module	19	Battery Fuse	P19 Battery Fuse
P19:S08	30019708	300J708	Power Module	19	Aux2 Fuse	P19 Aux2 Fuse
P19:S09	32019709	320J709	Power Module	19	Aux2 Tamper	P19 Aux2 Tamper
P19:S10	31219710	312J710	Power Module	19	Detector Over Current	P19 Detector Over Current
P19:S11	31219711	312J711	Power Module	19	Charger Over Current	P19 Charger Over Current
P19:S12	15019712	150J712	Power Module	19	Over Volts	P19 Over Volts
P19:S13	15019713	150J713	Power Module	19	Under Volts	P19 Under Volts
P19:S14	33019714	330J714	Power Module	19	Slave Fail	P19 Slave Fail
P19:S15	30919715	309J715	Power Module	19	Battery Test	P19 Battery Test
P19:S16	14319716	143J716	Power Module	19	LAN Comms	P19 LAN Comms
P20:Z01	14020701	140K701	Power Module	20	Z01	P20:Z01
P20:Z02	14020702	140K702	Power Module	20	Z02	P20:Z02
P20:S01	14520701	145K701	Power Module	20	Cabinet Tamper	P20 Cabinet Tamper
P20:S02	30120702	301K702	Power Module	20	AC fail	P20 AC fail
P20:S03	30220703	302K703	Power Module	20	Low Battery	P20 Low Battery
P20:S04	31120704	311K704	Power Module	20	Battery Fail	P20 Battery Fail
P20:S05	30020705	300K705	Power Module	20	Detector Fuse	P20 Detector Fuse
P20:S06	30020706	300K706	Power Module	20	LAN Fuse	P20 LAN Fuse
P20:S07	30020707	300K707	Power Module	20	Battery Fuse	P20 Battery Fuse
P20:S08	30020708	300K708	Power Module	20	Aux2 Fuse	P20 Aux2 Fuse
P20:S09	32020709	320K709	Power Module	20	Aux2 Tamper	P20 Aux2 Tamper
P20:S10	31220710	312K710	Power Module	20	Detector Over Current	P20 Detector Over Current
P20:S11	31220711	312K711	Power Module	20	Charger Over Current	P20 Charger Over Current
P20:S12	15020712	150K712	Power Module	20	Over Volts	P20 Over Volts
P20:S13	15020713	150K713	Power Module	20	Under Volts	P20 Under Volts
P20:S14	33020714	330K714	Power Module	20	Slave Fail	P20 Slave Fail
P20:S15	30920715	309K715	Power Module	20	Battery Test	P20 Battery Test
P20:S16	14320716	143K716	Power Module	20	LAN Comms	P20 LAN Comms
P21:Z01	14021701	140L701	Power Module	21	Z01	P21:Z01
P21:Z02	14021702	140L702	Power Module	21	Z02	P21:Z02
P21:S01	14521701	145L701	Power Module	21	Cabinet Tamper	P21 Cabinet Tamper
P21:S02	30121702	301L702	Power Module	21	AC fail	P21 AC fail
P21:S03	30221703	302L703	Power Module	21	Low Battery	P21 Low Battery
P21:S04	31121704	311L704	Power Module	21	Battery Fail	P21 Battery Fail
P21:S05	30021705	300L705	Power Module	21	Detector Fuse	P21 Detector Fuse
P21:S06	30021706	300L706	Power Module	21	LAN Fuse	P21 LAN Fuse
P21:S07	30021707	300L707	Power Module	21	Battery Fuse	P21 Battery Fuse
P21:S08	30021708	300L708	Power Module	21	Aux2 Fuse	P21 Aux2 Fuse
P21:S09	32021709	320L709	Power Module	21	Aux2 Tamper	P21 Aux2 Tamper
P21:S10	31221710	312L710	Power Module	21	Detector Over Current	P21 Detector Over Current
P21:S11	31221711	312L711	Power Module	21	Charger Over Current	P21 Charger Over Current

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P21:S12	15021712	150L712	Power Module	21	Over Volts	P21 Over Volts
P21:S13	15021713	150L713	Power Module	21	Under Volts	P21 Under Volts
P21:S14	33021714	330L714	Power Module	21	Slave Fail	P21 Slave Fail
P21:S15	30921715	309L715	Power Module	21	Battery Test	P21 Battery Test
P21:S16	14321716	143L716	Power Module	21	LAN Comms	P21 LAN Comms
P22:Z01	14022701	140M701	Power Module	22	Z01	P22:Z01
P22:Z02	14022702	140M702	Power Module	22	Z02	P22:Z02
P22:S01	14522701	145M701	Power Module	22	Cabinet Tamper	P22 Cabinet Tamper
P22:S02	30122702	301M702	Power Module	22	AC fail	P22 AC fail
P22:S03	30222703	302M703	Power Module	22	Low Battery	P22 Low Battery
P22:S04	31122704	311M704	Power Module	22	Battery Fail	P22 Battery Fail
P22:S05	30022705	300M705	Power Module	22	Detector Fuse	P22 Detector Fuse
P22:S06	30022706	300M706	Power Module	22	LAN Fuse	P22 LAN Fuse
P22:S07	30022707	300M707	Power Module	22	Battery Fuse	P22 Battery Fuse
P22:S08	30022708	300M708	Power Module	22	Aux2 Fuse	P22 Aux2 Fuse
P22:S09	32022709	320M709	Power Module	22	Aux2 Tamper	P22 Aux2 Tamper
P22:S10	31222710	312M710	Power Module	22	Detector Over Current	P22 Detector Over Current
P22:S11	31222711	312M711	Power Module	22	Charger Over Current	P22 Charger Over Current
P22:S12	15022712	150M712	Power Module	22	Over Volts	P22 Over Volts
P22:S13	15022713	150M713	Power Module	22	Under Volts	P22 Under Volts
P22:S14	33022714	330M714	Power Module	22	Slave Fail	P22 Slave Fail
P22:S15	30922715	309M715	Power Module	22	Battery Test	P22 Battery Test
P22:S16	14322716	143M716	Power Module	22	LAN Comms	P22 LAN Comms
P23:Z01	14023701	140N701	Power Module	23	Z01	P23:Z01
P23:Z02	14023702	140N702	Power Module	23	Z02	P23:Z02
P23:S01	14523701	145N701	Power Module	23	Cabinet Tamper	P23 Cabinet Tamper
P23:S02	30123702	301N702	Power Module	23	AC fail	P23 AC fail
P23:S03	30223703	302N703	Power Module	23	Low Battery	P23 Low Battery
P23:S04	31123704	311N704	Power Module	23	Battery Fail	P23 Battery Fail
P23:S05	30023705	300N705	Power Module	23	Detector Fuse	P23 Detector Fuse
P23:S06	30023706	300N706	Power Module	23	LAN Fuse	P23 LAN Fuse
P23:S07	30023707	300N707	Power Module	23	Battery Fuse	P23 Battery Fuse
P23:S08	30023708	300N708	Power Module	23	Aux2 Fuse	P23 Aux2 Fuse
P23:S09	32023709	320N709	Power Module	23	Aux2 Tamper	P23 Aux2 Tamper
P23:S10	31223710	312N710	Power Module	23	Detector Over Current	P23 Detector Over Current
P23:S11	31223711	312N711	Power Module	23	Charger Over Current	P23 Charger Over Current
P23:S12	15023712	150N712	Power Module	23	Over Volts	P23 Over Volts
P23:S13	15023713	150N713	Power Module	23	Under Volts	P23 Under Volts
P23:S14	33023714	330N714	Power Module	23	Slave Fail	P23 Slave Fail
P23:S15	30923715	309N715	Power Module	23	Battery Test	P23 Battery Test
P23:S16	14323716	143N716	Power Module	23	LAN Comms	P23 LAN Comms
P24:Z01	14024701	140O701	Power Module	24	Z01	P24:Z01
P24:Z02	14024702	140O702	Power Module	24	Z02	P24:Z02
P24:S01	14524701	145O701	Power Module	24	Cabinet Tamper	P24 Cabinet Tamper
P24:S02	30124702	301O702	Power Module	24	AC fail	P24 AC fail
P24:S03	30224703	302O703	Power Module	24	Low Battery	P24 Low Battery
P24:S04	31124704	311O704	Power Module	24	Battery Fail	P24 Battery Fail
P24:S05	30024705	300O705	Power Module	24	Detector Fuse	P24 Detector Fuse
P24:S06	30024706	300O706	Power Module	24	LAN Fuse	P24 LAN Fuse
P24:S07	30024707	300O707	Power Module	24	Battery Fuse	P24 Battery Fuse
P24:S08	30024708	300O708	Power Module	24	Aux2 Fuse	P24 Aux2 Fuse
P24:S09	32024709	320O709	Power Module	24	Aux2 Tamper	P24 Aux2 Tamper
P24:S10	31224710	312O710	Power Module	24	Detector Over Current	P24 Detector Over Current
P24:S11	31224711	312O711	Power Module	24	Charger Over Current	P24 Charger Over Current
P24:S12	15024712	150O712	Power Module	24	Over Volts	P24 Over Volts
P24:S13	15024713	150O713	Power Module	24	Under Volts	P24 Under Volts
P24:S14	33024714	330O714	Power Module	24	Slave Fail	P24 Slave Fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P24:S15	30924715	309O715	Power Module	24	Battery Test	P24 Battery Test
P24:S16	14324716	143O716	Power Module	24	LAN Comms	P24 LAN Comms
P25:Z01	14025701	140P701	Power Module	25	Z01	P25:Z01
P25:Z02	14025702	140P702	Power Module	25	Z02	P25:Z02
P25:S01	14525701	145P701	Power Module	25	Cabinet Tamper	P25 Cabinet Tamper
P25:S02	30125702	301P702	Power Module	25	AC fail	P25 AC fail
P25:S03	30225703	302P703	Power Module	25	Low Battery	P25 Low Battery
P25:S04	31125704	311P704	Power Module	25	Battery Fail	P25 Battery Fail
P25:S05	30025705	300P705	Power Module	25	Detector Fuse	P25 Detector Fuse
P25:S06	30025706	300P706	Power Module	25	LAN Fuse	P25 LAN Fuse
P25:S07	30025707	300P707	Power Module	25	Battery Fuse	P25 Battery Fuse
P25:S08	30025708	300P708	Power Module	25	Aux2 Fuse	P25 Aux2 Fuse
P25:S09	32025709	320P709	Power Module	25	Aux2 Tamper	P25 Aux2 Tamper
P25:S10	31225710	312P710	Power Module	25	Detector Over Current	P25 Detector Over Current
P25:S11	31225711	312P711	Power Module	25	Charger Over Current	P25 Charger Over Current
P25:S12	15025712	150P712	Power Module	25	Over Volts	P25 Over Volts
P25:S13	15025713	150P713	Power Module	25	Under Volts	P25 Under Volts
P25:S14	33025714	330P714	Power Module	25	Slave Fail	P25 Slave Fail
P25:S15	30925715	309P715	Power Module	25	Battery Test	P25 Battery Test
P25:S16	14325716	143P716	Power Module	25	LAN Comms	P25 LAN Comms
P26:Z01	14026701	140Q701	Power Module	26	Z01	P26:Z01
P26:Z02	14026702	140Q702	Power Module	26	Z02	P26:Z02
P26:S01	14526701	145Q701	Power Module	26	Cabinet Tamper	P26 Cabinet Tamper
P26:S02	30126702	301Q702	Power Module	26	AC fail	P26 AC fail
P26:S03	30226703	302Q703	Power Module	26	Low Battery	P26 Low Battery
P26:S04	31126704	311Q704	Power Module	26	Battery Fail	P26 Battery Fail
P26:S05	30026705	300Q705	Power Module	26	Detector Fuse	P26 Detector Fuse
P26:S06	30026706	300Q706	Power Module	26	LAN Fuse	P26 LAN Fuse
P26:S07	30026707	300Q707	Power Module	26	Battery Fuse	P26 Battery Fuse
P26:S08	30026708	300Q708	Power Module	26	Aux2 Fuse	P26 Aux2 Fuse
P26:S09	32026709	320Q709	Power Module	26	Aux2 Tamper	P26 Aux2 Tamper
P26:S10	31226710	312Q710	Power Module	26	Detector Over Current	P26 Detector Over Current
P26:S11	31226711	312Q711	Power Module	26	Charger Over Current	P26 Charger Over Current
P26:S12	15026712	150Q712	Power Module	26	Over Volts	P26 Over Volts
P26:S13	15026713	150Q713	Power Module	26	Under Volts	P26 Under Volts
P26:S14	33026714	330Q714	Power Module	26	Slave Fail	P26 Slave Fail
P26:S15	30926715	309Q715	Power Module	26	Battery Test	P26 Battery Test
P26:S16	14326716	143Q716	Power Module	26	LAN Comms	P26 LAN Comms
P27:Z01	14027701	140R701	Power Module	27	Z01	P27:Z01
P27:Z02	14027702	140R702	Power Module	27	Z02	P27:Z02
P27:S01	14527701	145R701	Power Module	27	Cabinet Tamper	P27 Cabinet Tamper
P27:S02	30127702	301R702	Power Module	27	AC fail	P27 AC fail
P27:S03	30227703	302R703	Power Module	27	Low Battery	P27 Low Battery
P27:S04	31127704	311R704	Power Module	27	Battery Fail	P27 Battery Fail
P27:S05	30027705	300R705	Power Module	27	Detector Fuse	P27 Detector Fuse
P27:S06	30027706	300R706	Power Module	27	LAN Fuse	P27 LAN Fuse
P27:S07	30027707	300R707	Power Module	27	Battery Fuse	P27 Battery Fuse
P27:S08	30027708	300R708	Power Module	27	Aux2 Fuse	P27 Aux2 Fuse
P27:S09	32027709	320R709	Power Module	27	Aux2 Tamper	P27 Aux2 Tamper
P27:S10	31227710	312R710	Power Module	27	Detector Over Current	P27 Detector Over Current
P27:S11	31227711	312R711	Power Module	27	Charger Over Current	P27 Charger Over Current
P27:S12	15027712	150R712	Power Module	27	Over Volts	P27 Over Volts
P27:S13	15027713	150R713	Power Module	27	Under Volts	P27 Under Volts
P27:S14	33027714	330R714	Power Module	27	Slave Fail	P27 Slave Fail
P27:S15	30927715	309R715	Power Module	27	Battery Test	P27 Battery Test
P27:S16	14327716	143R716	Power Module	27	LAN Comms	P27 LAN Comms
P28:Z01	14028701	140S701	Power Module	28	Z01	P28:Z01

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P28:Z02	14028702	140S702	Power Module	28	Z02	P28:Z02
P28:S01	14528701	145S701	Power Module	28	Cabinet Tamper	P28 Cabinet Tamper
P28:S02	30128702	301S702	Power Module	28	AC fail	P28 AC fail
P28:S03	30228703	302S703	Power Module	28	Low Battery	P28 Low Battery
P28:S04	31128704	311S704	Power Module	28	Battery Fail	P28 Battery Fail
P28:S05	30028705	300S705	Power Module	28	Detector Fuse	P28 Detector Fuse
P28:S06	30028706	300S706	Power Module	28	LAN Fuse	P28 LAN Fuse
P28:S07	30028707	300S707	Power Module	28	Battery Fuse	P28 Battery Fuse
P28:S08	30028708	300S708	Power Module	28	Aux2 Fuse	P28 Aux2 Fuse
P28:S09	32028709	320S709	Power Module	28	Aux2 Tamper	P28 Aux2 Tamper
P28:S10	31228710	312S710	Power Module	28	Detector Over Current	P28 Detector Over Current
P28:S11	31228711	312S711	Power Module	28	Charger Over Current	P28 Charger Over Current
P28:S12	15028712	150S712	Power Module	28	Over Volts	P28 Over Volts
P28:S13	15028713	150S713	Power Module	28	Under Volts	P28 Under Volts
P28:S14	33028714	330S714	Power Module	28	Slave Fail	P28 Slave Fail
P28:S15	30928715	309S715	Power Module	28	Battery Test	P28 Battery Test
P28:S16	14328716	143S716	Power Module	28	LAN Comms	P28 LAN Comms
P29:Z01	14029701	140T701	Power Module	29	Z01	P29:Z01
P29:Z02	14029702	140T702	Power Module	29	Z02	P29:Z02
P29:S01	14529701	145T701	Power Module	29	Cabinet Tamper	P29 Cabinet Tamper
P29:S02	30129702	301T702	Power Module	29	AC fail	P29 AC fail
P29:S03	30229703	302T703	Power Module	29	Low Battery	P29 Low Battery
P29:S04	31129704	311T704	Power Module	29	Battery Fail	P29 Battery Fail
P29:S05	30029705	300T705	Power Module	29	Detector Fuse	P29 Detector Fuse
P29:S06	30029706	300T706	Power Module	29	LAN Fuse	P29 LAN Fuse
P29:S07	30029707	300T707	Power Module	29	Battery Fuse	P29 Battery Fuse
P29:S08	30029708	300T708	Power Module	29	Aux2 Fuse	P29 Aux2 Fuse
P29:S09	32029709	320T709	Power Module	29	Aux2 Tamper	P29 Aux2 Tamper
P29:S10	31229710	312T710	Power Module	29	Detector Over Current	P29 Detector Over Current
P29:S11	31229711	312T711	Power Module	29	Charger Over Current	P29 Charger Over Current
P29:S12	15029712	150T712	Power Module	29	Over Volts	P29 Over Volts
P29:S13	15029713	150T713	Power Module	29	Under Volts	P29 Under Volts
P29:S14	33029714	330T714	Power Module	29	Slave Fail	P29 Slave Fail
P29:S15	30929715	309T715	Power Module	29	Battery Test	P29 Battery Test
P29:S16	14329716	143T716	Power Module	29	LAN Comms	P29 LAN Comms
P30:Z01	14030701	140U701	Power Module	30	Z01	P30:Z01
P30:Z02	14030702	140U702	Power Module	30	Z02	P30:Z02
P30:S01	14530701	145U701	Power Module	30	Cabinet Tamper	P30 Cabinet Tamper
P30:S02	30130702	301U702	Power Module	30	AC fail	P30 AC fail
P30:S03	30230703	302U703	Power Module	30	Low Battery	P30 Low Battery
P30:S04	31130704	311U704	Power Module	30	Battery Fail	P30 Battery Fail
P30:S05	30030705	300U705	Power Module	30	Detector Fuse	P30 Detector Fuse
P30:S06	30030706	300U706	Power Module	30	LAN Fuse	P30 LAN Fuse
P30:S07	30030707	300U707	Power Module	30	Battery Fuse	P30 Battery Fuse
P30:S08	30030708	300U708	Power Module	30	Aux2 Fuse	P30 Aux2 Fuse
P30:S09	32030709	320U709	Power Module	30	Aux2 Tamper	P30 Aux2 Tamper
P30:S10	31230710	312U710	Power Module	30	Detector Over Current	P30 Detector Over Current
P30:S11	31230711	312U711	Power Module	30	Charger Over Current	P30 Charger Over Current
P30:S12	15030712	150U712	Power Module	30	Over Volts	P30 Over Volts
P30:S13	15030713	150U713	Power Module	30	Under Volts	P30 Under Volts
P30:S14	33030714	330U714	Power Module	30	Slave Fail	P30 Slave Fail
P30:S15	30930715	309U715	Power Module	30	Battery Test	P30 Battery Test
P30:S16	14330716	143U716	Power Module	30	LAN Comms	P30 LAN Comms
P31:Z01	14031701	140V701	Power Module	31	Z01	P31:Z01
P31:Z02	14031702	140V702	Power Module	31	Z02	P31:Z02
P31:S01	14531701	145V701	Power Module	31	Cabinet Tamper	P31 Cabinet Tamper
P31:S02	30131702	301V702	Power Module	31	AC fail	P31 AC fail

Integriti Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P31:S03	30231703	302V703	Power Module	31	Low Battery	P31 Low Battery
P31:S04	31131704	311V704	Power Module	31	Battery Fail	P31 Battery Fail
P31:S05	30031705	300V705	Power Module	31	Detector Fuse	P31 Detector Fuse
P31:S06	30031706	300V706	Power Module	31	LAN Fuse	P31 LAN Fuse
P31:S07	30031707	300V707	Power Module	31	Battery Fuse	P31 Battery Fuse
P31:S08	30031708	300V708	Power Module	31	Aux2 Fuse	P31 Aux2 Fuse
P31:S09	32031709	320V709	Power Module	31	Aux2 Tamper	P31 Aux2 Tamper
P31:S10	31231710	312V710	Power Module	31	Detector Over Current	P31 Detector Over Current
P31:S11	31231711	312V711	Power Module	31	Charger Over Current	P31 Charger Over Current
P31:S12	15031712	150V712	Power Module	31	Over Volts	P31 Over Volts
P31:S13	15031713	150V713	Power Module	31	Under Volts	P31 Under Volts
P31:S14	33031714	330V714	Power Module	31	Slave Fail	P31 Slave Fail
P31:S15	30931715	309V715	Power Module	31	Battery Test	P31 Battery Test
P31:S16	14331716	143V716	Power Module	31	LAN Comms	P31 LAN Comms
P32:Z01	14032701	140W701	Power Module	32	Z01	P32:Z01
P32:Z02	14032702	140W702	Power Module	32	Z02	P32:Z02
P32:S01	14532701	145W701	Power Module	32	Cabinet Tamper	P32 Cabinet Tamper
P32:S02	30132702	301W702	Power Module	32	AC fail	P32 AC fail
P32:S03	30232703	302W703	Power Module	32	Low Battery	P32 Low Battery
P32:S04	31132704	311W704	Power Module	32	Battery Fail	P32 Battery Fail
P32:S05	30032705	300W705	Power Module	32	Detector Fuse	P32 Detector Fuse
P32:S06	30032706	300W706	Power Module	32	LAN Fuse	P32 LAN Fuse
P32:S07	30032707	300W707	Power Module	32	Battery Fuse	P32 Battery Fuse
P32:S08	30032708	300W708	Power Module	32	Aux2 Fuse	P32 Aux2 Fuse
P32:S09	32032709	320W709	Power Module	32	Aux2 Tamper	P32 Aux2 Tamper
P32:S10	31232710	312W710	Power Module	32	Detector Over Current	P32 Detector Over Current
P32:S11	31232711	312W711	Power Module	32	Charger Over Current	P32 Charger Over Current
P32:S12	15032712	150W712	Power Module	32	Over Volts	P32 Over Volts
P32:S13	15032713	150W713	Power Module	32	Under Volts	P32 Under Volts
P32:S14	33032714	330W714	Power Module	32	Slave Fail	P32 Slave Fail
P32:S15	30932715	309W715	Power Module	32	Battery Test	P32 Battery Test
P32:S16	14332716	143W716	Power Module	32	LAN Comms	P32 LAN Comms
P33:Z01	14033701	140X701	Power Module	33	Z01	P33:Z01
P33:Z02	14033702	140X702	Power Module	33	Z02	P33:Z02
P33:S01	14533701	145X701	Power Module	33	Cabinet Tamper	P33 Cabinet Tamper
P33:S02	30133702	301X702	Power Module	33	AC fail	P33 AC fail
P33:S03	30233703	302X703	Power Module	33	Low Battery	P33 Low Battery
P33:S04	31133704	311X704	Power Module	33	Battery Fail	P33 Battery Fail
P33:S05	30033705	300X705	Power Module	33	Detector Fuse	P33 Detector Fuse
P33:S06	30033706	300X706	Power Module	33	LAN Fuse	P33 LAN Fuse
P33:S07	30033707	300X707	Power Module	33	Battery Fuse	P33 Battery Fuse
P33:S08	30033708	300X708	Power Module	33	Aux2 Fuse	P33 Aux2 Fuse
P33:S09	32033709	320X709	Power Module	33	Aux2 Tamper	P33 Aux2 Tamper
P33:S10	31233710	312X710	Power Module	33	Detector Over Current	P33 Detector Over Current
P33:S11	31233711	312X711	Power Module	33	Charger Over Current	P33 Charger Over Current
P33:S12	15033712	150X712	Power Module	33	Over Volts	P33 Over Volts
P33:S13	15033713	150X713	Power Module	33	Under Volts	P33 Under Volts
P33:S14	33033714	330X714	Power Module	33	Slave Fail	P33 Slave Fail
P33:S15	30933715	309X715	Power Module	33	Battery Test	P33 Battery Test
P33:S16	14333716	143X716	Power Module	33	LAN Comms	P33 LAN Comms
P34:Z01	14034701	140Y701	Power Module	34	Z01	P34:Z01
P34:Z02	14034702	140Y702	Power Module	34	Z02	P34:Z02
P34:S01	14534701	145Y701	Power Module	34	Cabinet Tamper	P34 Cabinet Tamper
P34:S02	30134702	301Y702	Power Module	34	AC fail	P34 AC fail
P34:S03	30234703	302Y703	Power Module	34	Low Battery	P34 Low Battery
P34:S04	31134704	311Y704	Power Module	34	Battery Fail	P34 Battery Fail
P34:S05	30034705	300Y705	Power Module	34	Detector Fuse	P34 Detector Fuse

Integrati Input ID	Contact ID Message	Account Maint. Zone	Module		Input Description	Combined Module ID and Input Description
			Type	No.		
P34:S06	30034706	300Y706	Power Module	34	LAN Fuse	P34 LAN Fuse
P34:S07	30034707	300Y707	Power Module	34	Battery Fuse	P34 Battery Fuse
P34:S08	30034708	300Y708	Power Module	34	Aux2 Fuse	P34 Aux2 Fuse
P34:S09	32034709	320Y709	Power Module	34	Aux2 Tamper	P34 Aux2 Tamper
P34:S10	31234710	312Y710	Power Module	34	Detector Over Current	P34 Detector Over Current
P34:S11	31234711	312Y711	Power Module	34	Charger Over Current	P34 Charger Over Current
P34:S12	15034712	150Y712	Power Module	34	Over Volts	P34 Over Volts
P34:S13	15034713	150Y713	Power Module	34	Under Volts	P34 Under Volts
P34:S14	33034714	330Y714	Power Module	34	Slave Fail	P34 Slave Fail
P34:S15	30934715	309Y715	Power Module	34	Battery Test	P34 Battery Test
P34:S16	14334716	143Y716	Power Module	34	LAN Comms	P34 LAN Comms
P35-P99:Z01	14035701	140Z701	Power Module	35	Z01	P35-P99:Z01
P35-P99:Z02	14035702	140Z702	Power Module	35	Z02	P35-P99:Z02
P35-P99:S01	14535701	145Z701	Power Module	35	Cabinet Tamper	P35-P99 Cabinet Tamper
P35-P99:S02	30135702	301Z702	Power Module	35	AC fail	P35-P99 AC fail
P35-P99:S03	30235703	302Z703	Power Module	35	Low Battery	P35-P99 Low Battery
P35-P99:S04	31135704	311Z704	Power Module	35	Battery Fail	P35-P99 Battery Fail
P35-P99:S05	30035705	300Z705	Power Module	35	Detector Fuse	P35-P99 Detector Fuse
P35-P99:S06	30035706	300Z706	Power Module	35	LAN Fuse	P35-P99 LAN Fuse
P35-P99:S07	30035707	300Z707	Power Module	35	Battery Fuse	P35-P99 Battery Fuse
P35-P99:S08	30035708	300Z708	Power Module	35	Aux2 Fuse	P35-P99 Aux2 Fuse
P35-P99:S09	32035709	320Z709	Power Module	35	Aux2 Tamper	P35-P99 Aux2 Tamper
P35-P99:S10	31235710	312Z710	Power Module	35	Detector Over Current	P35-P99 Detector Over Current
P35-P99:S11	31235711	312Z711	Power Module	35	Charger Over Current	P35-P99 Charger Over Current
P35-P99:S12	15035712	150Z712	Power Module	35	Over Volts	P35-P99 Over Volts
P35-P99:S13	15035713	150Z713	Power Module	35	Under Volts	P35-P99 Under Volts
P35-P99:S14	33035714	330Z714	Power Module	35	Slave Fail	P35-P99 Slave Fail
P35-P99:S15	30935715	309Z715	Power Module	35	Battery Test	P35-P99 Battery Test
P35-P99:S16	14335716	143Z716	Power Module	35	LAN Comms	P35-P99 LAN Comms