

Integriti Contact ID Mapping

Revision 2.0 January 2013.

Control Module Firmware V2.0 or later.

1. Standard Map

2. Access Map

NOTES:

1)

Point numbering is shown in these tables for 16 Module numbers of each Module type, with the exception of:

- LCD Terminals and Touchscreen Terminals in the "Standard" Map, where 20 Module numbers are supported.
- 2-Door Reader Modules in the "Access" Map, where 36 Module numbers are supported.

Unique reporting of Zone Inputs and System Inputs is only available for a limited number of Modules of each type. Inputs on Module numbers above that limit are shaded in these tables. The Inputs in the shaded areas of the tables, along with all Inputs on Modules above Module number 16 (*see exceptions above*), report on Point 999 . These Inputs can only be differentiated by the Event Code and Area Number (Group Byte).

2)

Some Module Types share a range of point numbers. If unique reporting of Zones and System Inputs is required, then the system Module numbering should be planned to ensure that the Contact ID point numbers are not duplicated, or do not overlap with other Module types that share the same point number range.

Modules Types that share point numbers are as follows:

Standard Map:

- LCD Terminal, Touchscreen Terminal and Graphic Terminal
- Zone Expander, RF Expander and Encrypted Expander
- Two-Door Access Module and Four-Door Access Module

Access Map:

- LCD Terminal, Touchscreen Terminal and Graphic Terminal
- Zone Expander, RF Expander and Encrypted Expander
- Two-Door Access Module and Four-Door Access Module

STANDARD MAP

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Cnn:S39	Door #6 Lock Tamper	432	999															
Cnn:S40	Door #7 Lock Tamper	432	999															
Cnn:S41	Door #8 Lock Tamper	432	999															
Cnn:S42	Door #1 Forced	423	999															
Cnn:S43	Door #2 Forced	423	999															
Cnn:S44	Door #3 Forced	423	999															
Cnn:S45	Door #4 Forced	423	999															
Cnn:S46	Door #5 Forced	423	999															
Cnn:S47	Door #6 Forced	423	999															
Cnn:S48	Door #7 Forced	423	999															
Cnn:S49	Door #8 Forced	423	999															
Cnn:S50	Door #1 DOTL	426	999															
Cnn:S51	Door #2 DOTL	426	999															
Cnn:S52	Door #3 DOTL	426	999															
Cnn:S53	Door #4 DOTL	426	999															
Cnn:S54	Door #5 DOTL	426	999															
Cnn:S55	Door #6 DOTL	426	999															
Cnn:S56	Door #7 DOTL	426	999															
Cnn:S57	Door #8 DOTL	426	999															
Cnn:S58	Rdr #1 Invalid Card	140	999															
Cnn:S59	Rdr #2 Invalid Card	140	999															
Cnn:S60	Rdr #3 Invalid Card	140	999															
Cnn:S61	Rdr #4 Invalid Card	140	999															
Cnn:S62	Rdr #5 Invalid Card	140	999															
Cnn:S63	Rdr #6 Invalid Card	140	999															
Cnn:S64	Rdr #7 Invalid Card	140	999															
Cnn:S65	Rdr #8 Invalid Card	140	999															
Cnn:S66	Rdr #9 Invalid Card	140	999															
Cnn:S67	Rdr #10 Invalid Card	140	999															
Cnn:S68	Rdr #11 Invalid Card	140	999															
Cnn:S69	Rdr #12 Invalid Card	140	999															
Cnn:S70	Rdr #13 Invalid Card	140	999															
Cnn:S71	Rdr #14 Invalid Card	140	999															
Cnn:S72	Rdr #15 Invalid Card	140	999															
Cnn:S73	Rdr #16 Invalid Card	140	999															
Cnn:S74	Rdr #1 Duress	122	999															
Cnn:S75	Rdr #2 Duress	122	999															
Cnn:S76	Rdr #3 Duress	122	999															
Cnn:S77	Rdr #4 Duress	122	999															
Cnn:S78	Rdr #5 Duress	122	999															
Cnn:S79	Rdr #6 Duress	122	999															
Cnn:S80	Rdr #7 Duress	122	999															
Cnn:S81	Rdr #8 Duress	122	999															

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	LCD TERMINAL																	
Tnn:Z01	Zone Input 1		141	151	161	171	181	191	201	211	221	231	241	251	261	271	281	291
Tnn:Z02	Zone Input 2		142	152	162	172	182	192	202	212	222	232	242	252	262	272	282	292
Tnn:S01	Cabinet tamper.	145	143	153	163	173	183	193	203	213	223	233	243	253	263	273	283	293
Tnn:S02	Panic	120	144	154	164	174	184	194	204	214	224	234	244	254	264	274	284	294
Tnn:S03	Door Forced	423	145	155	165	175	185	195	205	215	225	235	245	255	265	275	285	295
Tnn:S04	Door DOTL	426	146	156	166	176	186	196	206	216	226	236	246	256	266	276	286	296
Tnn:S05	Duress	122	147	157	167	177	187	197	207	217	227	237	247	257	267	277	287	297
Tnn:S06	Deadman	102	148	158	168	178	188	198	208	218	228	238	248	258	268	278	288	298
Tnn:S07	PIN Attempts	461	149	159	169	179	189	199	209	219	229	239	249	259	269	279	289	299
Tnn:S08	LAN Comms	143	150	160	170	180	190	200	210	220	230	240	250	260	270	280	290	300
	TOUCHSCREEN TERMINAL																	
Knn:Z01	Zone Input 1		141	151	161	171	181	191	201	211	221	231	241	251	261	271	281	291
Knn:Z02	Zone Input 2		142	152	162	172	182	192	202	212	222	232	242	252	262	272	282	292
Knn:S01	Cabinet tamper.	145	143	153	163	173	183	193	203	213	223	233	243	253	263	273	283	293
Knn:S02	Panic	120	144	154	164	174	184	194	204	214	224	234	244	254	264	274	284	294
Knn:S03	Door Forced	423	145	155	165	175	185	195	205	215	225	235	245	255	265	275	285	295
Knn:S04	Door DOTL	426	146	156	166	176	186	196	206	216	226	236	246	256	266	276	286	296
Knn:S05	Duress	122	147	157	167	177	187	197	207	217	227	237	247	257	267	277	287	297
Knn:S06	Deadman	102	148	158	168	178	188	198	208	218	228	238	248	258	268	278	288	298
Knn:S07	PIN Attempts	461	149	159	169	179	189	199	209	219	229	239	249	259	269	279	289	299
Knn:S08	LAN Comms	143	150	160	170	180	190	200	210	220	230	240	250	260	270	280	290	300

Input ID	Module Type / Input	Event Code	17	18	19	20
	LCD TERMINAL					
Tnn:Z01	Zone Input 1		301	311	321	331
Tnn:Z02	Zone Input 2		302	312	322	332
Tnn:S01	Cabinet tamper.	145	303	313	323	333
Tnn:S02	Panic	120	304	314	324	334
Tnn:S03	Door Forced	423	305	315	325	335
Tnn:S04	Door DOTL	426	306	316	326	336
Tnn:S05	Duress	122	307	317	327	337
Tnn:S06	Deadman	102	308	318	328	338
Tnn:S07	PIN Attempts	461	309	319	329	339
Tnn:S08	LAN Comms	143	310	320	330	340
	TOUCHSCREEN TERMINAL					
Knn:Z01	Zone Input 1		301	311	321	331
Knn:Z02	Zone Input 2		302	312	322	332
Knn:S01	Cabinet tamper.	145	303	313	323	333
Knn:S02	Panic	120	304	314	324	334
Knn:S03	Door Forced	423	305	315	325	335
Knn:S04	Door DOTL	426	306	316	326	336
Knn:S05	Duress	122	307	317	327	337
Knn:S06	Deadman	102	308	318	328	338
Knn:S07	PIN Attempts	461	309	319	329	339
Knn:S08	LAN Comms	143	310	320	330	340

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	ENCRYPTED EXPANDER																	
Snn:Z01	Zone Input 1		341	373	405	437	469	501	533	565	597	629	661	693	725	999	999	999
Snn:Z02	Zone Input 2		342	374	406	438	470	502	534	566	598	630	662	694	726	999	999	999
Snn:Z03	Zone Input 3		343	375	407	439	471	503	535	567	599	631	663	695	727	999	999	999
Snn:Z04	Zone Input 4		344	376	408	440	472	504	536	568	600	632	664	696	728	999	999	999
Snn:Z05	Zone Input 5		345	377	409	441	473	505	537	569	601	633	665	697	729	999	999	999
Snn:Z06	Zone Input 6		346	378	410	442	474	506	538	570	602	634	666	698	730	999	999	999
Snn:Z07	Zone Input 7		347	379	411	443	475	507	539	571	603	635	667	699	731	999	999	999
Snn:Z08	Zone Input 8		348	380	412	444	476	508	540	572	604	636	668	700	732	999	999	999
Snn:Z09	Zone Input 9		349	381	413	445	477	509	541	573	605	637	669	701	733	999	999	999
Snn:Z10	Zone Input 10		350	382	414	446	478	510	542	574	606	638	670	702	734	999	999	999
Snn:Z11	Zone Input 11		351	383	415	447	479	511	543	575	607	639	671	703	735	999	999	999
Snn:Z12	Zone Input 12		352	384	416	448	480	512	544	576	608	640	672	704	736	999	999	999
Snn:Z13	Zone Input 13		353	385	417	449	481	513	545	577	609	641	673	705	737	999	999	999
Snn:Z14	Zone Input 14		354	386	418	450	482	514	546	578	610	642	674	706	738	999	999	999
Snn:Z15	Zone Input 15		355	387	419	451	483	515	547	579	611	643	675	707	739	999	999	999
Snn:Z16	Zone Input 16		356	388	420	452	484	516	548	580	612	644	676	708	740	999	999	999
Snn:S01	Cabinet tamper.	145	357	389	421	453	485	517	549	581	613	645	677	709	741	999	999	999
Snn:S02	Internal siren tamper.	320	358	390	422	454	486	518	550	582	614	646	678	710	742	999	999	999
Snn:S03	External siren tamper.	320	359	391	423	455	487	519	551	583	615	647	679	711	743	999	999	999
Snn:S04	AC fail.	301	360	392	424	456	488	520	552	584	616	648	680	712	744	999	999	999
Snn:S05	Low battery.	302	361	393	425	457	489	521	553	585	617	649	681	713	745	999	999	999
Snn:S06	LAN fuse.	300	362	394	426	458	490	522	554	586	618	650	682	714	746	999	999	999
Snn:S07	Detector fuse.	300	363	395	427	459	491	523	555	587	619	651	683	715	747	999	999	999
Snn:S08	Battery test	309	364	396	428	460	492	524	556	588	620	652	684	716	748	999	999	999
Snn:S09	Seismic tamper	145	365	397	429	461	493	525	557	589	621	653	685	717	749	999	999	999
Snn:S10	ELM Low Volts	338	366	398	430	462	494	526	558	590	622	654	686	718	750	999	999	999
Snn:S11	ELM Serial Number	380	367	399	431	463	495	527	559	591	623	655	687	719	751	999	999	999
Snn:S12	ELM Poll Fail	382	368	400	432	464	496	528	560	592	624	656	688	720	752	999	999	999
Snn:S13	ELM Default Key	383	369	401	433	465	497	529	561	593	625	657	689	721	753	999	999	999
Snn:S14	ELM Extra	0	370	402	434	466	498	530	562	594	626	658	690	722	754	999	999	999
Snn:S15	ELM Security	0	371	403	435	467	499	531	563	595	627	659	691	723	755	999	999	999
Snn:S16	LAN Comms	143	372	404	436	468	500	532	564	596	628	660	692	724	756	999	999	999

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	INTEGRITI GRAPHIC TERMINAL																	
Gnn:Z01	Zone Input 1		141	166	191	216	241	266	291	316	999	999	999	999	999	999	999	999
Gnn:Z02	Zone Input 2		142	167	192	217	242	267	292	317	999	999	999	999	999	999	999	999
Gnn:S01	Door reed	140	143	168	193	218	243	268	293	318	999	999	999	999	999	999	999	999
Gnn:S02	Door tongue	140	144	169	194	219	244	269	294	319	999	999	999	999	999	999	999	999
Gnn:S03	Door lock tamper	432	145	170	195	220	245	270	295	320	999	999	999	999	999	999	999	999
Gnn:S04	Door Forced	423	146	171	196	221	246	271	296	321	999	999	999	999	999	999	999	999
Gnn:S05	Door DOTL	426	147	172	197	222	247	272	297	322	999	999	999	999	999	999	999	999
Gnn:S06	Cabinet tamper.	145	148	173	198	223	248	273	298	323	999	999	999	999	999	999	999	999
Gnn:S07	AC Fail	301	149	174	199	224	249	274	299	324	999	999	999	999	999	999	999	999
Gnn:S08	Low Batt	302	150	175	200	225	250	275	300	325	999	999	999	999	999	999	999	999
Gnn:S09	Lan Fuse	300	151	176	201	226	251	276	301	326	999	999	999	999	999	999	999	999
Gnn:S10	Detector Fuse	300	152	177	202	227	252	277	302	327	999	999	999	999	999	999	999	999
Gnn:S11	Low Volts	300	153	178	203	228	253	278	303	328	999	999	999	999	999	999	999	999
Gnn:S12	Power Supply Fail	300	154	179	204	229	254	279	304	329	999	999	999	999	999	999	999	999
Gnn:S13	Batt Test	309	155	180	205	230	255	280	305	330	999	999	999	999	999	999	999	999
Gnn:S14	Invalid Card	140	156	181	206	231	256	281	306	331	999	999	999	999	999	999	999	999
Gnn:S15	Duress	122	157	182	207	232	257	282	307	332	999	999	999	999	999	999	999	999
Gnn:S16	Reader Tamper	140	158	183	208	233	258	283	308	333	999	999	999	999	999	999	999	999
Gnn:S17	Panic	120	159	184	209	234	259	284	309	334	999	999	999	999	999	999	999	999
Gnn:S18	PIN Attempts	461	160	185	210	235	260	285	310	335	999	999	999	999	999	999	999	999
Gnn:S19	Temperature	140	161	186	211	236	261	286	311	336	999	999	999	999	999	999	999	999
Gnn:S20	Light Level	140	162	187	212	237	262	287	312	337	999	999	999	999	999	999	999	999
Gnn:S21	LAN Comms	143	163	188	213	238	263	288	313	338	999	999	999	999	999	999	999	999
Gnn:S22	Spare	140	164	189	214	239	264	289	314	339	999	999	999	999	999	999	999	999
Gnn:S23	Spare	140	165	190	215	240	265	290	315	340	999	999	999	999	999	999	999	999

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	INTEGRITI ZONE EXPANDER																	
Enn:Z01	Zone Input 1		341	394	447	500	553	606	659	712	999	999	999	999	999	999	999	999
Enn:Z02	Zone Input 2		342	395	448	501	554	607	660	713	999	999	999	999	999	999	999	999
Enn:Z03	Zone Input 3		343	396	449	502	555	608	661	714	999	999	999	999	999	999	999	999
Enn:Z04	Zone Input 4		344	397	450	503	556	609	662	715	999	999	999	999	999	999	999	999
Enn:Z05	Zone Input 5		345	398	451	504	557	610	663	716	999	999	999	999	999	999	999	999
Enn:Z06	Zone Input 6		346	399	452	505	558	611	664	717	999	999	999	999	999	999	999	999
Enn:Z07	Zone Input 7		347	400	453	506	559	612	665	718	999	999	999	999	999	999	999	999
Enn:Z08	Zone Input 8		348	401	454	507	560	613	666	719	999	999	999	999	999	999	999	999
Enn:Z09	Zone Input 9		349	402	455	508	561	614	667	720	999	999	999	999	999	999	999	999
Enn:Z10	Zone Input 10		350	403	456	509	562	615	668	721	999	999	999	999	999	999	999	999
Enn:Z11	Zone Input 11		351	404	457	510	563	616	669	722	999	999	999	999	999	999	999	999
Enn:Z12	Zone Input 12		352	405	458	511	564	617	670	723	999	999	999	999	999	999	999	999
Enn:Z13	Zone Input 13		353	406	459	512	565	618	671	724	999	999	999	999	999	999	999	999
Enn:Z14	Zone Input 14		354	407	460	513	566	619	672	725	999	999	999	999	999	999	999	999
Enn:Z15	Zone Input 15		355	408	461	514	567	620	673	726	999	999	999	999	999	999	999	999
Enn:Z16	Zone Input 16		356	409	462	515	568	621	674	727	999	999	999	999	999	999	999	999
Enn:Z17	Zone Input 17		357	410	463	516	569	622	675	728	999	999	999	999	999	999	999	999
Enn:Z18	Zone Input 18		358	411	464	517	570	623	676	729	999	999	999	999	999	999	999	999
Enn:Z19	Zone Input 19		359	412	465	518	571	624	677	730	999	999	999	999	999	999	999	999
Enn:Z20	Zone Input 20		360	413	466	519	572	625	678	731	999	999	999	999	999	999	999	999
Enn:Z21	Zone Input 21		361	414	467	520	573	626	679	732	999	999	999	999	999	999	999	999
Enn:Z22	Zone Input 22		362	415	468	521	574	627	680	733	999	999	999	999	999	999	999	999
Enn:Z23	Zone Input 23		363	416	469	522	575	628	681	734	999	999	999	999	999	999	999	999
Enn:Z24	Zone Input 24		364	417	470	523	576	629	682	735	999	999	999	999	999	999	999	999
Enn:Z25	Zone Input 25		365	418	471	524	577	630	683	736	999	999	999	999	999	999	999	999
Enn:Z26	Zone Input 26		366	419	472	525	578	631	684	737	999	999	999	999	999	999	999	999
Enn:Z27	Zone Input 27		367	420	473	526	579	632	685	738	999	999	999	999	999	999	999	999
Enn:Z28	Zone Input 28		368	421	474	527	580	633	686	739	999	999	999	999	999	999	999	999
Enn:Z29	Zone Input 29		369	422	475	528	581	634	687	740	999	999	999	999	999	999	999	999
Enn:Z30	Zone Input 30		370	423	476	529	582	635	688	741	999	999	999	999	999	999	999	999
Enn:Z31	Zone Input 31		371	424	477	530	583	636	689	742	999	999	999	999	999	999	999	999
Enn:Z32	Zone Input 32		372	425	478	531	584	637	690	743	999	999	999	999	999	999	999	999
Enn:S01	Cabinet tamper.	145	373	426	479	532	585	638	691	744	999	999	999	999	999	999	999	999
Enn:S02	Internal siren tamper.	320	374	427	480	533	586	639	692	745	999	999	999	999	999	999	999	999
Enn:S03	External siren tamper.	320	375	428	481	534	587	640	693	746	999	999	999	999	999	999	999	999
Enn:S04	AC fail.	301	376	429	482	535	588	641	694	747	999	999	999	999	999	999	999	999
Enn:S05	Low battery.	302	377	430	483	536	589	642	695	748	999	999	999	999	999	999	999	999
Enn:S06	LAN fuse.	300	378	431	484	537	590	643	696	749	999	999	999	999	999	999	999	999
Enn:S07	Detector fuse.	300	379	432	485	538	591	644	697	750	999	999	999	999	999	999	999	999
Enn:S08	Low Volts	300	380	433	486	539	592	645	698	751	999	999	999	999	999	999	999	999
Enn:S09	Power Supply Fail	300	381	434	487	540	593	646	699	752	999	999	999	999	999	999	999	999
Enn:S10	Battery test	309	382	435	488	541	594	647	700	753	999	999	999	999	999	999	999	999

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	INTEGRITI 2-DOOR ACC MOD																	
Rnn:Z01	Door 1 Reed (Zone Input 1)		771	802	833	864	895	926	957	999	999	999	999	999	999	999	999	999
Rnn:Z02	Door 2 Reed (Zone Input 2)		772	803	834	865	896	927	958	999	999	999	999	999	999	999	999	999
Rnn:Z03	Door 1 Tongue (Zone Input 3)		773	804	835	866	897	928	959	999	999	999	999	999	999	999	999	999
Rnn:Z04	Door 2 Tongue (Zone Input 4)		774	805	836	867	898	929	960	999	999	999	999	999	999	999	999	999
Rnn:Z05	Door 1 REX (Zone Input 5)		775	806	837	868	899	930	961	999	999	999	999	999	999	999	999	999
Rnn:Z06	Door 2 REX (Zone Input 6)		776	807	838	869	900	931	962	999	999	999	999	999	999	999	999	999
Rnn:Z07	Door 1 REN (Zone Input 7)		777	808	839	870	901	932	963	999	999	999	999	999	999	999	999	999
Rnn:Z08	Door 2 REN (Zone Input 8)		778	809	840	871	902	933	964	999	999	999	999	999	999	999	999	999
Rnn:S01	Door1 Lock Tamper.	432	779	810	841	872	903	934	965	999	999	999	999	999	999	999	999	999
Rnn:S02	Door2 Lock Tamper.	432	780	811	842	873	904	935	966	999	999	999	999	999	999	999	999	999
Rnn:S03	Door1 Forced.	423	781	812	843	874	905	936	967	999	999	999	999	999	999	999	999	999
Rnn:S04	Door2 Forced.	423	782	813	844	875	906	937	968	999	999	999	999	999	999	999	999	999
Rnn:S05	Door1 DOTL.	426	783	814	845	876	907	938	969	999	999	999	999	999	999	999	999	999
Rnn:S06	Door2 DOTL.	426	784	815	846	877	908	939	970	999	999	999	999	999	999	999	999	999
Rnn:S07	Cabinet tamper.	145	785	816	847	878	909	940	971	999	999	999	999	999	999	999	999	999
Rnn:S08	AC fail.	301	786	817	848	879	910	941	972	999	999	999	999	999	999	999	999	999
Rnn:S09	Low battery.	302	787	818	849	880	911	942	973	999	999	999	999	999	999	999	999	999
Rnn:S10	Lan Fuse.	300	788	819	850	881	912	943	974	999	999	999	999	999	999	999	999	999
Rnn:S11	Detector Fuse	300	789	820	851	882	913	944	975	999	999	999	999	999	999	999	999	999
Rnn:S12	Low Volts	300	790	821	852	883	914	945	976	999	999	999	999	999	999	999	999	999
Rnn:S13	Power Supply Fail	300	791	822	853	884	915	946	977	999	999	999	999	999	999	999	999	999
Rnn:S14	Batt Test	309	792	823	854	885	916	947	978	999	999	999	999	999	999	999	999	999
Rnn:S15	Rdr1 Invalid Card	140	793	824	855	886	917	948	979	999	999	999	999	999	999	999	999	999
Rnn:S16	Rdr2 Invalid Card	140	794	825	856	887	918	949	980	999	999	999	999	999	999	999	999	999
Rnn:S17	Rdr1 Duress	122	795	826	857	888	919	950	999	999	999	999	999	999	999	999	999	999
Rnn:S18	Rdr2 Duress	122	796	827	858	889	920	951	999	999	999	999	999	999	999	999	999	999
Rnn:S19	Rdr1 Tamper	330	797	828	859	890	921	952	999	999	999	999	999	999	999	999	999	999
Rnn:S20	Rdr2 Tamper	330	798	829	860	891	922	953	999	999	999	999	999	999	999	999	999	999
Rnn:S21	LAN Comms.	143	799	830	861	892	923	954	999	999	999	999	999	999	999	999	999	999
Rnn:S22	Spare	140	800	831	862	893	924	955	999	999	999	999	999	999	999	999	999	999
Rnn:S23	Spare	140	801	832	863	894	925	956	999	999	999	999	999	999	999	999	999	999

[illegible]

Integriti Contact ID Mapping

"STANDARD" MAP

Rev. 2.0

[illegible]

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	INTEGRITI RF EXPANDER																	
Fnn:Z01	Zone Input 1		341	387	433	479	525	571	617	663	709	999	999	999	999	999	999	999
Fnn:Z02	Zone Input 2		342	388	434	480	526	572	618	664	710	999	999	999	999	999	999	999
Fnn:Z03	Zone Input 3		343	389	435	481	527	573	619	665	711	999	999	999	999	999	999	999
Fnn:Z04	Zone Input 4		344	390	436	482	528	574	620	666	712	999	999	999	999	999	999	999
Fnn:Z05	Zone Input 5		345	391	437	483	529	575	621	667	713	999	999	999	999	999	999	999
Fnn:Z06	Zone Input 6		346	392	438	484	530	576	622	668	714	999	999	999	999	999	999	999
Fnn:Z07	Zone Input 7		347	393	439	485	531	577	623	669	715	999	999	999	999	999	999	999
Fnn:Z08	Zone Input 8		348	394	440	486	532	578	624	670	716	999	999	999	999	999	999	999
Fnn:Z09	Zone Input 9		349	395	441	487	533	579	625	671	717	999	999	999	999	999	999	999
Fnn:Z10	Zone Input 10		350	396	442	488	534	580	626	672	718	999	999	999	999	999	999	999
Fnn:Z11	Zone Input 11		351	397	443	489	535	581	627	673	719	999	999	999	999	999	999	999
Fnn:Z12	Zone Input 12		352	398	444	490	536	582	628	674	720	999	999	999	999	999	999	999
Fnn:Z13	Zone Input 13		353	399	445	491	537	583	629	675	721	999	999	999	999	999	999	999
Fnn:Z14	Zone Input 14		354	400	446	492	538	584	630	676	722	999	999	999	999	999	999	999
Fnn:Z15	Zone Input 15		355	401	447	493	539	585	631	677	723	999	999	999	999	999	999	999
Fnn:Z16	Zone Input 16		356	402	448	494	540	586	632	678	724	999	999	999	999	999	999	999
Fnn:Z17	Zone Input 17		357	403	449	495	541	587	633	679	725	999	999	999	999	999	999	999
Fnn:Z18	Zone Input 18		358	404	450	496	542	588	634	680	726	999	999	999	999	999	999	999
Fnn:Z19	Zone Input 19		359	405	451	497	543	589	635	681	727	999	999	999	999	999	999	999
Fnn:Z20	Zone Input 20		360	406	452	498	544	590	636	682	728	999	999	999	999	999	999	999
Fnn:Z21	Zone Input 21		361	407	453	499	545	591	637	683	729	999	999	999	999	999	999	999
Fnn:Z22	Zone Input 22		362	408	454	500	546	592	638	684	730	999	999	999	999	999	999	999
Fnn:Z23	Zone Input 23		363	409	455	501	547	593	639	685	731	999	999	999	999	999	999	999
Fnn:Z24	Zone Input 24		364	410	456	502	548	594	640	686	732	999	999	999	999	999	999	999
Fnn:Z25	Zone Input 25		365	411	457	503	549	595	641	687	733	999	999	999	999	999	999	999
Fnn:Z26	Zone Input 26		366	412	458	504	550	596	642	688	734	999	999	999	999	999	999	999
Fnn:Z27	Zone Input 27		367	413	459	505	551	597	643	689	735	999	999	999	999	999	999	999
Fnn:Z28	Zone Input 28		368	414	460	506	552	598	644	690	736	999	999	999	999	999	999	999
Fnn:Z29	Zone Input 29		369	415	461	507	553	599	645	691	737	999	999	999	999	999	999	999
Fnn:Z30	Zone Input 30		370	416	462	508	554	600	646	692	738	999	999	999	999	999	999	999
Fnn:Z31	Zone Input 31		371	417	463	509	555	601	647	693	739	999	999	999	999	999	999	999
Fnn:Z32	Zone Input 32		372	418	464	510	556	602	648	694	740	999	999	999	999	999	999	999
Fnn:S01	Xmitter Low batt.	384	373	419	465	511	557	603	649	695	741	999	999	999	999	999	999	999
Fnn:S02	Xmitter Poll Fail	381	374	420	466	512	558	604	650	696	742	999	999	999	999	999	999	999
Fnn:S03	Xmitter Jam.	344	375	421	467	513	559	605	651	697	743	999	999	999	999	999	999	999
Fnn:S04	Cabinet tamper.	145	376	422	468	514	560	606	652	698	744	999	999	999	999	999	999	999
Fnn:S05	AC Fail.	301	377	423	469	515	561	607	653	699	745	999	999	999	999	999	999	999
Fnn:S06	Low battery.	302	378	424	470	516	562	608	654	700	746	999	999	999	999	999	999	999
Fnn:S07	Lan Fuse.	300	379	425	471	517	563	609	655	701	747	999	999	999	999	999	999	999
Fnn:S08	Detector Fuse.	300	380	426	472	518	564	610	656	702	748	999	999	999	999	999	999	999
Fnn:S09	Low Volts	300	381	427	473	519	565	611	657	703	749	999	999	999	999	999	999	999
Fnn:S10	Power Supply Fail	300	382	428	474	520	566	612	658	704	750	999	999	999	999	999	999	999

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Fnn:S11	Battery Test	309	383	429	475	521	567	613	659	705	751	999	999	999	999	999	999	999
Fnn:S12	LAN Comms status	143	384	430	476	522	568	614	660	706	752	999	999	999	999	999	999	999
Fnn:S13	Spare	140	385	431	477	523	569	615	661	707	753	999	999	999	999	999	999	999
Fnn:S14	Spare	140	386	432	478	524	570	616	662	708	754	999	999	999	999	999	999	999

ACCESS MAP

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Cnn:S39	Door #6 Lock Tamper	432	999															
Cnn:S40	Door #7 Lock Tamper	432	999															
Cnn:S41	Door #8 Lock Tamper	432	999															
Cnn:S42	Door #1 Forced	423	999															
Cnn:S43	Door #2 Forced	423	999															
Cnn:S44	Door #3 Forced	423	999															
Cnn:S45	Door #4 Forced	423	999															
Cnn:S46	Door #5 Forced	423	999															
Cnn:S47	Door #6 Forced	423	999															
Cnn:S48	Door #7 Forced	423	999															
Cnn:S49	Door #8 Forced	423	999															
Cnn:S50	Door #1 DOTL	426	999															
Cnn:S51	Door #2 DOTL	426	999															
Cnn:S52	Door #3 DOTL	426	999															
Cnn:S53	Door #4 DOTL	426	999															
Cnn:S54	Door #5 DOTL	426	999															
Cnn:S55	Door #6 DOTL	426	999															
Cnn:S56	Door #7 DOTL	426	999															
Cnn:S57	Door #8 DOTL	426	999															
Cnn:S58	Rdr #1 Invalid Card	140	999															
Cnn:S59	Rdr #2 Invalid Card	140	999															
Cnn:S60	Rdr #3 Invalid Card	140	999															
Cnn:S61	Rdr #4 Invalid Card	140	999															
Cnn:S62	Rdr #5 Invalid Card	140	999															
Cnn:S63	Rdr #6 Invalid Card	140	999															
Cnn:S64	Rdr #7 Invalid Card	140	999															
Cnn:S65	Rdr #8 Invalid Card	140	999															
Cnn:S66	Rdr #9 Invalid Card	140	999															
Cnn:S67	Rdr #10 Invalid Card	140	999															
Cnn:S68	Rdr #11 Invalid Card	140	999															
Cnn:S69	Rdr #12 Invalid Card	140	999															
Cnn:S70	Rdr #13 Invalid Card	140	999															
Cnn:S71	Rdr #14 Invalid Card	140	999															
Cnn:S72	Rdr #15 Invalid Card	140	999															
Cnn:S73	Rdr #16 Invalid Card	140	999															
Cnn:S74	Rdr #1 Duress	122	999															
Cnn:S75	Rdr #2 Duress	122	999															
Cnn:S76	Rdr #3 Duress	122	999															
Cnn:S77	Rdr #4 Duress	122	999															
Cnn:S78	Rdr #5 Duress	122	999															
Cnn:S79	Rdr #6 Duress	122	999															
Cnn:S80	Rdr #7 Duress	122	999															
Cnn:S81	Rdr #8 Duress	122	999															

[illegible]

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	ENCRYPTED EXPANDER																	
Snn:Z01	Zone Input 1		221	253	285	317	349	381	413	445	477	509	541	999	999	999	999	999
Snn:Z02	Zone Input 2		222	254	286	318	350	382	414	446	478	510	542	999	999	999	999	999
Snn:Z03	Zone Input 3		223	255	287	319	351	383	415	447	479	511	543	999	999	999	999	999
Snn:Z04	Zone Input 4		224	256	288	320	352	384	416	448	480	512	544	999	999	999	999	999
Snn:Z05	Zone Input 5		225	257	289	321	353	385	417	449	481	513	545	999	999	999	999	999
Snn:Z06	Zone Input 6		226	258	290	322	354	386	418	450	482	514	546	999	999	999	999	999
Snn:Z07	Zone Input 7		227	259	291	323	355	387	419	451	483	515	547	999	999	999	999	999
Snn:Z08	Zone Input 8		228	260	292	324	356	388	420	452	484	516	548	999	999	999	999	999
Snn:Z09	Zone Input 9		229	261	293	325	357	389	421	453	485	517	549	999	999	999	999	999
Snn:Z10	Zone Input 10		230	262	294	326	358	390	422	454	486	518	550	999	999	999	999	999
Snn:Z11	Zone Input 11		231	263	295	327	359	391	423	455	487	519	551	999	999	999	999	999
Snn:Z12	Zone Input 12		232	264	296	328	360	392	424	456	488	520	552	999	999	999	999	999
Snn:Z13	Zone Input 13		233	265	297	329	361	393	425	457	489	521	553	999	999	999	999	999
Snn:Z14	Zone Input 14		234	266	298	330	362	394	426	458	490	522	554	999	999	999	999	999
Snn:Z15	Zone Input 15		235	267	299	331	363	395	427	459	491	523	555	999	999	999	999	999
Snn:Z16	Zone Input 16		236	268	300	332	364	396	428	460	492	524	556	999	999	999	999	999
Snn:S01	Cabinet tamper.	145	237	269	301	333	365	397	429	461	493	525	557	999	999	999	999	999
Snn:S02	Internal siren tamper.	320	238	270	302	334	366	398	430	462	494	526	558	999	999	999	999	999
Snn:S03	External siren tamper.	320	239	271	303	335	367	399	431	463	495	527	559	999	999	999	999	999
Snn:S04	AC fail.	301	240	272	304	336	368	400	432	464	496	528	560	999	999	999	999	999
Snn:S05	Low battery.	302	241	273	305	337	369	401	433	465	497	529	561	999	999	999	999	999
Snn:S06	LAN fuse.	300	242	274	306	338	370	402	434	466	498	530	562	999	999	999	999	999
Snn:S07	Detector fuse.	300	243	275	307	339	371	403	435	467	499	531	563	999	999	999	999	999
Snn:S08	Battery test	309	244	276	308	340	372	404	436	468	500	532	564	999	999	999	999	999
Snn:S09	Seismic tamper	145	245	277	309	341	373	405	437	469	501	533	565	999	999	999	999	999
Snn:S10	ELM Low Volts	338	246	278	310	342	374	406	438	470	502	534	566	999	999	999	999	999
Snn:S11	ELM Serial Number	380	247	279	311	343	375	407	439	471	503	535	567	999	999	999	999	999
Snn:S12	ELM Poll Fail	382	248	280	312	344	376	408	440	472	504	536	568	999	999	999	999	999
Snn:S13	ELM Default Key	383	249	281	313	345	377	409	441	473	505	537	569	999	999	999	999	999
Snn:S14	ELM Extra	0	250	282	314	346	378	410	442	474	506	538	570	999	999	999	999	999
Snn:S15	ELM Security	0	251	283	315	347	379	411	443	475	507	539	571	999	999	999	999	999
Snn:S16	LAN Comms	143	252	284	316	348	380	412	444	476	508	540	572	999	999	999	999	999

[illegible]

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	INTEGRITI ZONE EXPANDER																	
Enn:Z01	Zone Input 1		221	274	327	380	433	486	539	999	999	999	999	999	999	999	999	999
Enn:Z02	Zone Input 2		222	275	328	381	434	487	540	999	999	999	999	999	999	999	999	999
Enn:Z03	Zone Input 3		223	276	329	382	435	488	541	999	999	999	999	999	999	999	999	999
Enn:Z04	Zone Input 4		224	277	330	383	436	489	542	999	999	999	999	999	999	999	999	999
Enn:Z05	Zone Input 5		225	278	331	384	437	490	543	999	999	999	999	999	999	999	999	999
Enn:Z06	Zone Input 6		226	279	332	385	438	491	544	999	999	999	999	999	999	999	999	999
Enn:Z07	Zone Input 7		227	280	333	386	439	492	545	999	999	999	999	999	999	999	999	999
Enn:Z08	Zone Input 8		228	281	334	387	440	493	546	999	999	999	999	999	999	999	999	999
Enn:Z09	Zone Input 9		229	282	335	388	441	494	547	999	999	999	999	999	999	999	999	999
Enn:Z10	Zone Input 10		230	283	336	389	442	495	548	999	999	999	999	999	999	999	999	999
Enn:Z11	Zone Input 11		231	284	337	390	443	496	549	999	999	999	999	999	999	999	999	999
Enn:Z12	Zone Input 12		232	285	338	391	444	497	550	999	999	999	999	999	999	999	999	999
Enn:Z13	Zone Input 13		233	286	339	392	445	498	551	999	999	999	999	999	999	999	999	999
Enn:Z14	Zone Input 14		234	287	340	393	446	499	552	999	999	999	999	999	999	999	999	999
Enn:Z15	Zone Input 15		235	288	341	394	447	500	553	999	999	999	999	999	999	999	999	999
Enn:Z16	Zone Input 16		236	289	342	395	448	501	554	999	999	999	999	999	999	999	999	999
Enn:Z17	Zone Input 17		237	290	343	396	449	502	555	999	999	999	999	999	999	999	999	999
Enn:Z18	Zone Input 18		238	291	344	397	450	503	556	999	999	999	999	999	999	999	999	999
Enn:Z19	Zone Input 19		239	292	345	398	451	504	557	999	999	999	999	999	999	999	999	999
Enn:Z20	Zone Input 20		240	293	346	399	452	505	558	999	999	999	999	999	999	999	999	999
Enn:Z21	Zone Input 21		241	294	347	400	453	506	559	999	999	999	999	999	999	999	999	999
Enn:Z22	Zone Input 22		242	295	348	401	454	507	560	999	999	999	999	999	999	999	999	999
Enn:Z23	Zone Input 23		243	296	349	402	455	508	561	999	999	999	999	999	999	999	999	999
Enn:Z24	Zone Input 24		244	297	350	403	456	509	562	999	999	999	999	999	999	999	999	999
Enn:Z25	Zone Input 25		245	298	351	404	457	510	563	999	999	999	999	999	999	999	999	999
Enn:Z26	Zone Input 26		246	299	352	405	458	511	564	999	999	999	999	999	999	999	999	999
Enn:Z27	Zone Input 27		247	300	353	406	459	512	565	999	999	999	999	999	999	999	999	999
Enn:Z28	Zone Input 28		248	301	354	407	460	513	566	999	999	999	999	999	999	999	999	999
Enn:Z29	Zone Input 29		249	302	355	408	461	514	567	999	999	999	999	999	999	999	999	999
Enn:Z30	Zone Input 30		250	303	356	409	462	515	568	999	999	999	999	999	999	999	999	999
Enn:Z31	Zone Input 31		251	304	357	410	463	516	569	999	999	999	999	999	999	999	999	999
Enn:Z32	Zone Input 32		252	305	358	411	464	517	570	999	999	999	999	999	999	999	999	999
Enn:S01	Cabinet tamper.	145	253	306	359	412	465	518	571	999	999	999	999	999	999	999	999	999
Enn:S02	Internal siren tamper.	320	254	307	360	413	466	519	572	999	999	999	999	999	999	999	999	999
Enn:S03	External siren tamper.	320	255	308	361	414	467	520	573	999	999	999	999	999	999	999	999	999
Enn:S04	AC fail.	301	256	309	362	415	468	521	574	999	999	999	999	999	999	999	999	999
Enn:S05	Low battery.	302	257	310	363	416	469	522	575	999	999	999	999	999	999	999	999	999
Enn:S06	LAN fuse.	300	258	311	364	417	470	523	576	999	999	999	999	999	999	999	999	999
Enn:S07	Detector fuse.	300	259	312	365	418	471	524	577	999	999	999	999	999	999	999	999	999
Enn:S08	Low Volts	300	260	313	366	419	472	525	578	999	999	999	999	999	999	999	999	999
Enn:S09	Power Supply Fail	300	261	314	367	420	473	526	579	999	999	999	999	999	999	999	999	999
Enn:S10	Battery test	309	262	315	368	421	474	527	580	999	999	999	999	999	999	999	999	999

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

Input ID	Module Type / Input	Event Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Fnn:S11	Battery Test	309	263	309	355	401	447	493	539	585	999	999	999	999	999	999	999	999
Fnn:S12	LAN Comms status	143	264	310	356	402	448	494	540	586	999	999	999	999	999	999	999	999
Fnn:S13	Spare	140	265	311	357	403	449	495	541	587	999	999	999	999	999	999	999	999
Fnn:S14	Spare	140	266	312	358	404	450	496	542	588	999	999	999	999	999	999	999	999