

CAN 1
L H

TOP plate Jumper OFF
BOTTOM plate Jumper ON

CAN Local Parameters: (TOP PLATE)
Local Address: 1
Communication priority level: Master

CAN Remote Object 1 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 101
CAN Repeater Addr: 0

CAN Remote Object 2 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 2
CAN Repeater Addr: 0

CAN Remote Object 3 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 3
CAN Repeater Addr: 0

CAN Remote Object 4 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 4
CAN Repeater Addr: 0

CAN Remote Object 5 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 5
CAN Repeater Addr: 0

CAN Local Parameters: (BOTTOM PLATE)
Local Address: 101
Communication priority level: Slave


CAN Remote Object 1 Parameters:
Comm. Priority Level: Master
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 1
CAN Repeater Addr: 0

CAN Remote Object 2 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 2
CAN Repeater Addr: 0

CAN Remote Object 3 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 3
CAN Repeater Addr: 0

CAN Remote Object 4 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 4
CAN Repeater Addr: 0

CAN Remote Object 5 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 5
CAN Repeater Addr: 0

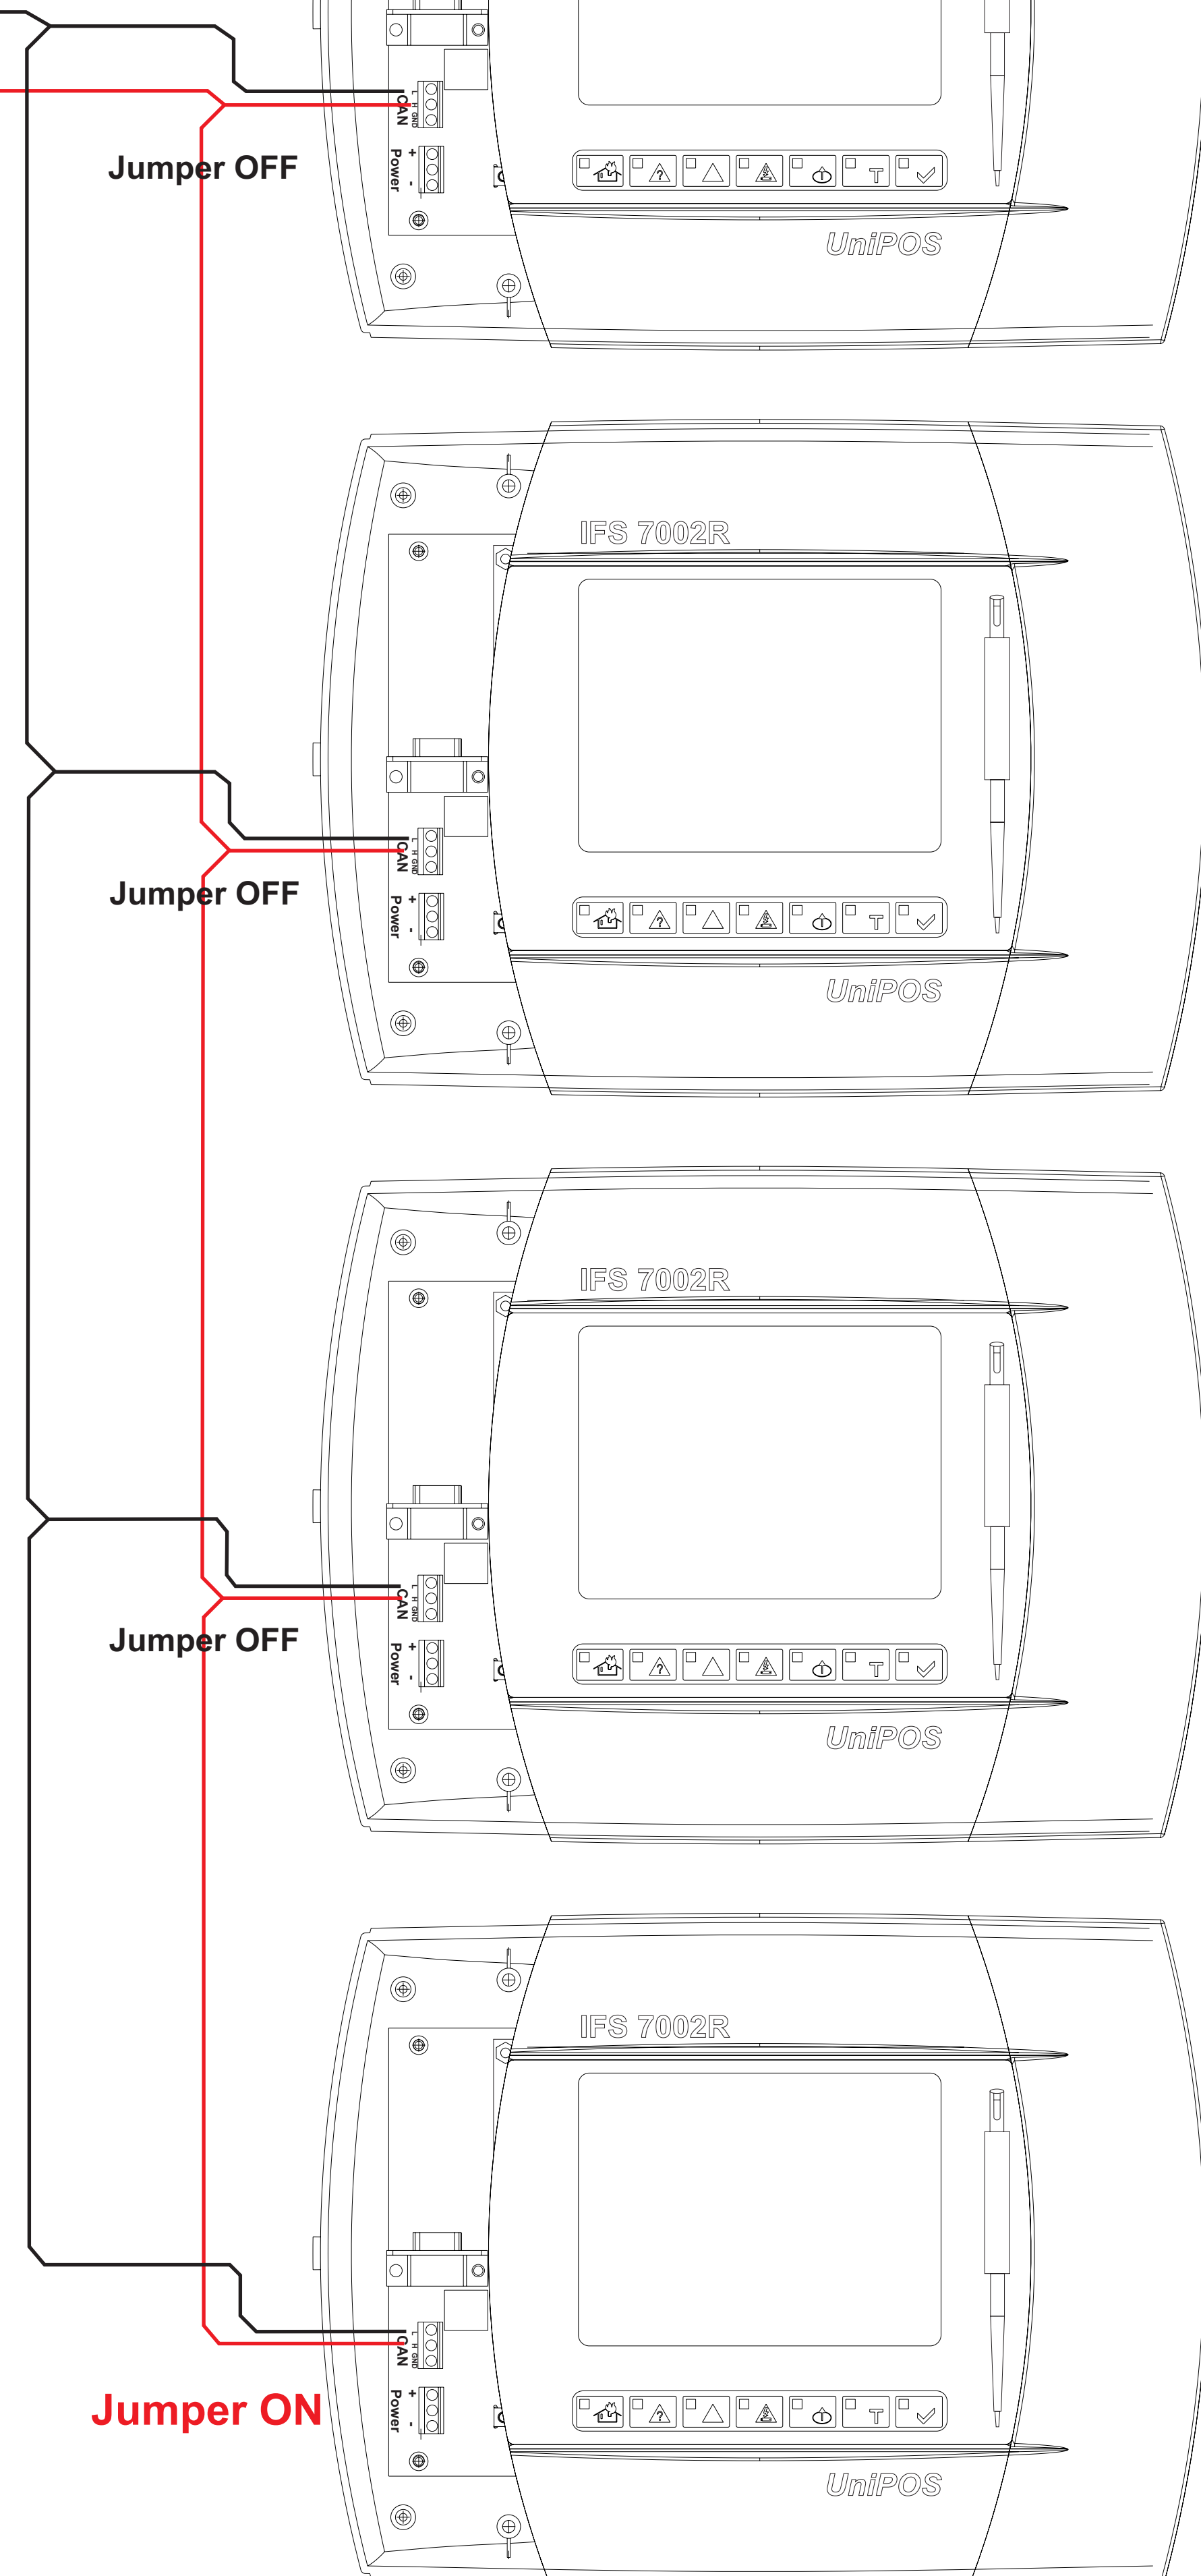

CAN Local Parameters:
Local Address: 2
Communication priority level: Slave

CAN Remote Object 1 Parameters:
Comm. Priority Level: Master
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 1
CAN Repeater Addr: 0

CAN Remote Object 2 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 101
CAN Repeater Addr: 0

CAN Local Parameters:
Local Address: 3
Communication priority level: Slave

CAN Remote Object 1 Parameters:
Comm. Priority Level: Master
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 1
CAN Repeater Addr: 0

CAN Remote Object 2 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 101
CAN Repeater Addr: 0

CAN Local Parameters:
Local Address: 4
Communication priority level: Slave

CAN Remote Object 1 Parameters:
Comm. Priority Level: Master
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 1
CAN Repeater Addr: 0

CAN Remote Object 2 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 101
CAN Repeater Addr: 0

CAN Local Parameters:
Local Address: 5
Communication priority level: Slave

CAN Remote Object 1 Parameters:
Comm. Priority Level: Master
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 1
CAN Repeater Addr: 0

CAN Remote Object 2 Parameters:
Comm. Priority Level: Slave
CAN Comm. Port: CAN 1
CAN Comm. Type: Direct
CAN Address: 101
CAN Repeater Addr: 0